

Altivar Process ATV900

Variable Speed Drives for Asynchronous and Synchronous Motors

Programming Manual

NHA80757.09
06/2021



Legal Information

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this guide are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owners.

This guide and its content are protected under applicable copyright laws and furnished for informational use only. No part of this guide may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the guide or its content, except for a non-exclusive and personal license to consult it on an "as is" basis. Schneider Electric products and equipment should be installed, operated, serviced, and maintained only by qualified personnel.

As standards, specifications, and designs change from time to time, information contained in this guide may be subject to change without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this material or consequences arising out of or resulting from the use of the information contained herein.

Table of Contents

Safety Information	9
About the Book.....	15
Introduction	19
Setup.....	20
Initial Steps	21
Steps for Setting-Up the Drive.....	23
Software Enhancements	24
Overview	27
Factory Configuration.....	28
Application Functions	29
Basic Functions	32
Graphic Display Terminal.....	33
Multipoint Screen.....	38
Structure of the Parameter Table.....	40
Finding a Parameter in This Document.....	41
Cyber Security.....	42
Programming	45
[Simply start] 5 9 5 -	46
[Simply start] 5 , П - Menu	47
[My menu] П 4 П П - Menu	49
[Modified parameters] L П d - Menu	49
[Dashboard] d 5 H -	50
[System] d 5 t - Menu	51
[Dashboard] d 5 H - Menu	53
[kWh Counters] K W C - menu	54
[Dashboard] d 5 H - Menu	56
[Diagnostics] d , R -	57
[Diag. data]	58
[Error history] P F H - Menu	61
[Warnings] R L r - Menu	65
[Display] П o П -	66
[Energy parameters]	67
[Elec Ener Input Counter] E L , - Menu	67
[Elec Ener Output Counter] E L o - Menu	68
[Mechanical energy] П E C - Menu	70
[Energy saving] E 5 R - Menu	72
[Application parameters]	74
[Pump parameters] - [Variable speed pump]	75
[M/S parameters]	76
[M/S Local Display] П 5 o - Menu	76
[M/S System Display] П 5 r - Menu	78
[Motor parameters]	80
[Drive parameters]	83
[Thermal monitoring]	88
[PID display]	89
[Counter management]	90
[Other state]	94
[I/O map]	95

[Communication map]	99
[Data logging]	120
[Braking Unit Option]	124
[Complete settings] <i>C S E</i> -	125
[Macro configuration]	127
[Motor parameters] <i>MPR</i> - Menu	128
[Motor parameters] <i>MPR</i> - Menu	128
[Data] <i>PEd</i> - Menu	133
[Angle test setting] <i>ASA</i> - Menu	145
[Motor tune] <i>PEu</i> - Menu	148
[Motor tune] - [Rotation tune] <i>ERAP</i> - Menu	156
[Motor monitoring] <i>MP</i> - Menu	165
[Thermal monitoring] <i>EP</i> - Menu	166
[Motor monitoring] <i>MP</i> - Menu	175
[Motor control] <i>drC</i> - Menu	178
[Fluxing by DI] <i>FLI</i> - Menu	182
[Spd Loop Optimization] <i>PEL</i> - Menu	185
[Motor control] <i>drC</i> - Menu	196
[Switching frequency] <i>SWF</i> - Menu	199
[Input Filter] <i>dCr</i> - Menu	202
[Define system units]	203
[Command and Reference] <i>CRP</i> - Menu	205
[Pump functions] - [PID controller]	221
[Pump functions] - [Sleep/wakeup]	241
[Pump functions] - [Feedback monitoring]	248
[Pump functions] - [ENA System]	250
[Pump functions] - [Backspin Control]	252
[Pump monitoring] - [Pumpcycle monitoring]	255
[Pump monitoring] - [Thermal monitoring]	257
[Master/Slave]	258
[Backlash compensation]	286
[Hoisting Functions]	297
[Brake logic control] <i>bLC</i> - Menu	297
[High speed hoisting] <i>HSH</i> - Menu	318
[Load Sharing] <i>LdS</i> - Menu	325
[Rope Slack Handling] <i>Sdr</i> - Menu	328
[Hoisting monitoring]	329
[Dynamic load detect.] <i>dLd</i> - Menu	329
[Conveyor Functions]	330
[Load Sharing] <i>LdS</i> - Menu	330
[Generic functions] - [Speed limits]	334
[Generic functions] - [Ramp]	337
[Generic functions] - [Ramp switching]	342
[Generic functions] - [Stop configuration]	344
[Generic functions] - [Auto DC injection]	350
[Generic functions] - [Ref. operations]	354
[Generic functions] - [Preset speeds]	356
[Generic functions] - [+/- speed]	359
[Generic functions] - [+/- speed around ref]	362
[Generic functions] - [Jump frequency]	365
[Generic functions] - [PID controller]	367

[Generic functions] - [Feedback mon.]	387
[Generic functions] - [Threshold reached]	388
[Generic functions] - [Mains contactor command]	391
[Generic functions] - [Output contactor cmd]	394
[Generic functions] - [Reverse disable]	398
[Generic functions] - [Torque limitation]	399
[Generic functions] - [2nd current limit.]	404
[Generic functions] - [Jog]	406
[Generic functions] - [High Speed Switching]	408
[Generic functions] - [Memo reference frequency]	410
[Generic functions] - [Brake logic control]	411
[Generic functions] - [Limit switches]	412
[Generic functions] - [Positioning by sensors]	414
[Generic functions] - [Torque control]	422
[Generic functions] - [Parameters switching]	430
[Generic functions] - [Stop after speed timeout]	435
[Generic functions] - [Active Front End]	437
[Generic functions] - [Bus Ref Link]	438
[Generic functions] - [DC bus supply]	440
[Generic functions] - [Multimotors config]	442
[Generic functions] - [Liquid Cooled Drive]	446
[Generic Functions] [External Weight Measurement]	448
[Generic functions] — [Power backup]	451
[Generic monitoring]	454
[Process underload] $\cup L d$ - Menu	454
[Process overload] $\circ L d$ - Menu	457
[Stall monitoring] $S t P r$ - Menu	459
[Thermal monitoring] $t P P$ - Menu	461
[Frequency meter] $F q F$ - Menu	462
[Input/Output] - [I/O assignment]	465
[DI1 assignment] $L I A$ - to [DI8 assignment] $L B A$ - Menus	465
[DI11 assignment] $L I I A$ - to [DI16 assignment] $L I B A$ - Menus	466
[DI7 Pulse Input Assign] $P , 7 A$ - Menu	467
[DI8 Pulse Input Assign] $P , B A$ - Menu	468
[Encoder Pulse Assign] $P t G A$ - Menu	469
[AI1 assignment] $A , I A$ - to [AI5 assignment] $A , S A$ - Menus	469
[AIV1 assignment] $A V I A$ - Menu	470
[DI50 Assignment] $d 5 0 A$ - to [DI59 Assignment] $d 5 9 A$ - Menus	470
[Input/Output] - [DI/DQ]	471
[DI1 Configuration] d , I - to [DI8 Configuration] d , B - Menus	471
[DI11 Configuration] $d , I I$ - to [DI16 Configuration] Menus	472
[DI7 Pulse Config] $P A , 7$ - Menu	473
[DI8 Pulse Config] $P A , B$ - Menu	475
[Encoder Config] $P G$ - Menu	476
[DQxx Configuration] $d o X X$ - Menu	478

[DI50 Configuration] d , 5 0 - to [DI64 Configuration]	
<i>d , 5 4</i> - Menus.....	482
[Input/Output] - [Analog I/O]	483
[AI1 configuration] A , 1 - Menu	483
[AI2 configuration] A , 2 - Menu	486
[AI3 configuration] A , 3 - Menu	487
[AI4 configuration] A , 4 - Menu	489
[AI5 configuration] A , 5 - Menu	491
[AQ1 configuration] A Q 1 - Menu	493
[AQ2 configuration] A Q 2 - Menu	498
[PTO configuration] P E O - Menu	499
[Virtual AI1] A V 1 - Menu	501
[Input/Output] - [Relay]	503
[Relay] r E L A - Menu	503
[Input/Output] , O - Menu	510
[Encoder configuration]	512
[Error/Warning handling]	520
[Auto fault reset] A E r - Menu	520
[Fault reset] r S E - Menu.....	522
[Catch on the fly] F L r - Menu.....	525
[Error detect disabling] , n H - Menu	527
[External error] E E F - Menu.....	530
[External error] — [Monitoring circuit A] C n C A - to	
[Monitoring circuit D] C n C d - Menus	532
[Output phase loss] O P L - Menu	535
[Input phase loss] , P L - Menu	536
[4-20mA loss] L F L - Menu.....	537
[Fallback speed] L F F - Menu.....	539
[Fieldbus monitoring] C L L - Menu	540
[Embedded Modbus TCP] E n E C - Menu	542
[Communication module] C O n O - Menu	544
[Undervoltage handling] u S b - Menu	547
[Ground Fault] G r F L - Menu	550
[Motor thermal monit] E H E - Menu	551
[Encoder monitoring] S d d - Menu.....	553
[Braking Resistor monit] b r P - Menu.....	554
[Torque or i lim. detect] E , d - Menu	556
[Drive overload monit] O b r - Menu	557
[Warn grp 1 definition] A I C - to [Warn grp 5 definition]	
<i>A S C</i> - Menus.....	559
[Error/Warning Handling] C S W n - menu.....	560
[ON lock settings] L K O n - Menu	561
[Maintenance]	564
[Diagnostics] d A u - Menu	564
[Drive warranty mgnt] d W n A - Menu	565
[Customer event 1] C E 1 - Menu.....	566
[Customer event 2] C E 2 - to [Customer event 5] C E 5 -	
Menus	567
[Customer events] C u E V - Menu	568
[Fan management] F A n A - Menu	569
[Maintenance] C S n A - Menu	570

[Cabinet I/O Function] <i>C A B F</i> -	571
[Communication] <i>C o m</i> -	580
[Modbus Fieldbus] <i>m d b</i> - Menu	581
[Com. scanner input] <i>i c s</i> - Menu	583
[Com. scanner output] <i>o c s</i> - Menu	585
[Modbus HMI] <i>m d h</i> - Menu	587
[Embd Eth Config] <i>E t E</i> - Menu	589
[Fast Device Replacement] <i>F d r</i> - Menu	590
[CANopen] <i>C n o</i> - Menu	592
[DeviceNet] <i>d n c</i> - Menu	592
[Profibus] <i>P b c</i> - Menu	592
[Profinet] <i>P n c</i> - Menu	593
[EtherCAT Module] <i>E t c</i> - Menu	593
[Powerlink] <i>E P L</i> - Menu	593
[File management] <i>F m e</i> -	594
[Transfer config file] <i>t c f</i> - Menu	595
[Factory settings] <i>F c s</i> - Menu	596
[Parameter group list] <i>F r y</i> - Menu	597
[Factory settings] <i>F c s</i> - Menu	598
[Pre-settings] <i>P r e s</i> - Menu	599
[Firmware update] <i>F w u p</i> - Menu	600
[My preferences] <i>m y p</i> -	601
[Language]	601
[Password]	602
[Parameter access]	604
[Customization]	606
[My menu config.] <i>m y c</i> - Menu	606
[Display screen type] <i>m s c</i> - Menu	607
[Param. Bar Select] <i>P b s</i> - Menu	607
[Customer parameters] <i>c y p</i> - Menu	608
[Service message] <i>S e r</i> - Menu	608
[Date & Time settings]	609
[Access level]	610
[Webserver]	611
[Functions key mgnt]	612
[LCD settings]	613
[Stop and go]	614
[QR code]	616
[Pairing password]	617
Maintenance and diagnostics	618
Maintenance	619
Diagnostics and Troubleshooting	622
Warning Codes	623
Error Codes	626
FAQ	704
Glossary	705

Safety Information

Important Information

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠ DANGER
DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.
⚠ WARNING
WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
⚠ CAUTION
CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
NOTICE
NOTICE is used to address practices not related to physical injury.

Please Note

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

Qualification Of Personnel

Only appropriately trained persons who are familiar with and understand the contents of this manual and all other pertinent product documentation are authorized to work on and with this product. In addition, these persons must have received safety training to recognize and avoid hazards involved. These persons must have sufficient technical training, knowledge and experience and be able to foresee and detect potential hazards that may be caused by using the product, by changing the settings and by the mechanical, electrical and electronic equipment of the entire system in which the product is used. All persons working on and with

the product must be fully familiar with all applicable standards, directives, and accident prevention regulations when performing such work.

Intended Use

This product is a drive for three-phase synchronous, asynchronous motors and intended for industrial use according to this manual.

The product may only be used in compliance with all applicable safety standard and local regulations and directives, the specified requirements and the technical data. The product must be installed outside the hazardous ATEX zone. Prior to using the product, you must perform a risk assessment in view of the planned application. Based on the results, the appropriate safety measures must be implemented. Since the product is used as a component in an entire system, you must ensure the safety of persons by means of the design of this entire system (for example, machine design). Any use other than the use explicitly permitted is prohibited and can result in hazards.

Product Related Information

Read and understand these instructions before performing any procedure with this drive.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Only appropriately trained persons who are familiar with and fully understand the contents of the present manual and all other pertinent product documentation and who have received all necessary training to recognize and avoid hazards involved are authorized to work on and with this drive system.
- Installation, adjustment, repair and maintenance must be performed by qualified personnel.
- Verify compliance with all local and national electrical code requirements as well as all other applicable regulations with respect to grounding of all equipment.
- Only use properly rated, electrically insulated tools and measuring equipment.
- Do not touch unshielded components or terminals with voltage present.
- Prior to performing any type of work on the drive system, block the motor shaft to prevent rotation.
- Insulate both ends of unused conductors of the motor cable.
- Do not short across the DC bus terminals or the DC bus capacitors or the braking resistor terminals.

Failure to follow these instructions will result in death or serious injury.

⚠️⚠️ DANGER**HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

Before performing work on the drive system:

- Disconnect all power, including external control power that may be present. Take into account that the circuit breaker or main switch does not de-energize all circuits.
- Place a “Do Not Turn On” label on all power switches related to the drive system.
- Lock all power switches in the open position.
- Wait 15 minutes to allow the DC bus capacitors to discharge.
- Verify the absence of voltage. (1)

Before applying voltage to the drive system:

- Verify that the work has been completed and that the entire installation cannot cause hazards.
- If the mains input terminals and the motor output terminals have been grounded and short-circuited, remove the ground and the short circuits on the mains input terminals and the motor output terminals.
- Verify proper grounding of all equipment.
- Verify that all protective equipment such as covers, doors, grids is installed and/or closed.

Failure to follow these instructions will result in death or serious injury.

Refer to Verifying the absence of voltage to the installation manual of the product.

Damaged products or accessories may cause electric shock or unanticipated equipment operation.

⚠️⚠️ DANGER**ELECTRIC SHOCK OR UNANTICIPATED EQUIPMENT OPERATION**

Do not use damaged products or accessories.

Failure to follow these instructions will result in death or serious injury.

Contact your local Schneider Electric sales office if you detect any damage whatsoever.

This equipment has been designed to operate outside of any hazardous location. Only install this equipment in zones known to be free of a hazardous atmosphere.

⚠️ DANGER**POTENTIAL FOR EXPLOSION**

Install and use this equipment in non-hazardous locations only.

Failure to follow these instructions will result in death or serious injury.

Your application consists of a whole range of different interrelated mechanical, electrical, and electronic components, the drive being just one part of the application. The drive by itself is neither intended to nor capable of providing the entire functionality to meet all safety-related requirements that apply to your application. Depending on the application and the corresponding risk assessment to be conducted by you, a whole variety of additional equipment is required such as, but not limited to, external encoders, external brakes, external monitoring devices, guards, etc.

As a designer/manufacturer of machines, you must be familiar with and observe all standards that apply to your machine. You must conduct a risk assessment and determine the appropriate Performance Level (PL) and/or Safety Integrity Level (SIL) and design and build your machine in compliance with all applicable standards. In doing so, you must consider the interrelation of all components of the machine. In addition, you must provide instructions for use that enable the user of your machine to perform any type of work on and with the machine such as operation and maintenance in a safe manner.

The present document assumes that you are fully aware of all normative standards and requirements that apply to your application. Since the drive cannot provide all safety-related functionality for your entire application, you must ensure that the required Performance Level and/or Safety Integrity Level is reached by installing all necessary additional equipment.

⚠ WARNING

INSUFFICIENT PERFORMANCE LEVEL/SAFETY INTEGRITY LEVEL AND/OR UNINTENDED EQUIPMENT OPERATION

- Conduct a risk assessment according to EN ISO 12100 and all other standards that apply to your application.
- Use redundant components and/or control paths for all critical control functions identified in your risk assessment.
- Implement all monitoring functions required to avoid any type of hazard identified in your risk assessment, for example, slipping or falling loads, in particular, if you do not operate the drive in closed loop mode which provides certain internal monitoring functions such as BRH3 [BRH b3], BRH4 [BRH b4] and BRH5 [BRH b5].
- Verify that the service life of all individual components used in your application is sufficient for the intended service life of your overall application.
- Perform extensive commissioning tests for all potential error situations to verify the effectiveness of the safety-related functions and monitoring functions implemented, for example, but not limited to, speed monitoring by means of encoders, short circuit monitoring for all connected equipment, correct operation of brakes and guards.
- Perform extensive commissioning tests for all potential error situations to verify that the load can be brought to a safe stop under all conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The products may perform unexpected movements because of incorrect wiring, incorrect settings, incorrect data or other errors.

⚠ WARNING

UNANTICIPATED EQUIPMENT OPERATION

- Carefully install the wiring in accordance with the EMC requirements.
- Do not operate the product with unknown or unsuitable settings or data.
- Perform a comprehensive commissioning test.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

▲ WARNING**LOSS OF CONTROL**

- The designer of any control scheme must consider the potential failure modes of control paths and, for critical control functions, provide a means to achieve a safe state during and after a path failure. Examples of critical control functions are emergency stop, overtravel stop, power outage and restart.
- Separate or redundant control paths must be provided for critical control functions.
- System control paths may include communication links. Consideration must be given to the implications of unanticipated transmission delays or failures of the link.
- Observe all accident prevention regulations and local safety guidelines (1).
- Each implementation of the product must be individually and thoroughly tested for proper operation before being placed into service.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

(1) For USA: Additional information, refer to NEMA ICS 1.1 (latest edition), Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control and to NEMA ICS 7.1 (latest edition), Safety Standards for Construction and Guide for Selection, Installation and Operation of Adjustable-Speed Drive Systems.

The temperature of the products described in this manual may exceed 80 °C (176 °F) during operation.

▲ WARNING**HOT SURFACES**

- Ensure that any contact with hot surfaces is avoided.
- Do not allow flammable or heat-sensitive parts in the immediate vicinity of hot surfaces.
- Verify that the product has sufficiently cooled down before handling it.
- Verify that the heat dissipation is sufficient by performing a test run under maximum load conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Machines, controllers, and related equipment are usually integrated into networks. Unauthorized persons and malware may gain access to the machine as well as to other devices on the network/fieldbus of the machine and connected networks via insufficiently secure access to software and networks.

▲ WARNING

UNAUTHORIZED ACCESS TO THE MACHINE VIA SOFTWARE AND NETWORKS

- In your hazard and risk analysis, consider all hazards that result from access to and operation on the network/fieldbus and develop an appropriate cyber security concept.
- Verify that the hardware infrastructure and the software infrastructure into which the machine is integrated as well as all organizational measures and rules covering access to this infrastructure consider the results of the hazard and risk analysis and are implemented according to best practices and standards covering IT security and cyber security (such as: ISO/IEC 27000 series, Common Criteria for Information Technology Security Evaluation, ISO/IEC 15408, IEC 62351, ISA/IEC 62443, NIST Cybersecurity Framework, Information Security Forum - Standard of Good Practice for Information Security, SE recommended Cybersecurity Best Practices*).
- Verify the effectiveness of your IT security and cyber security systems using appropriate, proven methods.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

(*) : SE Recommended Cybersecurity Best Practices can be downloaded on SE.com

▲ WARNING

LOSS OF CONTROL

Perform a comprehensive commissioning test to verify that communication monitoring properly detects communication interruptions

Failure to follow these instructions can result in death, serious injury, or equipment damage.

NOTICE

DESTRUCTION DUE TO INCORRECT MAINS VOLTAGE

Before switching on and configuring the product, verify that it is approved for the mains voltage.

Failure to follow these instructions can result in equipment damage.

About the Book

Document Scope

The purpose of this document is to:

- help you to set up the drive,
- show you how to program the drive,
- show you the different menus, modes, and parameters,
- help you in maintenance and diagnostics.

Validity Note

Original instructions and information given in this manual have been written in English (before optional translation).

This documentation is valid for Altivar Process ATV900 drives except for ATV991 and ATV992 drive systems (ATV930, ATV950, ATV960, ATV980, ATV9A0, ATV9B0, ATV9L0).

The technical characteristics of the devices described in the present document also appear online. To access the information online, go to the Schneider Electric home page www.se.com/ww/en/download/.

The characteristics that are described in the present document should be the same as those characteristics that appear online. In line with our policy of constant improvement, we may revise content over time to improve clarity and accuracy. If you see a difference between the document and online information, use the online information as your reference.

Related Documents

Use your tablet or your PC to quickly access detailed and comprehensive information on all our products on www.se.com.

The internet site provides the information you need for products and solutions:

- The whole catalog for detailed characteristics and selection guides,
- The CAD files to help design your installation, available in over 20 different file formats,
- All software and firmware to maintain your installation up to date,
- A large quantity of White Papers, Environment documents, Application solutions, Specifications... to gain a better understanding of our electrical systems and equipment or automation,
- And finally all the User Guides related to your drive, listed below:

Title of Documentation	Catalog Number
Digital Catalog for Industrial Automation	Digit-Cat
Catalog: Variable speed drives Altivar Process ATV900	DIA2ED2150601EN (English), DIA2ED2150601FR (French)
ATV930, ATV950 Getting Started	NHA61578 (English), NHA61579 (French), NHA61580 (German), NHA61581 (Spanish), NHA61724 (Italian), NHA61582 (Chinese), NHA61578PT (Portuguese), NHA61578TR (Turkish)
ATV900 Getting Started Annex (SCCR)	NHA61583 (English)
ATV930, ATV950 Installation manual	NHA80932 (English), NHA80933 (French), NHA80934 (German), NHA80935 (Spanish), NHA80936 (Italian), NHA80937 (Chinese), NHA80932PT (Portuguese), NHA80932TR (Turkish)
ATV600F, ATV900F Installation Instruction sheet	NVE57369 (English)

Title of Documentation	Catalog Number
ATV900 Programming manual	NHA80757 (English), NHA80758 (French), NHA80759 (German), NHA80760 (Spanish), NHA80761 (Italian), NHA80762 (Chinese), NHA80757PT (Portuguese), NHA80757TR (Turkish)
ATV900 Embedded Modbus Serial Link manual	NHA80939 (English)
ATV900 Embedded Ethernet manual	NHA80940 (English)
ATV900 PROFIBUS DP manual (VW3A3607)	NHA80941 (English)
ATV900 DeviceNet manual (VW3A3609)	NHA80942 (English)
ATV900 PROFINET manual (VW3A3627)	NHA80943 (English)
ATV900 CANopen manual (VW3A3608, 618, 628)	NHA80945 (English)
ATV900 EtherCAT manual (VW3A3601)	NHA80946 (English)
ATV900 POWERLINK manual (VW3A3619)	PHA99693 (English)
ATV900 Communication Parameters addresses	NHA80944 (English)
ATV900 Embedded Safety Function manual	NHA80947 (English)
ATV900 Safety functions manual with Module VW3A3802	NVE64209 (English), NVE64210 (French), NVE64211 (German), NVE64212 (Spanish), NVE64213 (Italian), NVE64214 (Chinese), NVE64209PT (Portuguese), NVE64209TR (Turkish)
ATV900 Braking unit for Frame Size 7 manual (VW3A7101)	1757084 (English)
Drive Systems ATV960 handbook	NHA37115 (English), NHA37114 (German)
Drive Systems ATV980 handbook	NHA37117 (English), NHA37116 (German)
Drive Systems ATV990 handbook Multidrive Systems	NHA37145 (English), NHA37143 (German)
ATV991, ATV992 Supply units, Programming manual	QGH33275 (English)
Drive Systems Installation manual	NHA37118 (German), NHA37119 (English), NHA37121 (French), NHA37122 (Spanish), NHA37123 (Italian), NHA37124 (Dutch), NHA37126 (Polish), NHA37127 (Portuguese), NHA37129 (Turkish), NHA37130 (Chinese)
ATV600, ATV900 ATEX manual	NVE42416 (English)
SoMove: FDT	SoMove_FDT (English, French, German, Spanish, Italian, Chinese)
ATV900: DTM	ATV9xx_DTM_Library_EN (English - to be installed first), ATV9xx_DTM_Lang_FR (French), ATV9xx_DTM_Lang_DE (German), ATV9xx_DTM_Lang_SP (Spanish), ATV9xx_DTM_Lang_IT (Italian), ATV9xx_DTM_Lang_CN (Chinese)
ATV61-71 to ATV600-900 Migration Manual	EAV64336 (English)
Altivar Application Note for Hoisting	NHA80973 (English)
Recommended Cybersecurity Best Practices	CS-Best-Practices-2019-340 (English)

You can download these technical publications and other technical information from our website at www.se.com/en/download

Terminology

The technical terms, terminology, and the corresponding descriptions in this manual normally use the terms or definitions in the relevant standards.

In the area of drive systems this includes, but is not limited to, terms such as **error**, **error message**, **failure**, **fault**, **fault reset**, **protection**, **safe state**, **safety function**, **warning**, **warning message**, and so on.

Among others, these standards include:

- IEC 61800 series: Adjustable speed electrical power drive systems
- IEC 61508 Ed.2 series: Functional safety of electrical/electronic/programmable electronic safety-related

- EN 954-1 Safety of machinery - safety-related parts of control systems
- ISO 13849-1 & 2 Safety of machinery - safety related parts of control systems
- IEC 61158 series: Industrial communication networks - Fieldbus specifications
- IEC 61784 series: Industrial communication networks - Profiles
- IEC 60204-1: Safety of machinery - Electrical equipment of machines – Part 1: General requirements

In addition, the term **zone of operation** is used in conjunction with the description of specific hazards, and is defined as it is for a **hazard zone** or **danger zone** in the EC Machinery Directive (2006/42/EC) and in ISO 12100-1.

Contact Us

Select your country on:

www.se.com/contact

Schneider Electric Industries SAS

Head Office

35, rue Joseph Monier

92500 Rueil-Malmaison

France

Introduction

What's in This Part

Setup	20
Overview	27
Cyber Security	42

Setup

What's in This Chapter

Initial Steps	21
Steps for Setting-Up the Drive	23
Software Enhancements	24

Initial Steps

Before Powering up the Drive

⚠ WARNING

UNANTICIPATED EQUIPMENT OPERATION

Before switching on the device, verify that no unintended signals can be applied to the digital inputs that could cause unintended movements.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

If the drive was not connected to mains for an extended period of time, the capacitors must be restored to their full performance before the motor is started.

NOTICE

REDUCED CAPACITOR PERFORMANCE

- Apply mains voltage to the drive for one hour before starting the motor if the drive has not been connected to mains for the specified periods of time.(1)
- Verify that no Run command can be applied before the period of one hour has elapsed.
- Verify the date of manufacture if the drive is commissioned for the first time and run the specified procedure if the date of manufacture is more than 12 months in the past.

Failure to follow these instructions can result in equipment damage.

(1) Period of time:

- 12 months at a maximum storage temperature of +50°C (+122°F)
- 24 months at a maximum storage temperature of +45°C (+113°F)
- 36 months at a maximum storage temperature of +40°C (+104°F)

If the specified procedure cannot be performed without a Run command because of internal mains contactor control, perform this procedure with the power stage enabled, but the motor being at a standstill so that there is no appreciable mains current in the capacitors.

Mains Contactor

NOTICE

RISK OF DAMAGE TO THE DRIVE

Do not switch on the drive at intervals of less than 60 s.

Failure to follow these instructions can result in equipment damage.

Using a Motor with a Lower Rating or Dispensing with a Motor Altogether

In factory settings, the motor output phase loss detection is active: **[OutPhaseLoss Assign] $\alpha P L$** is set to **[OPF Error Triggered] $4 E 5$** . For details, refer to the parameter description, page 535. For commissioning tests or maintenance phase, the drive could be connected to a small motor power size and thus trigger an error **[Output Phase Loss] $\alpha P F 2$** or **[Single output phase loss] $\alpha P F 1$** when a Run command is applied. For that purpose, the function can be disabled by setting **[OutPhaseLossAssign] $\alpha P L$** to **[Function Inactive] $0 0$** .

Set also **[Motor control type]** $C E E$ to **[SVC V]** $V V C$ in **[Motor parameters]** $P R -$. For details, refer to .

NOTICE

MOTOR OVERHEATING

Install external thermal monitoring equipment under the following conditions:

- If a motor with a nominal current of less than 20% of the nominal current of the drive is connected.
- If you use the function Motor Switching.

Failure to follow these instructions can result in equipment damage.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

If output phase monitoring is disabled, phase loss and, by implication, accidental disconnection of cables, are not detected.

- Verify that the setting of this parameter does not result in unsafe conditions.

Failure to follow these instructions will result in death or serious injury.

Steps for Setting-Up the Drive

1 INSTALLATION

Refer to the installation manual.

2 Switch On the drive without active run command.

3 Configure:

- The nominal frequency of the motor **[Motor Standard] b F r** if this is not 50 Hz.
- The motor parameters including **[Motor Th Current] i t H** in the **[Motor parameters] P P R** - menu, only if the factory configuration of the drive is not suitable.
- The application functions in the **[Complete settings] L s L** - menu, only if the factory configuration of the drive is not suitable.

4 In the **[Simply start] 5 4 5** - menu, adjust the following parameters:

- [Acceleration] A C C** and **[Deceleration] d E C**
- [Low speed] L S P** and **[High Speed] H S P**

5 Start the drive.



The products may perform unexpected movements because of incorrect wiring, incorrect settings, incorrect data or other errors.

▲ WARNING

UNANTICIPATED EQUIPMENT OPERATION

- Carefully install the wiring in accordance with the EMC requirements.
- Do not operate the product with unknown or unsuitable settings or data.
- Perform a comprehensive commissioning test.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Tips

Use the **[Config. Source] F C 5** , parameter , page 596 to restore the factory settings at any time.

NOTE: The following operations must be performed for optimum drive performance in terms of accuracy and response time:

- Enter the values indicated on the motor nameplate in the **[Motor parameters] P P R** - menu.
- Perform autotuning with the motor cold and connected using the **[Autotuning] t u n** parameter.

Software Enhancements

Overview

Since the ATV900 was first launched, it has benefited from the addition of several new functions.

The software version has been updated to V3.4. Although this documentation relates to version V3.4, it can still be used with earlier versions.

Enhancements Made to Version V3.4 in Comparison to V3.3

Firmware evolution to support Altivar Process Modular Liquid Cooled offer (ATV9L0). New features dedicated to this offer have been added such as **[High Start Current]** $C L \cdot b$, **[Mixing Valve]** $\Pi V C \square$ setting and diagnostics of the cooling pump (**[Pump diagnostics]** $C P E$).

Improvements related to cybersecurity. By default, user authentication is necessary to connect to the drive via PC software tools such as SoMove-DTM (using Modbus TCP communication through Ethernet). **[User authentication]** $S E L E$ - menu has been added in **[Embd Eth Config]** $E E E$ - menu and **[User authentication]** $S E C P$ - has been added in **[Profinet]** $P n C$ - . For more information refer to DTM online help.

NOTE: To fully support this evolution with Profinet module, the minimum firmware version of Profinet module must be V1.9IE19.

Fallback feature is added on drive outputs. When the corresponding output is controlled by fieldbus, the output is reset if an error is triggered.

In the menu **[Fault reset]** $r S E$ - menu, **[Extended Fault Reset]** $H r F C$ parameter is now available.

Setting **[Brake assignment]** $b L C$ to an output preset **[Auto tuning usage]** $E u n u$ to **[Therm Mot]** $E \Pi$.

[Fallback Channel] $R F F L$ has been added to handle automatic channel fallback in case of fieldbus communication interruption.

New possible settings are available on drive outputs (digital outputs and relays).

In the **[Generic functions]** $C S G F$ - menu, the **[Power Backup]** $r F E$ - menu is available, including its related parameters.

In the **[Error/Warning Handling]** $C S W \Pi$ - menu, the **[ON lock settings]** $L K \square n$ - menu is available, including its related parameters.

New possible settings for **[Monitoring circuit A]** $C \Pi C A$ - ...**[Monitoring circuit D]** $C \Pi C d$ - functions. These menus are also now available in **[External error]** $E E F$ - menu.

Enhancements Made to Version V3.1 in Comparison to V2.3

Advanced motor control is available via **[Adv. Motor Control]** $R E \Pi C$ parameter in the menu **[Motor parameters]** $\Pi P A$ - . By default, this new feature is enabled. To complete the advanced motor control, a new tuning is added: the **[Rotation tune]** $E r A \Pi$ - .

In **[Ramp]** $r A \Pi P$ - menu, **[Braking Current Level]** $b d C L$ is added to modify the maximum current level for braking deceleration.

In the **[Positioning by sensors]** $L P \square$ - menu, **[Memo Slowdown]** $\Pi S L \square$ parameter is added. It allows to enable or disable the memorization of the slowdown.

Enhancements Made to Version V2.3 in Comparison to V2.2

In the tab **[Data]** *Π Ε δ* - of the **[Motor Data]** *Π ο Α* - menu, **[Torque Scaling]** *ι ο ρ ε* parameter is added. It allows to show and modify the scaling of parameters such as **[Nom Motor Torque]** *ε 9 5*.

Enhancements Made to Version V2.2 in Comparison to V2.1

Firmware evolution to support Altivar Process Modular 690V Low Harmonic / Regen offer.

In the **[Motor parameters]** *Π Ρ Α* - menu, the **[Input Filter]** *δ Ε ρ* - menu is available, including its related parameters.

Improvements on **[Brake logic control]** *β Λ Ε* - function, refer to the new parameters **[BRH b5]** *β ρ Η 5*, **[Load Maintain Time]** *Π δ Φ ε* and **[Load Maintain Delay]** *Π ε β Φ*.

Enhancements Made to Version V2.1 in Comparison to V1.9

Firmware evolution to support Altivar Process Modular 690V standard offer.

Improvements on **[Brake logic control]** *β Λ Ε* - function. Parameters linked to brake relay feedback have been added and **[BRH b4]** *β ρ Η 4* function can be used to trigger an error.

Improvement of the function **[Stop and go]** *5 ε Γ* - with a time parameter.

[Output Contactor Cmd] *ο Ε Ε* - and **[External Weight Meas.]** *Ρ Ε 5* - functions are now available.

Improvement of the password protection to limit the access to the menus.

Enhancements Made to Version V1.9 in Comparison to V1.8

Improvements and new functionalities on **[Brake logic control]** *β Λ Ε* - functions can be found in their related menus. New parameters are available and the calculation of the **[AUTO]** *Α ο Ε ο* setting values have been updated.

The virtual analog input type is now settable with **[AIV1 type]** *Α V 1 ε* parameters.

Support of bidirectional scaled analog inputs, see **[Alx range]** *Α , X Λ* parameters.

[Input phase loss] *Ρ Η Φ* is cleared as soon as its cause has been removed.

Enhancements Made to Version V1.8 in Comparison to V1.6

Firmware evolution to support Altivar Process Modular 400V standard offer.

Support of VW3A3619 POWERLINK fieldbus module.

In the **[Motor control]** *δ ρ Ε* - menu, "Output Voltage Management and Overmodulation" function is added.

A new possible behavior is added for the STOP/RESET key, see **[Stop Key Enable]** *Ρ 5 ε* parameter.

Enhancements Made to Version V1.6 in Comparison to V1.3

In the **[Complete settings]** *Ε 5 ε* - menu, the **[Encoder configuration]** *ι Ε ο* - has been updated with complementary informations.

In the **[Catch on Fly]** *Φ Λ ρ* - menu, a new selection has been added to allow the function to be active after stop types different than freewheel.

In the **[Input/Output] - [DI/DQ]** menu, the **[Encoder Config] P G** - menu is available, including its related parameters.

From this new version, the selection of **[Never] S E P** on **[Fan Mode] F F Π** has no effect.

Enhancements Made to Version V1.3 in Comparison to V1.2

In the **[Complete settings] C S E** - menu, the **[Encoder configuration] , E n** - has been updated with parameters and affectations added to support the HTL encoder module.

Enhancements Made to Version V1.2 in Comparison to V1.1

In the **[Complete settings] C S E** - menu, the **[Master/Slave] Π S R** - menu has been updated with parameters added to use Master/Slave function with MultiDrive Link mechanism.

In the **[Complete settings] C S E** - menu, the **[Backlash compensation] b S 9 Π** - menu is available, including its related parameters.

In the **[Pump functions] P F E** - menu, the **[Backspin Control] b S C C** - menu is available, including its related parameters.

Overview

What's in This Chapter

Factory Configuration	28
Application Functions	29
Basic Functions.....	32
Graphic Display Terminal	33
Multipoint Screen	38
Structure of the Parameter Table	40
Finding a Parameter in This Document	41

Factory Configuration

Factory Settings

The drive is factory-set for common operating conditions:

- Display: drive ready [**Pre-Ramp Ref Freq**] F_{rH} when motor is ready to run and motor frequency when motor is running.
- The DI3 and DI5 to DI8 digital inputs, AI2 and AI3 analog inputs, R2 and R3 relays are unassigned.
- Stop mode when error detected: freewheel.

This table presents the basic parameters of the drive and their factory setting values:

Code	Name	Factory setting values
bFr	[Motor Standard]	[50Hz IEC] 50
tcc	[2/3-Wire Control]	[2-Wire Control] $2c$: 2-wire control
ctt	[Motor control type]	[SVC V] vvc : voltage vector control
acc	[Acceleration]	3.0 s
dec	[Deceleration]	3.0 s
lsp	[Low Speed]	0.0 Hz
hsp	[High Speed]	50.0 Hz
ith	[Motor Th Current]	Nominal motor current (value depending on drive rating)
frd	[Forward]	[DI1] $d1$: Digital input DI1
rfs	[Reverse]	[DI2] $d2$: Digital input DI2
$fr1$	[Ref Freq 1 Config]	[AI1] $a1$: Analog input AI1
$r1$	[R1 Assignment]	[Operating State Fault] flc : the contact opens when the drive has detected error or when the drive has been switched off
brd	[Dec.Ramp Adapt]	[Yes] yes : function active (automatic adaptation of deceleration ramp)
atr	[Auto Fault Reset]	[No] no : function inactive
stt	[Type of stop]	[On Ramp] rnp : on ramp
$ao1$	[AQ1 assignment]	[Motor Frequency] ofr : Motor frequency
$ao2$	[AQ2 assignment]	[Motor Current] ocr : Motor current
$r5f$	[Fault Reset Assign]	[DI4] $d4$: Digital input DI4

NOTE: If you want to restore the drive presettings to their factory values, set [Config. Source] fls to [Macro Config] ini .

Verify whether the above values are compatible with the application and modify them if required.

Application Functions

Introduction

The following tables show the combinations of functions and applications in order to guide your selection.

The functions in these tables relate to the following applications:

- Mining, Mineral and Metal (MMM):
 - Long belt conveyor
 - Long-distance heavy conveying
 - Crusher
 - Grinding mills
 - Vibro feeders
- Hoisting:
 - Special cranes (Gantry cranes - Grab cranes)
 - Ship loaders
- Food & Beverage:
 - Mixers
 - Centrifuges machines
 - Hot rotary dryers
- O&G:
 - PCP (Progressive Cavity Pump)
 - ESP (Electrically Submersible Pump)
 - Rod pump

Each application has its own special features, and the combinations listed here are not mandatory or exhaustive.

⚠ WARNING
<p>UNANTICIPATED EQUIPMENT OPERATION</p> <p>Multiple functions can be assigned to and simultaneously activated via a single input.</p> <ul style="list-style-type: none"> • Verify that assigning multiple functions to a single input does not result in unsafe conditions. <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p>

Combinations of Functions and Applications

Function	MMM		O&G			F&B	Process
	Conveyor	Hoisting	Pump Jack or Road pump	PCP control	ESP control	High inertia	
ENA system , page 250			✓				
Brake sequence	✓	✓					
Boost for conical motors , page 179	✓	✓					
Limit switch management , page 412	✓						
Torque regulation , page 422	✓						✓
Positioning / Autostop on distance , page 414	✓						

Function	MMM		O&G			F&B	Process
	Conveyor	Hoisting	Pump Jack or Road pump	PCP control	ESP control	High inertia	
Positioning value for PLC , page 519	✓	✓					
Load sharing , page 325	✓	✓				✓	✓
Master/Slave management	✓	✓				✓	✓
Master/Slave on rigid coupling , page 268	✓	✓				✓	
Master/Slave on elastic coupling , page 268	✓	✓					
Backspin sequence for PCP pumps , page 252				✓			
Braking balance		✓				✓	✓
DC Bus charge option , page 440						✓	✓
High-speed hoisting , page 318		✓					
Commutation high speed , page 408		✓					

Combination of Functions and Monitoring Functions

Function	MMM		O&G			F&B	Process
	Conveyor	Hoisting	Pump Jack or Road pump	PCP control	ESP control	High inertia	
External error , page 530	✓	✓	✓	✓	✓	✓	
Catch on the fly , page 525	✓		✓	✓	✓	✓	
Motor Overspeed , page 689		✓		✓	✓		✓
Torque limitation , page 399	✓						
Encoder check , page 512	✓	✓					✓
Reverse disable , page 211			✓	✓	✓	✓	✓
Thermal monitoring of the braking resistor , page 554	✓	✓				✓	
Under load detection , page 454	✓			✓	✓		
Fast stop , page 345	✓	✓				✓	
Dynamic load detection , page 329	✓					✓	✓
Mechanical resonance rejection , page 192		✓					
Stall monitoring , page 459	✓					✓	✓
Load slipping monitoring , page 553		✓					
Rope slack and anti rope slack detection , page 321		✓					

Combination of Functions and Configuration management

Function	MMM		O&G			F&B	Process
	Conveyor	Hoisting	Pump Jack or Road pump	PCP control	ESP control	High inertia	
Motor switching	✓	✓					
Configuration switching	✓	✓					
Parameter switching , page 430	✓						
Current threshold function , page 388	✓	✓	✓	✓	✓	✓	✓
Torque threshold reached , page 390	✓	✓				✓	✓
Frequency threshold reached , page 389	✓	✓	✓	✓	✓	✓	✓
Thermal state reached , page 389	✓	✓	✓	✓	✓	✓	✓
Automatic fault reset , page 520	✓						
Surge voltage on motor				✓	✓		
Parameter customization , page 606	✓		✓		✓		✓
Pulse input configuration , page 473	✓	✓	✓			✓	
Dual rating			✓				✓

Basic Functions

Drive Ventilation

If **[Fan mode]** *F F Π* is set to:

- **[Standard]** *S E d*, the operation of the fan is enabled when the motor is running. According to drive rating, this could be the only available setting.
- **[Always]** *r u n*, the fan is always activated.
- **[Economy]** *E C o*, the fan is activated only if necessary, according to the internal thermal state of the drive.
- **[Never]** *S E P*, If the software version is:
 - up to V1.6 (excluded), the fan of the drive is disabled.
 - V1.6 or higher, this selection has no effect. The operation of the fan is enabled when the motor is running.

NOTICE

OVERHEATING

Verify that the ambient temperature does not exceed 40 °C (104° F) if the fan is disabled.

Failure to follow these instructions can result in equipment damage.

Fan speed and **[Fan Operation Time]** *F P b t* are monitored values:


- An abnormal low speed of the fan triggers a warning **[Fan Feedback Warning]** *F F d R*.
- As soon as **[Fan Operation Time]** *F P b t* reach the predefined value of 45,000 hours, a warning **[Fan Counter Warning]** *F C t R* is triggered.

[Fan Operation Time] *F P b t* counter can be set to 0 by using the **[Time Counter Reset]** *r P r* parameter.

Graphic Display Terminal

Description of the Graphic Display Terminal (VW3A1111)

This Graphic Display Terminal is a local control unit which can be either plugged on the drive or mounted on the door of the wall-mounted or floor-standing enclosure. It has a cable with connectors, which is connected to the drive front Modbus serial link. The Graphic Display Terminal embeds a real time clock used for the time stamping of logged data and all other functions which require time information.

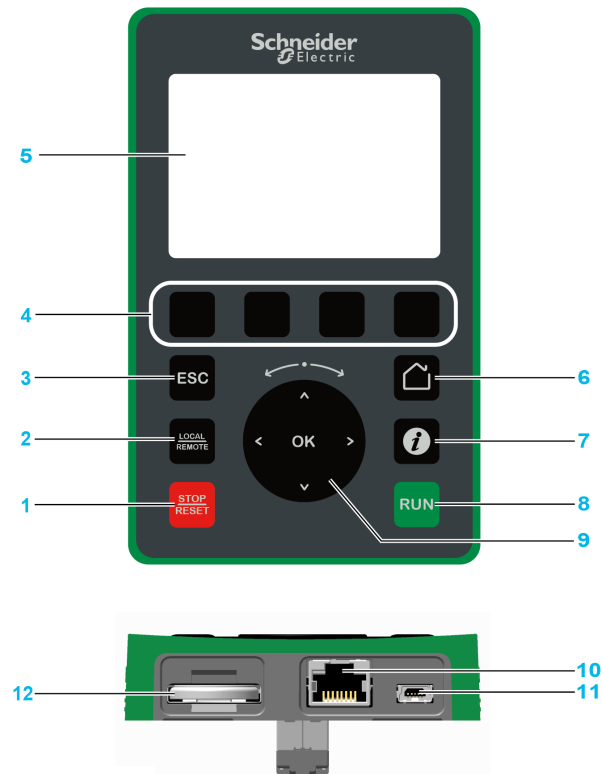

1 STOP / RESET: Stop command / apply a Fault Reset.

2 LOCAL / REMOTE: used to switch between local and remote control of the drive.

3 ESC: used to quit a menu/parameter or remove the currently displayed value in order to revert to the previous value retained in the memory

4 F1 to F4: function keys used to access drive id, QR code, quick view, and submenus. Simultaneous press of F1 and F4 keys generates a screenshot file in the Graphic Display Terminal internal memory.

5 Graphic display.

6 Home: used to access directly at the home page.

7 Information: used to have more information about menus, submenus, and parameters. The selected parameter or menu code is displayed on the first line of the information page.

8 RUN: executes the function assuming it has been configured.

9 Touch wheel / OK: used to save the current value or access the selected menu/parameter. The touch wheel is used to scroll fast into the menus. Up/down arrows are used for precise selections, right/left arrows are used to select digits when setting a numerical value of a parameter.


10 RJ45 Modbus serial port: used to connect the Graphic Display Terminal to the drive in remote control.

11 MiniB USB port: used to connect the Graphic Display Terminal to a computer.

12 Battery (10 years service life. Type: CR2032). The battery positive pole points to the front face of the Graphic Display Terminal.

NOTE: Keys 1, 8 and 9 can be used to control the drive if control via the Graphic Display Terminal is activated. To activate the keys on the Graphic Display Terminal, you first need to set **[Ref Freq 1 Config] F r 1** to **[Ref. Freq-Rmt.Term] L L L**.

Description of the Graphic Display

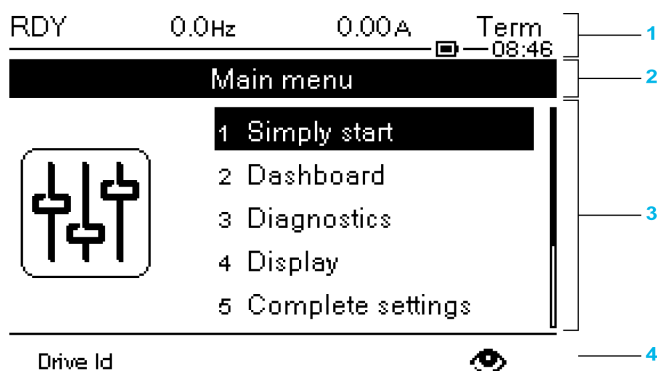

1 Display line: its content can be configured


2 Menu line: indicates the name of the current menu or submenu

3 Menus, submenus, parameters, values, bar charts, and so on, are displayed in drop-down window format on a maximum of five lines. The line or value selected by the navigation button is displayed in reverse video

4 Section displaying tabs (1 to 4 by menu), these tabs can be accessed using F1 to F4 keys


NOTE: The numbers in front of the menus and submenus in the graphic display terminal are different from chapters numbers in the programming manual.

Display line details:

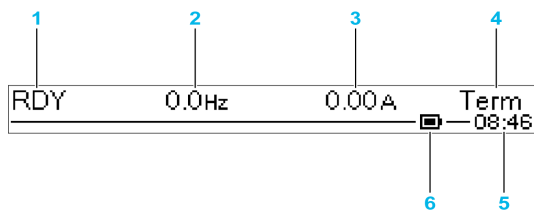

Key	
1	[Drive State] H Π , S
2	Customer defined
3	Customer defined
4	Active control channel <ul style="list-style-type: none"> • TERM: terminals • HMI: Graphic Display Terminal • MDB: integrated Modbus serial • CAN: CANopen® • NET: fieldbus module • ETH: integrated Ethernet • PWS: DTM based commissioning software
5	Present time
6	Battery level

Description of the Product Front LEDs

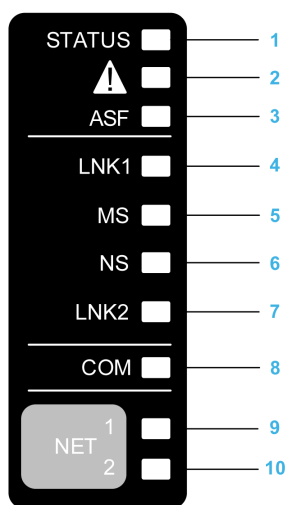

Following table provides the details of the drive status LEDs:

Item	LED	Color & status	Description
1	STATUS	OFF	Indicates that the drive is powered off
		Green flashing	Indicates that the drive is not running, ready to start
		Green blinking	Indicates that the drive is in transitory status (acceleration, deceleration, and so on)
		Green on	Indicates that the drive is running
		Yellow on	Device Visual identification function when using SoMove or the device DTM
2	Warning/Error	Red flashing	Indicates that the drive detected warning
		Red on	Indicates that the drive detected error
3	ASF	Yellow on	Indicates that the safety function is activated

Following table provides the details of the embedded Ethernet LEDs:

Item	LED	Color & status	Description
4	LNK1	OFF	No link.
		Green/Yellow flashing	Power on testing.
		Green on	Link established at 100 Mbit/s.
		Green flashing	Link established at 10 Mbit/s.
		Yellow flashing	Fieldbus activity at 100 Mbit/s.
		Yellow on	Fieldbus activity at 10 Mbit/s.
5	MS	OFF	No power is supplied to the device.
		Green/Red flashing	Power up testing.
		Green on	The device is operating correctly.
		Green flashing	The device has not been configured.
		Red flashing	The device has detected a recoverable minor detected error.
		Red on	The device has detected a non-recoverable major detected error.
6	NS	OFF	The device does not have an IP address or powered off.
		Green/Red flashing	Power on testing.
		Green on	A connection is established to control the command word.
		Green flashing	Device has a valid IP, but no command word connection.
		Red flashing	Duplicated IP.
		Red on	An established connection to control the command word is closes or timed out.
7	LNK2	OFF	No link.
		Green/Yellow flashing	Power on testing.
		Green on	Link established at 100 Mbit/s.
		Green flashing	Link established at 10 Mbit/s.
		Yellow flashing	Fieldbus activity at 100 Mbit/s.
		Yellow on	Fieldbus activity at 10 Mbit/s.

Following table provides the details of the embedded Modbus serial LEDs:

Item	LED	Color & status	Description
8	COM	Yellow flashing	Indicates embedded Modbus serial activity

Following table provides the details of the fieldbus module LEDs:

Item	LED	Color & status	Description
9	NET 1	Green/Red	for details, refer to the fieldbus manual (see related documents)
10	NET 2	Green/Red	for details, refer to the fieldbus manual (see related documents)

Graphic Display Terminal Connected to a Computer

NOTICE

INOPERATIVE PERIPHERAL EQUIPMENT

Do not connect equipment to the RJ45 port and to the USB port of the Graphic Display Terminal at the same time.

Failure to follow these instructions can result in equipment damage.

The Graphic Display Terminal is recognized as a USB storage device named SE_VW3A1111 while plugged on a computer.

This allows to access the saved drive configurations (*DRVCONF* folder) and the Graphic Display Terminal screenshots (*PRTSCR* folder).

Screenshots can be stored by a simultaneous press on *F1* and *F4* function keys

How To Update Language Files on the Graphic Display Terminal?




The Graphic Display Terminal (VW3A1111) language files can be updated:

- Download the latest version of language files here: [Languages_Drives_VW3A1111](#)
- Unzip the file and follow the instructions of the ReadMe text file.

How to customize the logo displayed at power on of the Graphic Display Terminal?

From the firmware version V2.0 of the Graphic Display Terminal, the logo displayed at power on by the Graphic Display Terminal can be customized. By default, the Schneider-Electric logo is displayed.

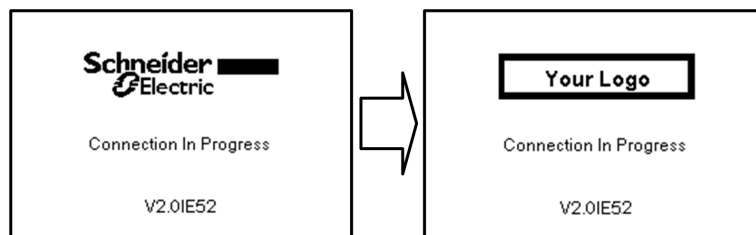

To modify the displayed logo, you must:

- Create your own logo and save it as a bitmap file (.bmp) with the name logo_init.bmp. The logo must be saved in black & white and the dimensions must be 137x32 pixels.
- Connect the Graphic Display Terminal to a computer via an USB cable.
- Copy your logo (logo_init.bmp) in the folder KPCONFIG of the Graphic Display Terminal.

At next power on of the Graphic Display Terminal connected to the drive, your own logo should be displayed.

If the logo of Schneider-Electric is still displayed, verify the characteristics of your file and the location where it has been copied.

Multipoint Screen

Overview

Generally, a Graphic Display Terminal is connected to only one drive. However, communication is possible between a Graphic Display Terminal and several Altivar drives (ATV320, ATV340, ATV600, and ATV900) connected on the same Modbus serial fieldbus via the RJ45 port (HMI or Modbus serial). In such a case, the multipoint mode is automatically applied on the Graphic Display Terminal.

The multipoint mode allows you to:

- Have an overview of all the drives connected on the fieldbus (drive state and two selected parameters).
- Access to all the menus of each drive connected on the fieldbus.
- Command a stop on all the connected drives with the STOP/RESET key (irrespective of the present screen displayed). The type of stop can be individually configured on each drive with the parameter **[Stop Key Enable]** *P 5 E* in the menu **[Command and Reference]** *C r P -* , page 205.

Apart the Stop function linked to the STOP/RESET key, the multipoint mode does not allow to apply a Fault Reset and command the drive via the Graphic Display Terminal: in multipoint mode, the Run key and the Local/Remote key are deactivated.


Prerequisites

To use the multipoint mode:

- The Graphic Display Terminal software version must be equal to or higher than V2.0.
- For each drive, the command channel and the reference channel must be set in advance to a value different from **[Ref.Freq-Rmt.Term]** *L C C* , page 205.
- The address of each drive must be configured in advance to different values by setting the parameter **[Modbus Address]** *A d d* in the **[Modbus Fieldbus]** *M d I -* , page 581.
- If the connection to the drive is done via the HMI RJ45 port, the parameter settings in **[Modbus HMI]** *M d E -* must be compliant with the Graphic Display Terminal usage , page 587.
- If the connection to the drive is done via the Modbus serial RJ45 port, the parameter settings in **[Modbus Fieldbus]** *M d I -* must be compliant with the Graphic Display Terminal usage , page 581.


Example of Installation Topology

The following figure gives a topology example using four drives, a Modbus “T” tap-off (VW3A8306TF03) and one Graphic Display Terminal (VW3A1111) linked to one Modbus splitter block (LU9GC3):

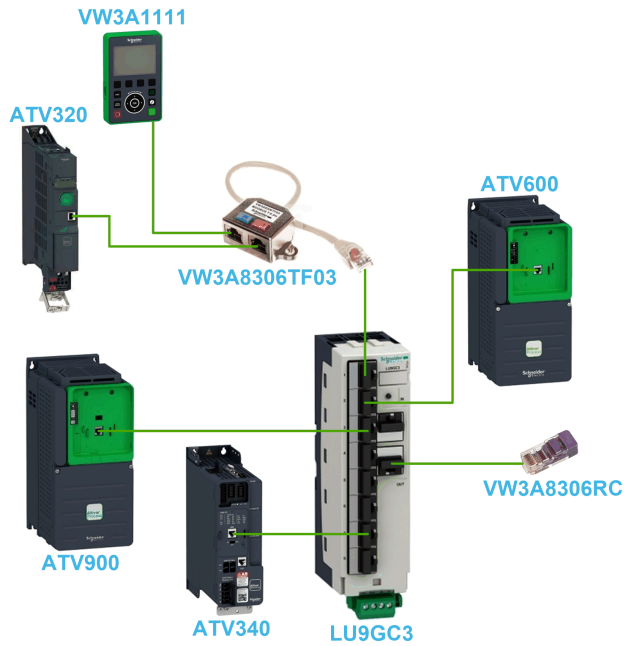

Screens for Multipoint Mode

The following figure gives the browsing between the different screens linked to the multipoint mode:

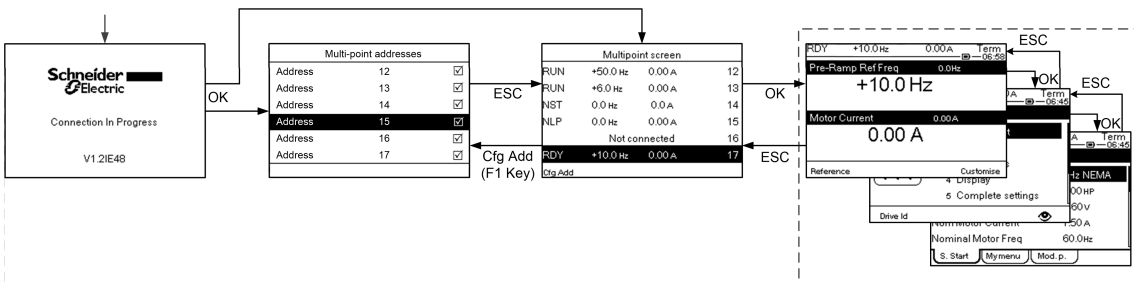

On the fieldbus common with the Graphic Display Terminal, if two or more drives are powered on, you access to the **[connection in progress]** screen. If there is no address selected by the Graphic Display Terminal or no recognized address, the Graphic Display Terminal is locked on this screen. Press OK key to access to the **[Multi-point Addresses]** screen. Otherwise, if there are addresses-selected and one of them have been recognized by the Graphic Display Terminal, the screen switches automatically to **[Multipoint screen]**.

The **[Multi-point Addresses]** screen allows to select, by pressing OK key, the addresses of the drives you want to connect with. Up to 32 addresses can be selected (address setting range: 1...247). When all the addresses have been selected, press ESC key to access to the **[Multipoint screen]**.

NOTE: To help to prevent a low refresh rate of the Graphic Display Terminal screen, do not select addresses that are not corresponding to drive addresses.

On the **[Multipoint screen]**, the touch wheel is used to navigate between the drive overviews. Access to the menus of the selected drive by pressing OK key. Return to the **[Multipoint screen]** by pressing ESC key.




NOTE: To access the **[Multi-point Addresses]** screen from the **[Multipoint screen]**, press F1 key.

If a drive triggers an error, the Graphic Display Terminal goes automatically to the **[Multipoint screen]** on the overview of the latest drive who has triggered an error.

The two parameters given in the drive overview can be modified individually on each drive in **[Param. Bar Select] [PbS-]** menu , page 607.

Structure of the Parameter Table

General Legend

Pictogram	Description
	These parameters only appear if the corresponding function has been selected in another menu. When the parameters can also be accessed and adjusted from within the configuration menu for the corresponding function, their description is detailed in these menus, on the pages indicated, to aid programming.
	Setting of this parameter can be done during operation or when stopped. NOTE: It is advisable to stop the motor before modifying any of the settings.
	To modify the assignment of the parameter, reinforced validation is required.

Parameter Presentation

Below is an example of a parameter presentation:

[Sample Menu] C o d E – Menu

Access

Parameters described below can be accessed by:

[Path] → [Sub-path]

About this menu

Description of the menu or function

[Parameter1] C o d E 1

Description of the parameter

Example of a table with a setting range:

Setting ()	Description
0.0... 10,000.0	Setting range Factory setting: 50.0

[Parameter2] C o d E 2

Description of the parameter

Example of a table with a list of choices:

Setting ()	Code / Value	Description
[50 Hz IEC]	5 0	IEC Factory setting
[60 Hz NEMA]	6 0	NEMA

Finding a Parameter in This Document

With the Graphic Display Terminal

Select the required parameter and press .

The parameter code is displayed at the top of the information window.

Example: **[Acceleration]** code is *R C C*.

With the Manual

It is possible to use either the parameter name or the parameter code to search in the manual the page giving details of the selected parameter.

Difference Between Menu and Parameter

A dash after menu and submenu codes is used to differentiate menu commands from parameter codes.

Example:

Level	Name	Code
Menu	[Ramp]	<i>r R P P -</i>
Parameter	[Acceleration]	<i>R C C</i>

Cyber Security

What's in This Chapter

Cyber Security	42
----------------------	----

Cyber Security

Introduction

Cyber Security is a branch of network administration that addresses attacks on or by computer systems and through computer networks that can result in accidental or intentional disruptions.

The objective of Cyber Security is to help provide increased levels of protection for information and physical assets from theft, corruption, misuse, or accidents while maintaining access for their intended users.

No single Cyber Security approach is adequate. Schneider Electric recommends a defense-in-depth approach. Conceived by the **National Security Agency (NSA)**, this approach layers the network with security features, appliances, and processes.

The basic components of this approach are:

- Risk assessment
- A security plan built on the results of the risk assessment
- A multi-phase training campaign
- Physical separation of the industrial networks from enterprise networks using a demilitarized zone (DMZ) and the use of firewalls and routing to establish other security zones
- System access control
- Device hardening
- Network monitoring and maintenance

This chapter defines the elements that help you configure a system that is less susceptible to cyber attacks.

For detailed information on the defense-in-depth approach, refer to the TVDA: **How Can I Reduce Vulnerability to Cyber Attacks in the Control Room (STN V2)** on the Schneider Electric website.

To submit a Cyber Security question, report security issues, or get the latest news from Schneider Electric, visit the Schneider Electric website.

Password Management


Ethernet channels, allowing the access to the configuration of the drive, are secured by a password. A password is required in case of:

- Webserver access , page 611
- Access via PC software tools provided by Schneider-Electric (such as SoMove FDT / DTM)

By default, the password policy is the following:

- A total of eight characters
- At least one upper-case letter,
- At least one lower-case letter,
- At least one special character (for example, @, #, \$),
- No blank character.

At the first connection, a dialog box is displayed (see the figure below) requiring the modification of the default password. This dialog box will continue to be displayed at each connection until a password is defined.

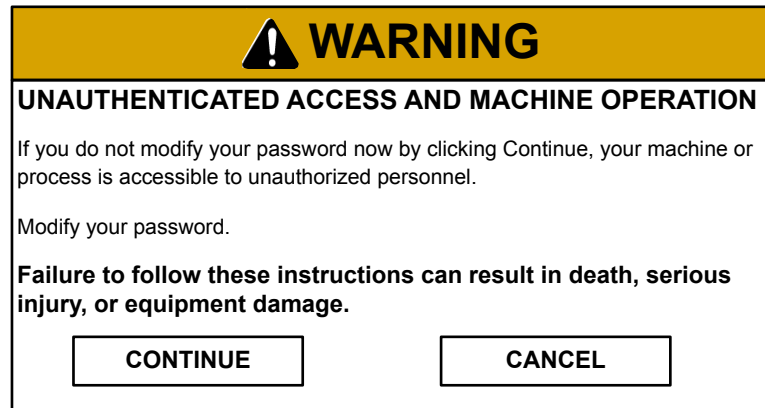

Additionally:

- The system can be secured with a drive password to access the drive configuration and parameter visibility. The password must contain six characters (blanks are allowed) , page 602.
- The device topology can be secured to a password. This password must contain four digits .

Note: After five unsuccessful login attempts, the access must be reactivated by the administrator. Schneider Electric recommends to:

- Modify the password every 90 days
- Use a dedicated password (not related to your personal password)

Note: No responsibility is assumed by Schneider Electric for any consequences if anyone hacks your product password and if you use the same password for personal usage.

Backing-up and Restoring the Software Configuration

To protect your data, Schneider Electric recommends backing-up the device configuration and keeping your backup file in a safe place. The backup is available in the device DTM, using "load from device" and "store to device" functions.

Remote Access to the Drive

When remote access is used between a device and the drive, ensure your network is secure (VPN, Firewall...).

Machines, controllers, and related equipment are usually integrated into networks. Unauthorized persons and malware may gain access to the machine as well as to other devices on the network/fieldbus of the machine and connected networks via insufficiently secure access to software and networks.

⚠ WARNING

UNAUTHORIZED ACCESS TO THE MACHINE VIA SOFTWARE AND NETWORKS

- In your hazard and risk analysis, consider all hazards that result from access to and operation on the network/fieldbus and develop an appropriate cyber security concept.
- Verify that the hardware infrastructure and the software infrastructure into which the machine is integrated as well as all organizational measures and rules covering access to this infrastructure consider the results of the hazard and risk analysis and are implemented according to best practices and standards covering IT security and cyber security (such as: ISO/IEC 27000 series, Common Criteria for Information Technology Security Evaluation, ISO/IEC 15408, IEC 62351, ISA/IEC 62443, NIST Cybersecurity Framework, Information Security Forum - Standard of Good Practice for Information Security, SE recommended Cybersecurity Best Practices*).
- Verify the effectiveness of your IT security and cyber security systems using appropriate, proven methods.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

(*) : SE Recommended Cybersecurity Best Practices can be downloaded on SE.com

Data Flow Restriction

To secure the access to the drive and limit the data flow, the use of a firewall device is required.

ConneXium Tofino Firewall Product

The ConneXium TCSEFEA Tofino Firewall is a security appliance that provides levels of protection against cyber threats for industrial networks, automation systems, SCADA systems, and process control systems.

This Firewall is designed to permit or deny communications between devices connected to the external network connection of the Firewall and the protected devices connected to the internal network connection.

The Firewall can restrict network traffic based on user defined rules that would permit only authorized devices, communication types and services.

The Firewall includes built-in security modules and an off-line configuration tool for creating secure zones within an industrial automation environment.

Control Command Restriction

To prevent unauthorized use of the command of the drive, it is possible to grant access to a limited number of IP address using the IP master parameter.

The parameter IP Master defines which device can command with the device. This parameter is available in the device DTM.

Deactivation of unused functions

To avoid unauthorized access, it is advisable to deactivate unused functions.

Example: WebServer, Fast Device Replacement ...

Programming

What's in This Part

[Simply start] <i>S Y S</i> -	46
[Dashboard] <i>d S H</i> -	50
[Diagnostics] <i>d i A</i> -	57
[Display] <i>Π ο ο</i> -	66
[Complete settings] <i>Γ S E</i> -	125
[Communication] <i>Γ ο Π</i> -	580
[File management] <i>F Π E</i> -	594
[My preferences] <i>Π Υ Ρ</i> -	601

[Simply start] 5 4 5 -

What's in This Chapter

[Simply start] 5 1 1 - Menu	47
[My menu] 1 4 1 1 - Menu	49
[Modified parameters] 1 1 1 - Menu	49

Introduction



[Simply start] 5 4 5 - menu contains 3 tabs for quick access to mains features:

- Simply Start tab which gives a quick access to basic parameters to set.
- My Menu tab which is a user-defined menu for quick access to specific parameters.
- Modified Parameters tab which gives a quick access to the 10 last modified parameters.

[Simply start] 5 , 7 - Menu

Access

[Simply start] → [Simply start]

About This Menu

⚠ WARNING

LOSS OF CONTROL

- Fully read and understand the manual of the connected motor.
- Verify that all motor parameters are correctly set by referring to the nameplate and the manual of the connected motor.
- If you modify the value of one or more motor parameters after having performed autotuning, the value of **[Tune selection] STUN** and/or **[Rotation Tune Select] STUR** is reset to **[Default] TAB** and you must re-perform autotuning.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

This menu provides a quick access to basic parameters to set in case of a single asynchronous motor in open loop control.

NOTE: On Graphic Display Terminal (VW3A1111), **[Simply start] 5 , 7 -** is the first tab displayed in the **[Simply start] 5 4 5 -** menu (the tab name is "S. Start").

For more information on the setting of the parameters present in this menu or to set your drive in another use case (such as synchronous motor and/or with specific functions) refer to **[Complete settings] 5 5 5 -** menu.

NOTE: To help set basic parameters of the drive, a dedicated view exists in SoMove/DTM.

The following table shows a standard procedure for a simply start configuration of the drive used with an asynchronous motor in open loop control. This procedure only uses the basic parameters that can be accessed in this menu:

Step	Parameter	Menu	Description	Factory setting
1 – Motor Standard	[Motor Standard] <i>b F r</i> ⁽¹⁾	[Data] <i>Π Ε Δ -</i>	Help to preset the drive parameters and units according to the standard 50 Hz IEC or 60 Hz NEMA. NOTE: First parameter to modify. Otherwise, the drive configuration must be performed again.	[50 Hz] <i>5 0</i> ⁽⁷⁾
2 – Motor nameplate	[Nominal Motor Power] <i>n P r</i> ⁽¹⁾	[Data] <i>Π Ε Δ -</i>	Set these parameters according to the motor nameplate. By default, [Motor 1 Cosinus Phi] <i>ϕ 5</i> does not need to be entered. To enter the motor nameplate using <i>ϕ 5</i> , the parameter [Motor param choice] <i>Π Ρ ς</i> must be set to [Mot Cosinus] <i>ϕ 5</i> . In this case, [Nominal motor power] <i>n P r</i> does not need to be entered.	- ⁽⁴⁾
	[Nom Motor Voltage] <i>u n 5</i> ⁽¹⁾			- ⁽⁴⁾
	[Nom Motor Current] <i>n I r</i> ⁽¹⁾			- ⁽⁴⁾
	[Nominal Motor Freq] <i>F r 5</i> ⁽¹⁾			50 Hz ⁽⁶⁾
	[Nominal Motor Speed] <i>n 5 P</i> ⁽¹⁾			- ⁽⁴⁾
	[Motor 1 Cosinus Phi] <i>ϕ 5</i> ^{(1) (2)}			- ⁽⁴⁾
	[Motor Th Current] <i>i t H</i>			- ⁽⁴⁾
3 – Type of wiring	[2/3–Wire Control] <i>ε ς ς</i>	[Com- mand and reference] <i>ς ρ ρ -</i>	Select between 2-wire and 3-wire control.	[2–Wire Control] <i>ς ς</i>
4 – Maximum motor frequency	[Max Frequency] <i>ε F r</i>	[Data] <i>Π Ε Δ -</i>	Maximum output frequency.	60 Hz ⁽⁵⁾
5 – Standstill motor tune	[Autotuning] <i>ε υ n</i>	[Motor tune] <i>Π Ε υ -</i>	Use to perform a standstill motor tune (autotuning) to measure internal motor characteristics. Set [Autotuning] <i>ε υ n</i> to [Apply Autotuning] <i>υ ε 5</i> in order to start the standstill motor tune. <i>ε υ n</i> and <i>5 ε υ n</i> are used to monitor the tune status. NOTE: If you modify the value of one or more motor parameters after having performed autotuning, you must re-perform autotuning.	[No Action] <i>n 0</i>
	[Autotuning Status] <i>ε υ 5</i>			[Not Done] <i>ε Α β</i> ⁽³⁾
	[Tune Selection] <i>5 ε υ n</i>			[Default] <i>ε Α β</i> ⁽³⁾
6 – Dynamics and limits of the reference	[Acceleration] <i>Α ς ς</i>	[Ramp] <i>ρ Α Π Ρ -</i>	Time to accelerate from 0 Hz to [Nominal Motor Freq] <i>F r 5</i> and time to decelerate from [Nominal Motor Freq] <i>F r 5</i> to 0 Hz. NOTE: To have a repeatability in the ramps, the value of these parameters must be set according to the possibility of the application (for example the inertia must be considered).	3.0 s
	[Deceleration] <i>Δ Ε ς</i>			3.0 s
	[Low Speed] <i>Λ 5 Ρ</i>	[Speed limits] <i>5 Λ Π -</i>	Minimum motor frequency reference.	0.0 Hz
	[High Speed] <i>Η 5 Ρ</i>		Maximum motor frequency reference.	50.0 Hz ⁽⁶⁾

(1): This parameter can only be accessed with asynchronous motor control law.
 (2): The access to this parameter depends on [Motor Param Choice] *Π Ρ ς*. This parameter can be accessed in [Data] *Π Ε Δ -* menu.
 (3): Read-only parameter.
 (4): The factory setting, the unit and/or the increment is impacted by the drive rating and/or [Motor Standard] *b F r*.
 (5): The factory setting value is changed to 72 Hz if [Motor Standard] *b F r* is set to [60 Hz NEMA] *6 0*.
 (6): The factory setting value is changed to 60 Hz if [Motor Standard] *b F r* is set to [60 Hz NEMA] *6 0*.
 (7): The factory setting value is changed to [60 Hz NEMA] *6 0* for ATV●30●●●S6● catalog numbers.

[My menu] П 9 П П - Menu

Access

[Simply start] ➔ [My menu]

About This Menu

This menu contains the parameters selected in the [My menu config.] П 9 П - Menu, page 606.

NOTE: This menu is empty by default.

[Modified parameters] L П П - Menu

Access

[Simply start] ➔ [Modified parameters]

About This Menu

This menu gives a quick access to the 10 last modified parameters.

[Dashboard] d S H -

What's in This Chapter

[System] d S L - Menu.....	51
[Dashboard] d S H - Menu	53
[kWh Counters] K W L - menu.....	54
[Dashboard] d S H - Menu	56

Introduction



[Dashboard] d S H - menu contains tabs for quick access to system and display features:

- System tab to configure the main system parameters.
- Energy tab which provides a complete access for instantaneous power counters and energy reports by means of graphics on the Graphic Display Terminal.

[System] d S t - Menu

Access

[Dashboard] → [System]

[Pre-Ramp Ref Freq] F r H

Frequency reference before ramp (signed value).

Actual frequency reference linked to the motor regardless of which channel for reference value has been selected. This parameter is in read-only mode.

Setting	Description
-[High Speed] H S P...[High Speed] H S P Hz	Setting range Factory setting: –

[Drive State] H n , 5

Drive state.

Setting	Code / Value	Description
[Autotuning]	t u n	Autotuning
[In DC inject.]	d C b	DC Injection
[Ready]	r d y	Drive ready
[Freewheel]	n S t	Freewheel stop control
[Running]	r u n	Motor in steady state or run command present and zero reference
[Accelerating]	A C C	Acceleration
[Decelerating]	d E C	Deceleration
[Current limitation]	C L i	In current limitation
[Fast stop]	F S t	Fast stop
[No Mains Voltage]	n L P	Control is powered on but the DC bus is not loaded
[control.stop]	C t L	Controlled stop
[Dec. adapt.]	a b r	Adapted deceleration
[Output cut]	S o C	Stand by output cut
[Undervoltage Warning]	u S A	Undervoltage warning
[“Operating State “Fault”“]	F L t	Product has detected an error
[DCP Flashing Mode]	d C P	DCP flashing mode
[STO Active]	S t o	Safe Torque Off active
[Energy Saving]	i d L E	Idle stop and go mode
[Firmware Update]	F W u P	Firmware update

Setting	Code / Value	Description
[Angle test]	R S R	Angle setting
[AFE Mains Undervoltage]	u r R	Displayed if the voltage applied on the Active Front End power brick exceeds the [Mains Voltage] u r E S, the drive stops on [Freewheel Stop] n S t.

[Motor Current] L C r

Motor current.

Setting	Description
According to drive rating	Setting range Factory setting: –

[Motor speed] S P d

Motor speed in rpm.

This parameter displays the estimated rotor speed without motor slip.

Setting	Description
0...65,535 rpm	Setting range Factory setting: –

[Motor Therm state] t H r

Motor thermal state.

The nominal motor thermal state is 100%, the [Motor Overload] o L F threshold is set to 118%.

Setting	Description
0...200%	Setting range Factory setting: –

[Dashboard] d S H - Menu

Access

[Dashboard]

[Trq/Spd] L E S

Displays the torque versus speed curve.

[kWh Counters] K W C - menu

Access

[Dashboard] → [kWh Counters]

About This Menu

This menu presents many energy objects available for instantaneous data and kW consumption reports.

It offers the possibility to display logged data with graphics by pressing the F4 function key.

[Elc Energy Cons] 0 C 4 ★

Electrical energy consumed by the motor in TWh.

This parameter can be accessed if **[Elc energy cons(TWh)] 0 C 4** is not set to 0.

Setting	Description
0...999 TWh	Setting range Factory setting: Read Only

[Elc Energy Cons] 0 C 3 ★

Electrical energy consumed by the motor in GWh.

Setting	Description
0...999 GWh	Setting range Factory setting: Read Only

[Elc Energy Cons] 0 C 2 ★

Electrical energy consumed by the motor in MWh.

Setting	Description
0...999 MWh	Setting range Factory setting: Read Only

[Elc Energy Cons] 0 C 1 ★

Electrical energy consumed by the motor in kWh.

Setting	Description
0...999 kWh	Setting range Factory setting: Read Only

[Elc Energy Cons] 0 C 0 ★

Electrical energy consumed by the motor in Wh.

Setting	Description
0...999 Wh	Setting range Factory setting: Read Only

[Acv Elc Out Pwr Estm] E P r W

Active electrical output power estimation.

Setting	Description
-32,767...32,767	Setting range Value in kW or HP according to [Motor Standard] b F r setting Factory setting: Read Only

[Elc Egy Today] o C t

Electrical energy consumed today by the motor in kWh.

Setting	Description
0...4,294,967,295 kWh	Setting range in kWh Factory setting: Read Only

[Elc Egy Yesterday] o C y

Electrical energy consumed yesterday by the motor in kWh.

Setting	Description
0...4,294,967,295 kWh	Setting range in kWh Factory setting: Read Only

[Dashboard] d S H - Menu

Access

[Dashboard]

About This Menu

Using **F4** function key on the Graphic Display Terminal, it is possible to select one of the following view for the **[Energy]** tab.

[Instant kW Trend] C V I

Displays the instantaneous electrical energy curve at the drive output.

[Daily kWh Report] H S d

Displays the daily energy histogram.

[Weekly kWh Report] H S W

Displays the weekly energy histogram.

[Monthly kWh Report] H S M

Displays the monthly energy histogram.

[Yearly kWh Report] H S Y

Displays the yearly energy histogram.

[Diagnostics] *d* , *A* -

What's in This Chapter

[Diag. data]	58
[Error history] <i>P F H</i> - Menu	61
[Warnings] <i>A L r</i> - Menu	65

Introduction



[Diagnostics] *d* , *A* - menu presents drive and application data useful when diagnostics is required.

[Diag. data]

[Diag. data] *d d t* - Menu

Access

[Diagnostics] → [Diag. data]

About This Menu

This menu presents the last warning and detected error in addition to drive data.

[Last Warning] *L R L r*

Last warning which occurred.

The list of warning codes is available in the chapter "Warning Codes, page 623.

[Last Error] *L F t*

Last error which occurred.

The list of error codes is available in the chapter Error Codes, page 626.

[Identification Error] *i n F t* ★

Identification Error (inF6).

This parameter can be accessed if [Last Error] *L F t* is [Identification Error] *i n F t*.

Setting	Description
0...12 (value in Hex.)	0x00 : No error detected 0x01 : No response of the option module 0x02 : Signature reception timeout 0x03 : ACK reception timeout 0x04 : Signature length 0x05 : CheckSum 0x06 : Unknown state 0x07 : UART receive 0x08 : Unknown protocol version 0x09 : Unknown module type 0x0A : More than 5 unsuccessful tries 0x0B : Unknown module type 0x0C : Option module not supported by the slot 0x0D : Same option module in more than one slot 0x0E : O1SV not received 0x0F : O1SV option module software version not compatible 0x10 : reserved 0x11 : reserved 0x12 : Control terminal module not present or not recognized Factory setting: –

[Internal Error 19] i n F J ★

Encoder module error code.

This parameter can be accessed if [Last Error] L F E is [Internal Error 19] i n F J.

Setting	Description
0...65,535	Setting Range Factory setting: –

[Encoder Fdbck Error] E n C E ★

Encoder feedback error code.

This parameter can be accessed if [Last Error] L F E is [Encoder Feedback Loss] S P F.

Setting	Description
0...65,535	Setting range Encoder error Id 1: Encoder power supply overcurrent 10: AB encoder: A-line disconnected 11: AB encoder: B-line disconnected 12: AB encoder: tracking error 13: AB encoder: spike error 20: Resolver: LOS error 21: Resolver: DOS error 22: Resolver: LOT error 30: SinCos: loss of signal 31: SinCos: loss of signal 32: SinCos: tracking error 33: SinCos: spike error 40: Hiperface: timeout while waiting for response and retry exceeded 41: Hiperface: encoder type is not known and can not be read from encoder EEPROM 42: Hiperface: Hiperface command GetAbsolutePosition error 43: Hiperface: checksum error detected and retry exceeded 50: Endat: communication error 51: Endat: encoder not connected 52...56: Endat: error reading EnDat21 parameter 57: Endat: encoder does not support EnDat22 58: Endat: runtime compensation procedure 59: Endat: runtime compensation procedure 60: Endat: error in cyclic communication Factory setting: –

[Nb Of Start] n S n

Number of motor starts (resettable).

Setting	Description
0...4,294,967,295	Setting range Factory setting: 0

[Motor Run Time] r E H H

Motor run time.

Run elapsed time display (resettable) in 0.1 hours (length of time the motor has been switched on).

Setting	Description
0.0...429,496,729.5 h	Setting range Factory setting: _

[Service message] S E r - menu

This menu presents the service message.

This service message is defined using **[My preferences] P Y P -> [Customization] C u S -> [Service messages] S E r - menu.**

[Other State] S S E - menu

This menu shows the list of present secondary states.

For more information refer to **[Display] P o n -> [Other state] S S E - .**

[Diagnostics] d R u - menu

This menu allows to make simple test sequences for diagnostics such as Fan(s), HMI LED(s) and IGBT(s) diagnostics.

For more information refer to **[Complete setting] C S E -> [Maintenance] C S P R -> [Diagnostics] d R u - .**

[Identification] o , d - menu

This is a read-only menu that cannot be configured. It enables the following information to be displayed:

- Drive reference, power rating, and voltage
- Drive software version
- Drive serial number
- Type of option modules present, with their software version
- Graphic Display Terminal type and version.

[Error history] P F H - Menu

[Error history] P F H - Menu

Access

[Diagnostics] → [Error history]

About This Menu

This menu shows the 15 last detected errors (d P I to d P F).

Pressing OK key on the selected error code in the Error history list displays the drive data recorded when the error has been detected.

NOTE: Same content for [Last Error 1] d P I to [Last Error F] d P F .

[Last Error 1] d P I

Last error 1.

Identical to [Last Error] L F E .

[Drive State] H S I

HMI status.

Identical to [Drive State] H Π , 5 , page 51.

[Last Error 1 Status] E P I

Status of last error 1.

DRIVECOM status register (same as [ETA state word] E E R).

[ETI state word] , P I

ETI state word.

ETI status register (see the communication parameter file).

[Cmd word] C Π P I

Cmd word.

Command register (same as [Cmd word] C Π d).

[Motor current] L C P I

Motor current (same as [Motor Current] L C r).

Setting	Description
0...2*In ⁽¹⁾	Setting range Factory setting: _
(1) Corresponding to the rated drive current indicated in the installation manual and on the drive nameplate.	

[Output frequency] $r F P I$ Output frequency (same as **[Output frequency] $r F r$**).

Setting	Description
-3,276.7...3,276.7 Hz	Setting range Factory setting: _

[Elapsed Time] $r t P I$

Elapsed time.

Setting	Description
0...65,535 h	Setting range Factory setting: _

[DC bus voltage] $v L P I$ DC bus voltage (same as **[DC bus voltage] $v b v S$**).

Setting	Description
0...6,553.5 Vdc	Setting range: [No meas.] $v L n u n K$ is displayed if no value is measured. Factory setting: _

[Motor therm state] $t H P I$ Motor thermal state (same as **[Motor Therm state] $t H r$**).

Setting	Description
0...200%	Setting range Factory setting: _

[Command Channel] $d C C I$ Command channel (same as **[Command channel] $C n d C$**).

Setting	Code / Value	Description
[Terminals]	$t E r$	Terminal block
[Ref. Freq-Rmt. Term]	$L C C$	Graphic Display Terminal
[Modbus]	$n d b$	Modbus serial
[CANopen]	$C n n$	CANopen
[Com. Module]	$n E t$	Fieldbus module
[Ethernet Module]	$E t h$	Embedded Ethernet
[PC tool]	$P W S$	DTM based commissioning software

[Ref Freq Channel] $d r C I$ Channel for reference frequency (same as **[Ref Freq Channel] $r F C C$**).

Identical to [Command channel] d C C I , page 62.

[Motor Torque] o t P I

Estimated motor torque value (same as [Motor Torque] o t r).

NOTE: The displayed value is always positive in motor mode and negative in generator mode whatever the direction.

Setting	Description
-300...300%	Setting range Factory setting: _

[Drive Thermal State] t d P I

Measured drive thermal state (same as [Drive Therm State] t H d).

Setting	Description
0...200%	Setting range Factory setting: _

[IGBT Junction Temp] t J P I

Estimated junction temperature value.

Setting	Description
0...255°C	Setting range Factory setting: _

[Switching Frequency] S F P I

Switching frequency applied (related to [Switching Frequency] S F r).

Setting	Description
0...65,535 Hz	Setting range Factory setting: _

[Power Brick Error ID] b P , I

Power Brick error ID

The value displayed is the bit number of the brick with actual error, starting with number 1 on the right side.

Setting	Description
0...255	Setting range Factory setting: _

[AFE Power brick error ID] b F , I

Active Front End brick error ID

The value displayed is the bit number of the brick with actual error, starting with number 1 on the right side.

Setting	Description
0...65535	Setting range Factory setting: _

[Last Error 2] d P 2 to [Last Error F] d P F

Last error 2... Last error F

Identical to **[Last Error1] d P 1**, page 61.

[Warnings] *A L r* - Menu

[Actual warnings] *A L r d* - Menu

Access

[Diagnostics] → [Warnings] → [Actual warnings]

About This Menu

List of current warnings.

If a warning is active, ✓ and  appears on the Graphic Display Terminal.

List of Available Warnings

The list of warning codes is available in the chapter "Diagnostics and Troubleshooting".

[Warning group 1 definition] *A I C* - to [Warning group 5 definition] *A 5 C* - Menus

Access

[Diagnostics] → [Warnings] → [Warning group 1 definition] to [Warning group 5 definition]

About This Menu

The following submenus group the warnings into 1 to 5 groups, each of which can be assigned to a relay or a digital output for remote signaling.

When one or a number of warnings selected in a group occurs, this warning group is activated.

List of Warnings

The list of warning codes is available in the chapter "Diagnostics and Troubleshooting".

[Warnings] *A L r* - Menu

Access

[Diagnostics] → [Warnings]

About This Menu

This menu presents the warning history (30 past warnings).

[Warning History] *A L H*

Identical to [Last warning] *L A L r* .

[Display] Π ο ς -

What's in This Chapter

[Energy parameters].....	67
[Application parameters].....	74
[Pump parameters] - [Variable speed pump].....	75
[M/S parameters].....	76
[Motor parameters].....	80
[Drive parameters].....	83
[Thermal monitoring].....	88
[PID display].....	89
[Counter management].....	90
[Other state].....	94
[I/O map].....	95
[Communication map].....	99
[Data logging].....	120
[Braking Unit Option].....	124

Introduction



[Display] Π ο ς - menu shows monitoring data related to the drive and the application.

It offers an application-oriented display in terms of energy, cost, cycle, efficiency, ...

This is available with customized units and graphics view.

[Energy parameters]

[Elec Ener Input Counter] $E L \text{ , - Menu}$

Access

[Display] → [Energy parameters] → [Elec Ener Input Counter]

About This Menu

This menu presents the input electrical energy data.

NOTE: On Altivar Process range, except for ATV980 and ATV9B0 products, the power and energy parameters are estimated based on the output current of the drive. For ATV980 and ATV9B0 products, the power and energy parameters are measured.

[Active Input Power] $\text{, } P r W$

Active electrical input power.

Setting	Description
According to the drive rating	Setting range in kW if [Motor Standard] b F r is set to [50Hz IEC] 5 0 or in HP if [Motor Standard] b F r is set to [60Hz NEMA] 6 0 Factory setting: _

[Input Reactive Power] $\text{, } Q r W$

Reactive electrical input power.

This parameter can be accessed on ATV980 and ATV9B0

Setting	Description
According to the drive rating	Setting range in kW if [Motor Standard] b F r is set to [50Hz IEC] 5 0 or in HP if [Motor Standard] b F r is set to [60Hz NEMA] 6 0 Factory setting: _

[Input Power Factor] $P W F$

Mains input power factor.

This parameter can be accessed on ATV980 and ATV9B0

Setting	Description
According to the drive rating	Setting range displayed as a percentage Factory setting: _

[Real Input Energy] $\text{, } E 4 \star$

Input electrical power consumed (TWh).

This parameter can be accessed if **[Real Input Energy] $\text{, } E 4$** is not set to 0.

Setting	Description
-999...999 TWh	Setting range Factory setting: _

[Real Input Energy] , E 3 ★

Input electrical power consumed (GWh).

Setting	Description
-999...999 GWh	Setting range Factory setting: _

[Real Input Energy] , E 2 ★

Input electrical power consumed (MWh).

Setting	Description
-999...999 MWh	Setting range Factory setting: _

[Real Input Energy] , E 1 ★

Input electrical power consumed (kWh).

Setting	Description
-999...999 kWh	Setting range Factory setting: _

[Real Input Energy] , E 0 ★

Input electrical power consumed (Wh).

Setting	Description
-999...999 Wh	Setting range Factory setting: _

[Elec Ener Output Counter] E L 0 - Menu**Access****[Display] → [Energy parameters] → [Elec Ener Output Counter]****About This Menu**

This menu presents the output electrical energy data.

[Acv Elc out pwr estm] E P r W

Active electrical output power estimation.

Setting	Description
According to the drive rating	Setting range in kW if [Motor Standard] b F r is set to [50Hz IEC] 5 0 or in HP if [Motor Standard] b F r is set to [60Hz NEMA] 6 0 Factory setting: _

[Real Consumption] □ E 4★

Electrical energy consumed (TWh).

This parameter can be accessed if **[Real Consumption] □ E 4** is not set to 0.

Setting	Description
-999...999 TWh	Setting range Factory setting: _

[Real Consumption] □ E 3

Electrical energy consumed (GWh).

Setting	Description
-999...999 GWh	Setting range Factory setting: _

[Real Consumption] □ E 2

Electrical energy consumed (MWh).

Setting	Description
-999...999 MWh	Setting range Factory setting: _

[Real Consumption] □ E 1

Electrical energy consumed (kWh).

Setting	Description
-999...999 kWh	Setting range Factory setting: _

[Real Consumption] □ E 0

Electrical energy consumed (Wh).

Setting	Description
-999...999 Wh	Setting range Factory setting: _

[Elc Egy Today] □ E E

Electrical energy consumed today by the motor (kWh).

Setting	Description
0...4,294,967,295 kWh	Setting range Factory setting: _

[Efc EGY Yesterday] $\square \square \square$

Electrical energy consumed yesterday by the motor (kWh).

Setting	Description
0...4,294,967,295 kWh	Setting range Factory setting: _

[Over-Consumption Thd] $P \square R H$

Power level for over-consumption.

Setting	Description
[Under-Consumption Thd] $P \square R L$...200.0%	Setting range Factory setting: 0.0%

[Under-Consumption Thd] $P \square R L$

Power level for under-consumption.

Maximum value = $P \square R H$ if $P \square R H \leq 100\%$.

Setting	Description
0.0...100.0% or [Over-Consumption Thd] $P \square R H$ if $P \square R H \leq 100\%$	Setting range Factory setting: 0.0%

[Over/Under-Cons Delay] $P \square R \square$

Over/under-consumption detection time.

Setting	Description
0...60 min	Setting range Factory setting: 1 min

[Peak Output Power] $\Pi \square E P$

Peak output power.

Setting	Description
According to the drive rating	Setting range Factory setting: _

[Mechanical energy] $\Pi E \square -$ Menu**Access**

[Display] → [Energy parameters] → [Mechanical energy]

About This Menu

This menu presents the output mechanical energy data.

[Power Estim Value] P r W

Motor shaft power estimation.

Setting	Description
According to the drive rating	Setting range in kW if [Motor Standard] b F r is set to [50Hz IEC] 5 0 or in HP if [Motor Standard] b F r is set to [60Hz NEMA] 6 0 Factory setting: _

[Motor Consumption] P E 4★

Energy consumption (TWh).

This parameter can be accessed if **[Motor Consumption] P E 4** is not set to 0.

Setting	Description
0...999 TWh	Setting range Factory setting: _

[Motor Consumption] P E 3★

Energy consumption (GWh).

Setting	Description
0...999 GWh	Setting range Factory setting: _

[Motor Consumption] P E 2★

Energy consumption (MWh).

Setting	Description
0...999 MWh	Setting range Factory setting: _

[Motor Consumption] P E 1★

Energy consumption (kWh).

Setting	Description
0...999 kWh	Setting range Factory setting: _

[Motor Consumption] P E 0★

Energy consumption (Wh).

Setting	Description
0...999 Wh	Setting range Factory setting: _

[Energy saving] E 5 R - Menu**Access**

[Display] → [Energy parameters] → [Energy saving]

About This Menu

This menu presents the comparison in term of cost, energy, CO₂ between solutions with and without drive.

[Reference Power] P r E F

Reference Power without drive

Setting	Description
0.00...655.35 kW	Setting range in kW if [Motor Standard] <i>b F r</i> is set to [50Hz IEC] <i>5 D</i> or in HP if [Motor Standard] <i>b F r</i> is set to [60Hz NEMA] <i>6 D</i> . Factory setting: 0.00 kW

[kWh Cost] E C 5 E

Cost of the kWh.

Setting	Description
0.00...655.35 \$	Setting range in € if [Motor Standard] <i>b F r</i> is set to [50 Hz IEC] <i>5 D</i> or in \$ if [Motor Standard] <i>b F r</i> is set to [60Hz NEMA] <i>6 D</i> . Factory setting: _

[CO2 Ratio] E C α 2Quantity of CO₂ by kWh.

Setting	Description
0.000...65.535 kg/kWh	Setting range Factory setting: 0.000 kg/kWh

[Energy Saved] E 5 R V

Energy saved with the drive solution.

Setting	Description
0...4,294,967,295 kWh	Setting range Factory setting: _

[Money Saved] C R 5 H

Cost saved with the drive solution.

Setting	Description
0.00...42,949,672 \$	Setting range in € if [Motor Standard] <i>b F r</i> is set to [50 Hz IEC] <i>5 D</i> or in \$ if [Motor Standard] <i>b F r</i> is set to [60 Hz NEMA] <i>6 D</i> . Factory setting: _

[Co2 Saved] [0 2 5

CO₂ saved with the drive solution.

Setting	Description
0.0...429,496,729.5 t	Setting range Factory setting: _

[Application parameters]

[Application parameters] *Π P r* - Menu

Access

[Display] → [Application parameters]

About This Menu

This menu displays information related to the application.

[Application State] *Π P P S*

Application state.

This parameter indicates the drive application state.

Setting	Code / Value	Description
[Running]	<i>r u n</i>	No application function in progress; the drive is running
[Stop]	<i>S t o p</i>	No application function in progress; the drive is not running
[Local Mode Active]	<i>L o c a l</i>	Forced local mode activated
[Channel 2 Active]	<i>o v e r</i>	Override speed control mode activated
[Manual Mode Active]	<i>Π a n u</i>	Motor running; manual PID mode is active
[PID Active]	<i>Π u t o</i>	Motor running; auto PID mode is active
[Boost In progress]	<i>b o o s t</i>	The boost is in progress
[Sleep Active]	<i>S L E E P</i>	The sleep is active
[BL In Progress]	<i>b 9 5</i>	Backlash sequence is in progress

[Pump parameters] - [Variable speed pump]

[Variable speed pump] $\Pi P P$ - Menu

Access

[Display] → [Pump parameters] → [Variable speed pump]

About This Menu

This menu shows the pump-related parameters.

[Motor Run Time] $r \text{ E H H}$

Motor run time.

Run elapsed time display (resettable) in 0.1 hours (length of time the motor has been switched on).

Setting	Description
0.0...429,496,729.5 h	Setting range Factory setting: _

[Motor Mechanical speed] $S P \Delta \Pi$

Motor mechanical speed.

This parameter displays the estimated rotor speed with motor slip.

Setting	Description
0...65,535 rpm	Setting range Factory setting: _

[Nb Of Start] $n S \Pi$

Number of motor starts (resettable).

Setting	Description
0...4,294,967,295	Setting range Factory setting: _

[Acv Elc Out Pwr Estm] $E P r W$

Active electrical output power estimation.

Setting	Description
-327.67...327.67 kW	Setting range in kW if [Motor Standard] $b F r$ is set to [50 Hz IEC] $S \Delta$ or in HP if [Motor Standard] $b F r$ is set to [60 Hz NEMA] $S \Delta$ Factory setting: _

[M/S parameters]

About this Menu

This menu can be accessed if **[M/S Comm Mode] P 5 C P** is not set to **[No] 0 0**.

[M/S Local Display] P 5 0 - Menu

Access

[Display] → [M/S parameters] → [M/S Local Display]

About This Menu

This menu present the master slave local display related parameters.

This menu can be accessed if **[M/S Comm Mode] P 5 C P** is not set to **[No] 0 0**.

[M/S Status] P 5 5

M/S function status.

Setting	Code / Value	Description
[None]	0 0 0 E	Not configured
[M/S Local Control]	0 P C E	M/S local control
[M/S Not Ready]	0 r d Y	M/S not ready
[M/S Ready]	r E R d Y	M/S ready
[M/S Running]	r u n	M/S running
[M/S Warning]	A L A r P	M/S warning

[M/S Master Speed Ref] P 5 P 5 ★

M/S Master speed reference.

This parameter can be accessed if **[M/S Comm Mode] P 5 C P** is not set to **[No] 0 0**.

Setting	Description
-599.0...599.0 Hz	Setting range Factory setting: _

[M/S Master Torq Ref] F P E r ★

M/S Master torque reference.

This parameter can be accessed if **[M/S Comm Mode] P 5 C P** is not set to **[No] 0 0**.

Setting	Description
-32,767...32,767 Nm	Setting range according to drive ratings and [TQS torque scaling] i n r E setting. Factory setting: _

[M/S Local Speed Ref] P 5 5 r ★

M/S Local speed reference.

This parameter can be accessed if:

- **[M/S Comm Mode] P 5 C P** is not set to **[No] n o**, and
- **[M/S Device Role] P 5 d E** is set to **[Slave] S L R V E**.

Setting	Description
-599.0...599 Hz	Setting range Factory setting: _

[M/S Local Torq Ref] F t o r ★

M/S Local torque reference.

This parameter can be accessed if:

- **[M/S Comm Mode] P 5 C P** is not set to **[No] n o**, and
- **[M/S Device Role] P 5 d E** is set to **[Slave] S L R V E**.

Setting	Description
-32,767...32,767 Nm	Setting range according to drive ratings and [TQS torque scaling] i n r E setting. Factory setting: _

[Motor Frequency] r F r

Motor frequency.

This parameter displays the estimated rotor frequency without motor slip.

Setting	Description
-3,276.7...3,276.7 Hz	Setting range Factory setting: 0.0 Hz

[Motor Torque (Nm)] o t q n

Motor torque.

Output torque value.

NOTE: The displayed value is always positive in motor and negative in generator mode whatever the direction.

Setting	Description
-32,767...32,767 Nm	Setting range according to drive ratings and [TQS torque scaling] i n r E setting. Factory setting: _

[M/S System Display] *Π* *σ* *π* - Menu

Access

[Display] → [M/S parameters] → [M/S System Display]

About This Menu

This menu present the master slave system related parameters.

This menu can be accessed if [M/S Comm Mode] *Π* *σ* *π* is set to [MultiDrive Link] *Π* *δ* *λ* .

[M/S Local Speed Ref] *Π* *σ* *σ* *π* ★

M/S output speed reference.

This parameter can be accessed if:

- [M/S Comm Mode] *Π* *σ* *π* is not set to [No] *π* *σ* , and
- [M/S Device ID] *Π* *σ* , *δ* is set to [Slave] *σ* *λ* *π* *ν* *ε* .

Setting	Description
-599.0...599 Hz	Setting range Factory setting: _

[M/S Local Torq Ref] *π* *ε* *σ* *π* ★

M/S output torque reference.

This parameter can be accessed if:

- [M/S Comm Mode] *Π* *σ* *π* is not set to [No] *π* *σ* , and
- [M/S Device ID] *Π* *σ* , *δ* is set to [Slave] *σ* *λ* *π* *ν* *ε* .

Setting	Description
-32,767...32,767 Nm	Setting range. Factory setting: _

[M/S Device Selection] *Π* *σ* *δ* *π*

M/S device selection.

This parameter allows to select the device parameters to be displayed.

Setting	Code / Value	Description
[Master]	<i>Π</i> <i>σ</i> <i>ε</i> <i>ε</i> <i>π</i>	Master Factory setting
[Slave 1]	<i>σ</i> <i>λ</i> <i>ν</i> <i>1</i>	Slave 1
[Slave 2]	<i>σ</i> <i>λ</i> <i>ν</i> <i>2</i>	Slave 2
[Slave 3]	<i>σ</i> <i>λ</i> <i>ν</i> <i>3</i>	Slave 3
[Slave 4]	<i>σ</i> <i>λ</i> <i>ν</i> <i>4</i>	Slave 4
[Slave 5]	<i>σ</i> <i>λ</i> <i>ν</i> <i>5</i>	Slave 5
[Slave 6]	<i>σ</i> <i>λ</i> <i>ν</i> <i>6</i>	Slave 6
[Slave 7]	<i>σ</i> <i>λ</i> <i>ν</i> <i>7</i>	Slave 7
[Slave 8]	<i>σ</i> <i>λ</i> <i>ν</i> <i>8</i>	Slave 8

Setting	Code / Value	Description
[Slave 9]	<i>S L V 9</i>	Slave 9
[Slave 10]	<i>S L V 10</i>	Slave 10

[M/S Device Status] *Π 5 d 5*

M/S device status.

Status of the device selected using **[M/S Device Selection]** *Π 5 d n*.

Setting	Code / Value	Description
[None]	<i>n o n E</i>	Not configured
[M/S Not Ready]	<i>n r d y</i>	M/S not ready
[M/S Ready]	<i>r E A d y</i>	M/S ready
[M/S Running]	<i>r u n</i>	M/S running
[M/S Warning]	<i>A L A r Π</i>	M/S warning

[M/S Device Speed Ref] *Π 5 X 5*

M/S device speed reference.

Displays the local speed reference value of the device selected using **[M/S Device Selection]** *Π 5 d n*.

Setting	Description
-599.0...599 Hz	Setting range Factory setting: _

[M/S Device Torq Ref] *F X 5*

M/S device torque reference.

Displays the local torque reference value of the device selected using **[M/S Device Selection]** *Π 5 d n*.

Setting	Description
-32,767...32,767 Nm	Setting range according to drive ratings and [TQS torque scaling] <i>i n r t</i> setting. Factory setting: _

[Motor parameters]

[Motor parameters] Π Π □ - Menu

Access

[Display] → [Motor parameters]

About This Menu

This menu shows the motor-related parameters.

The parameters available in this menu are in read-only mode, they cannot be configured.

[Motor Speed] 5 P d

Motor speed.

This parameter displays the estimated rotor speed without motor slip.

Setting	Description
0...65,535 rpm	Setting range Factory setting:–

[Signed Mech Speed] 5 P d l

Signed mechanical speed.

Setting	Description
-100,000...100,000 rpm	Setting range Factory setting:–

[Motor Voltage] υ □ P

Motor voltage.

Setting	Description
0... Nom Motor Voltage] υ □ 5 (step: 1 V)	Setting range Factory setting:–

[Motor Power] □ P r

Motor power.

Estimated output power in % (100% = nominal motor mechanical power).

Setting	Description
-300...300 % (step: 1 %)	Setting range Factory setting: –

[Nom Motor Torque] t □ n

Computed nominal motor torque (+/- 2% tolerance).

In case of synchronous motors, this parameter is impacted by a modification of **[Syn. EMF constant] P H 5**.

In case of asynchronous motors, this parameter is impacted by a modification of **[Magnetizing Current] i d R** and the magnetic saturation parameters (i.e **[Flux curve coeff A] R L F R**, **[Flux curve coeff B] b E E D**, **[Tangential Main Inductance] L D R**).

NOTE: A tune in rotation modifies the magnetic saturation parameters.

Setting	Description
0.01...65,535 Nm	Setting range according to drive ratings and [Torque Scaling] i n r t setting. Factory setting: _

[Motor Torque] $\sigma \tau r$

Motor torque.

Output torque value (100% = **[Nom Motor Torque] t q n**).

NOTE: The displayed value is always positive in motor mode and negative in generator mode whatever the direction.

Setting	Description
-300.0... 300.0 % (step: 0.1 %)	Setting range Factory setting: -

[Motor Torque (Nm)] $\sigma \tau q n$

Motor torque in Nm.

Output torque value.

NOTE: The displayed value is always positive in motor mode and negative in generator mode whatever the direction.

Setting	Description
-32,767...32,767 Nm	Setting range according to drive ratings and [Torque Scaling] i n r t setting. Factory setting: _

[Motor Current] L C r

Motor current (estimation).

Setting	Description
0...2 In ⁽¹⁾ (step: 0.01 A ⁽²⁾)	Setting range according to drive ratings Factory setting: -
<p>(1): In corresponds to the rated drive current indicated in the Installation Manual and on the drive nameplate.</p> <p>(2): For drives with power range ≤ 15 kW. If the power range is between 18 and 160 kW (limits included), the step is 0.1 A else it is 1 A.</p>	

[Motor Therm state] t H r

Motor thermal state.

The normal motor thermal state is 100 %, the **[Motor Overload] $\sigma L F$** threshold is set to 118 %.

Setting	Description
0...200 % (step: 1 %)	Setting range Factory setting: –

[Drive parameters]

[Drive parameters] P 0 n - Menu

Access

[Display] → [Drive parameters]

About This Menu

This menu shows the drive-related parameters.

[AIV1 Image input] P 0 V 1

AIV1 Image input.

This parameter is read-only. It enables to display the speed reference applied to the motor via the fieldbus channel.

Setting	Description
-10,000...10,000 ⁽¹⁾	Setting range Factory setting: –
1): range according to [AIV1 Type] P 0 V 1 L.	

[Pre-Ramp Ref Freq] P 0 F r H

Frequency reference before ramp.


This parameter is read-only. It enables to display the reference frequency applied to the motor, regardless of which channel for reference value has been selected.

Setting	Description
-599.0...599.0 Hz	Setting range Factory setting: 0 Hz

[Ref Frequency] P 0 L F r

Reference frequency.

This parameter only appears if the function has been enabled. It is used to change the reference frequency from the remote control. OK does not have to be pressed to enable a change of reference.

Setting 	Description
-599.0...599.0 Hz	Setting range Factory setting: –

[Torque ref.] P 0 L T r ★

Torque reference.

This parameter only appears if the function has been enabled. It is used to change the torque reference value from the remote control. OK does not have to be pressed to enable a change of reference value.

This parameter can be accessed if:

- [Trq/spd switching] P 0 L 5 5 is not set to [Not Assigned] P 0 n , and

- **[Torque ref. channel] $t r l$** is set to **[Ref. Freq-Rmt.Term] $L C C$** .

Setting ()	Description
-300.0...300.0%	Setting range Factory setting: –

[Torque reference] $t r r$ ★

Torque reference.

This parameter can be accessed if:

- **[M/S Device Role] $\Pi S d E$** is set to **[Slave] $S L R V E$** , and
- **[M/S Control Type] $\Pi S C E$** is set to:
 - **[Torque Direct] $t r q d$** , or
 - **[Torque Reverse] $t r q r$** , or
 - **[Torque Custom] $t r q C$** .

Setting ()	Description
-3,276.7...3,276.7 %	Setting range Factory setting: –

[Motor Frequency] $r F r$

Motor frequency.

This parameter displays the estimated rotor frequency without motor slip.

Setting	Description
-3,276.7...3,276.7 Hz	Setting range Factory setting: 0.0 Hz

[Stator Frequency] $S F q$ ★

Stator frequency.

This parameter can be accessed if **[Access Level] $L R C$** is set to **[Expert] $E P r$**

Setting ()	Description
[No Freq Applied] $\Pi \sigma$...599.0 Hz	Setting range Factory setting: –

[Rotor Frequency] $r F q$ ★

Rotor frequency.

This parameter displays the estimated rotor frequency with motor slip.

This parameter can be accessed if **[Access Level] $L R C$** is set to **[Expert] $E P r$**

Setting ()	Description
[No Freq Applied] $\Pi \sigma$...599.0 Hz	Setting range Factory setting: –

[Measured output fr.] P P F ★

Measured output frequency.

This parameter can be accessed only if the encoder module has been inserted, and the available selections will depend on the type of encoder module used.

Setting ()	Description
-3,276.7...3,276.7 Hz	Setting range Factory setting: –

[Multiplying Coeff.] P F r ★

Multiplying coefficient.

This parameter can be accessed if [Ref Freq - Multiply] P R 2, P R 3 has been assigned.

Setting ()	Description
0...100%	Setting range Factory setting: –

[Measured Freq] F 9 5 ★

Pulse input measured frequency.

This parameter can be accessed if [Frequency meter] F 9 F is not set to [Not Configured] n a .

Setting ()	Description
0...30 KHz	Setting range Factory setting: –

[Mains Voltage] u L n

Mains voltage based on AC bus measurement, motor running or stopped.

Setting	Description
1.0...6,553.5 Vac	Setting range: [no meas.] u L n u n K is displayed if no value is measured. Factory setting: –

[Mains Voltage phase 1-2] u L l

Mains voltage phase 1-2 measurement.

This parameter cannot be accessed on ATV930C22N4...C31N4.

Setting	Description
-3,276.7...3,276.7 Vac	Setting range: [No meas.] u L n u n K is displayed if no value is measured. Factory setting: –

[Mains Voltage phase 2-3] $\cup L 2$

Mains voltage phase 2-3 measurement.

This parameter cannot be accessed on ATV930C22N4...C31N4.

Setting	Description
-3,276.7...3,276.7 Vac	Setting range: [No meas.] $\cup L \sigma \cup \eta K$ is displayed if no value is measured. Factory setting: –

[Mains Voltage phase 3-1] $\cup L 3$

Mains voltage phase 3-1 measurement

This parameter cannot be accessed on ATV930C22N4...C31N4.

Setting	Description
-3,276.7...3,276.7 Vac	Setting range: [No meas.] $\cup L \sigma \cup \eta K$ is displayed if no value is measured. Factory setting: –

[Mains Current] $\iota L \eta$

Actual mains current (effective value of the fundamental mode).

Accuracy: 2% (related to drive nominal current).

This parameter can be accessed on ATV980 and ATV9B0.

Setting	Description
According to drive rating	Setting range Factory setting: –

[Mains Frequency] $F \Pi C$

Actual mains frequency.

This parameter can be accessed on ATV980 and ATV9B0.

Setting	Description
0.0...999.9 Hz	Setting range Factory setting: –

[DC Bus Voltage] $V b \cup 5$

DC bus voltage.

Setting	Description
0...6,553.5 Vdc	Setting range: [No meas.] $\cup L \sigma \cup \eta K$ is displayed if no value is measured. Factory setting: –

[Drive Therm State] $t H d$

Drive thermal state.

The normal drive thermal state is 100%, the **[Drive Overheating]** $\sigma H F$ threshold is set to 118%

Setting	Description
0...200%	Setting range Factory setting: –

[Used Param. Set] $C F P 5$ ★

Used parameter set.

Configuration parameter status (can be accessed if parameter switching function has been enabled).

Setting	Code / Value	Description
[None]	$n \sigma$	Not assigned
[Set N°1]	$C F P 1$	Parameter set 1 active
[Set N°2]	$C F P 2$	Parameter set 2 active
[Set N°3]	$C F P 3$	Parameter set 3 active

[Config. active] $C n F 5$

Active configuration.

Setting	Code / Value	Description
[In progress]	$n \sigma$	Transitory state
[Config. No.0]	$C n F 0$	Configuration 0 active
[Config. No.1]	$C n F 1$	Configuration 1 active
[Config. No.2]	$C n F 2$	Configuration 2 active
[Config 3 active]	$C n F 3$	Configuration 3 active

[Thermal monitoring]

[Thermal Monitoring] Ε Ρ Π - Menu

Access

[Display] → [Thermal Monitoring]

About This Menu

The content of this menu can be accessed if [Thermal monitoring] Ε Ρ Ρ - function has been activated , page 166.

This menu shows the present thermal value measured via analog inputs used.

NOTE: An encoder can also be used with the thermal monitoring function.

[AI1 Th Value] Ε Η Ι V, [AI3 Th Value] Ε Η Ξ V, [AI4 Th Value] Ε Η Υ V, [AI5 Th Value] Ε Η Σ V ★

AI1 thermal value, AI3 thermal value, AI4 thermal value and AI5 thermal value.

NOTE: AI4 and AI5 can only be accessed if the I/O extension option module (VW3A3203) has been inserted.

Setting	Description
-15.0...200.0 °C (step: 0.1 °C) 5.0...392.0 °F (step: 0.1 °F)	Setting range (the unit depends on the setting of [Temperature unit] Σ υ Ε Ρ). Factory setting: Read-only parameter.

[Enc Th Value] Ε Η Ε V ★

Encoder thermal sensor value.

Setting	Description
-15...200 °C (step: 0.1 °C) 5.0...392.0 °F (step: 0.1 °F)	Setting range (the unit depends on the setting of [Temperature unit] Σ υ Ε Ρ). Factory setting: Read-only parameter.

[PID display]

[PID display] $P \text{ , } \mathcal{L} - \text{Menu}$

Access

[Display] → [PID display]


About This Menu

NOTE: This function cannot be used with some other functions.

Following parameters can be accessed if **[PID feedback Assign]** $P \text{ , } F$ is not set to **[Not Configured]** $\square \square \square$.

[Internal PID ref] $r \text{ } P \text{ , } \star$

Internal PID reference.

Setting 	Description
0...32,767	Setting range Factory setting: 150

[PID Reference] $r \text{ } P \mathcal{L} \star$

PID setpoint value.

Setting	Description
0...65,535	Setting range Factory setting: 0

[PID feedback] $r \text{ } P F \star$

PID feedback value.

Setting	Description
0...65,535	Setting range Factory setting: 0

[PID Error] $r \text{ } P E \star$

PID error value.

Setting	Description
-32,767...32,767	Setting range Factory setting: –

[PID Output] $r \text{ } P \square \star$

PID output value.

Setting	Description
[PID Min Output] $P \square L$... [PID Max Output] $P \square h$	Setting range Factory setting: _

[Counter management]

[Counter Management] $E L E$ - Menu

Access

[Display] → [Counter Management]

About This Menu

This menu shows the drive and motor-related counters.

[Motor Run Time] $r E H H$

Motor run time.

Run elapsed time display (resettable) in 0.1 hours (length of time the motor has been switched on).

Setting	Description
0.0...429,496,729.5 h	Setting range Factory setting: _

[Power-on Time] $P E H H$

Power-on time (resettable) or counter can be set to 0 by using the [Time Counter Reset] $r P r$ parameter.

Setting	Description
0.0...429,496,729.5 h	Setting range Factory setting: _

[Fan Operation Time] $F P b E$

Fan operation time.

As soon as [Fan Operation Time] $F P b E$ reach the predefined value of 45,000 hours, a warning [Fan Counter Warning] $F C E R$ is triggered.

[Fan Operation Time] $F P b E$ counter can be set to 0 by using the [Time Counter Reset] $r P r$ parameter.

Setting	Description
0...500,000 h	Setting range Factory setting: Read Only

[Nb Of Start] $n S \Pi$

Number of motor starts (resettable) or counter can be set to 0 by using the [Time Counter Reset] $r P r$ parameter.

Setting	Description
0...4,294,967,295	Setting range Factory setting: _

[Cabinet Fan Opt Time] F C L

Cabinet Fan operation time

If **[Cabinet Fan Oper Time] F C L** has reached the predefined value of 30,000 hours, a warning **[Cabinet Fan Counter Warn] F C C R** is triggered.

This parameter can be accessed on ATV•30•••F, ATV•50•••F, ATV•60, ATV•80, and ATV•L0.

Setting	Description
0...500,000 h	Setting range Factory setting: Read Only

[AFE Run Time] b r H H

AFE Run Time

This parameter can be accessed on ATV980 and ATV9B0.

Setting	Description
0.0...429,496,729.5 h	Setting range Factory setting: _

[AFE Power-On Time] b P H H

AFE brick power on elapsed time

This parameter can be accessed on ATV980 and ATV9B0.

Setting	Description
0.0...429,496,729.5 h	Setting range Factory setting: _

[AFE Fan Operation Time] F b R L

AFE Fan Operation Time

If **[AFE Fan Operation Time] F b R L** has reached the predefined value of 45,000 hours, a warning **[AFE Fan Counter Warn] F C b R** is triggered.

This parameter can be accessed on ATV980 and ATV9B0.

Setting	Description
0...50,000 h	Setting range Factory setting: _

[AFE Nb of starts] b n S R

AFE number of starts

This parameter can be accessed on ATV980 and ATV9B0.

Setting	Description
0...4,294,967,295	Setting range Factory setting: _

[DBR Run Time] r r H H

Braking resistor run time

Setting	Description
0.0...429,496,729.5 h	Setting range Factory setting: _

[BUO Fan Operation Time] F b b t

Braking unit fan operation time

Setting	Description
0...500,000 h	Setting range Factory setting: _

[BUO Power-on time] r P H H


Braking unit Power-on time

Setting	Description
0.0...429,496,729.5 h	Setting range Factory setting: _

[Time Counter Reset] r P r

Time counter reset.

Setting ()	Code / Value	Description
[No]	n o	No Factory setting
[Run Time Reset]	r t H	Run time reset
[Power ON Time Reset]	P t H	Power ON time reset
[Reset Fan Counter]	F t H	Reset fan counter
[Clear NSM]	n s П	Clear number of motor starts
[Clear AFE Fan]	F b R t	Clear AFE Fan operation time ⁽¹⁾
[Clear Cabinet Fan]	F c t	Clear cabinet fan operation time NOTE: This selection can be accessed on ATV●30●●●F, ATV●50●●●F, ATV●60, ATV●80, and ATV●L0.
[Clear AFE Power ON Time]	b P t h	Clear AFE power ON time ⁽¹⁾
[Clear BRTH]	b r t h	Clear AFE run time ⁽¹⁾
[Clear AFE Nb. start]	b n s R	Clear AFE brick number of start ⁽¹⁾
[Clear BUO Run Time]	r r t H	Clear Braking Unit run time.
[Clear BUO Power On Time]	r P t H	Clear Braking Unit Power-on time.

Setting 	Code / Value	Description
[Clear BUO Fan Time]	<i>F b b t</i>	Clear Braking Unit fan operation time.
1 This selection can be accessed on ATV980 and ATV9B0.		

[Other state]

[Other state] 55t - Menu

Access

[Display] \rightarrow [Other state]

About This Menu

List of secondary states.

List

[Sleep Active] $5L\Pi$

[Sleep Boost active] $5LPb$

[Set 1 active] $CFP1$

[Set 2 active] $CFP2$

[Set 3 active] $CFP3$

[Automatic restart] $Ru\text{t}\sigma$

[DC Bus Charged] dbL

[Fast stop Active] $F5t$

[Fallback Frequency] FrF

[Speed Maintained] $rL5$

[Type of stop] $5t\text{t}$

[Encoder Config] iCC

[In braking] $br5$

[Backspin Active] $b5C$

[DC Bus Ripple Warn] $dCrW$

[Ref Freq Warning] $5rR$

[Forward] ΠFrd

[Reverse] $\Pi r r 5$

[In motor fluxing] FLX

[Autotuning] tun

[I/O map]

[I/O map] IOM- Menu

Access

[Display] → [I/O map]

About this Menu

This menu shows information about the inputs and the outputs of the drive such as: the function assigned, the configuration and the present value or state.

The information is separated in different categories/menus:

- **[Digital Input Map]** $L \ , \ R -$: The mapping of the digital inputs,
- **[Analog inputs image]** $R \ , \ R -$: The image of the analog inputs,
- **[Digital Output Map]** $L \ \square \ R -$: The mapping of the digital outputs and relays,
- **[Analog Outputs image]** $R \ \square \ R -$: The image of the analog outputs and the Pulse Train Output (PTO),
- **[Freq. signal image]** $F \ 5 \ , \ -$: The image of the pulse inputs,
- **[Cabinet Digital Input Map]** $L \ , \ \mathcal{L} \ R -$: The mapping of the cabinet digital inputs,
- **[Cabinet Digital Output Map]** $L \ \square \ \mathcal{L} \ R -$: The mapping of the cabinet digital outputs.

The parameters available in this menu are in read-only mode, they cannot be configured.

For more information on the inputs/outputs configuration, refer to the submenus in **[Complete settings]** → **[Input/Output]**.

[Digital Input Map] $L \ , \ R -$

This menu is used to display the state of digital inputs. Use the touch wheel to scroll through the digital inputs:

- STO_A and STO_B: inputs of the safety STO function. For more information, refer to the embedded safety function manual of the drive.
- Digital inputs DI1 to DI8 of the drive,
- Optional digital inputs DI11 to DI16 if VW3A3203 Extended I/O module has been inserted.

On the Graphic Display Terminal , click the digital input to see all the functions that are assigned to the digital input in order to verify the compatibility with the multiple assignments (low level assignment and high level assignment). If no functions have been assigned, **[Not assigned]** $\Pi \square$ is displayed.

For more information on the digital inputs refer to **[Complete settings]** → **[Input/Output]** → **[DI/DQ]**.

[Analog inputs image] $R \ , \ R -$

This menu is used to display the value of analog inputs. Use the touch wheel to scroll through the analog inputs:

- **[AI1]** $R \ , \ \mathcal{L} -$ to **[AI3]** $R \ , \ \exists \ \mathcal{L} -$: Analog inputs AI1 to AI3 of the drive.
- **[AI4]** $R \ , \ 4 \ \mathcal{L} -$ and **[AI5]** $R \ , \ 5 \ \mathcal{L} -$: Optional analog inputs AI4 and AI5 if VW3A3203 Extended I/O module has been inserted,
- **[Enc Resistor Value]** $\mathcal{L} \ H \ E \ \mathcal{L} -$: The resistor value (in Ohm) linked to the thermal monitoring function estimated via the encoder , page 166. This parameter is visible if an encoder is present and if **[Enc Therm Sensor Type]** $\mathcal{L} \ H \ E \ \mathcal{L}$ is set to a value different from **[None]** $\Pi \square \Pi \ E$.

The physical value of the analog input A_x shown in this menu corresponds to the parameter **[A_x]** $\Pi \square \Pi \square$. The range and the unit depend on the customer configuration.

On the Graphic Display Terminal, click the analog input A_x (with 'x' from 1 to 5) to display:

- **[A_x Assignment]** $\Pi \square \Pi \square$: all the functions associated with the analog input in order to verify, for example, compatibility problems with the multiple assignments,
- The minimum and maximum values according to the configured type **[A_x Type]** $\Pi \square \Pi \square$:
 - **[A_x min value]** $\Pi \square \Pi \square$ and **[A_x max value]** $\Pi \square \Pi \square$ with **[Voltage]** $\Pi \square \Pi \square$ type,
 - **[A_x min. value]** $\Pi \square \Pi \square$ and **[A_x max. value]** $\Pi \square \Pi \square$ with **[Current]** $\Pi \square \Pi \square$ type.
- The configured value of the interference filtering: **[A_x filter]** $\Pi \square \Pi \square$.

For more information on the analog inputs refer to **[Complete settings]** → **[Input/Output]** → **[Analog I/O]**.

[Digital Output Map] $\Pi \square \Pi \square -$

This menu is used to display the state of relays and digital outputs. Use the touch wheel to scroll through them:

- R1 to R3: the relays of the drive.
- R4 to R6: the optional relays if VW3A3204 Extended relay module has been inserted.
- DQ1: the digital output DQ of the drive,
- DQ11 and DQ12: the optional digital output if VW3A3203 Extended I/O module has been inserted.

NOTE: The digital output DQ can also be used as a Pulse Train Output depending on the configuration of PTO - DQ Switch (SW2). Refer to the installation manual.

On the Graphic Display Terminal, click the relay or the digital output to display:

- The function assigned to the digital output or the relay. If no functions have been assigned, **[Not assigned]** $\Pi \square \Pi \square$ is displayed,
- The delay time,
- The active level (high or low),
- The holding time.

For more information on the configuration of the digital outputs and the relays refer to **[Complete settings]** → **[Input/Output]**.

[Analog Outputs image] $\Pi \square \Pi \square -$

This menu is used to visualize the value of analog outputs and the value of the Pulse Train Output (PTO). Use the touch wheel to scroll through the outputs **[AQ1]** $\Pi \square \Pi \square$, **[AQ2]** $\Pi \square \Pi \square$ and **[PTO Frequency]** $\Pi \square \Pi \square$.

The physical value of the analog output AQ_x displayed in this menu corresponds to the parameter **[AQ_x]** $\Pi \square \Pi \square$. The range and the unit depend on the customer configuration.

On the Graphic Display Terminal, click the analog outputs to display:

- **[AQ_x Assignment]** $\Pi \square \Pi \square$: the function associated with the analog output in order to verify, for example, compatibility problems with the multiple assignments,
- The minimum and maximum values according to the configured type **[AQ_x Type]** $\Pi \square \Pi \square$:

- **[AQx min value]** u o L X and **[AQx max value]** u o H X with **[Voltage]** I D u type,
- **[AQx min value]** R o L X and **[AQx max value]** R o H X with **[Current]** D R type.
- **[Scaling AQx min]** R 5 L X (respectively **[Scaling AQx max]** R 5 H X): The scaling of the lower limit (respectively upper limit) of the assigned parameter, as a percentage of the minimum (respectively maximum) possible variation.
- The configured value of the interference filtering: **[AQx filter]** R 9 X F .

The PTO physical value (parameter **[PTO Frequency]** P E o C) depends on the customer configuration. The range is 0.00...655.35 kHz.

On the Graphic Display Terminal , click the PTO to display:

- **[PTO Assign]** P E o : the function associated with the Pulse Train Output (PTO). If no functions have been assigned, **[Not configured]** n o is displayed.
- **[PTO Max Output Freq]** P E o H: the maximum output frequency of the PTO. The value is between 1.00 and 30.00 kHz. By default, the value is 4.00 kHz. This information is accessible if the PTO is assigned (**[PTO Assign]** P E o is set to a value different from **[Not configured]** n o and **[DQ1]** d o I).

NOTE: Refer to the installation manual to configure DQ (DQ+ and DQ-) as pulse train output PTO.

For more information (such as the configuration), refer to **[Complete settings]** → **[Input/Output]** → **[Analog I/O]**.

[Freq. signal image] F 5 , -

This menu is used to visualize the frequency of configured pulse inputs. Use the touch wheel to scroll through the pulse inputs:

- **[DI7 frequency measured]** P F C 7 - and **[DI8 frequency measured]** P F C 8 - . The displayed value corresponds to the parameter **[DIx Frequency Measured]** P F C X . The unit is in 0.01 Hz and the range is 0...42,949,672.95 Hz.
- **[Encoder Pulse Freq]** E C F r : Encoder pulse frequency if the encoder is used as a pulse input speed reference (**[Encoder usage]** E n u is set to **[Speed Reference]** P G r) and a pulse train generator is connected to the encoder inputs (**[Reference Type]** P G R is set to **[Frequency Generator]** P E G). The unit is 0.01 kHz and the range is -21,474,836.47...21,474,836.47 kHz.
- **[Encoder Frequency]** E , F C : Encoder frequency if the encoder is used as a speed reference (**[Encoder usage]** E n u is set to **[Speed Reference]** P G r) and a standard encoder is used (**[Reference Type]** P G R is set to **[Encoder]** E n C). The unit is 0.01 Hz and the range is -21,474,836.47...21,474,836.47 Hz.

On the Graphic Display Terminal , click a pulse input to display information such as the function assigned to the pulse input, the low and high configured frequency and the interference filtering pulse input cut-off time of the low-filter.

NOTE: There is no such information for the encoder frequency and the encoder pulse frequency.

For more information (such as the configuration), refer to **[Complete settings]** → **[Input/Output]**.

[Cabinet Digital Input Map] L , C R -

It can be accessed on ATV●60, ATV●80 and ATV●L, equipped with cabinet IO, and if **[Access Level]** L R C is set to **[Expert]** E P r .

This menu is used to visualize the state of cabinet digital inputs. Use the touch wheel to scroll through the cabinet digital inputs D50 to D59.

On the Graphic Display Terminal, click the digital input to see all the functions that are assigned to the digital input in order to verify the compatibility with the multiple assignments (low level assignment and high level assignment). If no functions have been assigned, **[Not assigned]** $\Pi \square$ is displayed.

[Cabinet Digital Output Map] $L \square \square R -$

It can be accessed on ATV●60, ATV●80 and ATV●L, equipped with cabinet IO, and if **[Access Level]** $L R \square$ is set to **[Expert]** $E P r$.

This menu is used to visualize the state of cabinet digital outputs. Use the touch wheel to scroll through the cabinet digital outputs.

On the Graphic Display Terminal, click the relay or the digital output to display:

- The function assigned to the digital output or the relay. If no functions have been assigned, **[Not assigned]** $\Pi \square$ is displayed,
- The delay time,
- The active level (high or low),
- The holding time.

[Communication map]

[Communication map] C Π Π - Menu

Access

[Display] → [Communication map]

[Command Channel] C Π Δ C

Command channel.

Setting	Code / Value	Description
[Terminals]	E E r	Terminal block source Factory Setting
[Ref.Freq-Rmt. Term]	L C C	Command via Graphic Display Terminal
[Ref. Freq-Modbus]	Π Δ B	Command via Modbus
[Ref. Freq-CANopen]	C A n	Command via CANopen if a CANopen module has been inserted
[Ref. Freq-Com. Module]	n E E	Command via fieldbus module if a fieldbus module has been inserted
[Embedded Ethernet]	E E H	Command via Embedded Ethernet

[Cmd Register] C Π Δ

Command register.

[Control Mode] C H C F is not set to [I/O profile] , ο

Possible values in CiA402 profile, separate, or not separate mode:

Bit	Description, Value
0	Set to 1: "Switch on"/Contactor command
1	Set to 0: "Disable voltage"/Authorization to supply AC power
2	Set to 0: "Quick stop"
3	Set to 1: "Enable operation"/Run command
4 to 6	Reserved (= 0)
7	"Fault reset" acknowledgment active on 0 to 1 rising edge
8	Set to 1: Halt stop according to the [Type Of Stop] S E E parameter without leaving the operation enabled state
9 and 10	Reserved (= 0)
11 to 15	Can be assigned to commands

Possible values in the I/O profile. On state command [2-Wire Control] C C :

Bit	Description, Value
0	Forward (on state) command: 0: No forward command 1: Forward command NOTE: The assignment of bit 0 cannot be modified. It corresponds to the assignment of the terminals. It can be switched. Bit 0 $C \ d \ D \ D$ is only active if the channel of this control word is active.
1 to 15	Can be assigned to commands

Possible values in the I/O profile. On edge command **[3-Wire Control]** $\exists \ C$:

Bit	Description, Value
0	Stop (run authorization): 0: Stop 1: Run is authorized on a forward or reverse command
1	Forward (on 0 to 1 rising edge) command
2 to 15	Can be assigned to commands
NOTE: The assignment of bits 0 and 1 cannot be modified. It corresponds to the assignment of the terminals. It can be switched. Bits 0 $C \ d \ D \ D$ and 1 $C \ d \ D \ I$ are only active if the channel of this control word is active.	

[Ref Freq Channel] $r \ F \ C \ C$

Channel of reference frequency.

Identical to **[Command Channel]** $C \ \Pi \ d \ C$, page 99

[Pre-Ramp Ref Freq] $F \ r \ H$

Frequency reference before ramp (signed value).

This parameter is read-only. It enables to display the reference frequency applied to the motor, regardless of which channel for reference value has been selected.

Setting	Description
-599.0...599.0 Hz	Setting range Factory setting: 0 Hz

[CIA402 State Reg] $E \ L \ R$

CIA402 State Register.

Possible values in CiA402 profile, separate, or not separate mode:

Bit	Description, Value
0	"Ready to switch on", awaiting power section line supply
1	"Switched on", ready
2	"Operation enabled", running
3	Operating detected error state: 0: Inactive 1: Active
4	"Voltage enabled", power section line supply present: 0: Power section line supply unavailable

Bit	Description, Value
	1: Power section line supply present NOTE: When the drive is powered by the power section only, this bit is always at 1.
5	Quick stop
6	"Switched on disabled", power section line supply locked
7	Warning: 0: No warning 1: Warning
8	Reserved (= 0)
9	Remote: command or reference via the network 0: Command or reference via the Graphic Display Terminal 1: Command or reference via the network
10	Targets reference reached: 0: The reference is not reached 1: The reference has been reached NOTE: When the drive is in speed mode, this is the speed reference.
11	"Internal limit active", reference outside limits: 0: The reference is within the limits 1: The reference is not within the limits NOTE: When the drive is in speed mode, the limits are defined by the [Low speed] <i>L 5 P</i> and [High speed] <i>H 5 P</i> parameters.
12	Reserved
13	Reserved
14	"Stop key", STOP via stop key: 0: STOP key not pressed 1: Stop triggered by the STOP key on the Graphic Display Terminal
15	"Direction", direction of rotation: 0: Forward rotation at output 1: Reverse rotation at output
NOTE: The combination of bits 0, 1, 2, 4, 5 and 6 defines the state in the DSP 402 state chart (see the communication manuals).	

Possible values in the I/O profile:

Bit	Description, Value
0	Reserved (= 0 or 1)
1	Ready: 0: Not ready 1: Ready
2	Running: 0: The drive does not start if a reference other than zero is applied 1: Running, if a reference other than zero is applied, the drive can start
3	Operating detected error state: 0: Inactive 1: Active
4	Power section line supply present:

Bit	Description, Value
	0: Power section line supply unavailable 1: Power section line supply present
5	Reserved (= 1)
6	Reserved (= 0 or 1)
7	Warning 0: No warning 1: Warning
8	Reserved (= 0)
9	Command via a network: 0: Command via the terminals or the Graphic Display Terminal 1: Command via a network
10	Reference reached: 0: The reference is not reached 1: The reference has been reached
11	Reference outside limits: 0: The reference is within the limits 1: The reference is not within the limits NOTE: When the drive is in speed mode, the limits are defined by LSP and HSP parameters.
12	Reserved (= 0)
13	Reserved (= 0)
14	Stop via STOP key: 0: STOP key not pressed 1: Stop triggered by the STOP key on the Graphic Display Terminal
15	Direction of rotation: 0: Forward rotation at output 1: Reverse rotation at output
<p>NOTE: The value is identical in the CiA402 profile and the I/O profile. In the I/O profile, the description of the values is simplified and does not refer to the CiA402 (Drivecom) state chart.</p>	

[Modbus network diag] *Π ς δ* - Menu

Access

[Display] → [Communication map] → [Modbus network diag]

About This Menu

Used for the Modbus serial communication port at the bottom of the control block. Refer to the Modbus serial embedded communication manual for a complete description.

[COM LED] *Π δ β λ*

View of the Modbus communication LED.

[Mdb Frame Nb] Π □ ▢

Modbus network frames counter: number of processed frames.

Setting	Description
0...65,535	Setting range Factory setting: Read only

[Mb NET CRC errors] Π □ ▢

Modbus network CRC error countered: number of CRC errors

Setting	Description
0...65,535	Setting range Factory setting: Read only

[Com. scanner input map] □ ▢ ▣ - Menu**Access**

[Display] → [Communication map] → [Modbus network diag] → [Com. scanner input map]

About This Menu

Used for CANopen® and Modbus network.

[Com Scan In1 val.] □ ▢ ▣

Com scanner input 1 value. Value of the first input word.

Setting	Description
0...65,535	Setting range Factory setting: Read only

[Com Scan In2 val.] □ ▢ ▣

Com scanner input 2 value. Value of the second input word.

Identical to [Com Scan In1 val.] □ ▢ ▣, page 103.

[Com Scan In3 val.] □ ▢ ▣

Com scanner input 3 value. Value of the third input word.

Identical to [Com Scan In1 val.] □ ▢ ▣, page 103.

[Com Scan In4 val.] □ ▢ ▣

Com scanner input 4 value. Value of the fourth input word.

Identical to [Com Scan In1 val.] □ ▢ ▣, page 103.

[Com Scan In5 val.] □ ▢ ▣

Com scanner input 5 value. Value of the fifth input word.

Identical to **[Com Scan In1 val.] ς Π Ι** , page 103.

[Com Scan In6 val.] ς Π Β

Com scanner input 6 value. Value of the sixth input word.

Identical to **[Com Scan In1 val.] ς Π Ι** , page 103.

[Com Scan In7 val.] ς Π Γ

Com scanner input 7 value. Value of the seventh input word.

Identical to **[Com Scan In1 val.] ς Π Ι** , page 103.

[Com Scan In8 val.] ς Π Δ

Com scanner input 8 value. Value of the eighth input word.

Identical to **[Com Scan In1 val.] ς Π Ι** , page 103.

[Com scan output map] ο ς Α - Menu

Access


[Display] → [Communication map] → [Com scan output map]

About This Menu

Used for CANopen® and Modbus networks.

[Com Scan Out1 val.] ς Ε Ι

Com scanner output 1 value. Value of the first output word.

Setting 	Description
0...65,535	Setting range Factory setting: Read only

[Com Scan Out2 val.] ς Ε Β

Com scanner output 2 value. Value of the second output word.

Identical to **[Com Scan Out1 val.] ς Ε Ι** , page 104.

[Com Scan Out3 val.] ς Ε Γ

Com scanner output 3 value. Value of the third output word.

Identical to **[Com Scan Out1 val.] ς Ε Ι** , page 104.

[Com Scan Out4 val.] ς Ε Δ

Com scanner output 4 value. Value of the fourth output word.

Identical to **[Com Scan Out1 val.] ς Ε Ι** , page 104.

[Com Scan Out5 val.] 105

Com scanner output 5 value. Value of the fifth output word.

Identical to **[Com Scan Out1 val.] 101**, page 104.

[Com Scan Out6 val.] 106

Com scanner output 6 value. Value of the sixth output word.

Identical to **[Com Scan Out1 val.] 101**, page 104.

[Com Scan Out7 val.] 107

Com scanner output 7 value. Value of the seventh output word.

Identical to **[Com Scan Out1 val.] 101**, page 104.

[Com Scan Out8 val.] 108

Com scanner output 8 value. Value of the eighth output word.

Identical to **[Com Scan Out1 val.] 101**, page 104.

[Modbus HMI Diag] 104 - Menu**Access**

[Display] → **[Communication map]** → **[Modbus HMI Diag]**

About This Menu


Used for the Modbus serial communication port at the front of the control block (used by the Graphic Display Terminal)

[COM LED] 106

View of the Modbus HMI communication LED.


[Mdb NET frames] 102

Terminal Modbus 2: number of processed frames.

Setting 	Description
0...65,535	Setting range Factory setting: Read only

[Mdb NET CRC errors] 103

Terminal Modbus 2: number of CRC errors.

Setting 	Description
0...65,535	Setting range Factory setting: Read only

[Ethernet Emb Diag] *Π Ρ Ε* - Menu**Access**

[Display] → [Communication map] → [Ethernet Emb Diag]

About This Menu

Refer to the Modbus TCP Ethernet-IP communication manual for a complete description.

[MAC @] *Π Ρ Λ Ε*


MAC address of the embedded Ethernet adapter.

Read-only parameter.

The address format is XX-XX-XX-XX-XX-XX.


[ETH emb Rx frames] *Ε ρ Χ Ε*

Ethernet embedded Rx frames counter.

Setting 	Description
0...4,294,967,295	Setting range Factory setting: Read only


[ETH emb Tx frames] *Ε τ Χ Ε*

Ethernet embedded Tx frames counter.

Setting 	Description
0...4,294,967,295	Setting range Factory setting: Read only


[ETH emb error frames] *Ε Ε ρ Ε*


Ethernet embedded error frames counter.

Setting 	Description
0...4,294,967,295	Setting range Factory setting: Read only

[Ethernet Rate Data] *Ρ ρ δ Ε* ★

Actual data rate.

Setting 	Code / Value	Description
[Auto]	<i>Ρ α τ ο</i>	Automatic
[10M. full]	<i>Ι Δ F</i>	10 Mega bytes full-duplex
[10M. half]	<i>Ι Δ Η</i>	10 Mega bytes half-duplex

Setting 	Code / Value	Description
[100M. full]	<i>100F</i>	100 Mega bytes full-duplex
[100M. half]	<i>100H</i>	100 Mega bytes half-duplex

[DeviceNet Diag] *d V ς -* Menu

Access

[Display] → [Communication map] → [DeviceNet Diag]

About This Menu

Following parameters can be accessed if DeviceNet module (VW3A3609) has been inserted.

[Data rate used] *b d r u* ★

Data rate used by the fieldbus module.

Setting	Code / Value	Description
[Automatic]	<i>A u t o</i>	Automatic detection Factory setting
[125 Kbps]	<i>125K</i>	125,000 Bauds
[250 Kbps]	<i>250K</i>	250,000 Bauds
[500 Kbps]	<i>500K</i>	500,000 Bauds

[Fieldbus Error] *E P F 2*

External detected error from fieldbus module.

Setting	Description
0...1	0: No Error 1: Profile error, verify the settings on [Command and Reference] <i>E r P -</i> menu.

[Fieldbus Com Interrupt] *E n F*

Fieldbus module communication interruption. Refer to the related fieldbus manual.

Setting	Description
0...65,535	0: No error 1: Error triggered by network 2: Duplicated MAC ID 3: FIFO Rx error 4: FIFO Tx error 5: CAN overrun 6: Transmission error 7: Bus off 8: IO timeout 9: Acknowledge error 10: DeviceNet network reset 11: IO connection deleted 12: No network power 13: IOC error

[Profibus Diag] P r b - Menu

Access

[Display] → [Communication] → [Profibus Diag]

About This Menu

Following parameters can be accessible if Profibus DP module (VW3A3607) has been inserted.


[Data rate used] b d r u ★

Data rate used by the fieldbus module.

Setting (↺)	Code / Value	Description
[Automatic]	А u t o	Automatic detection Factory setting
[9.6 Kbps]	9 K 6	9,600 Bauds
[19.2 Kbps]	1 9 K 2	19,200 Bauds
[93.75 Kbps]	9 3 K 7	93,750 Bauds
[187.5 Kbps]	1 8 7 K	187,500 Bauds
[500 Kbps]	5 0 0 K	500,000 Bauds
[1.5 Mbps]	1 1 5	1.5 MBauds
[3 Mbps]	3 1 1	3 MBauds
[6 Mbps]	6 1 1	6 MBauds
[12 Mbps]	1 2 1 1	12 MBauds


[PPO profile used] P r F L ★

PPO profile in use.

Setting 	Code / Value	Description
[Not configured]	u n G G	Not configured
[1]	1	PROFIdrive
[100]	1 0 0	Device specific
[101]	1 0 1	Device specific
[102]	1 0 2	Device specific
[106]	1 0 6	Device specific
[107]	1 0 7	Device specific

[DP Master Active] d P n A ★

Active master: 1 or 2.


Setting 	Code / Value	Description
[MCL1]	1	Master 1 Factory setting
[MCL2]	2	Master 2

[Fieldbus Error] E P F 2

External detected error from fieldbus module.


[Fieldbus Com Interrupt] C n F

Fieldbus module communication interruption. Refer to the related fieldbus manual.

Setting 	Description
0...65,535	0: No error 1: Network timeout for received requests 2: Identification error between the module and the master 3: Master in clear mode 4: Master class 2 timeout

[InternCom Error1] , L F 1

Option module communication interruption. Refer to the related fieldbus manual.

Setting 	Description
0...65,535	Setting range Factory setting: Read only

[PROFINET Diag] P r n - Menu

Access

[Display] → [Communication map] → [PROFINET Diag]

About This Menu

Following parameters are accessible if PROFINET® module (VW3A3627) has been inserted.

[MAC @] *Π Α Ε*


MAC address of the PROFINET module.

read-only parameter.

The address format is XX-XX-XX-XX-XX-XX.


[PPO profile used] *Ρ ρ F L* ★

PPO profile in use.

Setting 	Code / Value	Description
[Not configured]	<i>u n C G</i>	Not configured
[1]	<i>1</i>	PROFIdrive
[100]	<i>1 0 0</i>	Device specific
[101]	<i>1 0 1</i>	Device specific
[102]	<i>1 0 2</i>	Device specific
[106]	<i>1 0 6</i>	Device specific
[107]	<i>1 0 7</i>	Device specific


[iPar Status] *, P R E* ★

PROFINET: IPAR service status.

Setting 	Code / Value	Description
[Idle State]	<i>, d L E</i>	Idle state
[Init]	<i>, i n i t</i>	Initialization
[Configura- tion]	<i>C o n F</i>	Configuration
[Ready]	<i>r d y</i>	Ready
[Operational]	<i>o P E</i>	Operational
[Not Configured]	<i>u C F G</i>	Not configured
[Unrecoverable Error]	<i>u r E C</i>	Unrecoverable detected error


[iPar Error Code] *, P R d* ★

iPar detected error code.

Setting 	Description
0...5	Setting range Factory setting: Read only

[DP Master Active] d P Π A★

Active master: 1 or 2.

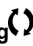Setting 	Code / Value	Description
[MCL1]	1	Master 1 Factory setting
[MCL2]	2	Master 2


[Fieldbus Error] E P F 2

External detected error from fieldbus module.

Setting	Description
0...13	0: No Error 9: Duplicate IP 10: No IP address 12: IPAR unconfigured 13: IPAR file unrecognized


[Fieldbus Com Interrupt] C n F

Fieldbus module communication interruption.

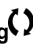Setting 	Description
0...65,535	0: No error 1: Network timeout 2: Network overload 3: Ethernet carrier loss 17: IOC scanner error

[InternCom Error1] , L F 1

Option module communication interruption.

Setting 	Description
0...65,535	Setting range Factory setting: Read only

[EtherCAT Module Diag] E E d - Menu**Access****[Display] → [Communication map] → [EtherCAT Module Diag]****About This Menu**

Following parameters can be accessed if EtherCAT module (VW3A3601) has been inserted.

[External Error] E P F 2

External detected error from fieldbus module.

[Fieldbus Com Interrupt] C n F

Fieldbus module communication interruption.

Setting ()	Description
0...65,535	Setting range Factory setting: _

[InternCom Error1] , L F I

Internal communication interruption 1.

Setting ()	Description
0...65,535	Setting range Factory setting: _

[Powerlink Diag] P W L - Menu**Access**

[Display] → [Communication map] → [Powerlink Diag]

About This Menu

Following parameters can be access if Powerlink module (VW3A3619) has been inserted. Refer to the Powerlink communication manual for a complete description.

This menu contains read-only parameters.

[Mac @]] P A C

MAC address of the POWERLINK module.

The address format is XX-XX-XX-XX-XX-XX

[Fieldbus Error]] E P F 2

External detected error from fieldbus module.


[Fieldbus Com Interrupt] C n F

Fieldbus module communication interruption. Refer to the related fieldbus manual.

Setting	Description
0...65,535	0: No network interruption 1: Unspecified interruption 17: Lost of link (2 ports) 23: Invalid Sync Manager configuration 25: No valid outputs 27: Sync Manager watchdog (1 port) 29: Invalid Sync Manager out configuration 30: Invalid Sync Manager in configuration 31: Invalid watchdog configuration 36: Invalid input mapping 37: Invalid output mapping 38: Inconsistent settings 43: No valid inputs and outputs 44: Sync error 80: EE no access 81: EE error 96: 0x60

[InternCom Error1] *, L F I*

Option module communication interruption.

Setting 	Description
0...65,535	Setting range Factory setting: Read-only

[Command word image] *Ⓛ W , - Menu*

Access

[Display] → [Communication map] → [Command word image]

About This Menu

Command word image.

[Modbus Cmd] *Ⓛ Π δ 1*

Command word image built with Modbus port source.

Identical to [CMD Register] *Ⓛ Π δ* , page 99.

[CANopen Cmd] *Ⓛ Π δ 2*

Command word image built with CANopen® port source.

Identical to [CMD Register] *Ⓛ Π δ* , page 99.

[COM. Module Cmd.] *Λ Π Δ 3*

Command word image built with fieldbus module source.

Identical to **[CMD Register]** *Λ Π Δ* , page 99.

[Ethernet Embd cmd.] *Λ Π Δ 5*

Command word image built with Ethernet embedded source.

Identical to **[CMD Register]** *Λ Π Δ* , page 99.

[Freq. ref. word map] *ρ ω ρ - Menu***Access**


[Display] → [Communication map] → [Freq. ref. word map]

About This Menu

Frequency reference image.


[Modbus Ref Freq] *Λ F ρ 1*

Frequency reference image built with Modbus port source (LFR_MDB).

Setting 	Description
-32,767...32,767 Hz	Setting range Factory setting: 0.0 Hz


[CAN Ref Freq] *Λ F ρ 2*

Frequency reference image built with CANopen® port source (LFR_CAN).

Setting 	Description
-32,767...32,767 Hz	Setting range Factory setting: 0.0 Hz


[Com Module Ref Freq] *Λ F ρ 3*

Frequency reference image built with fieldbus module source (LFR_COM).

Setting 	Description
-32,767...32,767 Hz	Setting range Factory setting: 0.0 Hz

[Ethernet Embd Ref Freq] *Λ F ρ 5*

Embedded Ethernet reference frequency.

Setting 	Description
-32,767...32,767 Hz	Setting range Factory setting: 0.0 Hz

[CANopen map] C η Π - Menu

Access

[Display] → [Communication map] → [CANopen map]

About This Menu

This menu is visible if a CANopen fieldbus module is present. Refer to the CANopen communication module manual.

[RUN LED] C ο η

Bitfield: view of the CANopen® Run LED status.

[ERR LED] C η η Ε

Bitfield: view of the CANopen® error LED status.

[PDO1 image] Ρ ο Ι - Menu

Access

[Display] → [Communication map] → [CANopen map] → [PDO1 image]

About This Menu

View of the Receive PDO1 and Transmit PDO1.

[Receive PDO1-1] ρ Ρ Ι Ι★

First frame of the receive PDO1.

Setting	Description
0...65,535	Setting range Factory setting: Read only

[Receive PDO1-2] ρ Ρ Ι 2★

Second frame of the receive PDO1.

Setting	Description
0...65,535	Setting range Factory setting: Read only

[Receive PDO1-3] ρ Ρ Ι 3★

Third frame of the receive PDO1.

Setting	Description
0...65,535	Setting range Factory setting: Read only

[Receive PDO1-4] P 14★

Fourth frame of the receive PDO1.

Setting	Description
0...65,535	Setting range Factory setting: Read only

[Transmit PDO1-1] P 11★

First frame of the transmit PDO1.

Setting	Description
0...65,535	Setting range Factory setting: Read only

[Transmit PDO1-2] P 12★

Second frame of the transmit PDO1.

Setting	Description
0...65,535	Setting range Factory setting: Read only

[Transmit PDO1-3] P 13★

Third frame of the transmit PDO1.

Setting	Description
0...65,535	Setting range Factory setting: Read only

[Transmit PDO1-4] P 14★

Fourth frame of the transmit PDO1.

Setting	Description
0...65,535	Setting range Factory setting: Read only

[PDO2 image] P ο 2 - Menu**Access****[Display] → [Communication map] → [CANopen map] → [PDO2 image]****About This Menu**View of the RPDO2 and TPDO2: same structure as **[PDO1 image] P ο 1 -**, page 115.

[Receive PDO2-1] r P 2 1★

First frame of the receive PDO2.

[Receive PDO2-2] r P 2 2★

Second frame of the receive PDO2.

[Receive PDO2-3] r P 2 3★

Third frame of the receive PDO2.

[Receive PDO2-4] r P 2 4★

Fourth frame of the receive PDO2.

[Transmit PDO2-1] t P 2 1★

First frame of the transmit PDO2.

[Transmit PDO2-2] t P 2 2★

Second frame of the transmit PDO2.

[Transmit PDO2-3] t P 2 3★

Third frame of the transmit PDO2.

[Transmit PDO2-4] t P 2 4★

Fourth frame of the transmit PDO2.

[PDO3 image] P ο 3 - Menu**Access**


[Display] → [Communication map] → [CANopen map] → [PDO3 image]

About This Menu

View of the RPDO3 and TPDO3.

[Receive PDO3-1] r P 3 1★

First frame of the receive PDO3.

Setting 	Description
0..65,535	Setting range Factory setting: Read only

[Receive PDO3-2] r P 3 2★

Second frame of the receive PDO3.

Identical settings as in **[Receive PDO3-1] r P 3 1**.

[Receive PDO3-3] ρ Ρ 3 3★

Third frame of the receive PDO3.

Identical settings as in **[Receive PDO3-1] ρ Ρ 3 1**.


[Receive PDO3-4] ρ Ρ 3 4★

Fourth frame of the receive PDO3.

Identical settings as in **[Receive PDO3-1] ρ Ρ 3 1**.

[Transmit PDO3-1] ε Ρ 3 1★

First frame of the transmit PDO3.

Setting 	Description
0...65,535	Setting range Factory setting: Read only

[Transmit PDO3-2] ε Ρ 3 2★

Second frame of the transmit PDO3.

Identical settings as in **[Transmit PDO3-1] ε Ρ 3 1**.

[Transmit PDO3-3] ε Ρ 3 3★

Third frame of the transmit PDO3.

Identical settings as in **[Transmit PDO3-1] ε Ρ 3 1**.

[Transmit PDO3-4] ε Ρ 3 4★

Fourth frame of the transmit PDO3.

Identical settings as in **[Transmit PDO3-1] ε Ρ 3 1**.

[CANopen map] ε ς Π - Menu**Access**

[Display] → [Communication map] → [CANopen map]

About This Menu

CANopen® image.


[Canopen NMT state] ς Π ε 5

Drive NMT state of the CANopen® slave.

Settings	Code / Value	Description
[Boot]	<i>b o o t</i>	Bootup
[Stopped]	<i>S t o p</i>	Stopped
[Operation]	<i>o p e</i>	Operational
[Pre-op]	<i>P o p e</i>	Pre-Operational


[Number of TX PDO] n b t P

Number of transmit PDO.

Setting 	Description
0...65,535	Setting range Factory setting: Read only

[Number of RX PDO] n b r P

Number of receive PDO.

Setting 	Description
0...65,535	Setting range Factory setting: Read only

[CANopen Error] E r C o

Error registry CANopen®.

Setting	Description
0...5	Setting range Factory setting: Read only

[RX Error Counter] r E C I

Number of receive error counter (not saved at power off).

Setting	Description
0...65,535	Setting range Factory setting: Read only

[TX Error Counter] t E C I

Number of transmit errors countered (not saved at power off).

Setting	Description
0...65,535	Setting range Factory setting: Read only

[Data logging]

[Distributed logging] $dL\alpha$ - Menu

Access

[Display] → [Data logging] → [Distributed logging]

About This Menu

This menu is used to store data following specific parameters.

The distributed logging function allows to log up to four parameter distributions at the same time. Each parameter storage is synchronized with the same sample time.

The result of this function gives the possibility to extract a bar graph with 10 bars (every 10% of the defined maximum value) to visualize the distribution for each of the four selected parameters.

NOTE: Any modification of the data logging function configuration will clear the data previously stored.

This function aims at extracting samples of data to store them. When available, these samples can be uploaded by other tools (SoMove and/or Webserver). Data logging meets the need to record and store data over time.

The drive can store the following data:

Type of [Data logging]	Description	[Data logging] storage: Automatic/ Manual	Access
Drive identification	Drive identification data	Automatic, in [Dashboard] dSH - menu	SoMove Webserver
Even warning logging	Warning logging	Automatic, in [Dashboard] dSH - menu	SoMove Webserver
Even error logging	Error logging	Automatic, in [Dashboard] dSH - menu	SoMove Webserver
Distribution logging	4 Distribution data	Manual	Webserver
Energy logging	1 Energy logging data	Automatic, in [Dashboard] dSH - menu	SoMove Webserver

Activation

To activate [Distributed logging] $dL\alpha$ - :


- Select 1 to 4 data to store with [Log dstrb prm select] LdP -
- Set [Log Distrib State] $LdEn$ to [Start] $StArt$

The logging starts as soon as the motor is running.

To stop logging, set [Log Distrib State] $LdEn$ to [Stop] $StoP$.

[Log Distrib State] $LdEn$

Logging distribution state.

Setting 	Code / Value	Description
[Stop]	<i>S t o p</i>	Distribution logging disabled Factory setting
[Start]	<i>S t a r t</i>	Distribution logs only when the motor is started
[Always]	<i>A L W A Y S</i>	Distribution logs all the time
[Reset]	<i>r e s e t</i>	Distribution logging reset (configuration, data)
[Clear]	<i>C L E A R</i>	Clear distribution data
[Error]	<i>E r r o r</i>	An error has been detected during distribution logging

[Log dstrb prm select] L d P - Menu**Access**

[Display] → [Data logging] → [Distributed logging] → [Log dstrb prm select]

About This Menu

This menu allows you to select up to 4 parameters for data logging. The peak value for each parameter is also stored.

[Log Distrib. Data 1] L d d 1 to [Log Distrib. Data 4] L d d 4

Logging distribution data 1 to 4.

Setting ()	Code / Value	Description
[Distrib. Log. Disable]	n o	Distribution logging disable Factory setting
[Motor Frequency]	r F r	Motor frequency
[Motor Current]	L C r	Motor current
[Motor Speed]	S P d	Motor speed
[Motor Voltage]	u o P	Motor voltage
[Motor Mech. Power]	o P r W	Motor mechanical power
[Input Elec. Power]	i P r W	Input electrical power
[Output Elec. Power]	E P r W	Output electrical power
[Motor Torque]	o T r	Motor torque
[Mains Voltage]	u L n	Mains voltage
[DC BUS Voltage]	V b u S	DC BUS voltage
[AI1 Th Value]	t H 1 V	Thermal sensor AI1
[AI3 Th Value]	t H 3 V	Thermal sensor AI3
[AI4 Th Value]	t H 4 V	Thermal sensor AI4
[AI5 Th Value]	t H 5 V	Thermal sensor AI5
[Drive Thermal State]	t H d	Drive thermal state
[Motor Therm State]	t H r	Motor thermal state
[Mains Current]	i L n	Main estimated current
[Input Reactive Power]	i q r W	Re-active Electrical input power estimation
[Input Power factor]	P W F	Main power factor
[DBR Thermal State]	t H b	Braking thermal state

[Distributed logging] d L o - Menu

Access

[Display] → [Data logging] → [Distributed logging]

About This Menu

NOTE: If a log data exceeds the user defined maximum values for log distribution data, this value will not be stored in the log distribution.

[Log Distrib Slp Time] L d S t

Logging distribution sample time.

Setting ()	Code / Value	Description
[200 ms]	2 0 0 0 5	200 ms
[1 second]	1 5	1 s Factory setting
[2 second]	2 5	2 s
[5 second]	5 5	5 s

[Dist Max Val 1] L d n 1 to [Dist Max Val 4] L d n 4

Maximum value of the log distribution data 1 to maximum value of the log distribution data 4.

The defined maximum value corresponds to 100 % of the stored data. Adjust the maximum value to adapt the full range of the logging distribution data.

Setting ()	Description
10...65,535	Setting range Factory setting: 65,535 (the setting can be adapted when modifying [Log Distrib. Data 1] L d d 1...[Log Distrib. Data 4] L d d 4.

[Braking Unit Option]

[Braking Unit Option] $b u o$ - Menu

Access

[Display] → [Braking Unit Option]

About This Menu

This menu can be accessed if a Braking Unit Option has been configured.

[DBR thermal state] $t H b$

Braking Resistor thermal state

Setting	Description
0...118%	Setting range Factory setting: Read only

[Braking Resistor Energy] $b r E \mathcal{E}$

Braking resistor energy counter

Setting	Description
0...4,294,967,295 kWh	Setting range Factory setting: Read only

[DBR Run Time] $r r H H$

Braking resistor run time

Setting	Description
0.0...429,496,729.5 h	Setting range Factory setting: Read only

[BUO Fan Operation Time] $F b b t$

Braking unit fan operation time

Setting	Description
0...500,000 h	Setting range Factory setting: Read only

[BUO Power-on time] $r P H H$

Braking unit Power-on time

Setting	Description
0.0...429,496,729.5 h	Setting range Factory setting: Read only

[Complete settings] C 5 E -

What's in This Chapter

[Macro configuration]	127
[Motor parameters] P P R - Menu	128
[Define system units]	203
[Command and Reference] C r P - Menu	205
[Pump functions] - [PID controller]	221
[Pump functions] - [Sleep/wakeup]	241
[Pump functions] - [Feedback monitoring]	248
[Pump functions] - [ENA System]	250
[Pump functions] - [Backspin Control]	252
[Pump monitoring] - [Pumpcycle monitoring]	255
[Pump monitoring] - [Thermal monitoring]	257
[Master/Slave]	258
[Backlash compensation]	286
[Hoisting Functions]	297
[Hoisting monitoring]	329
[Conveyor Functions]	330
[Generic functions] - [Speed limits]	334
[Generic functions] - [Ramp]	337
[Generic functions] - [Ramp switching]	342
[Generic functions] - [Stop configuration]	344
[Generic functions] - [Auto DC injection]	350
[Generic functions] - [Ref. operations]	354
[Generic functions] - [Preset speeds]	356
[Generic functions] - [+/- speed]	359
[Generic functions] - [+/- speed around ref]	362
[Generic functions] - [Jump frequency]	365
[Generic functions] - [PID controller]	367
[Generic functions] - [Feedback mon.]	387
[Generic functions] - [Threshold reached]	388
[Generic functions] - [Mains contactor command]	391
[Generic functions] - [Output contactor cmd]	394
[Generic functions] - [Reverse disable]	398
[Generic functions] - [Torque limitation]	399
[Generic functions] - [2nd current limit.]	404
[Generic functions] - [Jog]	406
[Generic functions] - [High Speed Switching]	408
[Generic functions] - [Memo reference frequency]	410
[Generic functions] - [Brake logic control]	411
[Generic functions] - [Limit switches]	412
[Generic functions] - [Positioning by sensors]	414
[Generic functions] - [Torque control]	422
[Generic functions] - [Parameters switching]	430
[Generic functions] - [Stop after speed timeout]	435
[Generic functions] - [Active Front End]	437
[Generic functions] - [Bus Ref Link]	438
[Generic functions] - [DC bus supply]	440
[Generic functions] - [Multimotors config]	442
[Generic functions] - [Liquid Cooled Drive]	446
[Generic Functions] [External Weight Measurement]	448
[Generic functions] — [Power backup]	451
[Generic monitoring]	454
[Input/Output] - [I/O assignment]	465
[Input/Output] - [DI/DQ]	471
[Input/Output] - [Analog I/O]	483
[Input/Output] - [Relay]	503
[Encoder configuration]	512
[Error/Warning handling]	520
[Maintenance]	564
[Cabinet I/O Function] C R b F -	571

Introduction



[Complete settings] \llcorner \llcorner \llcorner - menu presents all the settings related to drive functions for:

- Motor and drive configuration
- Application functions
- Monitoring functions

[Macro configuration]

[Macro configuration] - Menu

Access

[Complete settings] → [Macro configuration]

About This Menu

This menu allows to select an application type in order to display only the parameters and menus useful for the selected application.

The application type selection should be done prior to the application settings.

Menu	[Generic Pump Control] G P P P	[Hoisting] H o S t	[Conveyor] C o n v	[All Applications] A L L
[Pump functions] P F t -	X			X
[Pump monitoring] P P t -	X			X
[Hoisting functions] H F t -		X		X
[Hoisting monitoring] H P n -		X		X
[Conveyor functions] C F t -			X	X

[Application Selection] A P P t

Application selection.

⚠ WARNING
<p>UNANTICIPATED EQUIPMENT OPERATION</p> <p>If this parameter is changed, the functions of the current configuration are disabled. The assignments of the inputs and/or outputs of functions that are no longer used as a result of the modified setting of the parameter are reset to the factory settings.</p> <ul style="list-style-type: none"> • Verify that this change is compatible with the type of wiring used. <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p>

Setting	Code / Value	Description
[Generic Pump Control]	G P P P	Generic pump control application
[Hoisting]	H o S t	Hoisting control application
[Conveyor]	C o n v	Conveyor control application
[All Applications]	A L L	All Applications Factory setting

[Motor parameters] P P A - Menu

[Motor parameters] P P A - Menu

Access

[Complete settings] → [Motor parameters]

About This Menu

For an application where less than 120% of overload is required

- Power rating of the drive could be equal to power rating of the motor
- Normal rating should be used

For an application where more that 120% of overload is required (up to 150%)

- Power rating of the drive should be greater than power rating of the motor
- High rating could be used to pre-adjust motor nameplate parameter

High rating or Normal rating depend of the machine cycle.

If high rating is selected, drive current limitation is extended to 1.5 x I_n and maximum values of motor parameters linked to current and/or power are reduced. When switching from one to another selection, all the related parameters are set to their factory setting values.

In any case, the maximum current of the drive does not change. Setting the drive to high rating mode decreases the nominal values for the motor parameters. It means that for the same motor, an oversized drive is required in high rating mode.

ATV900 Motor Control Types

ATV900 drive embeds 8 motor control types which covers all the use cases depending of the application.

The following table shows the Motor Control types selection depending of the application needs:

Control	Motor Type	[Motor Control Type] 5 5 5 selection	Description
Open-Loop	Asynchronous motor	[SVC V] 5 5 5	Voltage vector control law with slip compensation
		[U/F VC 5pts] 5 5 5	5 points U/F vector control law
		[Energy Sav.] 5 5 5	Energy saving control law
	Synchronous motor	[Sync. mot.] 5 5 5	Permanent magnet control law
		[SYN_U VC] 5 5 5	Permanent magnet control law for variable torque applications
Reluctance motor	[Reluctance Motor] 5 5 5	Reluctance motor control law	
Closed-Loop ⁽¹⁾	Asynchronous motor	[FVC] 5 5 5	Current vector control law
	Synchronous motor	[Sync.CL] 5 5 5	Permanent magnet control law
(1) For these applications, an encoder must be present and configured.			

Parameters List for Asynchronous Motors

The following table shows the minimum parameters list that needs to be configured for asynchronous motors depending of [Motor Control Type] C E E selection:

NOTE: After setting these parameters, it is recommended to perform an [Autotuning] E u n to optimize the performances. If one of these parameters is modified, autotuning must be re-performed.

Parameters	[SVC V] V V C	[FVC] F V C	[U/F VC 5pts] u F S	[Energy Sav.] n L d
[Motor Standard] b F r	✓	✓	✓	✓
[Nominal Motor Power] n P r or [Motor 1 Cosinus Phi] C o S (1)	✓	✓	✓	✓
[Nom Motor Voltage] u n S	✓	✓	✓	✓
[Nom Motor Current] n C r	✓	✓	✓	✓
[Nominal Motor Freq] F r S	✓	✓	✓	✓
[Nominal Motor Speed] n S P	✓	✓	✓	✓
[Encoder Type] u E C P		✓ (2)		
[Encoder supply volt.] u E C V		✓ (2)		
[Encoder usage] E n u		✓ (2)		
(1) Depending on [Motor Param Choice] n P C				
(2) Encoder settings depend of the encoder used on the application (see [Encoder configuration] i E n -).				

Parameters List for Synchronous or Reluctance Motors

The following table shows the minimum parameters list that needs to be configured for synchronous or reluctance motors depending of [Motor Control Type] C E E selection:

NOTE: After setting these parameters, it is recommended to perform an [Autotuning] E u n to optimize the performances. If one of these parameters is modified, autotuning must be re-performed.

Parameters	[Sync. mot.] S y n	[Sync.CL] F S y	[SYN_U VC] S y n u	[Reluctance Motor] S r V C
[Sync Nominal I] n C r S	✓	✓	✓	✓
[Nom SyncMotor Speed] n S P S	✓	✓	✓	✓
[Nom Motor torque] t q S	✓	✓	✓	✓
[Pole pairs] P P n S	✓	✓	✓	✓
[Angle setting type] A S E	✓	✓	✓	✓
[Encoder Type] u E C P		✓ (1)		

Parameters	[Sync. mot.] 5 5 n	[Sync.CL] F 5 5	[SYN_U VC] 5 5 n u	[Reluctance Motor] 5 r v c
[Encoder supply volt.] u E c v		✓ ⁽¹⁾		
[Encoder usage] E n u		✓ ⁽¹⁾		
[Autotuning Type] t u n t				✓ ⁽²⁾

(1) Encoder settings depend of the encoder used on the application (see [Encoder configuration] i E n -).

(2) [Autotuning Type] t u n t can be changed to optimize the performances with Reluctance motors.

[Dual Rating] d r t

Dual rating state.

Select the normal/heady duty depending on the overload required on the application.

NOTE: Modifying this parameter resets the motor tune parameters and, [Tune Selection] 5 t u n and/or [Rotation Tune Select] 5 t u r are reset to [Default] t A B. You will need to re-perform autotuning.

Setting	Code / Value	Description
[Normal Duty]	n o r m a l	Normal rating, drive current limitation is 1.2 x I _n Factory setting
[Heavy Duty]	H i G H	High rating, drive current limitation is 1.5 x I _n

[Motor Control Type] c t t

Motor control type.

Set this parameter according to the application and the type of motor. The selection must be done before entering motor parameter values.

NOTE: Modifying this parameter resets the motor tune parameters and, [Tune Selection] 5 t u n and/or [Rotation Tune Select] 5 t u r are reset to [Default] t A B. You will need to re-perform autotuning.

Setting	Code / Value	Description
[SVC V]	v v c	Voltage vector control (Sensorless flux vector V): Open-loop voltage flux vector control with automatic slip compensation according to the load. It supports operation with a number of motors connected in parallel on the same drive (if motors are identical). Factory setting
[FVC]	F v c	Current vector control closed loop (Full flux vector): Closed-loop current flux vector control for motors with encoder sensor; this option can be selected if an encoder module has been inserted. NOTE: Verify the encoder before selecting [FVC] F v c.
[U/F VC 5pts]	u F 5	U/F VC 5 point voltage/frequency:

Setting	Code / Value	Description
		<p>The profile is defined by the values of parameters u_{n5}, F_{r5}, u_1 to u_5 and F_1 to F_5. The result is the blue curve.</p> <p>By default, if u_1 to u_5 and F_1 to F_5 are not modified (factory settings), the used profile is defined by 2 points (see the green curve).</p> <p>NOTE: U_0 is the result of an internal calculation based on motor parameters and multiplied by u_{fr} (%). U_0 can be adjusted by modifying u_{fr} value.</p>
[Sync. mot.]	5 5 n	Open-loop synchronous motors: Motor control type specific for permanent magnet synchronous motors.
[Energy Sav.]	n L d	Specific motor control type optimized for energy saving. This motor control type automatically reduces the drive output current according to the motor load. This automatic current level adaptation allows energy saving for periods when load is kept to a minimum and preserves the drive performance up to full load.
[Sync.CL]	F 5 5	Closed-loop synchronous motor: For permanent magnet synchronous motors, with encoder. This selection is only possible if an encoder module has been inserted. NOTE: Verify the encoder before selecting [Sync.CL] F 5 5.
[SYN_U VC]	5 5 n u	Open-loop synchronous motor: Motor control type specific for permanent magnet synchronous motors. This motor control type is used for variable torque applications.
[Reluctance Motor]	5 r V c	Synchronous reluctance Motor: Motor control type for reluctance motors. This motor control type is used for variable torque applications. If the maximum output current of the drive is not equal or greater than the motor current, this will lead to a lack of torque performances. [Stall Monitoring] 5 5 P C function helps to prevent a motor overload by monitoring the motor current and the speed rise time.

[Adv. Motor Control] 5 5 5 5

Advanced motor control.

▲ WARNING**LOSS OF CONTROL**

If you modify the value of this parameter, you must go through the same steps as if the drive has been reset to the factory settings for the motor parameters.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Even if some parameters are unchanged, some others parameters, not accessible, are computed again. These settings include, but not limited to, selection of motor control type, settings of the motor parameters according to the motor nameplate, Autotuning of the motor.

This parameter enhances the standard motor control. It improves the dynamic and static performances (such as, in torque control or speed control with torque limit) especially at low frequency and at frequency greater than the motor nominal frequency.

Disable this feature to retrieve the same motor control behavior available on software version older than V3.1 (excluded).

In case of configuration transfer, if the configuration is coming from a software version older than V3.1 (excluded), this parameter is set to **[No]** n o automatically.

If this parameter is set to **[Yes]** y e s, it is not possible to transfer the configuration to a drive with a software version older than V3.1 (excluded).

This parameter can be accessed if **[Motor Control Type]** C E E is set to **[SVC V]** v v C, **[FVC]** F V C or **[Energy Sav.]** n L d.

Modifying **[Motor Control Type]** C E E resets **[Adv. Motor Control]** A E n C to factory settings. However, this parameter is forced to **[No]** n o if **[Motor Control Type]** C E E is set to a value different from **[SVC V]** v v C, **[FVC]** F V C or **[Energy Sav.]** n L d.

Enabling advanced motor control makes **[Rotation Tune]** E r A n - function accessible .

Setting	Code / Value	Description
[No]	n o	Disabled.
[Yes]	y e s	Enabled. Factory setting

[Data] n E d - Menu

Access

[Complete settings] → [Motor parameters] → [Motor data] → [Data]

About This Menu

⚠ WARNING

LOSS OF CONTROL

- Fully read and understand the manual of the connected motor.
- Verify that all motor parameters are correctly set by referring to the nameplate and the manual of the connected motor.
- If you modify the value of one or more motor parameters after having performed autotuning, the value of **[Tune selection] STUN** and/or **[Rotation Tune Select] STUR** is reset to **[Default] TAB** and you must re-perform autotuning.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

This menu contains motor-related data such as, but not limited to, motor nameplate parameters and parameters resulting from motor tuning. The parameters displayed in the menu mainly depend on **[Motor control type] C E E** selection:

- Asynchronous motor control types, i.e. if **[Motor control type] C E E** is set to:
 - **[SVC V] V V C**,
 - **[Energy Sav.] n L d**,
 - **[FVC] F V C**,
 - **[U/F VC 5pts] u F 5**.
- Synchronous or reluctance motor control types, i.e. if **[Motor control type] C E E** is set to:
 - **[Sync. mot.] S Y n**,
 - **[Sync.CL.] F S Y**,
 - **[Reluctance Motor] S r V c**,
 - **[SYN_U VC] S Y n u**.

This table presents the steps to follow to set and optimize the motor data for synchronous or reluctance motor:

Step	Action
1	Enter the motor nameplate
2	Perform the [Autotuning] E u n operation
3	Adjust [Syn. EMF constant] P H 5 to optimize the behavior: <ul style="list-style-type: none"> • Start the motor at minimal stable frequency available on the machine (at minimum load). • Check and note the [% error EMF sync] r d R E value: <ul style="list-style-type: none"> ◦ If the [% error EMF sync] r d R E value is lower than 0%, then [Syn. EMF constant] P H 5 may be increased. ◦ If the [% error EMF sync] r d R E value is upper than 0%, then [Syn. EMF constant] P H 5 may be reduced. • [% error EMF sync] r d R E value should be closed to 0%. • Stop the motor for modify [Syn. EMF constant] P H 5 in accordance with the value of the [% error EMF sync] r d R E (previously noted).

[Motor Standard] b F r ★

Motor standard.

This parameter is used to modify the presets and/or the units of several parameters, such as:

- **[High Speed] H S P**
- **[Motor Freq Thd] F t d**
- **[Nom Motor Voltage] u n S**
- **[Nominal Motor Freq] F r S**
- **[Max Frequency] t F r**

This parameter can only be accessed with asynchronous motor control types.

NOTE: Modifying this parameter resets the motor tune parameters and, **[Tune Selection] S t u n** and/or **[Rotation Tune Select] S t u r** are reset to **[Default] t A b**. Autotuning will need to be performed again.

Setting	Code / Value	Description
[50 Hz]	5 0	50Hz motor frequency — IEC Factory setting ⁽¹⁾
[60 Hz]	6 0	60Hz motor frequency — NEMA

⁽¹⁾: The factory setting value is changed to **[60 Hz]** for ATV930●●●S6● catalog numbers.

[Max Frequency] t F r

Maximum output frequency.

To help prevent **[Motor Overspeed] S o F** error, it is recommended to have **[Max Frequency] t F r** equal to or higher than 110% of **[High Speed] H S P**.

Setting	Description
10.0...599.0 Hz ⁽¹⁾ (step: 0.1 Hz)	Setting range Factory setting: 60 Hz, or preset to 72 Hz if [Motor Standard] b F r is set to [60 Hz] 6 0 .

⁽¹⁾ The maximum of the range is 10 * **[Nominal Motor Freq] F r S** for an asynchronous law or 10 * **[Sync Nominal Freq] F r S S** for a synchronous law.

[Nominal Motor Power] n P r ★

Nominal motor power (given on the motor nameplate).

This parameter can only be accessed with asynchronous motor control types and if **[Motor Param Choice] n P C** is set to **[Mot Power] n P r**.

NOTE: Modifying this parameter resets the motor tune parameters and, **[Tune Selection] S t u n** and/or **[Rotation Tune Select] S t u r** are reset to **[Default] t A b**. Autotuning will need to be performed again.

Setting	Description
According to drive rating ⁽¹⁾	Setting range in kW if [Motor Standard] b F r is set to [50 Hz] 5 0 , in HP if [Motor Standard] b F r is set to [60 Hz] 6 0 Factory setting: according to the drive rating

⁽¹⁾: If **[Motor Standard] b F r** is set to **[50 Hz] 5 0**, the step is 0.01 kW for drives with power range ≤ 15 kW. If the power range is between 18 and 160 kW (limits included), the step is 0.1 kW else it is 1 kW. If **[Motor Standard] b F r** is set to **[60 Hz] 6 0**, the step is 0.01 HP for drives with power range ≤ 20 HP. If the power range is between 25 and 250 HP (limits included), the step is 0.1 HP else it is 1 HP.

[Nom Motor Voltage] u_n 5 ★

Nominal motor voltage (given on the motor nameplate).

This parameter can only be accessed with asynchronous motor control types.

NOTE: Modifying this parameter resets the motor tune parameters and, [Tune Selection] 5 5 and/or [Rotation Tune Select] 5 5 are reset to [Default] 5 5. Autotuning will need to be performed again.

Setting	Description
100...690 Vac (step: 1 Vac)	Setting range Factory setting: according to drive rating and [Motor Standard] 5 5

[Nom Motor Current] i_n 5 ★

Nominal motor current (given on the motor nameplate).

This parameter can only be accessed with asynchronous motor control types.

NOTE: Modifying this parameter resets the motor tune parameters and, [Tune Selection] 5 5 and/or [Rotation Tune Select] 5 5 are reset to [Default] 5 5. Autotuning will need to be performed again.

Setting	Description
0.25...1.5 I_n ⁽¹⁾ (step: 0.01 A ⁽²⁾)	Setting range Factory setting: according to drive rating and [Motor Standard] 5 5
<p>⁽¹⁾: Corresponding to the rated drive current indicated in the installation manual and on the drive nameplate. ⁽²⁾: For drives with power range ≤ 15 kW. If the power range is between 18 and 160 kW (limits included), the step is 0.1 A else it is 1 A.</p>	

[Nominal Motor Freq] f_r 5 ★

Nominal motor frequency (given on the motor nameplate).

This parameter can only be accessed with asynchronous motor control types.

NOTE: Modifying this parameter resets the motor tune parameters and, [Tune Selection] 5 5 and/or [Rotation Tune Select] 5 5 are reset to [Default] 5 5. Autotuning will need to be performed again.

Setting	Description
10.0...599.0 Hz (step: 0.1 Hz)	Setting range Factory setting: 50 Hz, or preset to 60 Hz if [Motor Standard] 5 5 is set to [60 Hz] 5 5.

[Nominal Motor Speed] n_s 5 ★

Nominal motor speed (related to the motor nameplate data).

This parameter can only be accessed with asynchronous motor control types.

NOTE: Modifying this parameter resets the motor tune parameters and, [Tune Selection] 5 5 and/or [Rotation Tune Select] 5 5 are reset to [Default] 5 5. Autotuning will need to be performed again.

If the nameplate indicates the synchronous speed and the slip in Hz or as a %, use one of the formulas to calculate the rated speed:

$$\bullet \text{ Nominal speed} = \text{Synchronous speed} \times \frac{100 - \text{slip as a \%}}{100}$$

- Nominal speed = Synchronous speed x $\frac{60 - \text{slip in Hz}}{60}$ (60 Hz motors)
- Nominal speed = Synchronous speed x $\frac{50 - \text{slip in Hz}}{50}$ (50 Hz motors).

Setting	Description
0...65,535 rpm (step: 1 rpm)	Setting range Factory setting: according to drive rating and [Motor Standard] b F r

[Motor Param Choice] n P C ★

Motor parameter choice.

This parameter selects which motor nameplate parameter is used between **[Motor 1 Cosinus Phi]** C o 5 and **[Nominal Motor Power]** n P r . Set the selected parameter, depending on this parameter setting.

This parameter can only be accessed with asynchronous motor control types.

NOTE: Modifying this parameter resets the motor tune parameters and, **[Tune Selection]** S t u n and/or **[Rotation Tune Select]** S t u r are reset to **[Default]** t A b . Autotuning will need to be performed again.

Setting	Code / Value	Description
[Mot Power]	n P r	Motor power: [Nominal Motor Power] n P r is used. Factory setting
[Mot Cosinus]	C o 5	Motor cosinus: [Motor 1 Cosinus Phi] C o 5 is used.

[Motor 1 Cosinus Phi] C o 5 ★

Nominal motor cosinus Phi (given on the motor nameplate).

This parameter can only be accessed with asynchronous motor control type and if **[Motor Param Choice]** n P C is set to **[Mot Cosinus]** C o 5 .

NOTE: Modifying this parameter resets the motor tune parameters and, **[Tune Selection]** S t u n and/or **[Rotation Tune Select]** S t u r are reset to **[Default]** t A b . Autotuning will need to be performed again.

Setting	Description
0.50...1.00 (step: 0.01)	Setting range Factory setting: according to the drive rating

[Nominal motor slip] n 5 L ★

Motor nominal slip (calculated by the drive).

To modify the nominal motor slip, modify **[Rated motor speed]** n 5 P , page 135.

This parameter can only be accessed with asynchronous motor control types and if **[Access Level]** L R C is set to **[Expert]** E P r .

Setting	Description
0...6553.5 Hz (step: 0.1 Hz)	Setting range Factory setting: Read-only parameter.

[AsyncMotor R Stator] r 5 R★

Asynchronous motor stator resistance.

The factory setting is replaced by a measure resulting from a standstill motor tune (autotuning) if it has been performed. Only enter manually a value if you are copying a drive configuration that has been tuned via autotuning.

This parameter can only be accessed with asynchronous motor control types and if [Access Level] L R L is set to [Expert] E P r .

Setting	Description
0...65,535 mOhm (step: 1 mOhm) ⁽¹⁾	Setting range Factory setting: 0 mOhm
^{(1):} For drives with power range ≤ 15 kW. If the power range is between 18 and 75 kW (limits included), the range is 0.0...6,553.5 mOhm (step: 0.1 mOhm). If the power range is between 90 and 500 kW (limits included), the range is 0.00...655.35 mOhm (step: 0.01 mOhm) else the range is 0.000...65.535 mOhm (step: 0.001 mOhm).	

[Magnetizing Current] i d R★

Magnetizing current.

The factory setting is replaced by the result of an internal calculation based on standstill motor tune results (autotuning). The parameter is measured if a tune in rotation is performed.

This parameter can only be accessed with asynchronous motor control types and if [Access Level] L R L is set to [Expert] E P r .

This parameter impacts the setting of [Nom Motor Torque] L 9 n .

Setting	Description
0.00...655.35 A (step: 0.01 A) ⁽¹⁾	Setting range Factory setting: 0.00 A
^{(1):} For drives with power range ≤ 15 kW. If the power range is between 18 and 160 kW (limits included), the range is 0.0...6,553.5 A (step: 0.1 A) else the range is 0...65,535 A (step: 1 A).	

[AsyncMotor Lf Induct] L F R★

Asynchronous motor leakage inductance.

The factory setting is replaced by an measure resulting from a standstill motor tune (autotuning) if it has been performed. Only enter manually a value if you are copying a drive configuration that has been tuned via autotuning.

This parameter can only be accessed with asynchronous motor control types and if [Access Level] L R L is set to [Expert] E P r .

Setting	Description
0.00...655.35 mH (step: 0.01 mH) ⁽¹⁾	Setting range Factory setting: 0.00 mH
^{(1):} For drives with power range ≤ 15 kW. If the power range is greater than 160 kW, the range is 0.0...6,553.5 μH (step: 0.1 μH) else the range is 0.00...65,535 μH (step: 1 μH).	

[Rotor Time Const] L r R★

Rotor time constant.

This parameter is the result of an internal calculation using motor nameplate parameters and motor autotuning results.

NOTE:

- If a value is manually entered, this parameter is not updated after a tune in rotation has been performed.
- A value manually entered is reset to the tabulated value if **[Adv. Motor Control] P E N C** is modified from **[Yes] Y E S** to **[No] n o**.

This parameter can only be accessed with asynchronous motor control types and if **[Access Level] L A C** is set to **[Expert] E P r**.

Setting	Description
0.0...6,553.5 ms (step: 0.1 ms) ⁽¹⁾	Setting range Factory setting: 0.0 ms
⁽¹⁾ : For drives with power range ≤ 15 kW else the range is 0...65,535 ms (step: 1 ms).	

[Sync Nominal I] n C r 5 ★

Sync motor nominal current (given on the motor nameplate).

This parameter can only be accessed with synchronous or reluctance motor control types.

NOTE: Modifying this parameter resets the motor tune parameters and, **[Tune Selection] S E U n** is reset to **[Default] E A b**. Autotuning will need to be performed again.

Setting	Description
0.25...1.5 I _n ⁽¹⁾ (step: 0.01 A ⁽²⁾)	Setting range Factory setting: according to the drive rating.
⁽¹⁾ : Corresponding to the rated drive current indicated in the installation manual and on the drive nameplate. ⁽²⁾ : For drives with power range ≤ 15 kW. If the power range is between 18 and 160 kW (limits included), the step is 0.1 A else it is 1 A.	

[Nom SyncMotor Speed] n S P 5 ★

Nominal synchronous motor speed (given on the motor nameplate).

This parameter can only be accessed with synchronous or reluctance motor control types.

NOTE: Modifying this parameter resets the motor tune parameters and, **[Tune Selection] S E U n** is reset to **[Default] E A b**. Autotuning will need to be performed again.

Setting	Description
0...48,000 rpm (step: 1 rpm)	Setting range Factory setting: according to the drive rating.

[Torque scaling] i n r t

Torque scaling.

This parameter shows the scaling of **[Motor torque (Nm)] o E 9 n**, **[Nom Motor Torque] E 9 n**, **[Nom Motor Torque] E 9 S**, **[M/S Master Torq Ref] F n E r**, **[M/S Local Torq Ref] F X E** and **[M/S Device Torq Ref] F E o r**.

According to your needs, you can adjust the torque scaling multiplying by 10 the default torque unit.

Setting	Code / Value	Description
[0.001]	0001	Unit: 0.001 Nm Absolute setting range: 0.001...65.535 Nm Setting range: -32.767...+32.767 Nm
[0.01]	001	Unit: 0.01 Nm Absolute setting range: 0.01...655.35 Nm Setting range: -327.67...+327.67 Nm
[0.1]	01	Unit: 0.1 Nm Absolute setting range: 0.1...6,553.5 Nm Setting range: -3,276.7...+3,276.7 Nm
[1]	1	Unit: 1 Nm Absolute setting range: 1...65,535 Nm Setting range: -32,767...+32,767 Nm
[10]	10	Unit: 10 Nm Absolute setting range: 10...655,350 Nm Setting range: -327,670...+327,670 Nm
NOTE: Factory setting: according to the drive rating		

[Nom Motor torque] 5 9 5 ★

Nominal motor torque (given on the motor nameplate).

This parameter can only be accessed with synchronous or reluctance motor control types.

NOTE: Modifying this parameter resets the motor tune parameters and, [Tune Selection] 5 5 5 is reset to [Default] 5 5 5. Autotuning will need to be performed again.

Setting	Description
0.1...6,553.5 Nm	Setting range according to drive ratings and [Torque Scaling] 5 5 5 setting. Factory setting: according to the drive rating.

[Pole pairs] 5 5 5 ★

Pole pairs (given on the motor nameplate).

This parameter is used to calculate [Sync Nominal Freq] 5 5 5.

This parameter can only be accessed with synchronous or reluctance motor control types.

NOTE: Modifying this parameter resets the motor tune parameters and, [Tune Selection] 5 5 5 is reset to [Default] 5 5 5. Autotuning will need to be performed again.

Setting	Description
1...240 (step: 1)	Setting range Factory setting: according to the drive rating.

[Angle setting type] 5 5 5 ★

Automatic angle setting type.

This parameter can only be accessed with synchronous or reluctance motor control types.

[PSI align] P 5 , and [PSIO align] P 5 , 0 are working for all types of synchronous motors. [SPM align] S P P R and [IPM align] , P P R increase performances depending on the type of synchronous motor. [Rotational Current Injection] r C , may be used where [PSI align] P 5 , and [PSIO align] P 5 , 0 do not give expected performances.

Setting	Code / Value	Description
[IPM align]	, P P R	Alignment for IPM motor. Alignment mode for Interior-buried Permanent Magnet motor (usually, this kind of motor has a high saliency level). It uses high frequency injection, which is less noisy than standard alignment mode.
[SPM align]	S P P R	Alignment for SPM motor. Mode for Surface-mounted Permanent Magnet motor (usually, this kind of motor has a medium or low saliency level). It uses high frequency injection, which is less noisy than standard alignment mode.
[PSI align]	P 5 ,	Pulse signal injection. Standard alignment mode, without rotor motion. The angle measurement is realized by monitoring the stator current response to a pulse signal injection over a wide range of frequencies.
[PSIO align]	P 5 , 0	Pulse signal injection - optimized. Optimized alignment mode, without rotor motion. Same operation as [PSI align] P 5 , is performed over an optimized range of frequencies The measurement time is reduced after the first run order or tune operation, even if the drive has been turned off. Factory setting
[Rotational Current Injection]	r C ,	Rotational current injection. Alignment mode with rotor motion. This alignment mode realizes the mechanical alignment of the rotor and the stator; it requires up to 4 s. The motor needs to be stopped and without resistive torque. NOTE: This setting is recommended when a sinus filter is used on the application. NOTE: For synchronous reluctance motor, it is recommended to use this setting.
[No align]	n 0	No alignment

[Syn. EMF constant] P H 5 ★

Synchronous motor EMF constant

P H 5 adjustment allows you to reduce the current in operation without load (or with minimum of load). For the all steps to follow to optimize the synchronous motor settings , page 133.

This parameter can only be accessed with synchronous motor control types.

Setting	Description
0...6,553.5 mV/rpm (step: 0.1 mV/rpm)	Setting range Factory setting: 0 mV/rpm

[SyncMotor Stator R] r 5 R 5 ★

Calculated SyncMotor Stator R (cold state stator resistance per winding).

The factory setting is replaced by an estimation resulting from a standstill motor tune (autotuning) if it has been performed. Only enter manually a value if you are copying a drive configuration that has been tuned via autotuning.

This parameter can only be accessed with synchronous or reluctance motor control types and if [Access Level] L A C is set to [Expert] E P r .

Setting	Description
0...65,535 mOhm (step: 1 mOhm) ⁽¹⁾	Setting range Factory setting: 0 mOhm
^{(1):} For drives with power range ≤ 15 kW. If the power range is between 18 and 75 kW (limits included), the range is 0.0...6,553.5 mOhm (step: 0.1 mOhm). If the power range is between 90 and 500 kW (limits included), the range is 0.00...655.35 mOhm (step: 0.01 mOhm) else the range is 0.000...65.535 mOhm (step: 0.001 mOhm).	

[Autotune L d-axis] L d 5 ★

Sync motor d inductance (axis "d" stator inductance per phase).

The factory setting is replaced by an estimation resulting from a standstill motor tune (autotuning) if it has been performed. Only enter manually a value if you are copying a drive configuration that has been tuned via autotuning.

NOTE: On motors with smooth poles, [Autotune L d-axis] L d 5 = [Autotune L q-axis] L q 5 = Stator inductance L.

This parameter can only be accessed with synchronous or reluctance motor control types and if [Access Level] L A C is set to [Expert] E P r .

Setting	Description
0.00...655.35 mH (step: 0.01 mH) ⁽¹⁾	Setting range Factory setting: 0.00 mH
^{(1):} For drives with power range ≤ 15 kW. If the power range is greater than 160 kW, the range is 0.0...6,553.5 μH (step: 0.1 μH) else the range is 0.00...65,535 μH (step: 1 μH).	

[Autotune L q-axis] L q 5 ★

Sync motor q inductance (axis "q" stator inductance per phase).

The factory setting is replaced by an estimation resulting from a standstill motor tune (autotuning) if it has been performed. Only enter manually a value if you are copying a drive configuration that has been tuned via autotuning.

NOTE: On motors with smooth poles, [Autotune L d-axis] L d 5 = [Autotune L q-axis] L q 5 = Stator inductance L.

This parameter can only be accessed with synchronous or reluctance motor control types and if [Access Level] L A C is set to [Expert] E P r .

Setting	Description
0.00...655.35 mH (step: 0.01 mH) ⁽¹⁾	Setting range Factory setting: 0.00 mH
^{(1):} For drives with power range ≤ 15 kW. If the power range is greater than 160 kW, the range is 0.0...6,553.5 μH (step: 0.1 μH) else the range is 0.00...65,535 μH (step: 1 μH).	

[Sync Nominal Freq] F r 5 5 ★

Synchronous motor nominal frequency.

This parameter can only be accessed with synchronous or reluctance motor control types and if [Access Level] L A C is set to [Expert] E P r .

NOTE: Modifying this parameter resets the motor tune parameters and, [Tune Selection] S t u n is reset to [Default] L A b . Autotuning will need to be performed again.

Setting	Description
10.0...599.0 Hz (step: 0.1 Hz)	Setting range Factory setting: $n S P S \times P P n S / 60$ (the value is automatically updated and cannot be modified)

[PSI Align Curr Max] n C r ★

Maximum current of PSI alignment.

Current level in % of **[Sync Nominal I] n C r S** for **[PSI align] P 5**, and **[PSIO align] P 5**, α angle shift measurement modes. This parameter has an impact on the inductor measurement.

This parameter can only be accessed with synchronous or reluctance motor control types and if **[Access Level] L R C** is set to **[Expert] E P r**.

This current must be equal to or higher than the maximum current level of the application; otherwise an instability may occur.

NOTE: In case of instability, **[PSI Align Curr Max] n C r** should be increased by steps up to obtain the requested performances.

Setting	Code / Value	Description
[Auto]	<i>A u t o</i>	[PSI Align Curr Max] n C r is adapted by the drive according to the motor data settings. Factory setting
1...300 % (step: 1 %)		setting range

[Current Filter Time] C r t F ★

Filter time of the current.

This parameter is defined the filter time of the feedback currents data internally used by the drive.

This parameter can be accessed if **[Access Level] L R C** is set to **[Expert] E P r**.

Setting	Code / Value	Description
[Auto]	<i>A u t o</i>	Currents filter time applied is defined by [Currents Filter] C r F A . Factory setting
1...100.0 ms (step: 0.1 ms)		setting range

[Currents Filter] C r F A ★

Internal currents filter time.

Default currents filter time used if **[Current Filter Time] C r t F** is set to **[Auto] A u t o**.

This parameter can be accessed if **[Access Level] L R C** is set to **[Expert] E P r**.

Setting	Description
0.0...100.0 ms (step: 0.1 ms)	Setting range Factory setting: Read-only parameter.

[% error EMF sync] r d A E ★

Ratio D-axis current.

This parameter can only be accessed with synchronous motor control types.

This parameter is used to perform adjustments on **[Syn. EMF constant] P H 5**: this parameter should be close to 0 %. If **[% error EMF sync] r d R E** is:

- Lower than 0%: **[Syn. EMF constant] P H 5** may be increased.
- Greater than 0%: **[Syn. EMF constant] P H 5** may be reduced.

For the all steps to follow to optimize the synchronous motor settings , page 133.

Setting	Description
0.0...6,553.5 % (step: 0.1 %)	Setting range Factory setting: Read-only parameter

[Tangential Main Inductance] L D R ★

Tangential main inductance

This parameter is estimated via the tune in rotation and is used by the magnetic saturation curve. Only enter manually a value if you are copying a drive configuration that has been tuned via the tune in rotation, page 156.

This parameter can be accessed if:

- **[Access Level] L R C** is set to **[Expert] E P r** , and
- **[Rotation Tune Type] E F R P** is set to **[Saturation] S R E F** .

Setting	Description
0...6,553.5 mH (step: 0.1 mH) ⁽¹⁾	Setting range Factory setting: 0
<small>(1): For drives with power range ≤ 15 kW. If the power range is greater than 160 kW, the range is 0...65,535 μH (step: 1 μH) else the range is 0.00...655.35 mH (step: 0.01 mH).</small>	

[Flux curve coeff A] R L F R ★

Flux saturation curve coefficient A.

This parameter is estimated via the tune in rotation and is used by the magnetic saturation curve. Only enter manually a value if you are copying a drive configuration that has been tuned via the tune in rotation, page 156.

This parameter can be accessed if:

- **[Access Level] L R C** is set to **[Expert] E P r** , and
- **[Rotation Tune Type] E F R P** is set to **[Saturation] S R E F** .

Setting	Description
-327.67 %...327.67 % (step: 0.01 %)	Setting range Factory setting: 0.00 %

[Flux curve coeff B] b E E D ★

Flux saturation curve coefficient B.

This parameter is estimated via the tune in rotation and is used by the magnetic saturation curve. Only enter manually a value if you are copying a drive configuration that has been tuned via the tune in rotation, page 156.

This parameter can be accessed if:

- **[Access Level] L R C** is set to **[Expert] E P r** , and
- **[Rotation Tune Type] E F R P** is set to **[Saturation] S R E F** .

Setting	Description
-327.67 %...327.67 % (step: 0.01 %)	Setting range Factory setting: 0.00 %

[Nameplate Nominal Flux] $P H , D \star$

Nameplate nominal flux.

This parameter is calculated from the motor nameplate and it is used for internal calculation. This parameter is used for Schneider Electric services purpose

This parameter can be accessed if **[Access Level] $L A C$** is set to **[Expert] $E P r$** .

Setting	Description
0.00...655.35 Wb (step: 0.01 Wb)	Setting range Factory setting: Read-only parameter.

[Rotor Nominal Flux] $P H , A \star$

Rotor nominal flux.

This parameter is the flux corresponding to **[Magnetizing current] $i d A$** and used in the Flux/Current model for motor control.

This parameter can be accessed if **[Access Level] $L A C$** is set to **[Expert] $E P r$** .

Setting	Description
0.00...655.35 Wb (step: 0.01 Wb)	Setting range Factory setting: Read-only parameter.

[Main Inductance] $L A \star$

Main Inductance.

This parameter is the result of an internal calculation using **[Rotor Nominal flux] $P H , A$** and **[Magnetizing current] $i d A$** .

This parameter can be accessed if **[Access Level] $L A C$** is set to **[Expert] $E P r$** .

Setting	Description
0...6,553.5 mH (step: 0.1 mH) ⁽¹⁾	Setting range Factory setting: Read-only parameter.
⁽¹⁾ : For drives with power range ≤ 15 kW. If the power range is greater than 160 kW, the range is 0...65,535 μ H (step: 1 μ H) else the range is 0.00...655.35 mH (step: 0.01 mH).	

[Angle test setting] A 5 A - Menu

Access

[Complete settings] → [Motor parameters] → [Motor data] → [Angle test setting]

About This Menu

For synchronous motor parameters.

This menu can be accessed if [Motor control type] C 5 E is set to:

- [Sync.CL.] F 5 Y.

And if an encoder option module has been inserted.

[Angle setting type] A 5 E ★

Auto angle setting type.

[PSI align] P 5 , and [PSIO align] P 5 , 0 are working for all types of synchronous motors. [SPM align] S P A and [IPM align] , P A increase performances depending on the type of synchronous motor. [Rotational Current Injection] r C , may be used where [PSI align] P 5 , and [PSIO align] P 5 , 0 do not give expected performances.

Setting	Code / Value	Description
[IPM align]	, P A	Alignment for IPM motor. Alignment mode for Interior-buried Permanent Magnet motor (usually, this kind of motor has a high saliency level). It uses high frequency injection, which is less noisy than standard alignment mode.
[SPM align]	S P A	Alignment for SPM motor. Mode for Surface-mounted Permanent Magnet motor (usually, this kind of motor has a medium or low saliency level). It uses high frequency injection, which is less noisy than standard alignment mode.
[PSI align]	P 5 ,	Pulse signal injection. Standard alignment mode, without rotor motion The angle measurement is realized by monitoring the stator current response to a pulse signal injection over a wide range of frequencies
[PSIO align]	P 5 , 0	Pulse signal injection - optimized. Optimized alignment mode, without rotor motion Same operation as [PSI align] P 5 , is performed over an optimized range of frequencies The measurement time is reduced after the first run order or tune operation, even if the drive has been turned off Factory setting
[Rotational Current Injection]	r C ,	Rotational current injection. Alignment mode with rotor motion. This alignment mode realizes the mechanical alignment of the rotor and the stator; it requires up to 4 s. The motor needs to be stopped and without resistive torque. NOTE: This setting is recommended when a sinus filter is used on the application. NOTE: For synchronous reluctance motor, it is recommended to use this setting.
[No align]	n 0	No alignment

[Angle auto-test] A 5 A

Angle setting.

Setting	Code / Value	Description
[No]	n o	Auto angle setting is not done Factory setting
[Yes]	y e s	Auto angle setting is requested.
[Done]	d o n e	Auto angle setting is done.

[Angle Test Assign] F 5 L

Auto angle setting activation by logic signal.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[DI1]...[DI8]	L , I ... L , B	Digital input DI1...DI8
[DI11]...[DI16]	L , I I ... L , I B	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	C d 0 0 ... C d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] , o configuration
[CD11]... [CD15]	C d 1 1 ... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1 ... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , o configuration
[C111]... [C115]	C 1 1 1 ... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1 ... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , o configuration
[C211]... [C215]	C 2 1 1 ... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1 ... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , o configuration
[C311]... [C315]	C 3 1 1 ... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1 ... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , o configuration
[C511]... [C515]	C 5 1 1 ... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

NOTE: If a **line contactor** function has been configured, the contactor closes during measurement.

[Angle setting Mode] F 5 R

Automatic auto angle setting activation.

Setting	Code / Value	Description
[No]	n o	Automatic auto angle setting is not activated
[Run Command]	R u n C o m m a n d	Auto angle setting launched at run command if the drive is not aligned state. Factory setting

[Angle offset value] F 5 V

Auto angle setting value.

Phase-shift angle between the motor and the encoder. 8192 corresponds to 360°.

Setting	Description
[No]...8192	Automatic auto angle setting value Factory setting: [No] 00

[Angle setting status] A 5 E 5

Auto angle setting status.

Setting	Code / Value	Description
[Not done]	<i>Not Done</i>	Angle setting value is not defined Factory setting
[Pending]	<i>Pending</i>	Angle setting is in waiting state
[In progress]	<i>In Progress</i>	Angle setting function is in progress
[Error]	<i>Fail</i>	Angle Setting function failed
[Done]	<i>Done</i>	Angle function is OK
[Custom Value]	<i>Custom</i>	The phase-shift angle value has been entered by the user via the display terminal or serial Link

[Motor tune] 7 5 - Menu

Access

[Complete settings] → [Motor parameters] → [Motor data] → [Motor tune]

About This Menu

This menu is used to perform motor autotuning (or standstill motor tuning).

The tune operation optimizes:

- The motor performances at low speed.
- The estimation of the motor torque.
- The accuracy of the estimation of the process values in sensorless operation and monitoring.

Before performing a motor autotuning

- The motor parameters must be set first. If a motor parameter is modified (or a parameter impacting a motor parameter setting), autotuning must be re-performed.
- The motor has to be stopped. Verify that the application does not make the motor turn during the tune operation.
- The motor must be at cold state: the motor thermal state has a significant influence on the tuning result.

Autotuning can be performed:

- manually on request by setting [Autotuning] 5 5 to [Apply Autotuning] 5 5,
- manually using the digital input or bit assigned to [Autotuning Assign] 5 5,
- automatically at drive power-up if [Automatic autotune] 5 5 is set to [Yes] 5 5.

[Autotuning] 5 5

⚠ WARNING

UNEXPECTED MOVEMENT

Autotuning moves the motor in order to tune the control loops.

- Only start the system if there are no persons or obstructions in the zone of operation.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

During autotuning, noise development and oscillations of the system are normal.

If [Autotuning Type] TUNT is set to [Standard] STD, during autotuning, the motor makes small movements.

If [Autotuning Type] TUNT is set to [Rotation] ROT, during autotuning, the motor runs at half of its nominal frequency.

⚠ WARNING

LOSS OF CONTROL

- If you modify the value of one or more motor parameters after having performed autotuning, the value of [Tune selection] STUN is reset to [Default] TAB and you must re-perform autotuning.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

If **[Motor control type] C 5 E** is set to **[Reluctance Motor] 5 r V C**, the drive operates the mechanical alignment of the motor (**[Angle setting type] A 5 E** set to **[Rotational Current Injection] r C i**) prior to start the autotuning.

Autotuning is only performed if no stop command has been activated. If a “freewheel stop” or “fast stop” function has been assigned to a digital input, this input must be set to 1 (active at 0).

Autotuning takes priority over any run or prefluxing commands, which will be taken into account after the autotuning sequence.

If autotuning has detected an error, this parameter automatically switches back to **[No action] n o** and, the error response depends on the configuration of **[Tuning Error Resp] E n L**.

Autotuning may last for several seconds. Do not interrupt the process. Wait for the Graphic Display Terminal to change to **[No action] n o**.

To redo a motor tuning, wait that it is stopped and cold. Set first **[Autotuning] E u n** to **[Erase Autotuning] C L r**, then redo the motor tuning.

The use of the motor autotuning without doing a **[Erase Autotuning] C L r** first is used to get the thermal state estimation of the motor.

The cable length has an influence on the tune result. If the wiring is modified, it is necessary to redo the tune operation.

Setting ()	Code / Value	Description
[No action]	n o	Autotuning not in progress. Factory setting
[Apply Autotuning]	Y E 5	Autotuning is performed immediately if possible, then the parameter automatically changes to [No action] n o . If the drive state does not allow the tune operation immediately, the parameter changes to [No] n o and the operation must be done again. NOTE: The motor parameters must be set before performing autotuning.
[Erase Autotuning]	C L r	The motor parameters measured by the autotuning function are reset. The default motor parameter values are used to control the motor. [Autotuning Status] E u 5 is set to [Not done] E A b .

[Autotuning Status] E u 5

Autotuning status.

Read-only parameter. This parameter is not saved at drive power-off. It shows the autotuning status since the last power-on.

NOTE: To know about which are the values used by the drive to control the motor (e.g. if the values used are the results of an autotuning) refer to **[Tune Selection] 5 E u n**, page 152.

Setting	Code / Value	Description
[Not done]	E A b	The autotuning is not done Factory setting
[Pending]	P E n d	The autotuning has been requested but not yet performed
[In Progress]	P r o G	The autotuning is in progress
[Error]	F A i L	The autotuning has detected an error
[Done]	d o n E	The motor parameters measured by the autotuning function are used to control the motor

[Auto tuning usage] E U N U ★

Auto tune usage.

On some application, such as hoisting application, that requires high torque at low speed, the temperature of the motor has a significant influence on the behavior and the capability to maintain the optimization of the performance resulting from the autotuning. In such case, setting the parameter **[Autotuning Usage] TUNU** to **[Therm mot] TM** helps to compensate the stator resistance according to the thermal state of the motor.

▲ WARNING**LOSS OF CONTROL**

- Set this parameter to **[Therm mot] TM** on hoisting application.
- For any setting of this parameter, perform a comprehensive commissioning test to verify correct operation of the application under maximum load and motor temperature conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

This parameter shows the way used to modify the motor parameters according to its estimated thermal state.

This parameter can be accessed if **[Access Level] L A C** is set to **[Expert] E P r**.

From firmware version V3.4, this parameter is preset to **[Therm Mot] E N** if **[Brake Logic Control] B L C** - function is activated (e.g. **[Brake Assignment] B L C** is assigned to an output).

Setting ()	Code / Value	Description
[No]	n o	No thermal state estimation. Factory setting
[Therm Mot]	E N	Statoric thermal state estimation based on nominal current and current consumed by the motor. It helps to take into account the thermal deviation of the statoric resistor impacting the application response (especially with open loop application).

[Tuning Error Resp] E n L ★

Response to autotune error (**[Autotuning Error] E n F**).

This parameter can be accessed if **[Access Level] L A C** is set to **[Expert] E P r**.

Setting	Code / Value	Description
[Ignore]	n o	Detected error ignored.
[Freewheel Stop]	y E S	A freewheel stop is requested and the error is triggered. Factory setting

[Autotuning Assign] E u L ★

Autotuning input assignment.

The autotuning is performed when the assigned input or bit changes to 1.

This parameter can be accessed if **[Access Level] L A C** is set to **[Expert] E P r**.

NOTE: The autotuning causes the motor to start up.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[DI1]...[DI8]	L , I ... L , B	Digital input DI1...DI8
[DI11]...[DI16]	L , I I ... L , I B	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	C d 0 0 ... C d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] , o configuration
[CD11]... [CD15]	C d 1 1 ... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1 ... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , o configuration
[C111]... [C115]	C 1 1 1 ... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1 ... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , o configuration
[C211]... [C215]	C 2 1 1 ... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1 ... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , o configuration
[C311]... [C315]	C 3 1 1 ... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1 ... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , o configuration
[C511]... [C515]	C 5 1 1 ... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[Autotuning Type] t u n t ★

Autotuning type.

This parameter can be accessed:

- if **[Access Level] L A C** is set to **[Expert] E P r** , and
- with reluctance motor control type (**[Motor control type] C E E** set to **[Reluctance Motor] S r V C**).

Setting ()	Code / Value	Description
[Standard]	S t d	Standard autotune Factory setting
[Rotation]	r o t	Autotune in rotation. This selection can be used for: <ul style="list-style-type: none"> • Optimization of energy saving • Application with low inertia • Application that requires high motor control performances. With this selection, less than 30% of resistive load must be present on the application to optimize the autotuning result. During the autotune sequence, the motor will be started to half of its nominal frequency during maximum 45 seconds.

[Automatic autotune] A u t ★

Automatic autotune.

⚠ WARNING
<p>UNEXPECTED MOVEMENT</p> <p>If this function is activated, autotuning is performed each time the drive is switched on.</p> <ul style="list-style-type: none"> • Verify that activating this function does not result in unsafe conditions. <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p>

The motor must be stopped when switching on the drive.

This parameter can be accessed if **[Access Level] *L A C*** is set to **[Expert] *E P r***.

Setting ()	Code / Value	Description
[No]	<i>n o</i>	Function deactivated Factory setting
[Yes]	<i>y e s</i>	A tuning is automatically done at each power-up

[Tune Selection] *S E u n* ★

Tune selection.

Read-only parameter.

Setting	Code / Value	Description
[Default]	<i>E A b</i>	The default motor parameter values are used to control the motor. Return to default value if a motor parameter is modified after autotuning has been performed. Factory setting
[Measure]	<i>M E A S</i>	The values measured by the autotuning function are used to control the motor. This parameter switches automatically to this value after an autotuning is successfully performed.
[Custom]	<i>C u s</i>	The values manually set are used to control the motor

[Saliency mot. state] *S P o t* ★

Information on synchronous motor saliency.

Read-only parameter (internally calculated).

This parameter can be accessed:

- if **[Access Level] *L A C*** is set to **[Expert] *E P r***, and
- if **[Tune Selection] *S E u n*** is set to **[Measure] *M E A S***, and
- with synchronous or reluctance motor control type.

This parameter helps the optimization of motor control performances for synchronous motors.

Setting	Code / Value	Description
[No]	<i>n o</i>	Tune not done
[Low salient]	<i>L L S</i>	Low saliency level. Recommended configuration: [Angle setting type] <i>A S t</i> = [PSI align] <i>P S i</i> , or [PSIO align] <i>P S i o</i> and [HF inj. activation] <i>H F i</i> = [No] <i>n o</i> .

Setting	Code / Value	Description
[Med salient]	ML5	Medium saliency level. Recommended configuration: [Angle setting type] ASL = [SPM align] SPMR. Additionally, [HF inj. activation] HFI, = [Yes] YES can be used. First, tests without high frequency injection must be performed. If the results meet the requirements, [HF inj. activation] HFI, must be let to [No] NO.
[High salient]	HL5	High saliency level. Recommended configuration: [Angle setting type] ASL = [IPM align] ,IPMR. Additionally, [HF inj. activation] HFI, = [Yes] YES can be used. First, tests without high frequency injection must be performed. If the results meet the requirements, [HF inj. activation] HFI, must be let to [No] NO.

[Autotuning Lvl Of Current] 5 5 r ★

Tune current ratio.

This parameter can be accessed if [Access Level] LAL is set to [Expert] EPR.

This parameter shows the level of current applied to the motor during auto tuning, in percent of the drive nominal current.

This parameter has an impact on the inductor measurement.

NOTE: In case of instability, [PSI Align Curr Max] 5 5 r should be increased by steps up to obtain the requested performances.

Setting	Code / Value	Description
[Auto]	Auto	Factory setting
1...300 % (step: 1 %)		setting range

[Angle setting type] ASL ★

Automatic angle setting type.

This parameter can be accessed with synchronous or reluctance motor control type.

[PSI align] P5, and [PSIO align] P5, are working for all types of synchronous motors. [SPM align] SPMR and [IPM align] ,IPMR increase performances depending on the type of synchronous motor. [Rotational Current Injection] 5 5 r, may be used where [PSI align] P5, and [PSIO align] P5, do not give expected performances.

Setting	Code / Value	Description
[IPM align]	,IPMR	Alignment for IPM motor. Alignment mode for Interior-buried Permanent Magnet motor (usually, this kind of motor has a high saliency level). It uses high frequency injection, which is less noisy than standard alignment mode.
[SPM align]	SPMR	Alignment for SPM motor. Mode for Surface-mounted Permanent Magnet motor (usually, this kind of motor has a medium or low saliency level). It uses high frequency injection, which is less noisy than standard alignment mode.
[PSI align]	P5,	Pulse signal injection. Standard alignment mode, without rotor motion The angle measurement is realized by monitoring the stator current response to a pulse signal injection over a wide range of frequencies

Setting	Code / Value	Description
[PSIO align]	P 5 1 0	Pulse signal injection - optimized. Optimized alignment mode, without rotor motion Same operation as [PSI align] P 5 1, is performed over an optimized range of frequencies. The measurement time is reduced after the first run order or tune operation, even if the drive has been turned off. Factory setting
[Rotational Current Injection]	r 5 1	Rotational current injection. Alignment mode with rotor motion. This alignment mode realizes the mechanical alignment of the rotor and the stator; it requires up to 4 s. The motor needs to be stopped and without resistive torque. NOTE: This setting is recommended when a sinus filter is used on the application. NOTE: For synchronous reluctance motor, it is recommended to use this setting.
[No align]	n 0	No alignment

[PSI Align Curr Max] 7 5 1 ★

Maximum current of PSI alignment.

Current level in % of [Sync Nominal I] 7 5 5 for [PSI align] P 5 1, and [PSIO align] P 5 1 0 angle shift measurement modes. This parameter has an impact on the inductor measurement.

This parameter can only be accessed with synchronous or reluctance motor control types and if [Access Level] L 5 5 is set to [Expert] E P 1.

This current must be equal to or higher than the maximum current level of the application; otherwise an instability may occur.

NOTE: In case of instability, [PSI Align Curr Max] 7 5 1 should be increased by steps up to obtain the requested performances.

Setting	Code / Value	Description
[Auto]	A 5 1 0	[PSI Align Curr Max] 7 5 1 is adapted by the drive according to the motor data settings. Factory setting
1...300 % (step: 1 %)		setting range

[Rotational Current Level] 7 5 2 ★

Rotational current level.

This parameter can be accessed if [Angle setting type] A 5 2 is set to [Rotational Current Injection] r 5 1.

The current level should be set according to the torque required during the alignment operation.

Setting	Description
10...300% (step: 1 %)	Setting range, as a percentage of the nominal motor current Factory setting: 75%

[Rotational Torque Current] 7 5 3 ★

Rotational torque current.

This parameter can be accessed:

- if **[Access Level]** *L A C* is set to **[Expert]** *E P r*, and
- if **[Angle setting type]** *A 5 E* is set to **[Rotational Current Injection]** *r C i*, and
- with synchronous or reluctance motor control type.

Setting	Description
0...300% (step: 1 %)	Setting range, as a percentage of the nominal motor current Factory setting: 0%

[RCI Max Freq] *r C 5 P*★

RCI maximum output frequency.

This parameter can be accessed:

- if **[Access Level]** *L A C* is set to **[Expert]** *E P r*, and
- if **[Angle setting type]** *A 5 E* is set to **[Rotational Current Injection]** *r C i*, and
- with synchronous or reluctance motor control type.

Setting	Code / Value	Description
[Auto]	<i>A u t o</i>	Factory setting
0.0...599.0 Hz (step: 0.1 Hz)		setting range

[RCI Round Nb] *r C r P*★

RCI round number.

This parameter can be accessed:

- if **[Access Level]** *L A C* is set to **[Expert]** *E P r*, and
- if **[Angle setting type]** *A 5 E* is set to **[Rotational Current Injection]** *r C i*, and
- with synchronous or reluctance motor control type.

Setting	Code / Value	Description
[Auto]	<i>A u t o</i>	Factory setting
0...32,767 (step: 1)		setting range

[RCI With Transformer] *r C i r*★

RCI alignment with transformer.

This parameter can be accessed:

- if **[Access Level]** *L A C* is set to **[Expert]** *E P r*, and
- if **[Angle setting type]** *A 5 E* is set to **[Rotational Current Injection]** *r C i*, and
- with synchronous or reluctance motor control type.

Setting	Code / Value	Description
[No]	<i>n o</i>	Function inactive Factory setting
[Yes]	<i>y e s</i>	Function active

[Motor tune] - [Rotation tune] 5 5 - Menu

Access

[Complete settings] → [Motor parameters] → [Motor data] → [Motor tune] → [Rotation tune]

Overview

This menu can be accessed if [Adv. Motor Control] 5 5 5 is set to [Yes] 5 5 5.

The tune in rotation is used to estimate the nominal magnetizing current ([Magnetizing current] 5 5 5), to identify and take into account the magnetic saturation by tracking the electrical operating range of the motor. This function completes [Adv. Motor Control] 5 5 5 feature.

The tune in rotation helps to improve the performances especially at low frequency, at frequency greater than the motor nominal frequency and for closed loop control.

Example of application

Application requiring torque control accuracy, torque dynamics and motor frequency greater than [Nominal Motor Freq] 5 5 5.

Incompatibility

- The tune in rotation does not manage [Brake Logic Control] 5 5 5 - function: [Brake assignment] 5 5 5 must be set to [No] 5 5 5. If a brake is used, the brake must be handled manually to perform the tune in rotation.
- The tune in rotation is not compatible with the use of Sinus filter.
- The tune in rotation is only compatible with drive controlling a single asynchronous motor.

Prerequisites to perform a tune in rotation

- Expert access: [Access Level] 5 5 5 = [Expert] 5 5 5 ,
- Asynchronous motor: [Motor Control Type] 5 5 5 = [SVC V] 5 5 5 , [FVC] 5 5 5 or [Energy Sav.] 5 5 5 .
- Advanced Motor Control activated: [Adv. Motor Control] 5 5 5 = [Yes] 5 5 5 ,
- Motor nameplate is entered,
- The motor must be at cold state to perform a tune in rotation,
- It is advisable to perform the tune in rotation with minimum of load or without load,
- The motor must be free to operate all along the execution of tune in rotation. During the tune in rotation, the motor should operate in stable and normal conditions. For example, no current limitation must be triggered.

Standard procedure for performing a tune in rotation

⚠ WARNING

UNEXPECTED MOVEMENT

Autotuning moves the motor in order to tune the control loops.

- Only start the system if there are no persons or obstructions in the zone of operation.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

⚠ WARNING

LOSS OF CONTROL

- If you modify the value of one or more motor parameters after having performed autotuning, the value of **[Rotation Tune Select] STUR** is reset to **[Default] TAB** and you must re-perform autotuning.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Even if some parameters are unchanged, some others parameters, not accessible, are computed again.

These settings include, but not limited to, selection of motor control type, settings of the motor parameters according to the motor nameplate, autotuning of the motor.

Step	Action
1	Set [Rotation Tune Type] EFAP to [Saturation] SREF .
2	Set [Rotation Tune Enable] TUR to [Apply autotuning] YES .
3	<p>At next run order, the tune in rotation is performed.</p> <p>During the tune in rotation, the motor operates at a frequency defined by the parameter [Rotation Tune Freq] ELFR and [Drive State] HPI S shows [Autotuning] TUN.</p> <p>Note:</p> <ul style="list-style-type: none"> • The run order must remain active during the tune in rotation. • At the beginning of the tune in rotation, a standstill motor tuning is performed in order to measure the motor stator resistance ([AsyncMotor R Stator] rSR) and the leakage inductance ([AsyncMotor Lf Inductance] LFR). • [Rotor time const] ERH, [Magnetizing current] idR and [Nominal motor slip] nSL are not measured via standstill motor tuning. It is the result of an internal calculation. • After the standstill motor tuning, several current cycles are repeated (number depending on [Nb of Repetitions] ENBR). The motor operates all through this phase without stopping. • The tune in rotation can last more than a minute depending on the motor, the drive setting and the configuration of the tune in rotation.
4	<p>At the end of the tune in rotation, [Rotation Tune Status] ERS switches to [Autotuning Done] DONE. The motor is stopped and the run order can be removed.</p> <p>[Rotor time const] ERH, [Magnetizing Current] idR, [Tangential Main Inductance] LDR, [Flux curve coeff A] ALFR and [Flux curve coeff B] BELD are updated.</p> <p>Also, at the end of the tune in rotation:</p> <ul style="list-style-type: none"> • [Rotation Tune Enable] TUR switches back to [No action] NO, • [Rotation Tune Select] STUR switches to [Measure] MESS, • [Autotuning Status] EUS switches to [Autotuning Done] DONE.


Error detected during tune in rotation

Refer to **[Autotuning Error] ENF** description , page 701

[Rotation Tune Type] E F A P

Rotation Tune Type. This parameter modifies the used Flux/Current model.

This parameter can be accessed if [Access Level] L A C is set to [Expert] E P r .

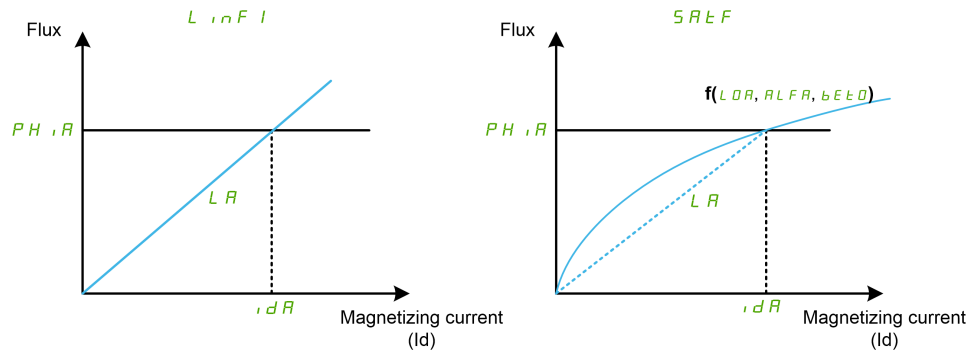

Setting	Code / Value	Description
[Standard]	L i n F I	Standard. Linear approach of the magnetic curve calculated from motor nameplate parameters. Factory setting
[Saturation]	S A E F	Saturation. Non-linear approach of the magnetic saturation curve. This setting requires to perform a tune in rotation to estimate $i d R$, $L D R$, $A L F A$ and $b E E D$.

[Rotation Tune Enable] t u n r

Rotation Tune Enable.

⚠ WARNING
UNEXPECTED MOVEMENT
Autotuning moves the motor in order to tune the control loops.
<ul style="list-style-type: none"> Only start the system if there are no persons or obstructions in the zone of operation.
Failure to follow these instructions can result in death, serious injury, or equipment damage.

⚠ WARNING
LOSS OF CONTROL
<ul style="list-style-type: none"> If you modify the value of one or more motor parameters after having performed autotuning, the value of [Rotation Tune Select] S T U R is reset to [Default] T A B and you must re-perform autotuning.
Failure to follow these instructions can result in death, serious injury, or equipment damage.

Even if some parameters are unchanged, some others parameters, not accessible, are computed again.

These settings include, but not limited to, selection of motor control type, settings of the motor parameters according to the motor nameplate, autotuning of the motor.

This parameter can be accessed if [Rotation Tune Type] E F A P is set to [Saturation] S A E F .

Setting	Code / Value	Description
[No Action]	<i>n o</i>	The tune in rotation is not in progress and not requested. Factory setting
[Apply Autotuning]	<i>Y E 5</i>	The tune in rotation will be performed at next run order, then the parameter automatically changes to [No action] <i>n o</i> . To help repeatability of the results, it is advisable to erase the tune in rotation before performing a new one. NOTE: The tune in rotation cannot be requested if [Brake Logic Control] <i>b L C</i> is configured or if [Sinus Filter Activation] <i>a F</i> is set to [Yes] <i>Y E 5</i> .
[Erase Autotuning]	<i>C L r</i>	<i>L D R</i> , <i>i d R</i> , <i>R L F A</i> and <i>b E t D</i> are reset. The default values are used to control the motor. [Rotation Tune Status] <i>t u r 5</i> switches to [Not done] <i>t A b</i> . NOTE: It does not affect standstill motor tuning parameters (<i>r 5 A</i> and <i>L F A</i> are not reset).

[Rotation Tune Status] *t u r 5*

Rotation Tune Status. Read-only parameter.

This parameter can be accessed if [Rotation Tune Type] *E F A P* is set to [Saturation] *5 A t F*.

This parameter is not saved at drive power-off. It shows the status of the tune in rotation since the last power-on.

Setting	Code / Value	Description
[Not Done]	<i>t A b</i>	The tune in rotation is not done since the last power-on. Factory setting
[Pending]	<i>P E n d</i>	The tune in rotation has been requested but not yet performed.
[In Progress]	<i>P r o G</i>	The tune in rotation is in progress.
[Error]	<i>F A , L</i>	The tune in rotation has detected an error.
[Autotuning Done]	<i>d o n E</i>	The tune in rotation is done. The motor parameters measured by the tune in rotation are used to control the motor.

[Rotation Tune Select] *5 t u r*

Rotation Tune Selection. Read-only parameter.

This parameter can be accessed if [Rotation Tune Type] *E F A P* is set to [Saturation] *5 A t F*.

Setting	Code / Value	Description
[Default]	<i>t A b</i>	The default motor parameter values are used to control the motor. Return to default value if a motor parameter is modified after rotation tune has been performed. Factory setting
[Measure]	<i>M E A S</i>	The values measured by the tune in rotation are used to control the motor.
[Custom]	<i>C u S</i>	The values manually set are used to control the motor. NOTE: At least one of the following parameters has been entered manually: <i>L D R</i> , <i>R L F A</i> or <i>b E t D</i> .

[Autotuning Status] E u 5

Autotuning status. Read-only parameter.

This parameter is not saved at drive power-off. It shows the standstill motor tuning status since the last power-on (for information only, cannot be modified).

Setting	Code / Value	Description
[Not done]	E A b	Standstill motor tuning is not done since the last power-on. Factory setting
[Pending]	P E n d	Standstill motor tuning has been requested but not yet performed
[In Progress]	P r o G	Standstill motor tuning is in progress
[Error]	F A , L	Standstill motor tuning has detected an error
[Done]	d o n E	Standstill motor tuning is done. The motor parameters measured by the autotuning function are used to control the motor

[Rotation Tune Freq] E L F r

Rotation tune reference frequency.

During the tune in rotation, the motor operates at this frequency. If **[High Speed] H 5 P** is lower than **[Rotation Tune Freq] E L F r**, the motor operates at **[High Speed] H 5 P**.

This parameter can be accessed if **[Rotation Tune Type] E F A P** is set to **[Saturation] 5 A E F**.

This parameter is reset to factory settings if **[Motor Standard] b F r** or **[Nominal Motor Freq] F r 5** is modified.

For robustness, it is advisable to let this parameter set to its factory setting.

Setting	Code/Value	Description
[Auto]	A u t o	it corresponds to [Nominal Motor Freq] F r 5/2 Factory setting
0.1...599.0 Hz		Setting range

[Nb of Repetitions] E n b r

Number of autotuning sequence repetitions.

During the tune in rotation, one or several current cycles are repeated. The motor operates all through this phase without stopping. This parameter modifies the number of cycles.

This parameter can be accessed if **[Rotation Tune Type] E F A P** is set to **[Saturation] 5 A E F**.

Increasing the number of cycles helps to improve the accuracy of the tune in rotation. The duration of tune in rotation is also increased.

Setting	Description
1...3	Setting range Factory setting: 1

[Main Inductance] L R

Main Inductance Read-only parameter.

This parameter is the result of an internal calculation using [Rotor Nominal flux] P H , R and [Magnetizing current] , d R .

This parameter can be accessed if [Access Level] L R C is set to [Expert] E P r .

Setting	Description
0...65535 mH (1)	Setting range Factory setting: -
(1): For drives with power range ≤ 15 kW. If the power range is greater than 160 kW, the range is 0...65,535 μH else the range is 0.00...655.35 mH.	

[Tangential Main Inductance] L D R

Tangential main inductance

This parameter is estimated via the tune in rotation and is used by the magnetic saturation curve. Only enter manually a value if you are copying a drive configuration that has been tuned via the tune in rotation.

This parameter can be accessed if:

- [Access Level] L R C is set to [Expert] E P r , and
- [Rotation Tune Type] E F R P is set to [Saturation] S R E F .

Setting	Description
0...65535 mH	Setting range Factory setting: 0
(1): For drives with power range ≤ 15 kW. If the power range is greater than 160 kW, the range is 0...65,535 μH else the range is 0.00...655.35 mH.	

[Nameplate Nominal Flux] P H , D

Nameplate nominal flux. Read-only parameter.

This parameter is calculated from the motor nameplate and it is used for internal calculation. This parameter is used for Schneider Electric services purpose

This parameter can be accessed if [Access Level] L R C is set to [Expert] E P r .

Setting	Description
0.00...655.35 Wb	Setting range Factory setting: -

[Rotor Nominal Flux] P H , R

Rotor nominal flux. Read-only parameter.

This parameter is the flux corresponding to [Magnetizing current] , d R and used in the Flux/Current model for motor control.

This parameter can be accessed if [Access Level] L R C is set to [Expert] E P r .

Setting	Description
0.0...655.35 Wb	Setting range Factory setting: -

[Flux curve coeff A] R L F A

Flux saturation curve coefficient A.

This parameter is estimated via the tune in rotation and it is used by the magnetic saturation curve. Only enter manually a value if you are copying a drive configuration that has been tuned via the tune in rotation.

This parameter can be accessed if:

- **[Access Level] L R C** is set to **[Expert] E P r**, and
- **[Rotation Tune Type] E F R P** is set to **[Saturation] S R E F**.

Setting	Description
-327.67 %...327.67 %	Setting range Factory setting: 0.00 %

[Flux curve coeff B] b E E D

Flux saturation curve coefficient B.

This parameter is estimated via the tune in rotation and it is used by the magnetic saturation curve. Only enter manually a value if you are copying a drive configuration that has been tuned via the tune in rotation.

This parameter can be accessed if:

- **[Access Level] L R C** is set to **[Expert] E P r**, and
- **[Rotation Tune Type] E F R P** is set to **[Saturation] S R E F**.

Setting	Description
-327.67 %...327.67 %	Setting range Factory setting: 0.00 %

[1st Id min current] , d L I

First Id min current level in rotation.

This parameter determines the min level of magnetizing current (Id) reached during the first current cycle of the tune in rotation. It is expressed in % of nominal magnetizing current (**[Magnetizing current] , d R**).

This parameter is reset to factory setting if **[Magnetizing current] , d R** is modified.

This parameter can be accessed if:

- **[Access Level] L R C** is set to **[Expert] E P r**, and
- **[Rotation Tune Type] E F R P** is set to **[Saturation] S R E F**.

Setting	Description
0%... [1st Id max current] , d H I	Setting range Factory setting: 50 %

[1st Id max current] , d H 1

First Id max current level in rotation.

This parameter determines the max level of magnetizing current (Id) reached during the first current cycle of the tune in rotation. It is expressed in % of nominal magnetizing current ([Magnetizing current] , d R).

This parameter is reset to factory setting if [Magnetizing current] , d R is modified.

This parameter can be accessed if:

- [Access Level] L A C is set to [Expert] E P r , and
- [Rotation Tune Type] E F A P is set to [Saturation] S A E F .

Setting	Description
[1st Id min current] , d L 1... 300 %	Setting range Factory setting: 100%

[2nd Id min current] , d L 2

Second Id max current level in rotation.

This parameter determines the min level of magnetizing current (Id) reached during all current cycles of the tune in rotation after the first one. It is expressed in % of nominal magnetizing current ([Magnetizing current] , d R).

This parameter is reset to factory setting if [Magnetizing current] , d R is modified.

This parameter can be accessed if:

- [Access Level] L A C is set to [Expert] E P r , and
- [Nb of Repetitions] E n b r is greater than 1.

Setting	Description
0 %... [2nd Id max current] , d H 2	Setting range Factory setting: 20 %

[2nd Id max current] , d H 2

Second Id max current level in rotation.

This parameter determines the mac level of magnetizing current (Id) reached during all current cycles of the tune in rotation after the first one. It is expressed in % of nominal magnetizing current ([Magnetizing current] , d R).

This parameter is reset to factory setting if [Magnetizing current] , d R is modified.

This parameter can be accessed if:

- [Access Level] L A C is set to [Expert] E P r , and
- [Nb of Repetitions] E n b r is greater than 1.

Setting	Description
[2nd Id min current] , d L 2... 300 %	Setting range Factory setting: 120 %

[Autotuning flux verif] *tnv*

Autotuning flux verification value. Read-only parameter.

This parameter can be accessed if:

- **[Access Level] *LR*** is set to **[Expert] *EP***, and
- **[Rotation Tune Type] *EFAP*** is set to **[Saturation] *SRE***.

This parameter is used for Schneider Electric services purpose.

Setting	Code/Value	Description
[NA]	<i>nR</i>	Value not available. The tune in rotation has not yet been performed since the last power-on or [Nb of Repetitions] <i>tnbr</i> is set to 1. Factory setting
1...65,535 %		A numerical value is displayed after a successful tune in rotation if [Nb of Repetitions] <i>tnbr</i> is set to 2 or 3.

[Motor monitoring] P - Menu**Access**

[Complete settings] → [Motor parameters] → [Motor monitoring]

[Motor Th Current] , E H

Motor thermal monitoring current to be set to the rated current indicated on the nameplate.

Setting ()	Description
0.2...1.5 In ⁽¹⁾	Setting range Factory setting: According to drive rating
(1) Corresponding to the rated drive current indicated in the installation manual and on the drive nameplate.	

[Motor Thermal Mode] E H E

Motor thermal monitoring mode.

NOTE: An error is detected when the thermal state reaches 118% of the rated state and reactivation occurs when the state falls back below 100%.

Setting	Code / Value	Description
[No]	n o	No thermal monitoring
[Self cooled]	R C L	Self ventilated motor Factory setting
[Force-cool]	F C L	Fan-cooled motor

[MotorTemp ErrorResp] o L L

Overload error response.

Setting	Code / Value	Description
[Ignore]	n o	Detected error ignored
[Freewheel Stop]	Y E S	Free wheel Factory setting

[Thermal monitoring] 5 P P - Menu

Access

[Complete settings] → [Motor parameters] → [Motor monitoring] → [Thermal monitoring]

About This Menu

The thermal monitoring function helps to prevent against high temperature by monitoring the real temperature by the drive.


PTC, PT100, PT1000, and KTY84 thermal probes are supported by this function.

The function gives the possibility to manage 2 levels of monitoring:

- A Warning level: the drive triggers an event without stopping the application.
- An Error level: the drive triggers an event and stops the application.

The thermal probe is monitored for the following detected error:

- Overheating
- Probe break (loss of signal)
- Probe short-circuit

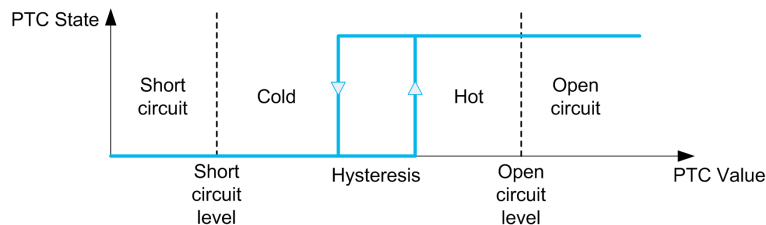

NOTE: AI1, AI3, AI4, AI5 and dedicated input of encoder modules can be configured for thermal monitoring.

Activation

[Alx Th Monitoring] 5 H X 5 allows you to activate the thermal monitoring on the related analog input:

- **[No] n 0**: the function is disabled
- **[Yes] 5 E 5**: the thermal monitoring is enabled on the related Alx.

Type of Thermal Probe Selection


[Alx Type] 5 , X 5 allows you to select the type of thermal sensor(s) connected on the related analog input:

- **[No] n 0**: no sensor
- **[PTC Management] P E 5**: one to six PTC (in serial) is used
- **[KTY] K E 4**: 1 KTY84 is used
- **[PT100] I P E 2**: 1 PT100 connected with two wires is used
- **[PT1000] I P E 3**: 1 PT1000 connected with two wires is used
- **[PT100 in 3 wires] I P E 2 3**: 1 PT100 connected with three wires is used (AI4 & AI5 only)
- **[PT1000 in 3 wires] I P E 3 3**: 1 PT1000 connected with three wires is used (AI4 & AI5 only)
- **[3 PT100 in 3 wires] 3 P E 2 3**: 3 PT100 connected with three wires is used (AI4 & AI5 only)
- **[3 PT1000 in 3 wires] 3 P E 3 3**: 3 PT1000 connected with three wires is used (AI4 & AI5 only)

2-wire thermal probes are supported on analog input 2 to analog input 5.

Wiring for PT100 and PT1000 Probes

For 2-wire probes, the following wirings are possible:

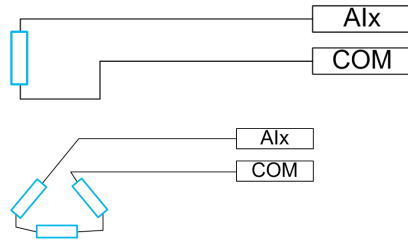

[AI1 Th Monitoring] 5 H 15

Activation of the thermal monitoring on AI1.

Setting	Code / Value	Description
[No]	n o	No Factory setting
[Yes]	y e s	Yes

[AI1 Type] 5 , 1 5 ★

AI1 assignment.

This parameter can be accessed if [AI1 Th Monitoring] 5 H 15 is not set to [No] n o.

Setting	Code / Value	Description
[Voltage]	1 0 v	0-10 Vdc Factory setting
[Current]	0 A	0-20 mA

[AI1 Th Error Resp] 5 H 1 6 ★

Thermal monitoring response to a detected error for AI1.

This parameter can be accessed if [AI1 Type] 5 , 1 5 is not set to

- [Voltage] 1 0 v, or
- [Current] 0 A.

Setting	Code / Value	Description
[Ignore]	n o	Detected error ignored
[Freewheel Stop]	y e s	Freewheel stop
[Per STT]	5 5 5	Stop according to [Type of stop] 5 5 5 parameter but without an error triggered after stop
[Fallback Speed]	L F F	Change to fallback speed, maintained as long as the detected error persists and the command has not been removed ⁽¹⁾
[Ramp stop]	r n p	Stop on ramp Factory setting

¹ Because, in this case, the detected error does not trigger a stop, it is recommended to assign a relay or logic output to its indication.

[AI1 Th Error Level] 5 H 1 F ★

Error detection level for AI1.

This parameter can be accessed if **[AI1 Type] A , 1 5** is not set to:

- **[Voltage] 1 0 5**, or
- **[Current] 0 A**, or
- **[PTC Management] P 5 5**.

Setting ()	Description
-15.0...200.0°C	Setting range Factory setting: 110.0°C

[AI1 Th Warn Level] 5 H 1 A ★

Warning level for AI1.

This parameter can be accessed if **[AI1 Type] A , 1 5** is not set to:

- **[Voltage] 1 0 5**, or
- **[Current] 0 A**, or
- **[PTC Management] P 5 5**.

Setting ()	Description
-15.0...200.0°C	Setting range Factory setting: 90.0°C

[AI1 Th Value] 5 H 1 V ★

AI1 thermal value.

This parameter can be accessed if **[AI1 Type] A , 1 5** is not set to:

- **[Voltage] 1 0 5**, or
- **[Current] 0 A**, or
- **[PTC Management] P 5 5**.

Setting	Description
-15.0...200.0°C	Setting range Factory setting: _

[AI3 Th Monitoring] 5 H 3 5

Activation of the thermal monitoring on AI3.

Setting	Code / Value	Description
[No]	n o	No Factory setting
[YES]	y e s	Yes

[AI3 Type] A , 3 5 ★

AI3 assignment.

This parameter can be accessed if **[AI3 Th Monitoring] 5 5 5** is not set to **[No] n o**.

Identical to **[AI1 Type] R 1 1**, page 167 with factory setting: **[Current] 0 R**.

[AI3 Th Error Resp] 5 5 6★

Thermal monitoring response to a detected error for AI3.

This parameter can be accessed if **[AI3 Type] R 3 1** is not set to:

- **[Voltage] 1 0 1**, or
- **[Current] 0 R**, or

Setting	Code / Value	Description
[Ignore]	n o	Detected error ignored
[Freewheel Stop]	5 5 5	Freewheel stop
[Per STT]	5 5 1	Stop according to [Type of stop] 5 5 1 parameter but without an error triggered after stop
[Fallback Speed]	L F F	Change to fallback speed, maintained as long as the detected error persists and the command has not been removed ⁽¹⁾
[Ramp stop]	r P P	Stop on ramp Factory setting

¹ Because, in this case, the detected error does not trigger a stop, it is recommended to assign a relay or logic output to its indication.

[AI3 Th Error Level] 5 5 F★

Error detection level for AI3.

This parameter can be accessed if **[AI3 Type] R 3 1** is not set to:

- **[Voltage] 1 0 1**, or
- **[Current] 0 R**, or
- **[PTC Management] P 1 1**.

Setting (°C)	Description
-15.0...200.0°C	Setting range Factory setting: 110.0°C

[AI3 Th Warn Level] 5 5 R★

Warning level for AI3.

This parameter can be accessed if **[AI3 Type] R 3 1** is not set to:

- **[Voltage] 1 0 1**, or
- **[Current] 0 R**, or
- **[PTC Management] P 1 1**.

Setting (°C)	Description
-15.0...200.0°C	Setting range Factory setting: 90.0°C

[AI3 Th Value] 5 H 3 V ★

AI3 thermal value.

This parameter can be accessed if **[AI3 Type] 8 , 3 5** is not set to:

- **[Voltage] 1 0 0**, or
- **[Current] 0 8**, or
- **[PTC Management] 8 5 5**.

Setting	Description
-15.0...200.0°C	Setting range Factory setting: _

[AI4 Th Monitoring] 5 H 4 5 ★

Activation of the thermal monitoring on AI4.

This parameter can be accessed if VW3A3203 I/O extension module has been inserted.

Setting	Code / Value	Description
[No]	0 0	No Factory setting
[YES]	4 5 5	Yes

[AI4 Th Error Resp] 5 H 4 6 ★

Thermal monitoring response to a detected error for AI4.

This parameter can be accessed if **[AI4 Type] 8 , 4 5** is not set to

- **[Voltage] 1 0 0**, or
- **[Current] 0 8**.

Setting	Code / Value	Description
[Ignore]	0 0	Detected error ignored
[Freewheel Stop]	4 5 5	Freewheel stop
[Per STT]	5 5 5	Stop according to [Type of stop] 5 5 5 parameter but without an error triggered after stop
[Fallback Speed]	5 5 5	Change to fallback speed, maintained as long as the detected error persists and the command has not been removed ⁽¹⁾
[Ramp stop]	5 5 5	Stop on ramp Factory setting

¹ Because, in this case, the detected error does not trigger a stop, it is recommended to assign a relay or logic output to its indication.

[AI4 Th Error Level] 5 H 4 F ★

Error detection level for AI4.

This parameter can be accessed if **[AI4 Type] 8 , 4 5** is not set to:

- **[Voltage] 1 0 0**, or
- **[Current] 0 8**, or
- **[PTC Management] 8 5 5**.

Setting ()	Description
-15.0...200.0°C	Setting range Factory setting: 110.0°C

[AI4 Th Warn Level] 5 4 4 ★

Warning level for AI4.

This parameter can be accessed if [AI4 Type] 5 4 5 is not set to:

- [Voltage] 1 0 5, or
- [Current] 0 5, or
- [PTC Management] 5 5 5.

Setting ()	Description
-15.0...200.0°C	Setting range Factory setting: 90.0°C

[AI4 Th Value] 5 4 5 ★

AI4 thermal value.

This parameter can be accessed if [AI4 Type] 5 4 5 is not set to:

- [Voltage] 1 0 5, or
- [Current] 0 5, or
- [PTC Management] 5 5 5.

Setting	Description
-15.0...200.0°C	Setting range Factory setting: _

[AI5 Th Monitoring] 5 5 5 ★

Activation of the thermal monitoring on AI5.

This parameter can be accessed if VW3A3203 I/O extension module has been inserted.

Setting	Code / Value	Description
[No]	n o	No Factory setting
[YES]	5 5 5	Yes

[AI5 Th Error Resp] 5 5 6 ★

Thermal monitoring response to a detected error for AI5.

This parameter can be accessed if [AI5 Type] 5 5 5 is not set to

- [Voltage] 1 0 5, or
- [Current] 0 5.

Setting	Code / Value	Description
[Ignore]	n o	Detected error ignored
[Freewheel Stop]	Y E S	Freewheel stop
[Per STT]	S E E	Stop according to [Type of stop] S E E parameter but without an error triggered after stop
[Fallback Speed]	L F F	Change to fallback speed, maintained as long as the detected error persists and the command has not been removed ⁽¹⁾
[Ramp stop]	r P P	Stop on ramp Factory setting
¹ Because, in this case, the detected error does not trigger a stop, it is recommended to assign a relay or logic output to its indication.		

[AI5 Th Error Level] E H 5 F ★

Error detection level for AI5.

This parameter can be accessed if [AI5 Type] R , S E is not set to:

- [Voltage] I D u , or
- [Current] D R , or
- [PTC Management] P E C .

Setting ()	Description
-15.0...200.0°C	Setting range Factory setting: 110.0°C

[AI5 Th Warn Level] E H 5 R ★

Warning level for AI5.

This parameter can be accessed if [AI5 Type] R , S E is not set to:

- [Voltage] I D u , or
- [Current] D R , or
- [PTC Management] P E C .

Setting ()	Description
-15.0...200.0°C	Setting range Factory setting: 90.0°C

[AI5 Th Value] E H 5 V ★

AI5 thermal value.

This parameter can be accessed if [AI5 Type] R , S E is not set to:

- [Voltage] I D u , or
- [Current] D R , or
- [PTC Management] P E C .

Setting	Description
-15.0...200.0°C	Setting range Factory setting: _

[Enc Therm Sensor Type] E H E E ★

Encoder thermal sensor type.

This parameter can be accessed if an encoder module different from a HTL encoder has been inserted.

Settings	Code/Value	Description
[None]	n o n E	None Factory settings
[PTC]	P E C	PTC
[PT100]	I P E 2	PT100
[PT1000]	I P E 3	PT1000
[KTY]	K E Y	KTY
[Klixon]	K L i X	Klixon

[Enc Th ErrorResp] E H E B ★

Thermal monitoring response to a detected error for the encoder module input.

This parameter can be accessed if:

- An encoder module has been inserted, and
- [Enc Therm Sensor Type] E H E E is not set to [None] n o n E .

Setting	Code / Value	Description
[Ignore]	n o	External detected error ignored
[Freewheel Stop]	y e s	Freewheel stop
[Per STT]	s e e	Stop according to configuration of [Type of stop] s e e , page 344, without tripping. In this case, the detected error relay does not open and the drive is ready to restart as soon as the detected error disappears, according to the restart conditions of the active command channel (for example, according to [2/3-wire control] e c c and [2-wire type] e c e , page 217 if control is via the terminals). Configuring a warning for this detected error is recommended (assigned to a digital output, for example) in order to indicate the cause of the stop.
[Fallback speed]	L F F	Change to fallback speed, maintained as long as the detected error persists and the run command has not been removed ⁽¹⁾
[Speed maintained]	r l s	The drive maintains the speed being applied when the detected error occurred, as long as the detected error is active and the run command has not been removed ⁽¹⁾
[Ramp stop]	r n p	Stop on ramp Factory setting
[Fast stop]	F S E	Fast stop
[DC Injection]	d c i	DC injection stop. This type of stop cannot be used with some other functions

(1) Because, in this case, the detected error does not trigger a stop, it is advisable to assign a relay or digital output to its indication.

[Enc Th Error Level] E H E F ★

Thermal error level for encoder.

This parameter can be accessed if:

- An encoder module has been inserted, and
- [Enc Therm Sensor Type] E H E E is not set to:

- **[None]** *n o n E*, or
- **[PTC]** *P t C*.

Setting	Description
-15.0...200.0°C	Setting range Factory setting: 110.0°C

[Enc Th Warn Level] *E H E R* ★

Thermal warning level for encoder.

This parameter can be accessed if:

- An encoder module has been inserted, and
- **[Enc Therm Sensor Type]** *E H E E* is not set to:
 - **[None]** *n o n E*, or
 - **[PTC]** *P t C*.

Setting	Description
-15.0...200.0°C	Setting range Factory setting: 90.0°C

[Enc Th Value] *E H E V* ★

Encoder thermal value.

This parameter can be accessed if:

- An encoder module has been inserted, and
- **[Enc Therm Sensor Type]** *E H E E* is not set to:
 - **[None]** *n o n E*, or
 - **[PTC]** *P t C*.

Setting	Description
-15.0...200.0°C	Setting range Factory setting: _

[Fallback Speed] *L F F*

Fallback speed.

Setting	Description
0.0...599.0 Hz	Setting range Factory setting: 0.0 Hz

[Motor monitoring] Π \square P - Menu

Access

[Complete settings] \rightarrow [Motor parameters] \rightarrow [Motor monitoring]

About This Menu

The thermal monitoring function helps to prevent the motor from overheating by an estimation of the thermal state of the motor.

[Current Limitation] \llcorner L , \star

Internal current limit.

NOTICE
<p>OVERHEATING</p> <ul style="list-style-type: none"> Verify that the motor is properly rated for the maximum current to be applied to the motor. Verify that the parameter [Current Limitation] \llcorner L , is set to a value lower or equal to the value shown in this table. Consider the duty cycle of the motor and all factors of your application including derating requirements in determining the current limit. <p>Failure to follow these instructions can result in equipment damage.</p>

NOTE: If the setting is less than 0.25. In, the drive may lock in **[OutPhaseLoss Assign] \square P L** if this has been enabled. If it is less than the no-load motor current, the motor cannot run.

Setting \curvearrowright	Description
0...1.5 In ⁽¹⁾	Setting range Factory setting: 1.2 In ⁽¹⁾
(1) Corresponding to the rated drive current indicated in the installation manual and on the drive nameplate.	

[Attenuation Time] S \square P \star

Attenuation time.

This parameter can be accessed if **[Motor surge limit.] S V L** is not set to **[No] \square \square** .

The value of the **[Volt surge limit. opt] S \square P** parameter corresponds to the attenuation time of the cable used. It is defined to help to prevent the superimposition of voltage wave reflections resulting from long cable lengths. It limits over-voltages to twice the DC bus rated voltage.

As surge voltage depends on many parameters such as types of cable, different motor powers in parallel, different cable lengths in parallel, and so on, it is recommend the use of an oscilloscope to check the over-voltage values obtained at the motor terminals.

For long cable lengths, an output of the filter or a dV/dt filter must be used.

To retain the overall drive performance, do not increase the SOP value unnecessarily.

Setting	Code / Value	Description
[6 μs]	6	6 μs
[8 μs]	8	8 μs Factory setting
[10 μs]	10	10 μs

[Sinus Filter Activation] 5 F 5 ★

Sinus filter activation.

This parameter can be accessed if [Motor control type] 5 5 5 is not set to:

- [Sync. mot.] 5 5 5, or
- [Sync.CL.] 5 5 5, or
- [SYN_UVC] 5 5 5, or
- [Reluctance Motor] 5 5 5.

NOTICE

DAMAGE TO THE SINUS FILTER

Do not set the maximum output frequency [Max frequency] 5 F 5 to a value greater than 100 Hz on system with a sinus filter.

Failure to follow these instructions can result in equipment damage.

Setting	Code / Value	Description
[No]	00	No sinus filter Factory setting
[Yes]	5 5 5	Use of a sinus filter to limit over-voltages on the motor and reduce the ground detected error leakage current or in case of applications with Step-Up transformer.

[Output Short Circuit Test] 5 5 5 5

Output short circuit test configuration.

The drive outputs are tested at every power-up irrespective of the configuration of this parameter. If this parameter is set to [Yes] 5 5 5, the test is also done every time a run command is applied. These tests cause a slight delay (a few ms). In the event of an error, the drive locks.

The *drive output short-circuit (terminals U-V-W)*: SCF error can be detected.

The factory setting value is changed to [Yes] 5 5 5 depending on the catalog numbers.

Setting	Code / Value	Description
[No]	00	Not test at run command Factory setting
[Yes]	5 5 5	Output short circuit test at each run command

[Motor Therm Thd] 5 5 5

Motor thermal threshold for [Motor Thermal Thd] 5 5 5 warning activation.

Setting ()	Description
0...118%	Setting range Factory setting: 100%

[Motor2 therm. level] 5 5 2

Motor 2 thermal level for **[Motor2 Thermal Thd] 5 5 2** warning activation.

Setting ()	Description
0...118%	Setting range Factory setting: 100%

[Motor3 therm. level] 5 5 3

Motor 3 thermal level for **[Motor3 Thermal Thd] 5 5 3** warning activation.

Setting ()	Description
0...118%	Setting range Factory setting: 100%

[Motor4 therm. level] 5 5 4

Motor 4 thermal level for **[Motor4 Thermal Thd] 5 5 4** warning activation.

Setting ()	Description
0...118%	Setting range Factory setting: 100%

[Motor control] d r C - Menu**Access**

[Complete settings] → [Motor parameters] → [Motor control]

About This Menu

This menu shows the motor control related parameters.

[IR compensation] u F r

This parameter is used to optimize torque at low speed, or to adapt to special cases (for example: for motors connected in parallel, decrease **[IR compensation] u F r**). If there is insufficient torque at low speed, increase **[IR compensation] u F r**. A too high value can avoid the motor to start (locking) or change the current limiting mode.

Setting ()	Description
0...200%	Setting range Factory setting: 100%

[Slip compensation] S L P★

Slip compensation.

This parameter can be accessed if **[Motor control type] C E E** is set to:

- **[SVC V] v v C**, or
- **[U/F VC 5pts] u F 5**, or
- **[Energy Sav.] n L d**.

The speeds given on motor nameplates are not necessarily exact.

If the slip setting is lower than the actual slip, the motor is not rotating at the correct speed in steady state, but at a lower speed than the reference.

If the slip setting is higher than the actual slip, the motor is overcompensated and the speed is unstable.

Setting ()	Description
0...300%	Setting range Factory setting: 100%

[U1] u 1★ to [U5] u 5★

V/F profile setting.

Voltage point 1 on 5 points V/F to Voltage point 5 on 5 points V/F.

These parameters can be accessed if **[Motor Control Type] C E E** is set to **[V/F 5pts] u F 5**.

Setting ()	Description
0...800 Vac	Setting range according to rating Factory setting: 0 Vac

[F1] F 1★ to [F5] F 5★

Frequency point 1 on 5 points V/F to Frequency point 5 on 5 points V/F.

V/F profile setting.

This parameter can be accessed if [Motor Control Type] C E E is set to [V/F 5pts] U F 5.

Setting ()	Description
0.0...599.0 Hz	Setting range Factory setting: 0.0 Hz

[Output Ph Rotation] P H r

Output phase rotation.

Modifying this parameter operates as an inversion of 2 of the three motor phases. This results in changing the direction of rotation of the motor.

Setting	Code / Value	Description
[ABC]	A B C	Standard rotation Factory setting
[ACB]	A C B	Opposite rotation

[Inertia Factor] S P G U★

Inertia factor

This parameter can be accessed if:

- [Access Level] L R C is set to [Expert] E P r , and
- [Motor Control Type] C E E is set to:
 - [U/F VC 5pts] U F 5 , or
 - [SYN_U VC] S Y n u .

Setting ()	Description
1...1,000%	Setting range Factory setting: 40%

[Boost Activation] b o A★

Boost activation.

This parameter can be accessed if [Access Level] L R C is set to [Expert] E P r .

The factory setting of this parameter is modified to:

- [Inactive] n o if [Motor Control Type] C E E is set to [Reluctance Motor] S r V C .
- [Constant] C S E E if [Motor Control Type] C E E is set to [Sync. mot.] S Y n , [SYN_U VC] S Y n u or [Sync.CL] F S Y .

Setting	Code / Value	Description
[Inactive]	n o	No boost
[Dynamic]	d Y n A	Dynamic boost, the magnetizing current value is modified according to the motor load.

Setting	Code / Value	Description
		<p>Factory setting</p> <p>NOTE: Drive manages itself the value [Magnetizing Current] i_{dR} to optimize the performances.</p> <p>NOTE: This selection can't be accessed if [Motor Control Type] C 4 E is set to [Sync. mot.] S Y n, [Sync.CL] F S Y, [Reluctance Motor] S r V C or [SYN_U VC] S Y n u.</p>
[Static]	S E R E	<p>Static boost, the magnetizing current value follows the profile whatever the motor load</p> <p>NOTE: With this selection the [Boost] b o o and [Freq Boost] F R b are taken into account.</p> <p>NOTE: This selection can be used for conical motor with [Boost] b o o sets to a negative value.</p>
[Constant]	C 5 E E	<p>Constant boost, the magnetizing current is maintained in case of change of direction of the motor. An additional parameter is available to handle the deceleration and stop phase. C 5 E E can be accessed if [Motor Control Type] C 4 E is set to [Sync. mot.] S Y n, [Sync.CL] F S Y, [Reluctance Motor] S r V C or [SYN_U VC] S Y n u.</p> <p>NOTE: With this selection only [Boost] b o o is taken into account.</p>
[Conical Motor]	C n o t	<p>Conical boost, can be accessed if [Motor Control Type] C 4 E is not set to [Sync. mot.] S Y n, [Sync.CL] F S Y, [Reluctance Motor] S r V C and [SYN_U VC] S Y n u.</p> <p>NOTE: With this selection, it is possible to adjust the [Boost] b o o for acceleration and [Boost On Deceleration] b o o 2 for deceleration.</p>


[Boost] b o o ★

Value at 0 Hz: % of nominal magnetizing current (taken into account if different from 0).

A too high value of **[Boost]** b o o can result in a magnetic saturation of the motor, which leads to a torque reduction.

This parameter can be accessed if:

- **[Access Level]** L R C is set to **[Expert]** E P r, and
- **[Boost Activation]** b o A is not set to **[Inactive]** n o.

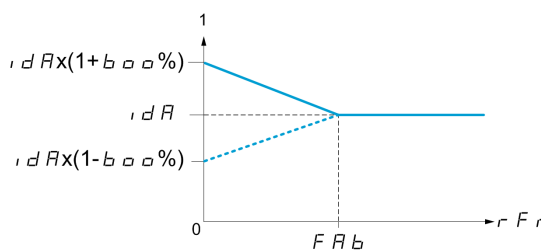

NOTE: For synchronous motors, it is recommended to set this value to optimize control at low speed.

Setting	Description
-100...100%	<p>Setting range</p> <p>If [Boost Activation] b o A is set to [Dynamic] d Y n A, [Boost] b o o is set to 25%.</p> <p>Factory setting: 0%</p>

[Boost On Deceleration] b o o 2 ★

Value in % of nominal magnetizing current (taken into account if different from 0).

This parameter is used during deceleration phase to quickly reduce the magnetizing current at stop phase.

This parameter can be accessed if:

- [Access Level] L A C is set to [Expert] E P r , and
- [Boost Activation] b o A is set to [Conical Motor] C P o t .

Setting	Description
-100...0%	Setting range Factory setting: -25%

[Freq Boost] F A b ★

Value at 0 Hz: speed threshold to reach nominal magnetizing current.

This parameter can be accessed if:

- [Access Level] L A C is set to [Expert] E P r , and
- [Boost Activation] b o A is not set to [NO] n o , and
- [Boost Activation] b o A is not set to [Constant] C 5 t E .

Setting	Description
0.0...599.0 Hz	Setting range If [Boost Activation] b o A is set to [Dynamic] d y n A , [Freq Boost] F A b is set to 30.0 Hz. Factory setting: 0.0 Hz

NOTE: For synchronous motors, it is recommended to set this value to optimize control at low speed.

[Braking level] V b r

Braking transistor command level.

Setting ()	Description
335...1130 V	Setting range Factory setting: According to drive rating voltage

[Fluxing by DI] F L I - Menu

Access

[Complete settings] → [Motor parameters] → [Motor control] → [Fluxing by DI]

About This Menu

Configure the fluxing by digital input.

[Motor fluxing] F L U ★

Motor fluxing configure

⚡⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

If the parameter **[Motor fluxing] F L U** is set to **[Continuous] F C E**, fluxing is always active, even if the motor does not run.

- Verify that using this setting does not result in unsafe conditions.

Failure to follow these instructions will result in death or serious injury.

NOTICE

OVERHEATING

Verify that the connected motor is properly rated for the flux current to be applied.

Failure to follow these instructions can result in equipment damage.

In order to obtain rapid high torque on startup, magnetic flux needs to already have been established in the motor.

In **[Continuous] F C E** mode, the drive automatically builds up flux when it is powered up.

in **[Not continuous] F n C** mode, fluxing occurs when the motor starts up.

The flux current is greater than **[Nom Motor Current] n C r** (configured rated motor current) when the flux is established and is the adjusted to the motor magnetizing current.

If **[Motor control type] C E E** is set to **[Sync. mot.] S Y n**, the **[Motor fluxing] F L U** parameter causes the alignment of the motor and not the fluxing.

If **[Brake assignment] b L C** is not **[No] n o**, the **[Motor fluxing] F L U** parameter has no effect.

Setting ()	Code / Value	Description
[Not continuous]	F n C	Non-continuous mode
[Continuous]	F C E	Continuous mode This option is not possible if [Auto DC Injection] R d C , page 350 is [Yes] Y E S or if [Type of stop] S E E , page 344 is [Freewheel] n S E
[No]	F n o	Function inactive Factory setting

[Fluxing assignment] F L , ★

Fluxing input assignment

NOTICE
OVERHEATING
Verify that the connected motor is properly rated for the flux current to be applied.
Failure to follow these instructions can result in equipment damage.

Assignment is only possible if [Motor fluxing] F L is set to [Not continuous] F n C.

If a DI or a bit is assigned to the motor fluxing command, flux is built up when the assigned input or bit is at 1.

If a DI or a bit has not been assigned, or if the assigned DI or bit is at 0 when a run command is sent, fluxing occurs when the motor starts.

Setting	Code / Value	Description
[Not Assigned]	n a	Not assigned Factory setting
[DI1]...[DI8]	L , 1...L , 8	Digital input DI1...DI8
[DI11]...[DI16]	L , 11... L , 16	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	C d 0 0... C d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] , a configuration
[CD11]... [CD15]	C d 1 1... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , a configuration
[C111]... [C115]	C 1 1 1... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , a configuration
[C211]... [C215]	C 2 1 1... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , a configuration
[C311]... [C315]	C 3 1 1... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , a configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[Angle setting type] A 5 E ★

Automatic angle setting type.

This parameter can be accessed if [Motor Control Type] C E E is set to:

- [Sync. mot.] S Y n , or
- [Sync.CL] F S Y , or
- [SYN_U VC] S Y n u , or
- [Reluctance Motor] S r V C .

[PSI align] P 5 , and [PSIO align] P 5 , 0 are working for all types of synchronous motors. [SPM align] S P P R and [IPM align] , P P R increase performances depending on the type of synchronous motor. [Rotational Current Injection] r C , may be used where [PSI align] P 5 , and [PSIO align] P 5 , 0 do not give expected performances.

Setting	Code / Value	Description
[IPM align]	, P P R	Alignment for IPM motor. Alignment mode for Interior-buried Permanent Magnet motor (usually, this kind of motor has a high saliency level). It uses high frequency injection, which is less noisy than standard alignment mode.
[SPM align]	S P P R	Alignment for SPM motor. Mode for Surface-mounted Permanent Magnet motor (usually, this kind of motor has a medium or low saliency level). It uses high frequency injection, which is less noisy than standard alignment mode.
[PSI align]	P 5 ,	Pulse signal injection. Standard alignment mode, without rotor motion The angle measurement is realized by monitoring the stator current response to a pulse signal injection over a wide range of frequencies
[PSIO align]	P 5 , 0	Pulse signal injection - optimized. Optimized alignment mode, without rotor motion Same operation as [PSI align] P 5 , is performed over an optimized range of frequencies The measurement time is reduced after the first run order or tune operation, even if the drive has been turned off Factory setting
[Rotational Current Injection]	r C ,	Rotational current injection. Alignment mode with rotor motion. This alignment mode realizes the mechanical alignment of the rotor and the stator; it requires up to 4 s. The motor needs to be stopped and without resistive torque. NOTE: This setting is recommended when a sinus filter is used on the application. NOTE: For synchronous reluctance motor, it is recommended to use this setting.
[No align]	n 0	No alignment

[Spd Loop Optimization] 7 5 5 - Menu

Access

[Complete settings] → [Motor parameters] → [Motor control] → [Spd Loop Optimization]

About This Menu

This procedure can be done if [Motor control type] 5 5 5 is not set to [U/F VC 5pts] 5 5 5 or [SYN_U VC] 5 5 5.


Recommended Procedure for Setting the High-Performance Speed Loop

Step	Action
1	Enter the motor parameters. If you subsequently modify one of these, you have to perform this whole procedure again.
2	The value of the inertia being driven must be entered in the [Application Inertia] <i>J R P L</i> parameter. , page 191 NOTE: If a motor parameter is modified, the estimated inertia is recalculated and updated (parameters [Estim. app. inertia] <i>J E S E</i> and [Inertia Mult. Coef.] <i>J P u L</i> . [Application Inertia] <i>J R P L</i> returns to its default value according to the new value of [Estim. app. inertia] <i>J E S E</i> .
3	Check the speed loop response time by first setting [Feed forward] <i>F F P</i> to 0 (see graphs on next page).
4	If necessary, adjust the bandwidth and stability using parameters [FreqLoop Stab] <i>S E R</i> and [FreqLoopGain] <i>F L G</i> , page 188.
5	To optimize ramp following, increase the feedforward parameter [[Feed forward] <i>F F P</i> as indicated on the next page until the best result is obtained.
6	The feedforward term bandwidth can be adjusted if necessary (as shown on the next page) to further improve the ramp following or to filter the noise on the speed reference.

High-Performance speed Loop - Setting the [Feed forward] *F F P* Parameter

This is used to adjust the level of dynamic torque feedforward required for accelerating and decelerating the inertia. The effect of this parameter on ramp following is illustrated below. Increasing the value of *F F P* allows the ramp to be followed more closely. However, if the value is too high, overspeed occurs. The optimum setting is obtained when the speed follows the ramp precisely; this depends on the accuracy of the [Application Inertia] *J R P L* parameter, , page 191 and the [Encoder filter value] *F F r* parameter setting , page 192


F F P settings

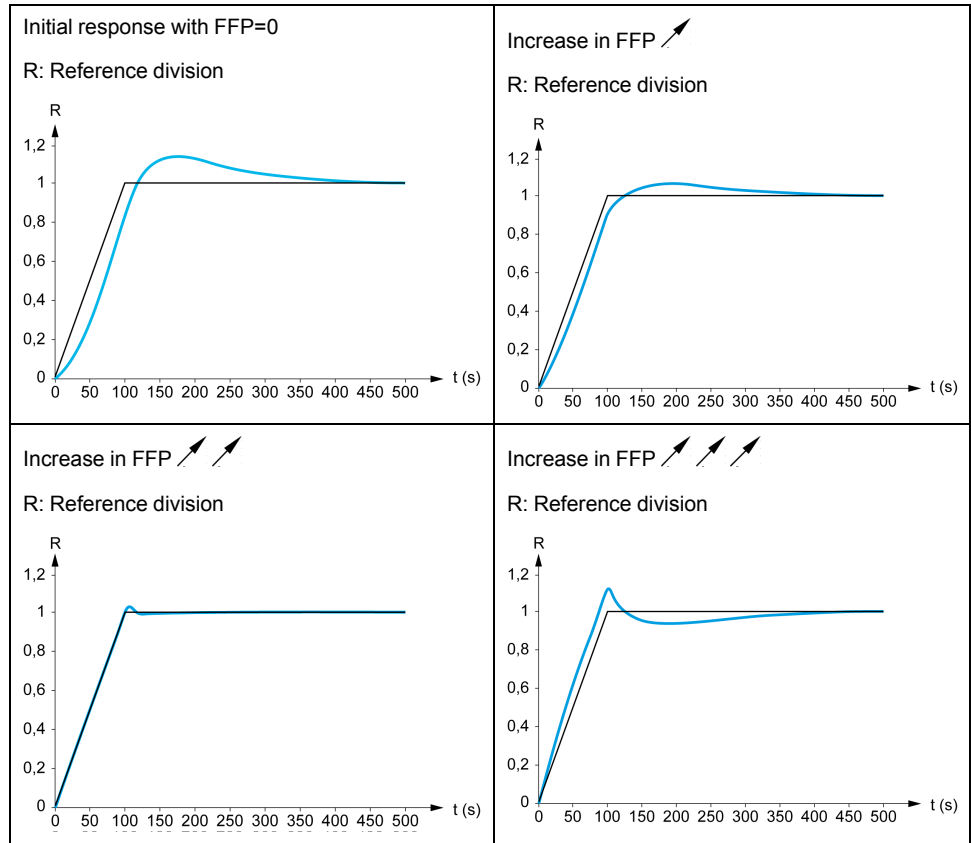

High-Performance Speed Loop - Setting the [FeedFwd Bandwidth] F F V Parameter

This is used to adjust the bandwidth of the dynamic torque feedforward term. The effect of this parameter on ramp following is illustrated below. Decreasing the value of $F F V$ reduces the effect of noise on the speed reference (torque ripple). However, too great a decrease in relation to the ramp settings (on short ramps) causes a delay, and ramp following is adversely affected. Increasing the value of $F F V$ allows the ramp to be followed more closely, but also heightens noise sensitivity. The optimum setting is obtained by reaching the best compromise between ramp following and the existing noise sensitivity.

$F F V$ settings

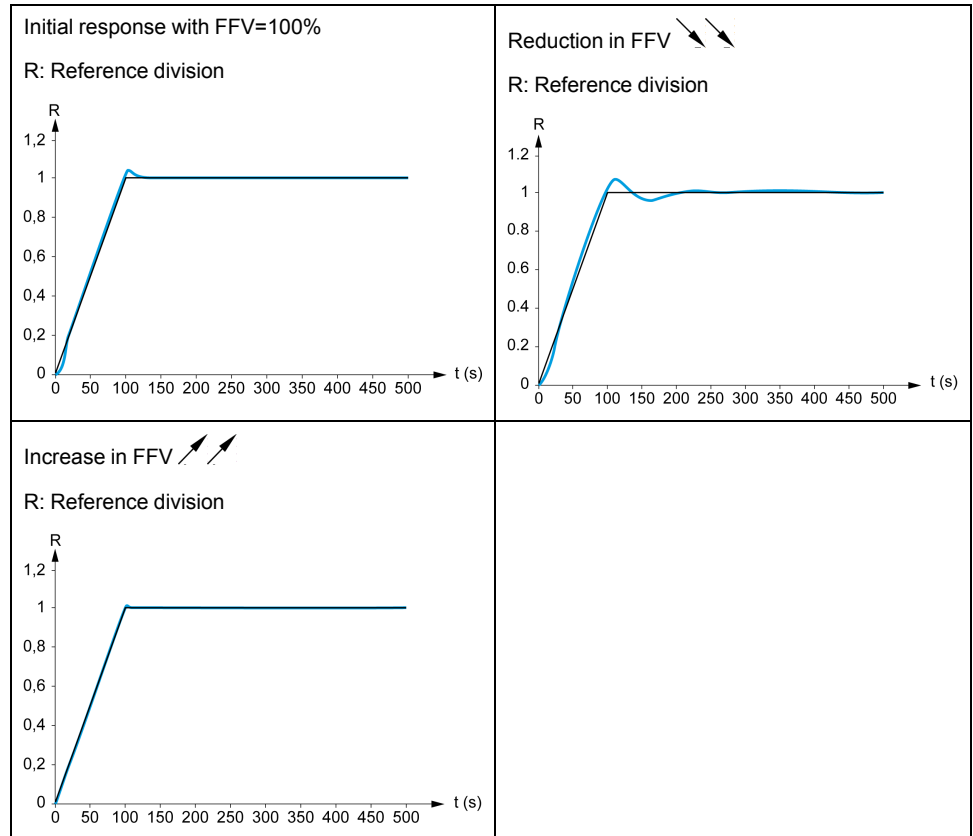

[Speed loop type] 5 5 L ★

Speed loop type.

This parameter can be accessed if [Motor control type] 5 5 L is not set to:

- [U/F VC 5pts] 5 F 5, or
- [SYN_U VC] 5 Y n u.

Setting	Code / Value	Description
[Standard]	5 5 L	Standard speed loop Factory setting
[High Perf]	H P F	High-performance speed loop. It is advised to deactivate [Dec. Ramp Adapt] 5 R R = [No] n o

[Speed prop. gain] 5 P G ★

Speed loop proportional gain.

This parameter can be accessed if:

- [Speed loop type] 5 5 L is set to [Standard] 5 5 L, and
- [Motor control type] 5 5 L is not set to:
 - [U/F VC 5pts] 5 F 5, or
 - [SYN_U VC] 5 Y n u.

Setting ()	Description
0...1,000%	Setting range Factory setting: 40%

[Speed time integral] S I E ★

Speed loop integral time constant.

This parameter can be accessed if:

- **[Speed loop type] S S L** is set to **[Standard] S E d**, and
- **[Motor control type] C E E** is not set to:
 - **[U/F VC 5pts] U F 5**, or
 - **[SYN_U VC] S Y n u**.

Setting (°)	Description
1...65,535 ms	Setting range Factory setting: According to the drive rating.

[K speed loop filter] S F C

Speed filter coefficient (0(IP) to 1(PI)).

Setting (°)	Description
0...100	Setting range Factory setting: 65

[Spd est. filter time] F F H ★

Filter time of the estimated speed.

This parameter can be accessed if **[Access Level] L H C** is set to **[Expert] E P r**.

Setting (°)	Description
0.0...100.0 ms	Setting range Factory setting: According to the drive rating

[FreqLoop Stab] S E H ★

Frequency loop stability (Speed loop damping factor).

This parameter can be accessed if:

- **[Speed loop type] S S L** is set to **[High Perf] H P F**, and
- **[Motor control type] C E E** is not set to:
 - **[U/F VC 5pts] U F 5**, or
 - **[SYN_U VC] S Y n u**.

Stability: Used to adapt the return to steady state after a speed transient, according to the dynamics of the machine. Gradually increase the stability to increase control loop attenuation and thus reduce any overspeed.

Setting (°)	Description
0...100%	Setting range Factory setting: 20%

[FreqLoopGain] *F L G*★

Frequency loop gain (Speed loop bandwidth).

This parameter can be accessed if:

- **[Speed loop type] *5 5 L*** is set to **[High Perf] *H P F***, and
- **[Motor control type] *ℓ ℓ ℓ*** is not set to:
 - **[U/F VC 5pts] *υ F 5***, or
 - **[SYN_U VC] *5 4 n υ***.

Used to adapt the response of the machine speed transients according to the dynamics. For machines with high resistive torque, high inertia or fast cycles, increase the gain gradually.

Setting ()	Description
0...100%	Setting range Factory setting: 20%

[Feed forward] *F F P*★

Feed-Forward term activation and setting.

This parameter can be accessed if:

- **[Speed loop type] *5 5 L*** is set to **[High Perf] *H P F***, and
- **[Motor control type] *ℓ ℓ ℓ*** is not set to:
 - **[U/F VC 5pts] *υ F 5***, or
 - **[SYN_U VC] *5 4 n υ***.

Percentages of the high-performance regulator feedforward term. 100% corresponds to the term calculated using the value of **[Application Inertia] *J A P L***.

Setting ()	Description
0...200%	Setting range Factory setting: 0%

[FeedFwd Bandwidth] *F F V*★

Bandwidth of the filter of feed-forward term.

This parameter can be accessed if:

- **[Speed loop type] *5 5 L*** is set to **[High Perf] *H P F***, and
- **[Motor control type] *ℓ ℓ ℓ*** is not set to:
 - **[U/F VC 5pts] *υ F 5***, or
 - **[SYN_U VC] *5 4 n υ***.

Bandwidths of the high-performance speed loop feedforward term, as a percentage of the predefined value.

Setting ()	Description
20...500%	Setting range Factory setting: 100%

[External FeedFwd Assign] *ℓ E F F*★

External feed-forward mode

Setting	Code / Value	Description
[No]	n o	Analog input is not assigned Factory setting
[AI1]...[AI3]	R , 1...R , 3	Analog input AI1...AI3
[AI4]...[AI5]	R , 4...R , 5	Analog input AI4...AI5 if VW3A3203 I/O extension module has been inserted
[Ref. Freq- Rmt. Term]	L C C	Reference Frequency via remote terminal
[Ref. Freq- Modbus]	n d b	Reference frequency via Modbus
[Ref. Freq- CANopen]	C A n	Reference frequency via CANopen if a CANopen module has been inserted
[Ref. Freq- Com. Module]	n E E	Reference frequency via fieldbus module if a fieldbus module has been inserted
[Embedded Ethernet]	E E H	Embedded Ethernet
[DI7 PulseInput]... [DI8 PulseInput]	P , 7...P , 8	Digital input DI7...DI8 used as pulse input
[Encoder]	P G	Encoder reference if an encoder module has been inserted.

[Inertia Mult. Coef.] J n u L ★

Scaling factor for inertia displays.

This parameter can be accessed if:

- [Speed loop type] S S L is set to [High Perf] H P F , and
- [Motor control type] C E E is not set to:
 - [U/F VC 5pts] u F 5 , or
 - [SYN_U VC] S Y n u .

Increment for [Application Inertia] J A P L and [Estim. app. inertia] J E S E parameters, calculated by the drive, in read-only mode: 0.1 gm², 1 gm², 10 gm², 100 gm², 1000 gm².

Setting	Description
0.0...6553.5 gm ²	Setting range Factory setting: 0.0 gm ²

[Estim. app. inertia] J E S E ★

Estimated application inertia.

This parameter can be accessed if:

- [Speed loop type] S S L is set to [High Perf] H P F , and
- [Motor control type] C E E is not set to:
 - [U/F VC 5pts] u F 5 , or
 - [SYN_U VC] S Y n u .

The inertia being driven is estimated by the drive according to the motor parameters, in read-only mode. Speed loop default settings are determined by the drive from this inertia.

Increment given by [Inertia Mult. Coef.] J n u L : - 0.1 gm², 1 gm², 10 gm², 100 gm² or 1000 gm².

Setting	Description
1...9,999 kg.m ²	Setting range Factory setting: -

[App. Inertia Coef.] J A C o ★

Adjustable application inertia ratio.

This parameter can be accessed if:

- [Speed loop type] S 5 L is set to [High Perf] H P F , and
- [Motor control type] C E E is not set to:
 - [U/F VC 5pts] u F 5 , or
 - [SYN_U VC] S Y n u .

Coefficient which fixes the ratio between [Estim. app. inertia] J E 5 E and [Application Inertia] J A P L parameters.

[Application Inertia] J A P L = [Estim. app. inertia] J E 5 E × [App. Inertia Coef.] J A C o .

Setting	Description
0.10...100.00	Setting range Factory setting: 1

[Application Inertia] J A P L ★

Adjustable application inertia.

This parameter can be accessed if:

- [Speed loop type] S 5 L is set to [High Perf] H P F , and
- [Motor control type] C E E is not set to:
 - [U/F VC 5pts] u F 5 , or
 - [SYN_U VC] S Y n u .

Adjustable application inertia used by the drive to optimize speed loop settings).

Increment given by [Inertia Mult. Coef.] J n u L : 0.1 gm², 1 gm², 10 gm², 100 gm² or 1000 gm².

NOTE: If a motor parameter is modified, the estimated inertia is recalculated and updated (parameters [Estim. app. inertia] J E 5 E and [Inertia Mult. Coef.] J n u L). [Application Inertia] J A P L is also returned to its default value according to the new value of [Estim. app. inertia] J E 5 E .

Setting	Description
0.00...655.35 kgm ²	Setting range Factory setting: -

[Encoder filter activ.] F F A ★

Encoder feedback filter activation.

This parameter can be accessed if an encoder module is present.

This parameter can be accessed if [Encoder usage] E n u is set to [No] n o .

Setting	Code / Value	Description
[No]	<i>n o</i>	Filter deactivated Factory setting
[Yes]	<i>y e s</i>	Filter activated

[Encoder filter value] *F F r* ★

Encoder feedback filter value.

This parameter can be accessed if:

- **[Access Level] *L A C*** is set to **[Expert] *E P r***, and
- **[Encoder filter activ.] *F F A*** is set to **[Yes] *y e s***.

Setting	Description
0.0...40.0 ms	Setting range Factory setting: according to encoder rating

[Notch Filter Activation] *n F A* ★

Notch filter activation.

This parameter activates the notch filter function. Two independent notch filters can be configured.

The notch filter central frequency should be set at or slightly higher than the mechanical resonance frequency. The main task is to identify as precise as possible the resonance frequency.

NOTE: Vibrations may occurs at frequencies higher than the mechanical resonance frequency, depending on the settings of the speed loop and motor parameters. It is important to identify the real mechanical resonance frequency.

Perform the following actions for the commissioning:


1. Set the motor data
2. Set the application data
3. Set the speed loop settings
4. In case of vibrations, set the Notch filter settings as described bellow
5. If the performances are not OK, restart from step 3

This parameter can be accessed if:

- an encoder module is present
- **[Access Level] *L A C*** is set to **[Expert] *E P r***, and
- **[Speed loop type] *S S L*** is set to **[High Perf] *H P F***.

Setting ()	Code / Value	Description
[First]	<i>1 5 t</i>	Notch filter 1 enabled
[2nd]	<i>2 n d</i>	Notch filter 2 enabled
[All]	<i>A L L</i>	Notch filters 1 and 2 enabled
[No]	<i>n o</i>	No notch filter enabled Factory setting

Notch filter settings

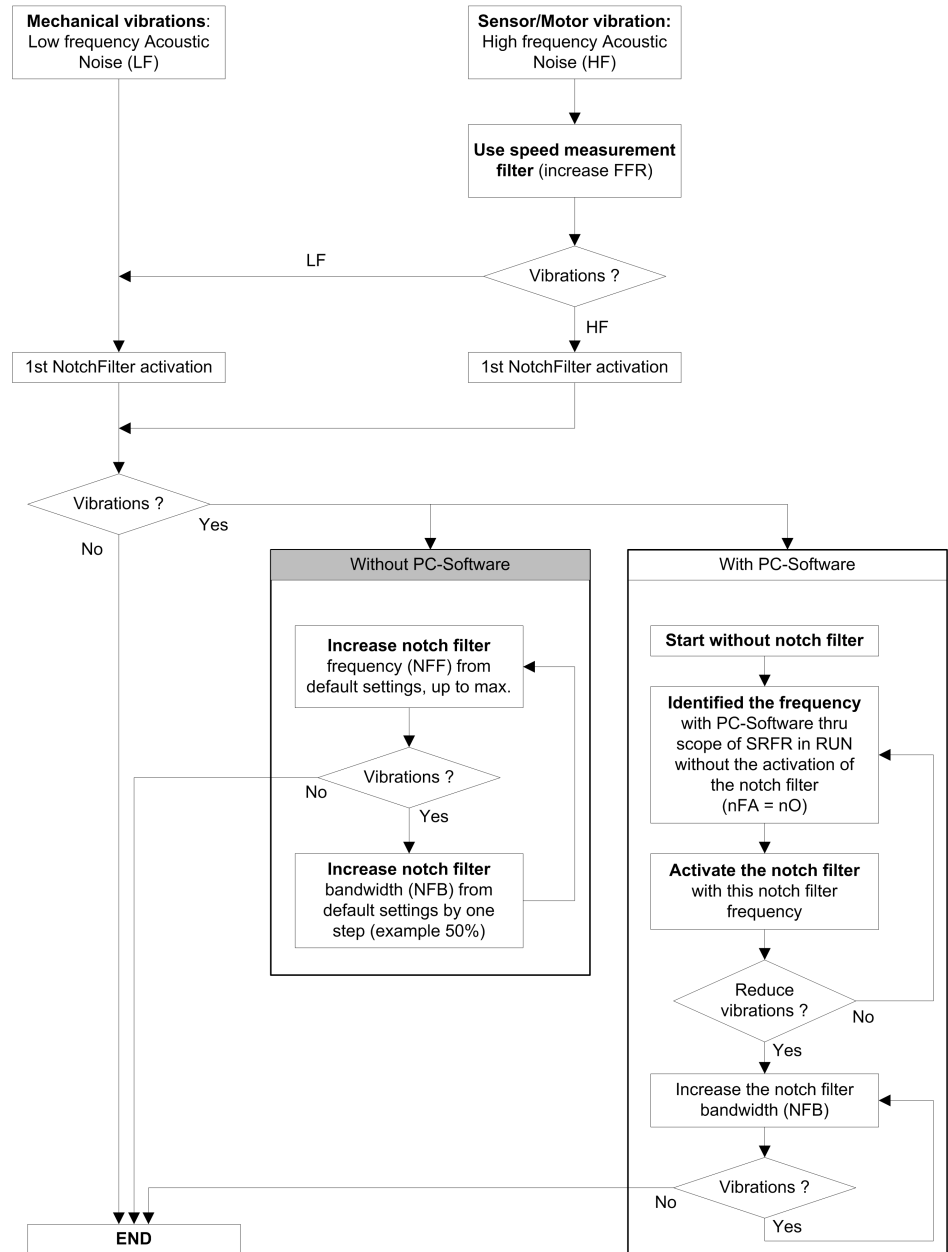

[Notch Filter Freq 1] n F F 1★

Notch filter 1 central frequency.

This parameter can be accessed if:

- [Access Level] L A C is set to [Expert] E P r , and
- [Speed loop type] S S L is set to [High Perf] H P F , and
- [Notch Filter Activation] n F A is set to:
 - [First] I S L , or
 - [All] A L L .

Setting	Description
10.0...150.0 Hz	Setting range Factory setting: 15.0 Hz

[Notch Filter Bdw 1] n F b 1★

Notch filter 1 bandwidth.

This parameter can be accessed if:

- **[Access Level] L R C** is set to **[Expert] E P r**, and
- **[Speed loop type] S S L** is set to **[High Perf] H P F**, and
- **[Notch Filter Activation] n F A** is set to:
 - **[First] I S E**, or
 - **[All] A L L**.

This parameter defines the bandwidth of the notch filter 1. Filter with higher bandwidth provides better stability margin when the load resonant frequency changes (with trolley position or load).

NOTE: Rising the bandwidth can interfere with the expect drive dynamic (reducing the dynamic of the speed loop).

Setting	Description
10...400%	Setting range Factory setting: 100%

[Notch Filter Depth 1] n F d 1★

Notch filter 1 depth.

This parameter can be accessed if:

- **[Access Level] L R C** is set to **[Expert] E P r**, and
- **[Speed loop type] S S L** is set to **[High Perf] H P F**, and
- **[Notch Filter Activation] n F A** is set to:
 - **[First] I S E**, or
 - **[All] A L L**.

This parameter defines the gain of the notch filter 1 at the central frequency. When NFD1=100%, no filter is applied.

Setting	Description
0...99%	Setting range Factory setting: 10%

[Notch Filter Freq 2] n F F 2★

Notch filter 2 central frequency.

This parameter can be accessed if:

- **[Access Level] L R C** is set to **[Expert] E P r**, and
- **[Speed loop type] S S L** is set to **[High Perf] H P F**, and
- **[Notch Filter Activation] n F A** is set to:
 - **[Second] 2 n d**, or
 - **[All] A L L**.

Setting	Description
10.0...150.0 Hz	Setting range Factory setting: 85.0 Hz

[Notch Filter Bdw 2] *nFb2*★

Notch filter 2 bandwidth.

This parameter can be accessed if:

- [Access Level] *LRC* is set to [Expert] *EP*, and
- [Speed loop type] *SSL* is set to [High Perf] *HPF*, and
- [Notch Filter Activation] *nFR* is set to:
 - [Second] *2nd*, or
 - [All] *ALL*.

This parameter defines the bandwidth of the notch filter 2. Filter with higher bandwidth provides better stability margin when the load resonant frequency changes (with trolley position or load).

NOTE: Rising the bandwidth can interfere with the expect drive dynamic (reducing the dynamic of the speed loop).

Setting	Description
10...400%	Setting range Factory setting: 100%

[Notch Filter Depth 2] *nFd2*★

Notch filter 2 depth.

This parameter can be accessed if:

- [Access Level] *LRC* is set to [Expert] *EP*, and
- [Speed loop type] *SSL* is set to [High Perf] *HPF*, and
- [Notch Filter Activation] *nFR* is set to:
 - [Second] *2nd*, or
 - [All] *ALL*.

This parameter defines the gain of the notch filter 2 at the central frequency. When *nFd2* =100%, no filter is applied.

Setting	Description
0...99%	Setting range Factory setting: 25%

[Motor control] $d r \llcorner$ - Menu**Access**

[Complete settings] \rightarrow [Motor parameters] \rightarrow [Motor control]

About This Menu

This menu shows the motor control related parameters.

[HF inj. activation] $H F \llcorner$

Activation of HF injection.

This parameter can be accessed if:

- [Access Level] $L R \llcorner$ is set to [Expert] $E P r$, and
- [Motor control type] $\llcorner \llcorner \llcorner$ is not set to:
 - [Sync. mot.] $S Y n$, or
 - [Sync.CL.] $F S Y$, or
 - [SYN_U VC] $S Y n u$, or
 - [Reluctance Motor] $S r V \llcorner$.

Setting	Code / Value	Description
[No]	$n o$	HF injection inactive Factory setting
[Yes]	$y e s$	HF injection active

[HF injection freq.] $F r \llcorner$

Frequency of the HF injection signal.

This parameter can be accessed if:

- [Access Level] $L R \llcorner$ is set to [Expert] $E P r$, and
- [HF inj. activation] $H F \llcorner$ is set to [yes] $y e s$.

Setting	Description
250...1000 Hz	Setting range Factory setting: 500 Hz

[HF pll bandwidth] $S P b$

Bandwidth of the HF PLL.

This parameter can be accessed if:

- [Access Level] $L R \llcorner$ is set to [Expert] $E P r$, and
- [HF inj. activation] $H F \llcorner$ is set to [yes] $y e s$.

Setting	Description
0...400%	Setting range Factory setting: 100%

[Current Level Align] i L r

Current level of the HF alignment.

This parameter can be accessed if:

- **[Access Level] L R C** is set to **[Expert] E P r**, and
- **[HF inj. activation] H F i** is set to **[yes] Y E S**.

Setting	Description
0...200%	Setting range Factory setting: 50%

[Boost level align.] S i r

Boost level for IPMA alignment.

This parameter can be accessed if **[Access Level] L R C** is set to **[Expert] E P r**.

Setting	Description
0...200%	Setting range Factory setting: 100%

[Angle error Comp.] P E C

Angle position error compensation.

This parameter can be accessed if:

- **[Access Level] L R C** is set to **[Expert] E P r**, and
- **[HF inj. activation] H F i** is set to **[yes] Y E S**.

Setting	Description
0...500%	Setting range Factory setting: 0%

About Output Voltage Management and Overmodulation

[Overmodul. Activation] o V n A

Overmodulation activation.


This parameter can be accessed if **[Access Level] L R C** is set to **[Expert] E P r**.

The purpose of the overmodulation is to:

- compensate the voltage loss in DC bus when the drive is loaded.
- increase the maximum possible voltage to reduce current consumption at high motor voltage and limit thermal effect on the motor.

In factory settings, the motor supplied by the intermediate of the drive has:

- a common output voltage mode not null depending on the DC bus supply.
- No overmodulation (**[Overmodul. Activation] o V n A** is set to **[No] n o**): sinusoidal phase to phase voltage.
- output voltage limited to the maximum possible value depending on DC bus supply which depends on the main power supply.

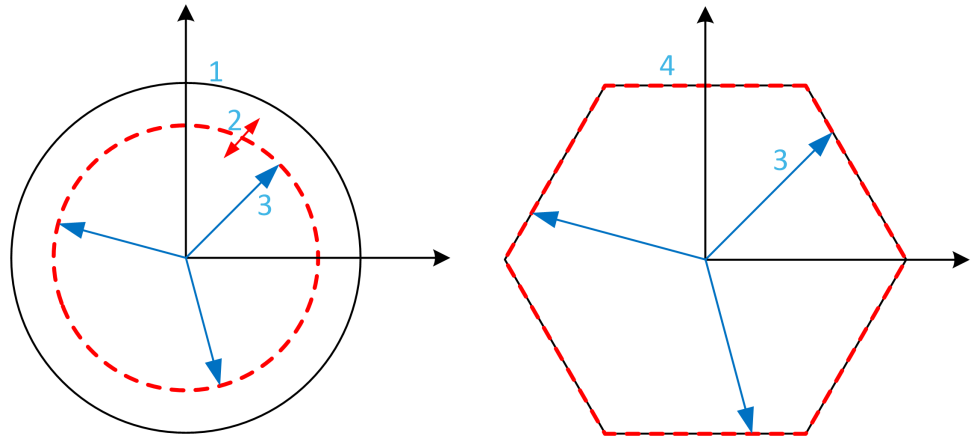

- 1 Maximum possible value of Output voltage limitation (default value)
- 2 VLim with numeric value under the maximum limitation
- 3 Output voltage
- 4 Output voltage limitation with full overmodulation (hexagon form)

Setting	Code / Value	Description
[Default]	d E F R u L t	Overmodulation is not configured By default, the Output voltage limitation describes a circle with at maximum radius depending of DC bus voltage. The radius can be reduced to a lower value by setting a numerical value to [Output voltage limitation] V L , n . Factory setting
[Full]	F u L L	Overmodulation is active and full. The output voltage limitation describes a regular hexagon depending of DC bus voltage. The phase to phase voltages are not sinusoidal.

[Output voltage limitation] V L , n

Output voltage limitation.

This parameter can be accessed if [Access Level] L R C is set to [Expert] E P r .

The purpose of this parameter is to modify the output voltage limitation to a lower value than the maximum default value.

The unit of the numerical value of this parameter is in phase to phase rms voltage.

This parameter cannot be set to a numerical value if [Overmodul. Activation] o V n A is set to [FULL] F u L L .

Setting	Code / Value	Description
[Default]	d E F R u L t	Default value of Output Voltage limitation. The Output Voltage limitation is at the maximum capability of the DC bus voltage depending on [Overmodul. Activation] o V n A setting. Factory setting
0...9999 V		Setting range of the output limitation voltage. Set a value lower than the corresponding [Default] d E F R u L t value to reduce the maximum output voltage limitation. If the numerical value is higher than the corresponding [Default] d E F R u L t value, this corresponding value is considered.

[Switching frequency] 5 W F - Menu

Access

[Complete settings] → [Motor parameters] → [Switching frequency]

[Switching frequency] 5 F r

Drive switching frequency.


Adjustment range: The maximum value is limited to 4 kHz if **[Motor surge limit.] 5 V L** parameter is configured. The maximum value is limited to 4.9 kHz with ATV•L0.

If **[Sinus Filter Activation] 5 F i** is set to **[Yes] 5 E 5**, the minimum value is 2 kHz and the maximum value is limited to 6 kHz or 8 kHz according to drive rating.

NOTE: In the event of excessive temperature rise, the drive automatically reduces the switching frequency and reset it once the temperature returns to normal.

In case of high-speed motor, it is advised to increase the PWM frequency

[Switching frequency] 5 F r at 8, 12 kHz or 16 kHz

Setting 	Description
2...8 or 16 kHz according to drive rating	Setting range Factory setting: 4.0 kHz or 2.5 kHz according to the drive rating

[Noise Reduction] n r d

Motor noise reduction.

Random frequency modulation helps to prevent any resonance, which may occur at a fixed frequency.


Setting	Code / Value	Description
[No]	n o	Fixed PWM frequency Factory setting
[Yes]	5 E 5	PWM Frequency with random modulation

[Switch Freq Type] 5 F E ★

Switching frequency type.

This parameter can be accessed if **[Access Level] L R C** is set to **[Expert] E P r**.

The motor switching frequency is modified (reduced) when the internal temperature of the drive is too high.

Setting 	Code / Value	Description
[SFR type 1]	H F 1	<p>Heating loss optimization</p> <p>Allows the system to adapt the switching frequency according to the motor frequency. This setting optimizes the heating loss of the drive in order to improve the drive efficiency.</p> <p>Factory setting</p>
[SFR type 2]	H F 2	<p>Allows the system to keep a constant chosen switching frequency [Switching frequency] S F r whatever the motor frequency [Output frequency] r F r .</p> <p>With this setting, the motor noise is kept as low as possible by a high switching frequency.</p> <p>In the event of overheating, the drive automatically decreases the switching frequency.</p> <p>It is restored to its original value when the temperature returns to normal.</p>

[Motor Surge Limit.] S V L

Surge voltage limitation.

This parameter is forced to **[No]** n o if **[Sinus Filter Activation]** o F i is set to **[Yes]** y e s .

This function limits motor over-voltages and is useful in the following applications:

- NEMA motors
- Old or poor quality motors
- Spindle motors
- Rewound motors

This parameter can remain set to **[No]** n o for 230/400 Vac motors used at 230 Vac, or if the length of cable between the drive and the motor does not exceed:

- 4 m with unshielded cables
- 10 m with shielded cables

Setting	Code / Value	Description
[No]	n o	<p>Function inactive</p> <p>Factory setting</p>
[Yes]	y e s	<p>Function active</p> <p>NOTE: With this setting, the maximum of [Switching freq.] S F r is modified.</p>

[Attenuation Time] S o P ★

Attenuation time.

This parameter can be accessed if **[Motor surge limit.]** S V L is set to **[Yes]** y e s .

The value of the **[Attenuation Time]** S o P parameter corresponds to the attenuation time of the cable used. It is defined to help to prevent the superimposition of voltage wave reflections resulting from long cable lengths. It limits over-voltages to twice the DC bus rated voltage. As surge voltage depends on many parameters such as types of cable, different motor powers in parallel, different cable lengths in parallel, and so on. It is recommended to use an oscilloscope to check the over-voltage values obtained at the motor terminals. If the higher value of **[Attenuation Time]** S o P is not enough according to the cable lengths, an output filter or a dV/dt filter must be used.

To retain the overall drive performance, do not increase the S o P value unnecessarily.

Setting	Code / Value	Description
[6 μs]	5	6 μs
[8 μs]	8	8 μs Factory setting
[10 μs]	10	10 μs

[Input Filter] d C r - Menu

Access

[Complete settings] → [Motor parameters] → [Input Filter]

About This Menu

This menu cannot be accessed on ATV980 and ATV9B0.

This function monitors the ripple on the DC bus by detecting instabilities. It is not used to detect input phase loss.

On the DC bus, if the oscillation frequencies are inconsistent with those observed on the mains supply, and if the amplitude is inconsistent with the drive capability (such as the DC bus capacitors), the drive triggers **[DC Bus Ripple Warn] d C r W** warning.

Depending on the setting of **[DC Bus Ripple Config] d C r C**, if **[DC Bus Ripple Warn] d C r W** warning is persistent during an amount of time set by an internal fixed value, **[DC Bus Ripple Error] d C r E** error is triggered.

[Input Filter] , F ,

Use of an input filter.

This parameter is forced to **[No] n o** if:

- **[Motor Control Type] C E E** is not set to **[U/F VC 5pts] u F 5**, or
- **[U1] u 1** or ... or **[U5] u 5** is configured, or
- **[F1] F 1** or ... or **[F5] F 5** is configured.

Setting	Code / Value	Description
[No]	n o	No input filter used. Factory setting
[Yes]	y e s	Motor control performance is adjusted to consider the use of an input filter in order to help to prevent ripple on the DC bus.

[DC Bus Ripple Config] d C r C

Configuration of the DC bus ripple monitoring.

This parameter is preset to **[Error] F L E**, if **[Input Filter] , F ,** is set to **[Yes] y e s**.

Setting	Code / Value	Description
[Ignore]	n o	DC bus ripple monitoring function is inactive. This selection can't be accessed if [Input Filter] , F , is set to [Yes] y e s . Factory setting
[Warning]	w a r n	DC bus ripple monitoring function is enabled. In case of DC bus ripple, the drive triggers [DC Bus Ripple Warn] d C r W warning.
[Error]	F L E	The DC bus ripple monitoring function is fully enabled. The drive triggers [DC Bus Ripple Error] d C r E error if [DC Bus Ripple Warn] d C r W warning is persistent.

[Define system units]

[Define system units] \llcorner \llcorner \llcorner - Menu

Access

[Complete settings] \rightarrow [Define system units]

About This Menu

In order to be easy to configure, commission, operate, and maintain, the drive uses the application units.

The physicals that are concerned by application units are:

- Temperature values
- Currency values

NOTE: Some other default system units are automatically deduced from configurable system units or from other parameters.

System unit applies by default to all communication parameters and HMI (Graphic Display Terminal, Web server, DTM-based software).

When a system unit is changed, there is no rescaling of values. Numerical values are kept, but the meaning of these values is not the same:

- After a change, the behavior of the product will not change (the system stays numerically the same).
- If new values are written through communication or through HMI in new unit, then the behavior is impacted. In that case, all parameters should be reconfigured according to the new selected unit.
- In order to avoid issues due to a modification of system unit parameters, system units should be modified only during the installation of the product and before the commissioning of the functions.

The precision of the physical values is selected at the same time as the unit.

By default, values are signed.

Default range of values are:

16 bits values	32 bits values
-32,768...32,767	-2,147,483,648...2,147,483,648

[Temperature unit] \llcorner \llcorner \llcorner P

Default system application unit used for temperature.

Available temperature units:

Unit	Symbol	Conversion
Celsius Degree	$^{\circ}\text{C}$	-
Fahrenheit Degree	$^{\circ}\text{F}$	$T_F = 9/5 * T_C + 32$

Setting	Code / Value	Description
[0.1 $^{\circ}\text{C}$]	$D \ I \ C$	0.1 $^{\circ}\text{C}$ Factory setting
[0.1 $^{\circ}\text{F}$]	$D \ I \ F$	0.1 $^{\circ}\text{F}$

[Currency unit list] 5 5 5

Default system application unit used for currency.

Setting	Code / Value	Description
[EURO]	<i>E u r o</i>	Euro Factory setting
[\$]	<i>d o L L A r</i>	Dollar
[£]	<i>P o u n d</i>	Pound
[Krone]	<i>K r</i>	Krone
[Renminbi]	<i>r n b</i>	Renminbi
[Other]	<i>o t H E r</i>	Other

[Command and Reference] *U r P* - Menu

[Command and Reference] *U r P* - Menu

Access

[Complete settings] → [Command and Reference]

Command and Reference Channels Parameter Can Be Accessed

Run commands (forward, reverse, stop, and so on) and references can be sent using the following channels:

Command	Reference
Terminals: Digital inputs DI	Terminals: Analog inputs AI, pulse input
Graphic Display Terminal	Graphic Display Terminal
Integrated Modbus	Integrated Modbus
CANopen®	CANopen
Fieldbus module	Fieldbus module
-	+/- speed via the Graphic Display Terminal
Integrated Ethernet	Integrated Ethernet


NOTE: The stop keys on the Graphic Display Terminal can be programmed as non-priority keys. A stop key can only have priority if the **[Stop Key Enable] *P5E*** parameter menu is set to **[Stop Key Priority] *U5E*** or **[Stop Key Priority All] *RL***.

The behavior of the drive can be adapted according to requirements:


- **[Not separ.] *U r P***: Command and reference are sent via the same channel.
- **[Separate] *U E P***: Command and reference may be sent via different channels. In these configurations, control via the communication bus is performed in accordance with the DRIVECOM standard with only 5 freely assignable bits (see communication parameter manual). The application functions cannot be accessed via the communication interface.
- **[I/O profile] *r P***: The command and the reference can come from different channels. This configuration both simplifies and extends use via the communication interface. Commands may be sent via the digital inputs on the terminals or via the communication bus. When commands are sent via a bus, they are available on a word, which acts as virtual terminals containing only digital inputs. Application functions can be assigned to the bits in this word. More than one function can be assigned to the same bit.

NOTE: Stop commands from the Graphic Display Terminal remain active even if the terminals are not the active command channel.

Reference Channel for [Not separ.] 5, Π, [Separate] SEP and I/O profile] , □ Configurations, PID Not Configured

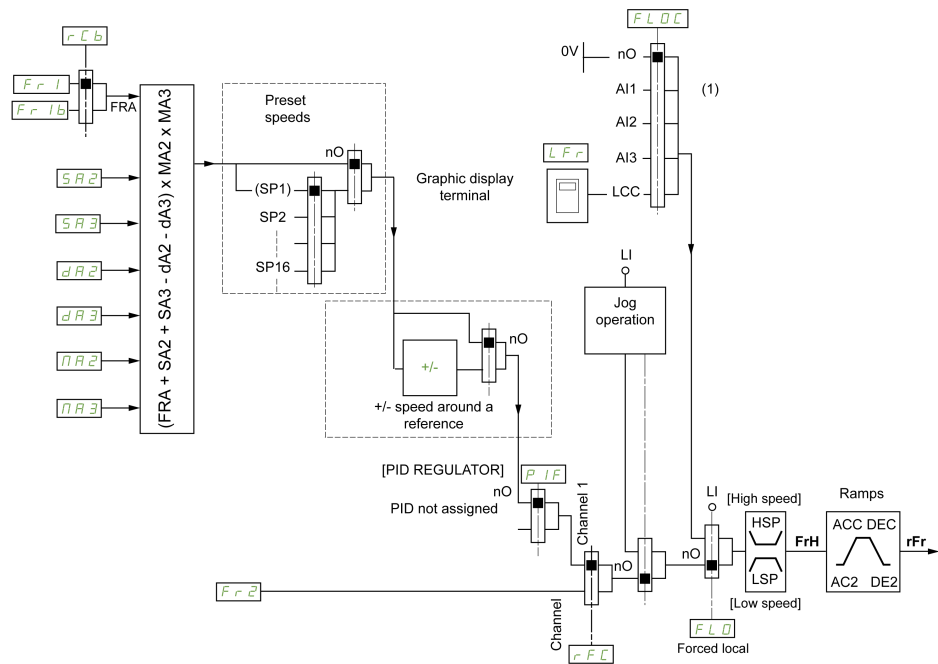

 (1) Note: Forced local is not active in **[I/O]**.



The black square represents the factory setting assignment.

Fr 1: terminals (including I/O extension module), Graphic Display Terminal, integrated Modbus, CANopen®, embedded Ethernet, DI7 PulseInput, DI8 PulseInput.


Fr 1b, for **SEP** and **□**: terminals (including I/O extension module), Graphic Display Terminal, integrated Modbus, CANopen®, embedded Ethernet, DI7 PulseInput, DI8 PulseInput.

Fr 1b, for **5, Π**: terminals (including I/O extension module), DI7 PulseInput, DI8 PulseInput.

SA 2, SA 3, dRA 2, dRA 3, nRA 2, nRA 3: terminals (including I/O extension module), Graphic Display Terminal, integrated Modbus, CANopen®, embedded Ethernet, DI7 PulseInput, DI8 PulseInput, and AI Virtual 1.


Fr 2: terminals (including I/O extension module), Graphic Display Terminal, integrated Modbus, CANopen®, embedded Ethernet, and Ref Freq via DI..

Reference Channel for [Not separ.] 5, Π, [Separate] SEP and [I/O profile] , ρ Configurations, PID Configured with PID References at the Terminals

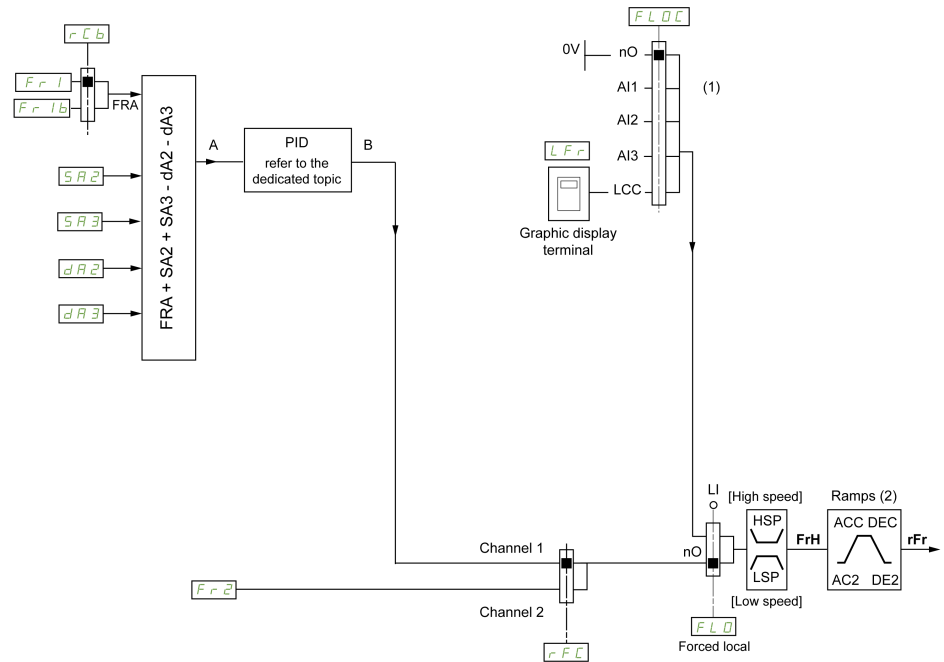

(1) Note: Forced local is not active in [I/O profile].

(2) Ramps not active if the PID function is active in automatic mode.

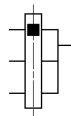

The black square represents the factory setting assignment.

Fr I: terminals (including I/O extension module), Graphic Display Terminal, integrated Modbus, CANopen®, embedded Ethernet, DI7 PulseInput, DI8 PulseInput.

Fr Ib, for SEP and , ρ: terminals (including I/O extension module), Graphic Display Terminal, integrated Modbus, CANopen®, embedded Ethernet, DI7 PulseInput, DI8 PulseInput.

Fr Ib, for 5, Π: terminals (including I/O extension module), DI7 PulseInput, DI8 PulseInput.

SA 2, *SA 3*, *dA 2*, *dA 3*: terminals (including I/O extension module), Graphic Display Terminal, integrated Modbus, CANopen®, embedded Ethernet, DI7 PulseInput, DI8 PulseInput.



Fr 2: terminals (including I/O extension module), Graphic Display Terminal, integrated Modbus, CANopen®, embedded Ethernet, and Ref Freq via DI..

Command Channel for [Not separ.] 5, Π configuration

Reference and command, not separate.

The command channel is determined by the reference channel. The parameters *Fr I*, *Fr 2*, *r F C*, *F L ρ* and *F L ρ C* are common to reference and command.

Example: If the reference is *Fr I = A*, I (analog input at the terminals), control is via DI (digital input at the terminals).

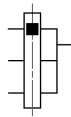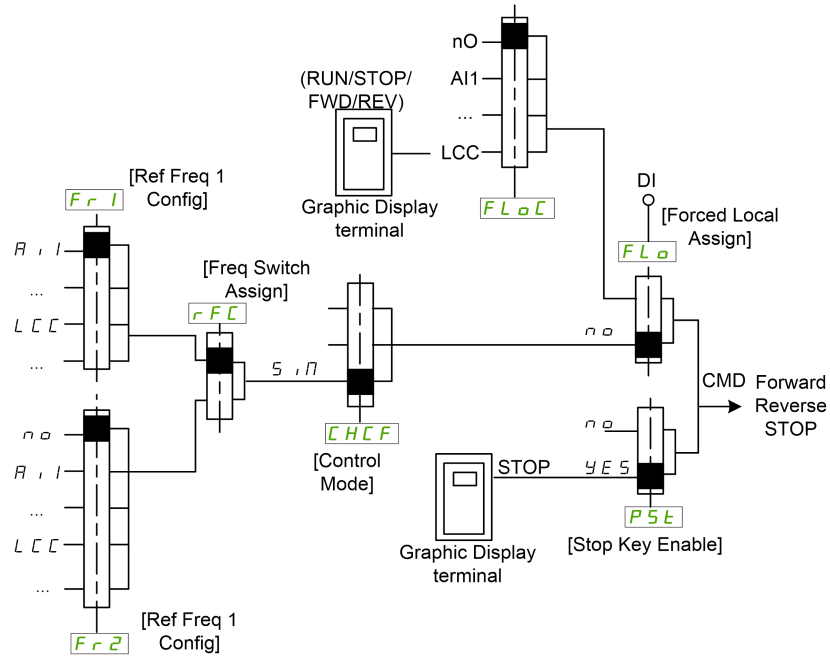

The black square represents the factory setting assignment.



Command Channel for [Separate] SEP configuration

Separated Reference and command.

The parameters FL0 and FL0C are common to reference and command.

Example: If the reference is in forced local mode via AI1 (analog input at the terminals), command in forced local mode is via DI (digital input at the terminals).

The command channels Cd1 and Cd2 are independent of the reference channels Fr1, Fr1b and Fr2.

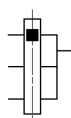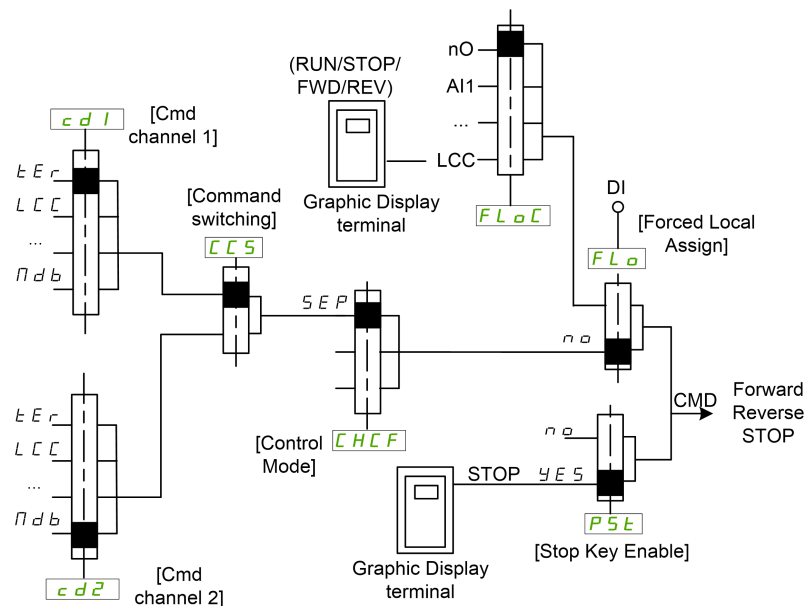



The black square represents the factory setting assignment, except for [Control Mode] CHCF.

[Cmd channel 1] C d 1 and **[Cmd channel 2] C d 2**: Terminals, Graphic Display Terminal, integrated Modbus, integrated CANopen®, communication card

Command Channel for I/O profile I O configuration

Separated Reference and command, as in **[Separate] S E P** configuration.

The command channels C d 1 and C d 2 are independent of the reference channels F r 1, F r 1 b and FR2.

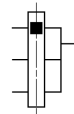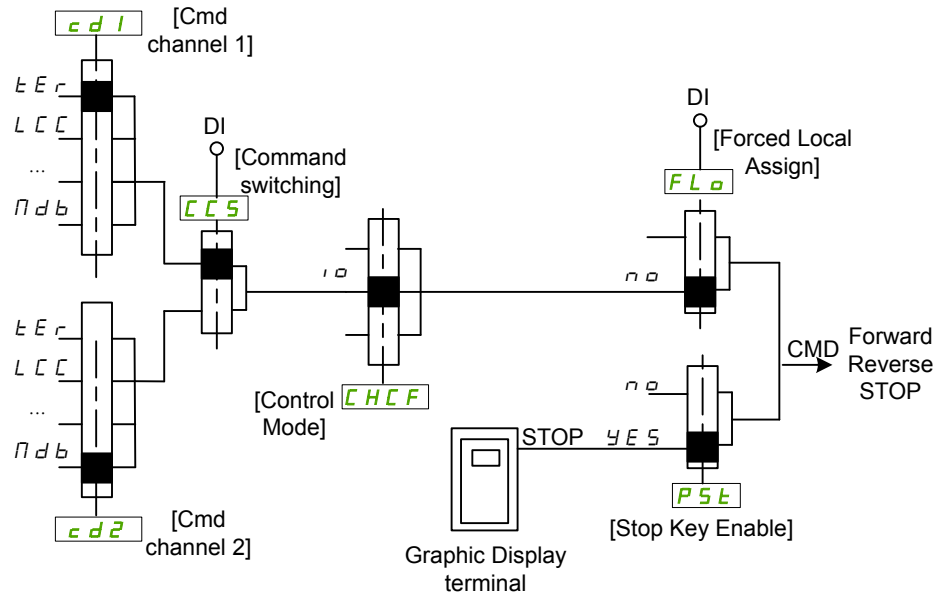

The black square represents the factory setting assignment, except for **[Control Mode] C H C F**.

[Cmd channel 1] C d 1 and **[Cmd channel 2] C d 2**: Terminals, Graphic Display Terminal, integrated Modbus, integrated CANopen®, communication card

A command or an action can be assigned:

- To a fixed channel by selecting a Digital input (Dix) or a Cxxx bit:
 - By selecting, for example, LI3, this action will be triggered by the digital input DI3 regardless of which command channel is switched.
 - By selecting, for example, C114, this action will be triggered by integrated Modbus with bit 14 regardless of which command channel is switched.
- To a switchable channel by selecting a CDxx bit:
 - By selecting, for example, Cd11, this action will be triggered by: LI12 if the terminals channel is active, C111 if the integrated Modbus channel is active, C211 if the integrated CANopen® channel is active, C311 if the communication card channel is active, C511 if the Ethernet channel is active.

If the active channel is the graphic display terminal, the functions and commands assigned to CDxx switchable internal bits are inactive.

NOTE: Several CDxx does not have equivalent digital inputs and can only be used for switching between 2 networks.

[Ref Freq 1 Config] F r 1

Configuration reference frequency 1.

Setting	Code / Value	Description
[Not Configured]	n o	Not assigned
[AI1]	A , 1	Analog input AI1 Factory Setting
[AI2]...[AI3]	A , 2... A , 3	Analog input AI2...AI3
[AI Virtual 1]	A , V 1	Virtual analogic input 1
[AI4]...[AI5]	A , 4... A , 5	Analog input AI4...AI5 if VW3A3203 I/O extension module has been inserted
[Ref.Freq-Rmt. Term]	L C C	Reference Frequency via remote terminal
[Ref. Freq-Modbus]	Π d b	Reference frequency via Modbus
[Ref. Freq-CANopen]	C A n	Reference frequency via CANopen if a CANopen module has been inserted
[Ref. Freq-Com. Module]	n E E	Reference frequency via fieldbus module if a fieldbus module has been inserted
[Embedded Ethernet]	E E H	Embedded Ethernet
[DI7 PulseInput]...[DI8 PulseInput]	P , 7... P , 8	Digital input DI7...DI8 used as pulse input
[Encoder]	P G	Encoder reference if an encoder module has been inserted.

[Ref.1B channel] F r 1 b

Configuration reference frequency 1B.

Identical to [Ref Freq 1 Config] F r 1 (see above) with factory setting: [Not Configured] n o.

[Ref 1B switching] r C b

⚠ WARNING

UNANTICIPATED EQUIPMENT OPERATION

This parameter can cause unintended movements, for example an inversion of the direction of the rotation of the motor, a sudden acceleration or a stop.

- Verify that the setting of this parameter does not cause unintended movements.
- Verify that the setting of this parameter does not result in unsafe conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Select switching (1 to 1B).

- If the assigned input or bit is at D, [Ref Freq 1 Config] F r 1 is active.
- If the assigned input or bit is at I, [Ref.1B channel] F r 1 b is active.

[Ref 1B switching] r C b is forced to [Ref Freq Channel 1] F r 1 if [Control Mode] C H C F is set to [Not separ.] 5 , Π with [Ref Freq 1 Config] F r 1 assigned via the terminals (analog inputs, pulse input).

NOTE: Activating this function from an other active command channel will also activate the monitoring of this new channel.

Setting	Code / Value	Description
[Ref Freq Channel 1]	<i>F r 1</i>	Reference channel = channel 1 (for RCB)
[Ref.1B channel]	<i>F r 1 b</i>	Reference channel = channel 1b (for RCB)
[DI1]...[DI8]	<i>L , 1...L , 8</i>	Digital input DI1...DI8
[DI11]...[DI16]	<i>L , 11... L , 16</i>	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	<i>C d 0 0... C d 1 0</i>	Virtual digital input CMD.0...CMD.10 in [I/O profile] , <i>o</i> configuration
[CD11]... [CD15]	<i>C d 1 1... C d 1 5</i>	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	<i>C 1 0 1... C 1 1 0</i>	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , <i>o</i> configuration
[C111]... [C115]	<i>C 1 1 1... C 1 1 5</i>	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	<i>C 2 0 1... C 2 1 0</i>	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , <i>o</i> configuration
[C211]... [C215]	<i>C 2 1 1... C 2 1 5</i>	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	<i>C 3 0 1... C 3 1 0</i>	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , <i>o</i> configuration
[C311]... [C315]	<i>C 3 1 1... C 3 1 5</i>	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	<i>C 5 0 1... C 5 1 0</i>	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , <i>o</i> configuration
[C511]... [C515]	<i>C 5 1 1... C 5 1 5</i>	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[Reverse Disable] *r , n*

Reverse directions disable.

Lock of movement in reverse direction does not apply to direction requests sent by digital inputs.

Reverse direction requests sent by digital inputs are taken into account.

Reverse direction requests sent by the Graphic Display Terminal or sent by the line are not taken into account.

Any reverse speed reference originating from the PID, summing input, and so on, is interpreted as a zero reference (0 Hz).

Setting	Code / Value	Description
[No]	<i>n o</i>	No Factory Setting
[Yes]	<i>y e s</i>	Yes

[Control Mode] *C H C F*

Mixed mode configuration.

⚠ WARNING**UNANTICIPATED EQUIPMENT OPERATION**

Disabling **[I/O profile]** \rightarrow resets the drive to the factory settings.

- Verify that restoring the factory settings is compatible with the type of wiring used.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Setting	Code / Value	Description
[Not separ.]	$S \rightarrow P$	Reference and command, not separate Factory Setting
[Separate]	$S \rightarrow E \rightarrow P$	Separate reference and command. This assignment cannot be accessed in [I/O profile] \rightarrow
[I/O profile]	\rightarrow	I/O profile

[Command Switching] C C 5 ★**⚠ WARNING****UNANTICIPATED EQUIPMENT OPERATION**

This parameter can cause unintended movements, for example an inversion of the direction of the rotation of the motor, a sudden acceleration or a stop.

- Verify that the setting of this parameter does not cause unintended movements.
- Verify that the setting of this parameter does not result in unsafe conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Control channel switch.

This parameter can be accessed if **[Control Mode] C H C F** is set to **[Separate] S E P** or to **[I/O profile]** \rightarrow .

If the assigned input or bit is at 0, channel **[Cmd channel 1] C d 1** is active. If the assigned input or bit is at 1, channel **[Cmd channel 2] C d 2** is active.

NOTE: Activating this function from an other active command channel will also activate the monitoring of this new channel.

Setting	Code / Value	Description
[Command channel 1]	$C d 1$	Command channel = channel 1 (for CCS) Factory setting
[Command channel 2]	$C d 2$	Command channel = channel 2 (for CCS)
[DI1]...[DI8]	$L \rightarrow 1 \dots L \rightarrow 8$	Digital input DI1...DI8
[DI11]...[DI16]	$L \rightarrow 1 \rightarrow 1 \dots L \rightarrow 16$	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[C101]...[C110]	$C \rightarrow 1 \rightarrow 0 \rightarrow 1 \dots C \rightarrow 1 \rightarrow 1 \rightarrow 0$	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] \rightarrow configuration
[C111]...[C115]	$C \rightarrow 1 \rightarrow 1 \rightarrow 1 \dots C \rightarrow 1 \rightarrow 1 \rightarrow 5$	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]...[C210]	$C \rightarrow 2 \rightarrow 0 \rightarrow 1 \dots C \rightarrow 2 \rightarrow 1 \rightarrow 0$	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] \rightarrow configuration
[C211]...[C215]	$C \rightarrow 2 \rightarrow 1 \rightarrow 1 \dots C \rightarrow 2 \rightarrow 1 \rightarrow 5$	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration

Setting	Code / Value	Description
[C301]... [C310]	C 3 0 1 ... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] configuration
[C311]... [C315]	C 3 1 1 ... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1 ... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] configuration
[C511]... [C515]	C 5 1 1 ... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[Cmd channel 1] C d 1 ★

Command channel 1 assignment.

This parameter can be accessed if [Control Mode] C H C F is set to [Separate] S E P or [I/O profile] configuration.

Setting	Code / Value	Description
[Terminals]	E E r	Terminal block source Factory Setting
[Ref.Freq-Rmt. Term]	L L L	Command via Graphic Display Terminal
[Ref. Freq-Modbus]	M d b	Command via Modbus
[Ref. Freq-CANopen]	C A n	Command via CANopen if a CANopen module has been inserted
[Ref. Freq-Com. Module]	n E t	Command via fieldbus module if a fieldbus module has been inserted
[Embedded Ethernet]	E t H	Command via Embedded Ethernet

[Cmd channel 2] C d 2 ★

Command channel 2 assignment.

This parameter can be accessed if [Control Mode] C H C F is set to [Separate] S E P or [I/O profile] configuration.

Identical to [Cmd channel 1] C d 1 with factory setting [Ref. Freq-Modbus] M d b.

[Freq Switch Assign] r F C

⚠ WARNING
UNANTICIPATED EQUIPMENT OPERATION
<p>This parameter can cause unintended movements, for example an inversion of the direction of the rotation of the motor, a sudden acceleration or a stop.</p> <ul style="list-style-type: none"> • Verify that the setting of this parameter does not cause unintended movements. • Verify that the setting of this parameter does not result in unsafe conditions. <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p>

frequency switching assignment.

If the assigned input or bit is at 0, channel [Ref Freq Channel 1] F r 1 is active.

If the assigned input or bit is at 1, channel **[Ref Freq Channel 2]** F_{r2} is active.

NOTE: Activating this function from an other active command channel will also activate the monitoring of this new channel.

Setting	Code / Value	Description
[Ref Freq Channel 1]	F_{r1}	Reference channel = channel 1 (for RFC)
[Ref Freq Channel 2]	F_{r2}	Reference channel = channel 2 (for RFC)
[DI1]...[DI8]	$L_{11}...L_{18}$	Digital input DI1...DI8
[DI11]...[DI16]	$L_{111}...L_{116}$	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]...[CD10]	$C_{d00}...C_{d10}$	Virtual digital input CMD.0...CMD.10 in [I/O profile] configuration
[CD11]...[CD15]	$C_{d11}...C_{d15}$	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]...[C110]	$C_{101}...C_{110}$	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] configuration
[C111]...[C115]	$C_{111}...C_{115}$	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]...[C210]	$C_{201}...C_{210}$	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] configuration
[C211]...[C215]	$C_{211}...C_{215}$	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]...[C310]	$C_{301}...C_{310}$	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] configuration
[C311]...[C315]	$C_{311}...C_{315}$	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]...[C510]	$C_{501}...C_{510}$	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] configuration
[C511]...[C515]	$C_{511}...C_{515}$	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[Ref Freq 2 Config] F_{r2}

Configuration reference frequency 2.

Setting	Code / Value	Description
[Not Configured]	$n0$	Not assigned. If [Control Mode] C_{HCF} is set to [Not separ.] S_{11} , the command is at the terminals with a zero reference. If [Control Mode] C_{HCF} is set to [Separate] S_{EP} or [I/O profile] configuration, the reference is zero. Factory Setting
[AI1]...[AI3]	$A_{11}...A_{13}$	Analog input AI1...AI3
[AI4]...[AI5]	$A_{14}...A_{15}$	Analog input AI4...AI5 if VW3A3203 I/O extension module has been inserted
[AI Virtual 1]	A_{1V1}	Virtual analogic input 1
[Ref Frequency via DI]	μPdt	+/- speed command assigned to DIx
[Ref.Freq-Rmt.Term]	LCC	Reference frequency via Graphic Display Terminal
[Ref. Freq-Modbus]	ndb	Reference frequency via Modbus
[Ref. Freq-CANopen]	CAn	Reference frequency via CANopen if a CANopen module has been inserted

Setting	Code / Value	Description
[Ref. Freq-Com. Module]	n E E	Reference frequency via fieldbus module if a fieldbus module has been inserted
[Embedded Ethernet]	E E h	Integrated Ethernet
[DI7 PulseInput]... [DI8 PulseInput]	P , 7...P , B	Digital input DI7...DI8 used as pulse input
[Encoder]	P G	Encoder reference if an encoder module has been inserted.

[Copy Ch1-Ch2] C o P 

Copy channel 1 reference frequency to channel 2.

▲ WARNING
<p>UNANTICIPATED EQUIPMENT OPERATION</p> <p>This parameter can cause unintended movements, for example an inversion of the direction of the rotation of the motor, a sudden acceleration or a stop.</p> <ul style="list-style-type: none"> • Verify that the setting of this parameter does not cause unintended movements. • Verify that the setting of this parameter does not result in unsafe conditions. <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p>

Can be used to copy the current reference and/or the command with switching in order to avoid speed surges, for example.

If [Control Mode] C H C F , page 211 is set to [Not separ.] 5 , n or [Separate] 5 E P , copying is possible only from channel 1 to channel 2.

If [Control Mode] C H C F is set to [I/O profile] , o , copying is possible in both directions. A reference or a command cannot be copied to a channel on the terminals. The reference copied is [Pre-Ramp Ref Freq] F r H (before ramp) unless the destination channel reference is set via +/- speed. In this case, the reference copied is [Output frequency] r F r (after ramp).

Setting	Code / Value	Description
[No]	n o	No copy Factory Setting
[Reference Frequency]	5 P	Copy reference
[Command]	C d	Copy command
[Cmd + Ref Frequency]	R L L	Copy reference and command

As the Graphic Display Terminal may be selected as the command and/or reference channel, its action modes can be configured.

Comments:

- The Graphic Display Terminal command/reference is only active if the command and/or reference channels from the terminal are active except for BMP with Local/ Remote key (command via the Graphic Display Terminal), which takes priority over these channels. Press Local/ Remote key again to revert control to the selected channel.
- Command and reference via the Graphic Display Terminal are impossible if the latter is connected to more than one drive.

- The preset PID reference functions can only be accessed if **[Control Mode] CHCF** is set to **[Not separ.] 5 1 1** or **[Separate] 5 EP**.
- The command via the Graphic Display Terminal can be accessed regardless of the **[Control Mode] CHCF**.

[Forced Local Freq] FL0

Forced local reference source assignment.

Setting	Code / Value	Description
[Not Configured]	no	Not assigned (control via the terminals with zero reference) Factory Setting
[AI1]...[AI3]	R 1...R 3	Analog input AI1...AI3
[AI4]...[AI5]	R 4...R 5	Analog input AI4...AI5 if VW3A3203 I/O extension module has been inserted
[Ref.Freq-Rmt.Term]	LC	Graphic Display Terminal
[DI7 PulseInput]... [DI8 PulseInput]	P 7...P 8	Digital input DI7...DI8 used as pulse input
[Encoder]	PG	Encoder reference if an encoder module has been inserted.

[Time-out Forc. Local] FL0t★

Time for channel confirmation after forced local.

This parameter can be accessed if **[Forced Local Assign] FL0** is not set to **[No] no**.

Setting (t)	Description
0.1...30.0 s	Setting range Factory setting: 10.0 s

[Forced Local Assign] FL0

Forced local assignment.

Forced local mode is active when the input is at state 1.

[Forced Local Assign] FL0 is forced to **[No] no** if **[Control Mode] CHCF** is set to **[I/O profile] 10**.

Setting	Code / Value	Description
[Not Assigned]	no	Not assigned Factory setting
[DI1]...[DI8]	L 1...L 8	Digital input DI1...DI8
[DI11]...[DI16]	L 11... L 16	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted

[Reverse Assign] r r 5



Reverse assignment.

Setting	Code / Value	Description
[Not Assigned]	<i>n a</i>	Not assigned Factory setting
[DI1]...[DI8]	<i>L , 1...L , 8</i>	Digital input DI1...DI8
[DI11]...[DI16]	<i>L , 11... L , 16</i>	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	<i>C d 0 0... C d 1 0</i>	Virtual digital input CMD.0...CMD.10 in [I/O profile] , <i>o</i> configuration
[CD11]... [CD15]	<i>C d 1 1... C d 1 5</i>	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	<i>C 1 0 1... C 1 1 0</i>	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , <i>o</i> configuration
[C111]... [C115]	<i>C 1 1 1... C 1 1 5</i>	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	<i>C 2 0 1... C 2 1 0</i>	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , <i>o</i> configuration
[C211]... [C215]	<i>C 2 1 1... C 2 1 5</i>	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	<i>C 3 0 1... C 3 1 0</i>	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , <i>o</i> configuration
[C311]... [C315]	<i>C 3 1 1... C 3 1 5</i>	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	<i>C 5 0 1... C 5 1 0</i>	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , <i>o</i> configuration
[C511]... [C515]	<i>C 5 1 1... C 5 1 5</i>	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[2/3-wire control] 5 5 5 

2-wire or 3-wire control.

⚠ WARNING
UNANTICIPATED EQUIPMENT OPERATION
<p>If this parameter is changed, the parameters [Reverse Assign] RRS and [2/3-Wire Control] ICC and the assignments of the digital inputs are reset to the factory setting.</p> <ul style="list-style-type: none"> • Verify that this change is compatible with the type of wiring used. <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p>

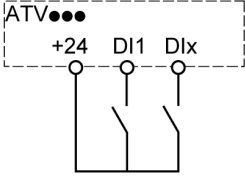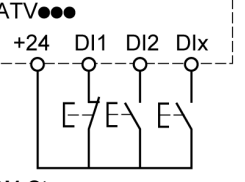Setting	Code / Value	Description
[2-Wire Control]	2 5	<p>2-wire control (level commands): This is the input state (0 or 1) or edge (0 to 1 or 1 to 0), which controls running or stopping.</p> <p>Example of source wiring:</p>  <p>DI1 Forward DIx Reverse Factory setting</p>
[3-Wire Control]	3 5	<p>3-wire control (pulse commands) [3 wire]: A forward or reverse pulse is sufficient to command starting, a stop pulse is sufficient to command stopping.</p> <p>Example of source wiring:</p>  <p>DI1 Stop DI2 Forward DIx Reverse</p>

[2-wire type] 5 5 5 ★ ⏳

Type of 2-wire control.

This parameter can be accessed if [2/3-wire control] 5 5 5 is set to [2-Wire Control] 2 5.

⚠ WARNING

UNANTICIPATED EQUIPMENT OPERATION

Verify that the parameter setting is compatible with the type of wiring used.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Setting	Code / Value	Description
[Level]	5 5 5	State 0 or 1 is taken into account for run (1) or stop (0)
[Transition]	5 5 5	<p>A change of state (transition or edge) is necessary to initiate operation in order to avoid accidental restarts after a break in the supply mains</p> <p>Factory setting</p>
[Level With Fwd Priority]	5 5 5	State 0 or 1 is taken into account for run or stop, but the "forward" input takes priority over the "reverse" input

[Stop Key Enable] 5 5 5 ⏳

STOP/RESET key enable.

Setting this function to *no* disables the STOP key of the Display Terminal if the setting of the parameter [Command Channel] 5 5 5 is not [Ref. Freq-Rmt. Term] 5 5 5.

▲ WARNING
LOSS OF CONTROL
Only set this parameter to <i>no</i> if you have implemented appropriate alternative stop functions.
Failure to follow these instructions can result in death, serious injury, or equipment damage.

If 2-wire control by level is active (parameter [2/3-Wire Control] 5 5 5 set to [2-Wire Control] 5 5 and parameter [2-wire type] 5 5 5 set to [Level] 5 5 5 or [Level With Fwd Priority] 5 5 5) and the parameter 5 5 5 is set to [Stop Key Priority All] 5 5 5, the motor starts if the STOP/RESET key of the Display Terminal is pressed while a run command is active.

▲ WARNING
UNANTICIPATED EQUIPMENT OPERATION
Only set the parameter [Stop Key Enable] 5 5 5 to [Stop Key Priority All] 5 5 5 in 2-wire control by level after having verified that this setting cannot result in unsafe conditions.
Failure to follow these instructions can result in death, serious injury, or equipment damage.

Irrespective of the configuration of [Stop Key Enable] 5 5 5, if the active command channel is the Graphic Display Terminal, the STOP/RESET key performs:

- in run, a stop according to the [Type of stop] 5 5 5,
- in "Operating State Fault", a fault reset command.

The following table gives the behavior of the function when the Graphic Display Terminal is not the active command channel:

Setting	Code / Value	Description
[Stop Key No Priority]	<i>no</i>	Disables the STOP/RESET key on the Graphic Display Terminal.
[Stop Key Priority]	5 5 5	Gives priority to the STOP/RESET key on the Graphic Display Terminal. Only the stop function is enabled. The stop is performed in freewheel. Factory Setting
[Stop Key Priority All]	5 5 5	Gives priority to the STOP/RESET key on the Graphic Display Terminal. The fault reset function and the stop function are enabled. The stop is performed depending on [Type of Stop] 5 5 5 setting value.

NOTE: The Fault Reset function is disabled in Multipoint mode, page 38.

[HMI cmd.] 5 5 5

HMI command.

Setting	Code / Value	Description
[Stop]	<i>5 5 0 P</i>	Stops the drive (although the controlled direction of operation and reference of the previous channel are copied (to be taken into account on the next RUN command))
[Bumpless]	<i>b u n P</i>	Does not stop the drive (the controlled direction of operation and the reference of the previous channel are copied)
[Disabled]	<i>d i S</i>	Disabled Factory Setting

[Pump functions] - [PID controller]


[PID controller] *P i d* - Overview

About This Menu

NOTE: This function cannot be used with some other functions.

Block Diagram

The function is activated by assigning an analog input to the PID feedback (measurement).

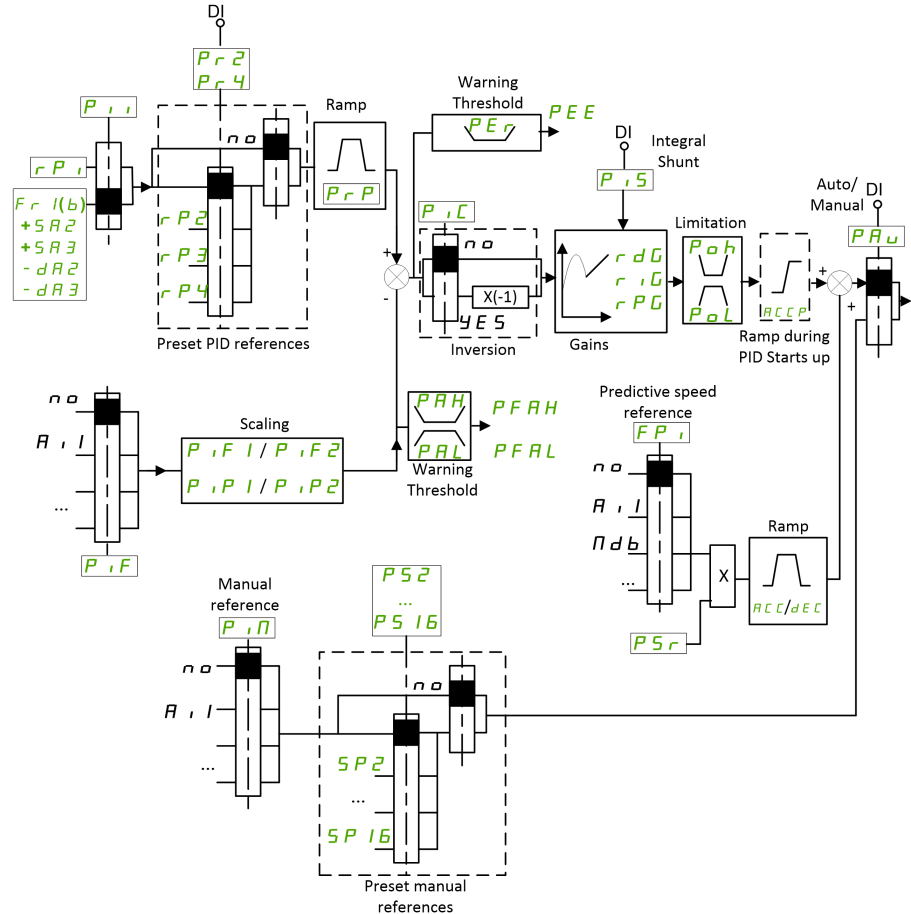

The PID feedback needs to be assigned to one of the analog inputs AI1 to AI5 or a pulse input, according to whether any I/O extension module has been inserted.

The PID reference needs to be assigned to the following parameters:

- Preset references via digital inputs (**[Ref PID Preset 2]** *r P 2*, **[Ref PID Preset 3]** *r P 3*, **[Ref PID Preset 4]** *r P 4*).
- In accordance with the configuration of **[Intern PID Ref]** *P i r*:
 - **[Internal PID ref]** *r P i*, or
 - Reference A **[Ref Freq 1 Config]** *F r 1* or **[Ref.1B channel]** *F r 1 b*.

Combination Table for Preset PID References:

DI (<i>P r 4</i>)	DI (<i>P r 2</i>)	<i>P r 2</i> = <i>n o</i>	Reference
			<i>r P i</i> or <i>F r 1 (b)</i>
0	0		<i>r P i</i> or <i>F r 1 (b)</i>
0	1		<i>r P 2</i>

DI (Pr 4)	DI (Pr 2)	Pr 2 = no	Reference
1	0		r P 3
1	1		r P 4

A predictive speed reference can be used to initialize the speed on restarting the process.

Scaling of feedback and references:


- **[Min PID feedback] Pr 1, [Max PID feedback] Pr 2** parameters can be used to scale the PID feedback (sensor range). This scale must be maintained for all other parameters.
- **[Min PID Process] Pr 1, [Max PID Process] Pr 2** parameters can be used to scale the adjustment range, for example the reference. **Check that the adjustment range remains within the sensor range.**

The maximum value of the scaling parameters is 32,767. To facilitate the installation, it is recommended to use values as close as possible to this maximum level, while retaining powers of 10 in relation to the actual values. The scaling is without unit if **[Type of control] E 0 C E** is set to **[NA] n B**, in % if set to **[OTHER] o E H E r**.

Example

Adjustment of the volume in a tank, 6...15 m³.

- Probe used 4-20 mA, 4.5 m³ for 4 mA and 20 m³ for 20 mA, with the result that **Pr 1** = 4,500 and **Pr 2** = 20,000.
- Adjustment range 6 to 15 m³, with the result that **Pr 1** = 6,000 (min. reference) and **Pr 2** = 15,000 (max. reference).
- Example references:
 - **r P 1** (internal reference) = 9,500
 - **r P 2** (preset reference) = 6,500
 - **r P 3** (preset reference) = 8,000
 - **r P 4** (preset reference) = 11,200

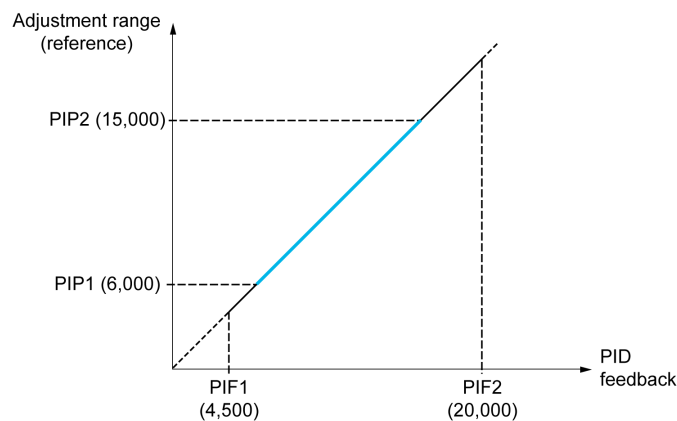

Other parameters:

- Reversal of the direction of correction **[PID Inversion] Pr 1 C**. If **[PID Inversion] Pr 1 C** is set to **[No] n o**, the speed of the motor increases when the detected error is positive (for example pressure control with a compressor). If **[PID Inversion] Pr 1 C** is set to **[Yes] y E 5**, the speed of the motor decreases when the detected error is positive (for example temperature control using a cooling fan).
- The integral gain may be short-circuited by a digital input.
- A warning on the **[PID feedback Assign] Pr 1 F** may be configured.
- A warning on the **[PID error] r P E** may be configured.

"Manual - Automatic" Operation with PID

This function combines the PID controller, the preset speeds, and a manual reference. Depending on the state of the digital input, the speed reference is given by the preset speeds or by a manual reference input via the PID function.

Manual PID reference **[Manual PID reference] P , Π**:

- Analog inputs AI1 to AI5
- Pulse inputs

Predictive speed reference **[Predictive Speed Ref] F P , :**

- **[AI1] R , 1**: analog input
- **[AI2] R , 2**: analog input
- **[AI3] R , 3**: analog input
- **[AI4] R , 4**: analog input if VW3A3203 I/O extension module has been inserted
- **[AI5] R , 5**: analog input if VW3A3203 I/O extension module has been inserted
- **[DI7 PulseInput] P , 7**: pulse input
- **[DI8 PulseInput] P , 8**: pulse input
- **[Ref.Freq-Rmt.Term] L C C**: Graphic Display Terminal
- **[Modbus] Π d b**: integrated Modbus
- **[CANopen] C R n**: CANopen® (if inserted)
- **[Com. Module] n E E**: fieldbus option module (if inserted)
- **[Embedded Ethernet] E E H**: integrated Ethernet

Setting Up the PID Controller

1. Configuration in PID mode.

Refer to the Block Diagram, page 221.


2. Perform a test in factory settings mode.

To optimize the drive, adjust **[PID Prop.Gain] r P G** or **[PID Intgl.Gain] r , G** gradually and independently, and observe the effect on the PID feedback in relation to the reference.

3. If the factory settings are unstable or the reference is incorrect.

Step	Action
1	Perform a test with a speed reference in Manual mode (without PID controller) and with the drive on load for the speed range of the system: <ul style="list-style-type: none"> • In steady state, the speed must be stable and comply with the reference, and the PID feedback signal must be stable. • In transient state, the speed must follow the ramp and stabilize quickly, and the PID feedback must follow the speed. If not, see the settings for the drive and/or sensor signal and wiring.
2	Switch to PID mode.
3	Set [PID ramp] P r P to the minimum permitted by the mechanism without triggering an [DC Bus Overvoltage] o b F .
4	Set the integral gain [PID Intgl.Gain] r , G to minimum.
5	Leave the derivative gain [PID derivative gain] r d G at 0.
6	Observe the PID feedback and the reference.
7	Switch the drive ON/OFF a number of times or vary the load or reference rapidly a number of times.
8	Set the proportional gain [PID Prop.Gain] r P G in order to ascertain the compromise between response time and stability in transient phases (slight overshoot and 1 to 2 oscillations before stabilizing).

Step	Action
9	If the reference varies from the preset value in steady state, gradually increase the integral gain [PID Intgl.Gain] $r_i G$, reduce the proportional gain [PID Prop.Gain] $r_p G$ in the event of instability (pump applications), find a compromise between response time and static precision (see diagram).
10	Lastly, the derivative gain may permit the overshoot to be reduced and the response time to be improved, although this is more difficult to obtain a compromise in terms of stability, as it depends on 3 gains.
11	Perform in-production tests over the whole reference range.

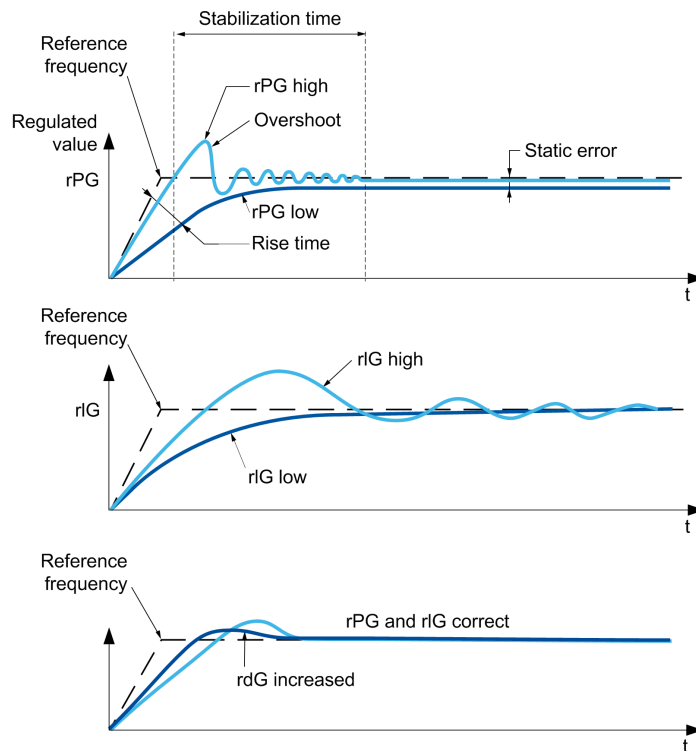

The oscillation frequency depends on the system kinematics:

Parameter	Rise time	Overshoot	Stabilization time	Static error
rPG +	--	+	=	-
rIG +	-	++	+	--
rdG +	=	-	-	=

[PID Feedback] *Fdb* - Menu

Access

[Complete settings] → [Pump functions] → [PID controller] → [PID Feedback]

About This Menu

NOTE: This function cannot be used with some other functions.

[Type of Control] *TC*

Type of control for the PID = unit choice.

Setting	Code / Value	Description
[nA]	<i>nA</i>	(without unit) Factory setting
[Other]	<i>Other</i>	Other control and unit (%)

[PID feedback Assign] *Pf*

PID controller feedback.

Setting	Code / Value	Description
[No]	<i>no</i>	Not assigned Factory setting
[AI1]...[AI3]	<i>A1...A3</i>	Analog input AI1...AI3
[AI4]...[AI5]	<i>A4...A5</i>	Analog input AI4...AI5 if VW3A3203 I/O extension module has been inserted
[AI Virtual 1]... [AI Virtual 3]	<i>AV1... AV3</i>	Virtual analogic input 1...3
[DI7 PulseInput]... [DI8 PulseInput]	<i>P7...P8</i>	Digital input DI7...DI8 used as pulse input
[Encoder]	<i>PG</i>	Encoder reference if an encoder module has been inserted.

[AI1 Type] *A1t* ★

Configuration of analog input AI1.

This parameter can be accessed if [PID feedback Assign] *Pf* is set to [AI1] *A1*.

Setting	Code / Value	Description
[Voltage]	<i>VD</i>	0-10 Vdc Factory setting
[Current]	<i>IA</i>	0-20 mA

[AI1 min value] *AVL* ★

AI1 voltage scaling parameter of 0%.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is set to **[AI1] R , I**, and
- **[AI1 Type] R , I E** is set to **[Voltage] I D U**.

Setting	Description
0.0...10.0 Vdc	Setting range Factory setting: 0.0 Vdc

[AI1 max value] U , H I ★

AI1 voltage scaling parameter of 100%.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is set to **[AI1] R , I**, and
- **[AI1 Type] R , I E** is set to **[Voltage] I D U**.

Setting	Description
0.0...10.0 Vdc	Setting range Factory setting: 10.0 Vdc

[AI1 min. value] C r L I ★

AI1 current scaling parameter of 0%.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is set to **[AI1] R , I**, and
- **[AI1 Type] R , I E** is set to **[Current] D R**.

Setting	Description
0.0...20.0 mA	Setting range Factory setting: 0.0 mA

[AI1 max. value] C r H I ★

AI1 current scaling parameter of 100%.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is set to **[AI1] R , I**, and
- **[AI1 Type] R , I E** is set to **[Current] D R**.

Setting	Description
0.0...20.0 mA	Setting range Factory setting: 20.0 mA

[AI1 range] R , I L ★

AI1 scaling selection.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is set to **[AI1] R , I 21**, and
- **[AI1 Type] R , I E** is set to **[Current] D R**.

This parameter is forced to **[0-100%] P D 5** if:

- **[AI1 Type] R , I E** is no set to **[Current] D R**, or
- **[AI1 min. value] C r L I** is lower than 3.0 mA.

Setting	Code / Value	Description
[0-100%]	P 0 5	Unidirectional: AI1 current scaling is 0% up to 100%. Factory setting
[-/+100%]	P 0 5 n E G	Bidirectional: AI1 current scaling is -100% up to 100%. [AI1 min. value] L r L I corresponds to -100%. [AI1 max. value] L r H I corresponds to 100%.

[AI2 Type] R , 2 E ★

Configuration of analog input AI2.

This parameter can be accessed if **[PID feedback Assign] P , F** is set to **[AI2] R , 2**.

Setting	Code / Value	Description
[Voltage]	1 0 u	0-10 Vdc
[Voltage +/-]	n 1 0 u	-10/+10 Vdc Factory setting

[AI2 min value] u , L 2 ★

AI2 voltage scaling parameter of 0%.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is set to **[AI2] R , 2**, and
- **[AI2 Type] R , 2 E** is set to **[Voltage] 1 0 u**.

Identical to **[AI1 min value] u , L 1**, page 225.

[AI2 max value] u , H 2 ★

AI2 voltage scaling parameter of 100%.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is set to **[AI2] R , 2**, and
- **[AI2 Type] R , 2 E** is set to **[Voltage] 1 0 u**.

Identical to **[AI1 max value] u , H 1**, page 226.

[AI3 Type] R , 3 E ★

Configuration of analog input AI3.

This parameter can be accessed if **[PID feedback Assign] P , F** is set to **[AI3] R , 3**.

Identical to **[AI1 Type] R , 1 E** with factory setting: **[Current] D R**, page 227.

[AI3 min value] u , L 3 ★

AI3 voltage scaling parameter of 0%.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is set to **[AI3] R , 3**, and
- **[AI3 Type] R , 3 E** is set to **[Voltage] 1 0 u**.

Identical to **[AI1 min value] u , L 1**, page 225.

[AI3 max value] U , H 3 ★

AI3 voltage scaling parameter of 100%.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is set to **[AI3] R , 3**, and
- **[AI3 Type] R , 3 E** is set to **[Voltage] I 0 U**.

Identical to **[AI1 max value] U , H 1**, page 226.

[AI3 min. value] C r L 3 ★

AI3 current scaling parameter of 0%.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is set to **[AI3] R , 3**, and
- **[AI3 Type] R , 3 E** is set to **[Current] 0 R**.

Identical to **[AI1 min. value] C r L 1**, page 226.

[AI3 max. value] C r H 3 ★

AI3 current scaling parameter of 100%.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is set to **[AI3] R , 3**, and
- **[AI3 Type] R , 3 E** is set to **[Current] 0 R**.

Identical to **[AI1 max. value] C r H 1**, page 226.

[AI3 range] R , 3 L

AI3 scaling selection.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is set to **[AI3] R , 3**, and
- **[AI3 Type] R , 3 E** is set to **[Current] 0 R**.

Identical to **[AI1 range] R , 1 L**.

[AI4 Type] R , 4 E ★

Configuration of analog input AI4.

This parameter can be accessed if:

- VW3A3203 I/O extension module has been inserted, and
- **[PID feedback Assign] P , F** is set to **[AI4] R , 4**.

Setting	Code / Value	Description
[Voltage]	I 0 U	0-10 Vdc
[Current]	0 R	0-20 mA Factory setting
[Voltage +/-]	n I 0 U	-10/+10 Vdc

[AI4 min value] U , L 4 ★

AI4 voltage scaling parameter of 0%.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is set to **[AI4] R , 4**, and
- **[AI4 Type] R , 4 E** is set to **[Voltage] I 0 u**.

Identical to **[AI1 min value] u , L 1**, page 225.

[AI4 max value] u , H 4★

AI4 voltage scaling parameter of 100%.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is set to **[AI4] R , 4**, and
- **[AI4 Type] R , 4 E** is set to **[Voltage] I 0 u**.

Identical to **[AI1 max value] u , H 1**, page 226.

[AI4 min. value] C r L 4★

AI4 current scaling parameter of 0%.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is set to **[AI4] R , 4**, and
- **[AI4 Type] R , 4 E** is set to **[Current] 0 R**.

Identical to **[AI1 min. value] C r L 1**, page 226.

[AI4 max. value] C r H 4★

AI4 current scaling parameter of 100%.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is set to **[AI4] R , 4**, and
- **[AI4 Type] R , 4 E** is not set to **[Current] 0 R**.

Identical to **[AI1 max. value] C r H 1**, page 226.

[AI4 range] R , 4 L

AI4 scaling selection.

This parameter can be accessed if :

- **[PID feedback Assign] P , F** is set to **[AI4] R , 4**, and
- **[AI4 Type] R , 4 E** is set to **[Current] 0 R**.

Identical to **[AI1 range] R , 1 L**.

[AI5 Type] R , 5 E★

Configuration of analog input AI5.

This parameter can be accessed if:

- VW3A3203 I/O extension module has been inserted, and
- **[PID feedback Assign] P , F** is set to **[AI5] R , 5**.

Identical to **[AI4 Type] R , 4 E**, page 228.

[AI5 min value] u , L 5★

AI5 voltage scaling parameter of 0%.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is set to **[AI5] R , 5**, and

- **[AI5 Type] R , S E** is set to **[Voltage] I D U**.

Identical to **[AI1 min value] U , L I**, page 225.

[AI5 max value] U , H 5 ★

AI5 voltage scaling parameter of 100%.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is set to **[AI5] R , S**, and
- **[AI5 Type] R , S E** is set to **[Voltage] I D U**.

Identical to **[AI1 max value] U , H I**, page 226.

[AI5 min. value] C r L 5 ★

AI5 current scaling parameter of 0%.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is set to **[AI5] R , S**, and
- **[AI5 Type] R , S E** is set to **[Current] D R**.

Identical to **[AI1 min. value] C r L I**, page 226.

[AI5 max. value] C r H 5 ★

AI5 current scaling parameter of 100%.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is set to **[AI5] R , S**, and
- **[AI5 Type] R , S E** is set to **[Current] D R**.

Identical to **[AI1 max. value] C r H I**, page 226.

[AI5 range] R , S L

AI5 scaling selection.

This parameter can be accessed if :

- **[PID feedback Assign] P , F** is set to **[AI5] R , S**, and
- **[AI5 Type] R , S E** is set to **[Current] D R**.

Identical to **[AI1 range] R , I L**.

[Min PID feedback] P , F I ★

Minimum PID feedback.


This parameter can be accessed if **[PID feedback Assign] P , F** is not set to **[No] n o**.

Setting ()	Description
0... [Max PID feedback] P , F 2	Setting range Factory setting: 100

[Max PID feedback] P , F 2 ★

Maximum PID feedback.

This parameter can be accessed if **[PID feedback Assign] P , F** is not set to **[No] n o**.

Setting 	Description
[Min PID feedback] <i>P , F 1...32,767</i>	Setting range Factory setting: 1,000

[PID feedback] *r P F* ★

Value for PID feedback, display only.


This parameter can be accessed if **[PID feedback Assign]** *P , F* is not set to **[No]** *n o*.

Setting	Description
0...65,535	Setting range Factory setting: _

[Min Fbk Warning] *P A L* ★

Minimum feedback level warning.


This parameter can be accessed if **[PID feedback Assign]** *P , F* is not set to **[No]** *n o*. **[PID Low Fdbck Warning]** *P F A L* warning is active if the value of the PID feedback is lower than the value configured in **[Min Fbk Warning]** *P A L*.

Setting 	Description
0...65,535	Setting range Factory setting: 100

[Max Fbk Warning] *P A H* ★

Maximum feedback level warning.

This parameter can be accessed if **[PID feedback Assign]** *P , F* is not set to **[No]** *n o*. **[PID High Fdbck Warning]** *P F A H* warning is active if the value of the PID feedback is greater than the value configured in **[Max Fbk Warning]** *P A H*.

Setting 	Description
0...65,535	Setting range Factory setting: 1,000

[PID Reference] *r F - Menu*

Access

[Complete settings] → [Pump functions] → [PID controller] → [PID Reference]

About This Menu

NOTE: This function cannot be used with some other functions.

[Intern PID Ref] *r P i*, ★

Internal PID controller reference.

This parameter can be accessed if [PID feedback Assign] *r P i F* is not set to [Not Configured] *n o*.

Setting	Code / Value	Description
[No]	<i>n o</i>	The PID controller reference is given by [Ref Freq 1 Config] <i>F r 1</i> or [Ref.1B channel] <i>F r 1 b</i> with summing/subtraction/multiplication functions. Refer to the block diagram, page 221. Factory setting
[Yes]	<i>y e s</i>	The PID controller reference is internal via [Internal PID ref] <i>r P i</i> .

[Ref Freq 1 Config] *F r 1* ★

Configuration reference frequency 1.

This parameter can be accessed if:

- [PID feedback Assign] *r P i F* is not set to [Not Configured] *n o*, and
- [Intern PID Ref] *r P i* is set to [No] *n o*.

Setting	Code / Value	Description
[Not Configured]	<i>n o</i>	Not assigned
[AI1]	<i>A i 1</i>	Analog input AI1 Factory Setting
[AI2]...[AI3]	<i>A i 2</i> ... <i>A i 3</i>	Analog input AI2...AI3
[AI Virtual 1]	<i>A i v 1</i>	Virtual analogic input 1
[AI4]...[AI5]	<i>A i 4</i> ... <i>A i 5</i>	Analog input AI4...AI5 if VW3A3203 I/O extension module has been inserted
[Ref.Freq-Rmt. Term]	<i>L C C</i>	Reference Frequency via remote terminal
[Ref. Freq-Modbus]	<i>M d b</i>	Reference frequency via Modbus
[Ref. Freq-CANopen]	<i>C A n</i>	Reference frequency via CANopen if a CANopen module has been inserted
[Ref. Freq-Com. Module]	<i>n E E</i>	Reference frequency via fieldbus module if a fieldbus module has been inserted
[Embedded Ethernet]	<i>E E H</i>	Embedded Ethernet
[DI7 PulseInput]...[DI8 PulseInput]	<i>P i 7</i> ... <i>P i 8</i>	Digital input DI7...DI8 used as pulse input
[Encoder]	<i>P G</i>	Encoder reference if an encoder module has been inserted.

[Min PID reference] P , P 1★

Minimum PID reference.

This parameter can be accessed if **[PID feedback Assign] P , F** is not set to **[Not Configured] n o**.

Setting ()	Description
[Min PID feedback] P , F 1... [Max PID reference] P , P 2	Setting range Factory setting: 150

[Max PID reference] P , P 2★

Maximum PID reference.

This parameter can be accessed if **[PID feedback Assign] P , F** is not set to **[Not Configured] n o**.

Setting ()	Description
[Min PID reference] P , P 1... [Max PID feedback] P , F 2	Setting range Factory setting: 900

[Internal PID ref] r P , ★

Internal PID controller reference.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is not set to **[Not Configured] n o**, and
- **[Intern PID Ref] P , r** is set to **[Yes] Y E S**.

Setting ()	Description
[Min PID reference] P , P 1... [Max PID reference] P , P 2	Setting range Factory setting: 150

[Auto/Manual assign.] P A u★

Auto/Manual select input.

This parameter can be accessed if **[PID feedback Assign] P , F** is not set to **[Not Configured] n o**.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[DI1]...[DI8]	L , 1...L , 8	Digital input DI1...DI8
[DI11]...[DI16]	L , 11... L , 16	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	C d 0 0... C d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] , o configuration
[CD11]... [CD15]	C d 1 1... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , o configuration
[C111]... [C115]	C 1 1 1... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration

Setting	Code / Value	Description
[C201]... [C210]	C 2 0 1... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] configuration
[C211]... [C215]	C 2 1 1... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] configuration
[C311]... [C315]	C 3 1 1... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[Manual PID Reference] P , Π★

Manual PID reference.

Reference input in manual mode.

This parameter can be accessed if:

- **[PID feedback Assign] P , F** is not set to **[Not Configured] n o**, and
- **[Auto/Manual assign.] P R u** is not set to **[No] n o**.

The preset speeds are active on the manual reference if they have been configured.

Setting	Code / Value	Description
[No]	n o	Not assigned Factory setting
[AI1]...[AI3]	R , 1...R , 3	Analog input AI1...AI3
[AI4]...[AI5]	R , 4...R , 5	Analog input AI4...AI5 if VW3A3203 I/O extension module has been inserted
[DI7 PulseInput]... [DI8 PulseInput]	P , 7...P , 8	Digital input DI7...DI8 used as pulse input
[Encoder]	P G	Encoder reference if an encoder module has been inserted.

[PID preset references] *P r 1 - Menu*

Access

[Complete settings] → [Pump functions] → [PID controller] → [PID Reference] → [PID preset references]

About This Menu

The function can be accessed if [PID feedback Assign] *P r F* is assigned.

[2 PID Preset Assign] *P r 2*

2 PID preset assignment.

If the assigned input or bit is at 0, the function is inactive.

If the assigned input or bit is at 1, the function is active.

Setting	Code / Value	Description
[Not Assigned]	<i>n a</i>	Not assigned Factory setting
[DI1]...[DI8]	<i>L 1...L 8</i>	Digital input DI1...DI8
[DI11]...[DI16]	<i>L 11...L 16</i>	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	<i>C d 0 0...C d 1 0</i>	Virtual digital input CMD.0...CMD.10 in [I/O profile] <i>i o</i> configuration
[CD11]... [CD15]	<i>C d 1 1...C d 1 5</i>	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	<i>C 1 0 1...C 1 1 0</i>	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] <i>i o</i> configuration
[C111]... [C115]	<i>C 1 1 1...C 1 1 5</i>	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	<i>C 2 0 1...C 2 1 0</i>	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] <i>i o</i> configuration
[C211]... [C215]	<i>C 2 1 1...C 2 1 5</i>	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	<i>C 3 0 1...C 3 1 0</i>	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] <i>i o</i> configuration
[C311]... [C315]	<i>C 3 1 1...C 3 1 5</i>	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	<i>C 5 0 1...C 5 1 0</i>	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] <i>i o</i> configuration
[C511]... [C515]	<i>C 5 1 1...C 5 1 5</i>	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[4 PID Preset Assign] *P r 4*

4 PID preset assignment.

Identical to [2 PID Preset Assign] *P r 2*, page 235.

Verify that [2 PID Preset Assign] *P r 2* has been assigned before assigning this function.

[Ref PID Preset 2] *r P 2*★

Second PID preset reference.

This parameter can be accessed only if **[2 PID Preset Assign] P r 2** is assigned.

Setting ()	Description
[Min PID reference] P , P 1... [Max PID reference] P , P 2	Setting range Factory setting: 300

[Ref PID Preset 3] r P 3★

Third PID preset reference.

This parameter can be accessed only if **[4 preset PID ref.] P r 4** is assigned.

Setting ()	Description
[Min PID reference] P , P 1... [Max PID reference] P , P 2	Setting range Factory setting: 600

[Ref PID Preset 4] r P 4★

Fourth PID preset reference.

This parameter can be accessed only if **[2 preset PID ref.] P r 2** and **[4 preset PID ref.] P r 4** are assigned.

Setting ()	Description
[Min PID reference] P , P 1... [Max PID reference] P , P 2	Setting range Factory setting: 900

[PID Reference] *r F - Menu*

Access

[Complete settings] → [Pump functions] → [PID controller] → [PID Reference]

[Predictive Speed Ref] *F P , ★*

Predictive speed reference.

This parameter can be accessed if:

- [Access Level] *L R C* is set to [Expert] *E P r*.
- [PID feedback] *P , F* is not set to [No] *n o*.

Setting	Code / Value	Description
[Not Configured]	<i>n o</i>	Not assigned Factory setting
[AI1]...[AI3]	<i>A , 1...A , 3</i>	Analog input AI1...AI3
[AI4]...[AI5]	<i>A , 4...A , 5</i>	Analog input AI4...AI5 if VW3A3203 I/O extension module has been inserted
[Ref. Freq-Rmt.Term]	<i>L C C</i>	Reference frequency via remote terminal
[Ref. Freq-Modbus]	<i>M d b</i>	Reference frequency via Modbus
[Ref. Freq-CANopen]	<i>C A n</i>	Reference frequency via CANopen
[Ref. Freq-Com. Module]	<i>n E E</i>	Reference frequency via communication module
[Embedded Ethernet]	<i>E E H</i>	Embedded Ethernet
[DI7 PulseInput]... [DI8 PulseInput]	<i>P , 7...P , 8</i>	Digital input DI7...DI8 used as pulse input
[Encoder]	<i>P G</i>	Encoder reference if an encoder module has been inserted.

[Speed Input %] *P 5 r ★*

PID speed input % reference.

- This parameter can be accessed if [Access Level] *L R C* is set to [Expert] *E P r*, and
- [Predictive Speed Ref] *F P ,* is not set to [Not Configured] *n o*.

Setting ()	Description
1...100%	Setting range Factory setting: 100%

[Settings] 5 5 - Menu**Access**

[Complete settings] → [Pump functions] → [PID controller] → [Settings]

About This Menu

Following parameters can be accessed if [PID Feedback] $P_r F$ is not set to [Not Configured] $n o$.

NOTE: This function cannot be used with some other functions.

[PID Prop.Gain] $r P G$ ★

Proportional gain.

Setting ()	Description
0.01...100.00	Setting range Factory setting: 1.00

[PI Intgl.Gain] $r I G$ ★

Integral gain.

Setting ()	Description
0.01...100.00	Setting range Factory setting: 1.00

[PID derivative gain] $r d G$ ★

Derivative gain.

Setting ()	Description
0.00...100.00	Setting range Factory setting: 0.00

[PID ramp] $P_r P$ ★

PID acceleration/deceleration ramp, defined to go from [Min PID reference] $P_r P 1$ to [Max PID reference] $P_r P 2$ and conversely.

Setting ()	Description
0.0...99.9 s	Setting range Factory setting: 0.0 s

[PID Inversion] $P_r I$ ★

PID inversion.

Setting	Code / Value	Description
[No]	n o	No Factory setting
[Yes]	y e s	Yes

[PID Min Output] P o L ★

PID controller minimum output in Hz.

Setting ()	Description
-599.0...599.0 Hz	Setting range Factory setting: 0.0 Hz

[PID Max Output] P o H ★

PID controller maximum output in Hz.

Setting ()	Description
0.0...599.0 Hz	Setting range Factory setting: 60.0 Hz

[PID Error Warning] P E r ★

PID error warning. [PID Error Warning] P E E is active if the value of PID error is greater than the value configured in [PID Error Warning] P E r .

Setting ()	Description
0...65,535	Setting range Factory setting: 100

[PID Integral OFF] P i S ★

Integral shunt.

If the assigned input or bit is at 0, the function is inactive (the PID integral is enabled).

If the assigned input or bit is at 1, the function is active (the PID integral is disabled).


Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[DI1]...[DI8]	L , I ... L , B	Digital input DI1...DI8
[DI11]...[DI16]	L , I I ... L , I B	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	C d 0 0 ... C d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] i o configuration
[CD11]... [CD15]	C d 1 1 ... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1 ... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] i o configuration

Setting	Code / Value	Description
[C111]... [C115]	C 1 1 1... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , 0 configuration
[C211]... [C215]	C 2 1 1... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , 0 configuration
[C311]... [C315]	C 3 1 1... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , 0 configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[PID acceleration time] ACCP★

PID: acceleration during start-up.

PID start ramp can be applied before starting the PID controller to allow reaching quickly the PID reference without increasing PID gains. If configured, the [Start Accel Ramp] ACCS is applied up to [Low Speed] LSP instead of [PID acceleration time] ACCP.

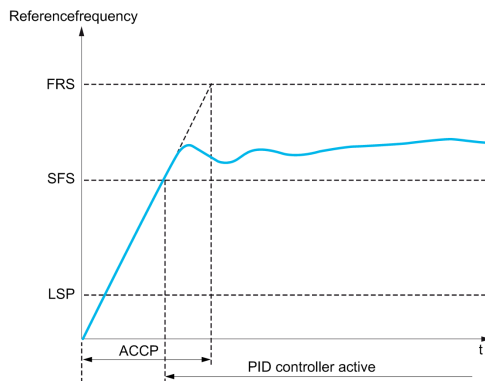

Setting (C)	Description
0.01...99.99 s ⁽¹⁾	Setting range Factory setting: 5.00 s
1 Range 0.01 to 99.99 s or 0.1 to 999.9 s or 1...6,000 s according to [Ramp increment] , 0 .	

[PID Start Ref Freq] SF5★

PID: speed reference for start-up.

Setting (C)	Description
0.0...599.0 Hz	Setting range If [PID Start Ref Freq] SF5 is lower than [Low speed] LSP, this function has no effect. Factory setting: 0.0 Hz

[Pump functions] - [Sleep/wakeup]

[Sleep/Wakeup] SPW - Overview

About This Menu

Following parameters can be accessed if [PID feedback Assign] P, F is not set to [Not Configured] $n.o.$.

▲ WARNING

UNANTICIPATED EQUIPMENT OPERATION

Verify that activating this function does not result in unsafe conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The purpose of the "Sleep / Wake-Up" function is to stop the motor in process standstill situations.

It allows you to save energy and helps to prevent premature aging of some equipment that cannot run for a long time at low speed because the greasing or cooling depends on the machine speed.

Depending on user-defined wakeup conditions, the motor is restarted automatically.

Sleep/Wake-Up in PID Control Mode

When the drive is used in PID control, one of the following conditions is used to switch the application to the sleep state:


- Sleep on low speed.
- Sleep on low motor power.
- Sleep on external condition (using drive input).

The drive is in "PID control mode" when PID is active. Typically when:

- PID is configured, and
- Channel 1 is selected, and
- PID is in automatic mode.

When the drive is in a sleep state, a wake-up condition is used to restart the application:

- Wake-up on PID Feedback level
- Wake-up on PID Error level

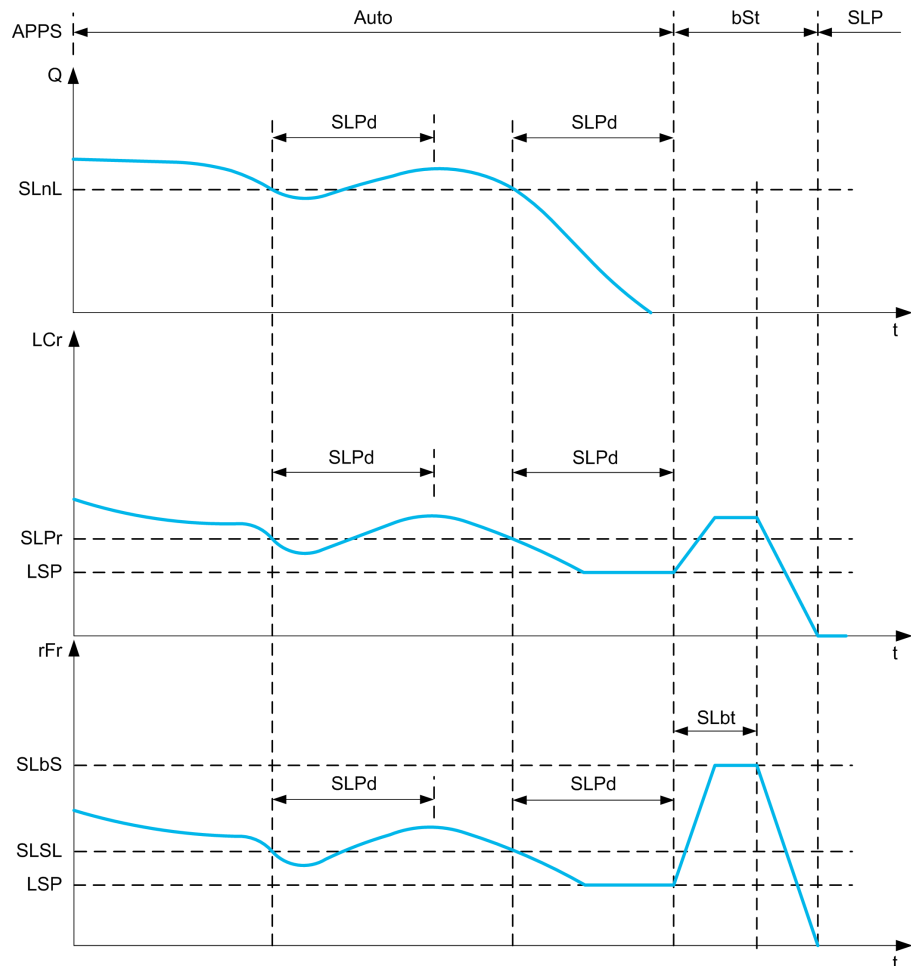

Sleep Conditions in PID Control Mode

If there is no valid wake-up condition, then the system switches to the sleep mode after one of the configured sleep conditions remains longer than **[Sleep Delay]** *SLPd*.

The sleep detection mode is selected by configuring **[Sleep Detect Mode]** *SLPn*. Then the system switches to sleep mode if the selected condition is met:

Configuration	Condition
<i>SW</i> sleep on switch or external condition	The switch input becomes active
<i>SPd</i> sleep on speed	The output frequency is below the sleep speed
<i>PWr</i> sleep on power level	The output power is below the sleep power
<i>or</i> multiple conditions	At least 1 of the configured condition to enter in sleep mode is met

Wake-Up Conditions in PID Control Mode

The system wakes up according to **[Wake Up Mode]** *wuPn* configuration:

- On PID Feedback level
- On PID Error level.

If **[Feedback]** *FbK* is selected, then the system wakes up and goes back in PID control mode:

- When PID feedback drops below configured **[Wake Up Process Level]** *wuPF* if PID is configured in Direct mode, (**[PID Inversion]** *PiL* is set to *no*).

- When PID feedback raises above configured **[Wake Up Process Level]** $\mathcal{W} \mathcal{U} \mathcal{P} \mathcal{L}$, if PID is configured in Reverse mode (**[PID Inversion]** $\mathcal{P} \mathcal{I} \mathcal{C}$ is set to $\mathcal{Y} \mathcal{E} \mathcal{S}$).

If **[Error]** $\mathcal{E} \mathcal{r} \mathcal{r}$ is selected, then the system wakes up and goes back in PID control mode:

- When PID feedback drops below (**[PID reference]** $\mathcal{r} \mathcal{P} \mathcal{L} -$ **[Wake Up Process Error]** $\mathcal{W} \mathcal{U} \mathcal{P} \mathcal{E}$), if PID is configured in Direct mode (**[PID Inversion]** $\mathcal{P} \mathcal{I} \mathcal{C}$ is set to $\mathcal{n} \mathcal{o}$).
- When PID feedback raises above (**[PID reference]** $\mathcal{r} \mathcal{P} \mathcal{L} +$ **[Wake Up Process Error]** $\mathcal{W} \mathcal{U} \mathcal{P} \mathcal{E}$), if PID is configured in Reverse mode (**[PID Inversion]** $\mathcal{P} \mathcal{I} \mathcal{C}$ is set to $\mathcal{Y} \mathcal{E} \mathcal{S}$).

Boosting Phase in PID Control Mode

When entering the sleep mode, the motor accelerates to **[Sleep Boost Speed]** $\mathcal{S} \mathcal{L} \mathcal{B} \mathcal{S}$ during **[Sleep Boost Time]** $\mathcal{S} \mathcal{L} \mathcal{B} \mathcal{T}$ and then stops.

If **[Sleep Boost Time]** $\mathcal{S} \mathcal{L} \mathcal{B} \mathcal{T}$ is set to 0, then the boost phase is ignored.

Initial State in PID Control Mode

Just after the system starts in automatic mode (a run order appears while in automatic mode - channel 1 already selected and PID auto):

- If a wake-up condition is met, the drive goes in PID control mode (PID started).
- If a wake-up condition is not met, the drive goes in sleep mode (PID stays stopped and motor is kept halted), and Boosting phase is ignored.

When the control is switched to automatic mode while the motor is running (switch to channel 1 or switch to PID auto mode for example), the drive stays in running state and switches to PID automatic mode.

Configuration of Sleep External Condition (Usage of a No Flow Switch for Example)

Sleep switch allows you to select the source of sleep external condition:

- $\mathcal{n} \mathcal{o}$: no input selected for the sleep external condition.
- $\mathcal{d} \mathcal{i} \mathcal{x}$: the sleep external condition (switch for example) is connected to $\mathcal{D} \mathcal{i} \mathcal{x}$ (the assignment is also possible on a control bit in I/O profile).

[Sleep menu] 5 L P - Menu**Access**

[Complete settings] → [Pump functions] → [Sleep/Wakeup] → [Sleep menu]

[Sleep Detect Mode] 5 L P Π

Sleep detection mode.

Setting	Code / Value	Description
[No]	n o	Not configured Factory setting
[Switch]	5 w	System enters in sleep mode on switch condition
[Speed]	5 P d	System enters in sleep mode on speed condition
[Power]	P w r	System enters in sleep mode on power condition
[Multiple]	o r	System enters in sleep mode on multiple-OR condition

[Sleep Switch Assign] 5 L P W

Sleep switch assignment.

This parameter can be accessed if [Sleep Detect Mode] 5 L P Π is set to:

- [Switch] 5 w, or
- [Multiple] o r.

Select an external condition to enter in sleep mode.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[DI1]...[DI8]	L , I ... L , B	Digital input DI1...DI8
[DI11]...[DI16]	L , I I ... L , I B	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	C d 0 0 ... C d 1 0	Virtual digital input CMD0.0...CMD.10 in [I/O profile] , o configuration
[CD11]... [CD15]	C d 1 1 ... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1 ... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , o configuration
[C111]... [C115]	C 1 1 1 ... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1 ... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , o configuration
[C211]... [C215]	C 2 1 1 ... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1 ... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , o configuration
[C311]... [C315]	C 3 1 1 ... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1 ... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , o configuration

Setting	Code / Value	Description
[C511]... [C515]	5 1 1... 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration
[DI52 (High level)]... [DI59 (High level)]	5 2 H... 5 9 H	Cabinet high level digital inputs NOTE: This selection can be accessed on ATV960, ATV980 equipped with Cabinet IO.

[Sleep Min Speed] 5 L 5 L ★

Sleep speed level.

Speed level under which the system should enter the sleep mode.

This parameter can be accessed if [Sleep Detect Mode] 5 L P Π is set to:

- [Speed] 5 P d, or
- [Multiple] o r .

Setting ()	Description
0...599.0 Hz	Setting range Factory setting: [No] n o

[Sleep Power Level] 5 L P r ★

Sleep power level.

Power level under which the system should enter the sleep mode.

This parameter can be accessed if [Sleep Detect Mode] 5 L P Π is set to:

- [Power] P w r, or
- [Multiple] o r .

Setting ()	Description
0...[Nominal Motor Power] n P r	Setting range Factory setting: [No] n o

[Sleep Delay] 5 L P d ★

Sleep delay.

This parameter can be accessed if [Sleep Detect Mode] 5 L P Π is not set to [Not Configured] n o .

Setting ()	Description
0...3,600 s	Setting range Factory setting: 20 s

[Boost] 5 5 5 - Menu**Access**

[Complete settings] → [Pump functions] → [Sleep/wakeup] → [Sleep menu] → [Boost]

About This Menu

Following parameters can be accessed if [Sleep Detect Mode] 5 5 5 5 is not set to [No] n o.

[Sleep Boost Speed] 5 5 5 5★

Sleep boost speed.

Setting ()	Description
0...599.0 Hz	Setting range Factory setting: n o

[Sleep Boost Time] 5 5 5 5★

Sleep boost time.

Setting ()	Description
0...3,600 s	Setting range Factory setting: n o

[Wake up menu] *WK P* - Menu

Access

[Complete settings] → [Pump functions] → [Sleep/wakeup] → [Wake up menu]

About This Menu

This menu can be accessed if [Sleep Detect Mode] *SLPN* is not set to [Not Configured] *no*.

[Wake Up Mode] *WUPN*★

Wake-up mode.

Setting	Code / Value	Description
[Feedback]	<i>FbK</i>	Wake-up on PID feedback level Factory setting
[Error]	<i>Err</i>	Wake-up on PID error level

[Wake Up Process Level] *WUPF*★

Wake-up process value level.

This parameter can be accessed if [Wake Up Mode] *WUPN* is set to [FeedBack] *FbK*.

Setting ()	Description
[Min PID feedback] <i>P, F 1</i> ... [Max PID feedback] <i>P, F 2</i>	Setting range Factory setting: 0

[Wake Up Process Error] *WUPE*★

Wake-up process value error level.

This parameter can be accessed if [Wake Up Mode] *WUPN* is set to [Error] *Err*.

Setting ()	Description
0...[Max PID feedback] <i>P, F 2</i>	Setting range Factory setting: 0,0 Hz

[Pump functions] - [Feedback monitoring]

[Feedback monitoring] $P F \Pi$ - Menu

Access

[Complete settings] \rightarrow [Pump functions] \rightarrow [Feedback monitoring]

About This Menu

The function is typically used to detect cases where the installation capability is exceeded or where the installation is not operating properly:

- Fire hydrant opened.
- Pump start-up with open discharge valve.
- Mechanical breakdown of pipes.
- Water leakage.


When the drive is running at high speed, this function monitors the PID feedback in order to detect if it is out of a given range around the setpoint during a configurable time.

By using a warning or a detected error, this function also indicates that:

- The capability of the installation is exceeded
- The proper control could not be ensured
- Something is wrong on the installation.

This menu can be accessed if [PID feedback Assign] P , F is not set to [Not Configured] Π .

This graphic presents the PID feedback monitoring:

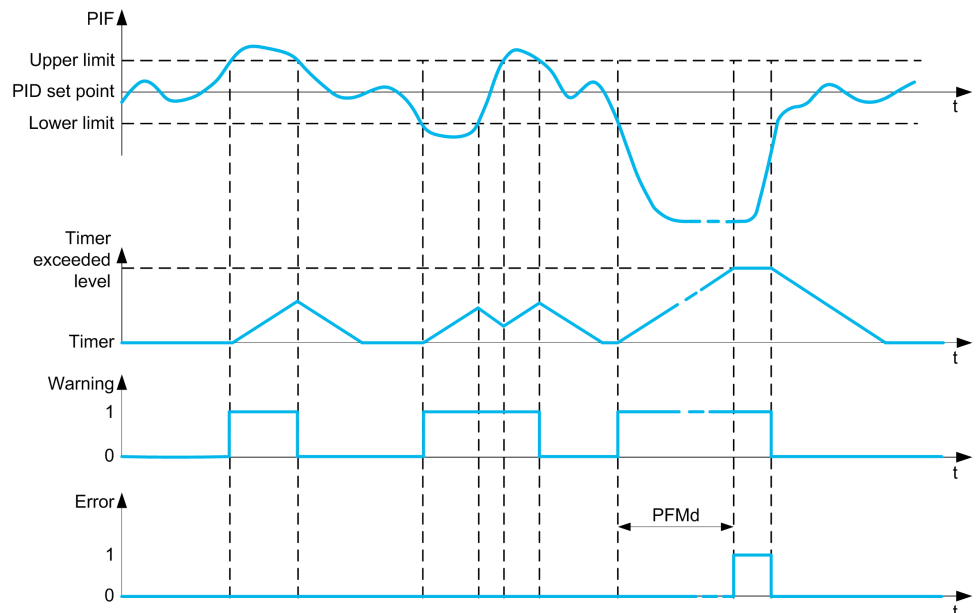

[PID Fdbk Monitoring] $P F \Pi \Pi$

PID feedback monitoring mode.

Parameter used to activate the function.

Setting	Code / Value	Description
[No]	n o	No Factory setting
[Yes]	y e s	Yes

[PID Fdbk Range] P F Π r ★

PID feedback monitoring range.

Range within which the PID feedback value is supposed to stay in normal situation.

This parameter can be accessed if [PID Fdbk Monitoring] P F Π Π is not set to [No] n o.

Setting ()	Description
0...100%	Setting range Factory setting: 3%

[PID Fdbk Error Delay] P F Π d ★

PID feedback monitoring delay.

Delay to trig an error after detection of an anomaly.

This parameter can be accessed if [PID Fdbk Monitoring] P F Π Π is not set to [No] n o.

Setting ()	Description
0...3,600 s	Setting range Factory setting: 10 s

[PID Fdbk Error Resp] P F Π b ★

PID feedback monitoring response to a detected error.

Define how the drive reacts when a feedback monitoring error occurs.

This parameter can be accessed if [PID Fdbk Monitoring] P F Π Π is not set to [No] n o.

Setting	Code / Value	Description
[Ignore]	n o	Detected error ignored
[Freewheel Stop]	y e s	Freewheel stop
[Per STT]	s t t	Stop according to [Type of stop] 5 5 parameter but without an error triggered after stop
[Ramp stop]	r Π P	Stop on ramp Factory setting

[Pump functions] - [ENA System]

[ENA System] ENA - Menu

Access

[Complete settings] → [Pump functions] → [ENA System]

About This Menu

ENA System is a control profile designed for rotating machines with unbalanced load. It is used primarily for oil pumps.

The operating principle applied:

- Allows operation without a braking resistor.
- Reduces mechanical stress on the rod.
- Reduces line current fluctuations.
- Reduces energy consumption by improving the electric power/current ratio.

[ENA activation] ENA ★

ENA function activation.

This parameter can be accessed if [Motor control type] 5 5 is set to [SVC V V].

Setting ()	Code / Value	Description
[No]	no	Not activated Factory setting
[Yes]	YES	Activated The activation of this function: <ul style="list-style-type: none"> • disables the deceleration ramp adaptation (parameter [Dec.Ramp Adapt] brA), • enables the [Torque limitation] 5 L - function: [Torque limit activ.] 5 L R is set to [YES] YES and [Gen. torque limit] 5 L , G is set to 0, and • enables the [Catch on the fly] FLr - function if no incompatible function has been enabled.

[ENA prop gain] GPE ★

ENA proportional gain.

This parameter can be accessed if [ENA activation] ENA is not set to [No] no.

This setting is used to achieve a compromise between the reduced energy consumption (and/or line current fluctuations) and the mechanical stress to which the rod is subject. Energy is saved by reducing current fluctuations and increasing the current while retaining the same average speed.

Setting ()	Description
1...9999	Setting range Factory setting: 250

[ENA integral gain] G , E ★

ENA integral gain.

This parameter can be accessed if **[ENA activation]** E n A is not set to **[No]** n o .

This setting is used to smooth the DC bus voltage.

Start up the machine with a low integral and proportional gain (proportional 25% and integral 10%) in order to avoid an overvoltage trip in the absence of a braking resistor. See if these settings are suitable.

Recommended adjustments to be made during operation:

- To eliminate the braking resistor and, therefore, the increase in the DC bus voltage:
 Display the machine speed on the Graphic Display Terminal.
 Reduce the integral gain value until the machine speed drops
 When this point is reached, increase the integral gain until the machine speed stabilizes.
 Use the Graphic Display Terminal or an oscilloscope to check that the DC bus voltage is stable.
- To save energy:
 Reduce the proportional gain (gradually) may increase energy savings by reducing the maximum value of the line current, but it will increase speed variations and, therefore, mechanical stress.
 The aim is to identify settings that will enable energy to be saved and minimize mechanical stress.
 When reducing the proportional gain, it may be necessary to readjust the integral gain in order to avoid an overvoltage trip.
NOTE: Once the adjustments are complete, check that the pump starts up correctly. If the ENA integral gain setting is too low, this may lead to insufficient torque on startup.

Setting ()	Description
0...9999	Setting range Factory setting: 100

[Reduction ratio] r A P ★

Reduction ratio in ENA system.

This parameter can be accessed if **[ENA activation]** E n A is not set to **[No]** n o .

This setting corresponds to the motor speed ahead of gearbox/speed after gearbox ratio.

This parameter is used to display the average speed in Hz and the machine speed in customer units (e.g., in strokes per minute) on the Graphic Display Terminal.

In order to be displayed on the Graphic Display Terminal, these values must be selected in the **[Display]** n o n - menu.

Adjustment recommendations for prevention of tripping on an **[Motor Overspeed]** S o F error, **[ENA System]** authorizes overspeed, which can trigger an **[Motor Overspeed]** S o F error.

To avoid this occurring, it is advisable to increase the value of the following parameters slightly:

- **[Max Frequency]** E F r
- **[Overspd. pulse thd.]** F 9 A, if the "frequency meter" function is configured

Setting ()	Description
10.0...999.9	Setting range Factory setting: 10.0

[Pump functions] - [Backspin Control]

[Backspin Control] 5 5 5 5 - Menu

Access

[Complete settings] → [Pump functions] → [Backspin Control]

About This Menu

This menu provides the capability to control backspin of a Progressing Cavity Pump (PCP).

This function avoids a shutdown of the drive in case of loss of the main supply. It is done using a DC bus voltage regulation to store enough energy to control the motor.

NOTICE


DAMAGE TO THE EQUIPMENT

A braking resistor must be used if [BS Activation] 5 5 5 5 is enabled.

Failure to follow these instructions can result in equipment damage.

Functional diagram

This diagram shows the Mains Phase Loss Backspin Control sequence

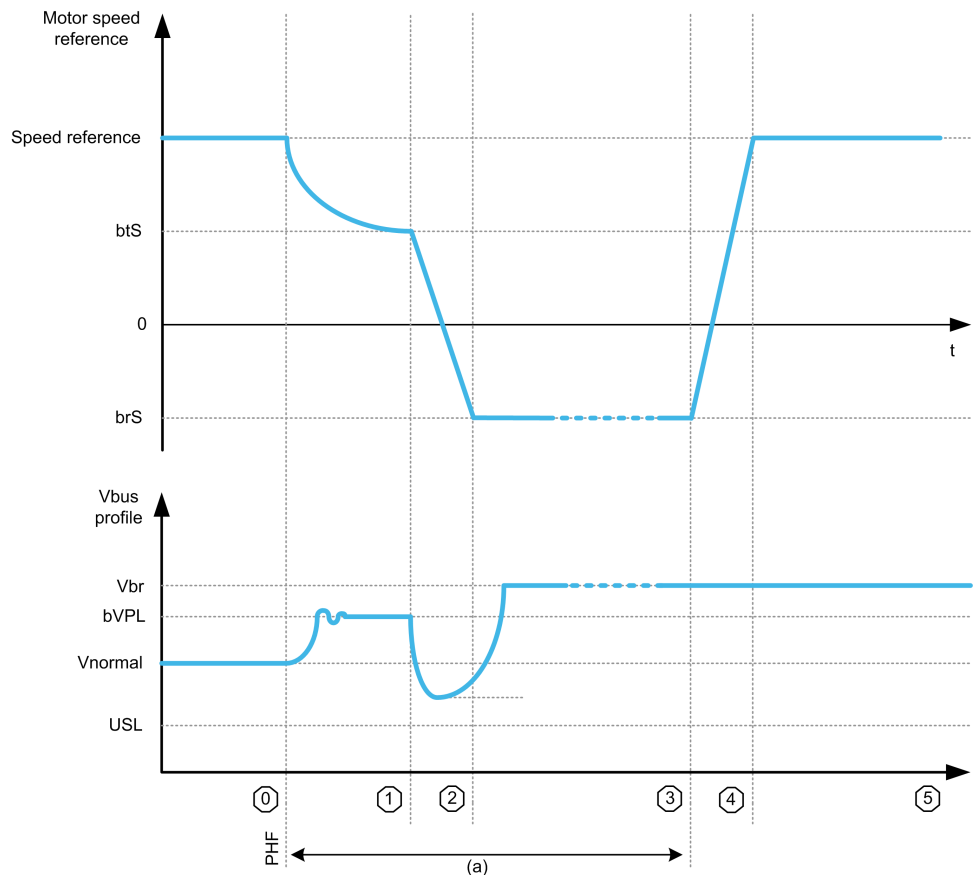

(a) Correspond to backspin function

State description

Sequence	Name	Description
0	Normal operation	Normal operation, drive is running at positive speed.
1	Backspin preparation	Mains phase loss is detected. The load torque resulting from the fluid column weighting on pump is still present. The lower limit of the energy control is set to a configured threshold [Deceleration Vbus Ref] b V P L , resulting to a rising [DC Bus Voltage] V b u 5 to this threshold (the regulation will adapt the torque to store energy).
2	Zero speed crossing	During this phase the following steps happens: <ul style="list-style-type: none"> Deceleration from [Reverse Speed Trigger] b E 5 to [BS DCBus Reg Freq Thd] b r 5, to cross the zero speed area. [DC Bus Voltage] V b u 5 drops due to losses in the system without incoming energy (near zero speed area). Energy gathered during phase 1 is spent to avoid drive shutdown.
3	Backspin speed control	During this phase, the drive regulates the speed according to [BS DCBus Reg Freq Thd] b r 5 . The [DC Bus Voltage] V b u 5 will rise to [Braking level] V b r due to the regenerative load. This energy will be dissipated by the braking resistor.
4	Acceleration	Mains supply is back, drive accelerates to normal operation speed.
5	Normal operation	Normal operation, drive is running at positive speed.

[BS Activation] b 5 C C

Backspin activation.

Mains phase loss PCP backspin will start on mains phase loss

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[Yes]	y e s	Yes
[DI1]...[DI8]	L , 1...L , 8	Digital input DI1...DI8
[DI11]...[DI16]	L , 11... L , 16	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	C d 0 0... C d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] , o configuration
[CD11]... [CD15]	C d 1 1... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , o configuration
[C111]... [C115]	C 1 1 1... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , o configuration
[C211]... [C215]	C 2 1 1... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , o configuration
[C311]... [C315]	C 3 1 1... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration

Setting	Code / Value	Description
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[Deceleration Vbus Ref] b V P L ★

Vbus Reference for deceleration phase.

This parameter cannot be accessed if [BS Activation] b 5 C C is not set to [Not Assigned] n o.

Setting ()	Description
100...1127 V	Setting range Factory setting: according to the drive rating

[BS DCBus Reg Freq Thd] b r 5 ★

Reference frequency during zero speed crossing phase.

This parameter cannot be accessed if [BS Activation] b 5 C C is not set to [Not Assigned] n o.

Setting ()	Description
-599.0...599.0 Hz	Setting range Factory setting: -10.0 Hz

[Reverse Speed Trigger] b E 5 ★

Speed threshold triggering zero speed crossing phase.

This parameter cannot be accessed if [BS Activation] b 5 C C is not set to [Not Assigned] n o.

NOTE: This parameter must be adjusted according to the application. If a too high value is set, the drive can not store enough energy to allow the zero speed crossing sequence.

Setting ()	Description
-599.0...599.0 Hz	Setting range Factory setting: 10.0 Hz

[Reverse Deceleration] b Z C d ★

Deceleration value during zero speed crossing phase.

This parameter cannot be accessed if [BS Activation] b 5 C C is not set to [Not Assigned] n o.

Setting ()	Description
0.0...999.9 s ⁽¹⁾	Setting range Factory setting: 3.0 s
1 Range 0.00 to 99.99 s or 0 to 9999 s according to [Ramp increment] n r.	

[Pump monitoring] - [Pumpcycle monitoring]

[Pumpcycle monitoring] C 5 P - Menu

Access

[Complete settings] → [Pump monitoring] → [Pumpcycle monitoring]

About This Menu

The purpose of this function is to monitor the number of start sequences during a configured time window in order to prevent from an unwanted aging of the system and to detect any abnormal operation.


An internal counter counts the number of pump start sequences. Each time the pump is started, the counter is incremented. It is decreased by one every time window corresponding to one start.

If the counter reaches the maximum number allowed **[PumpCycle MaxStarts]** PCPn, a warning **[Pump Cycle warning]** PCPR is triggered.

If a start command occurs while the detected warning is active, an error **[PumpCycle Start Error]** PCPF is triggered. The application follows the **[PumpCycleError Resp]** PCPB defined behavior.

Restarting the pump is allowed as soon as the counter decreases under the maximum number of starts allowed, if the detected error has been cleared.

The function is based on the sliding time window in which the pump start commands are counted.

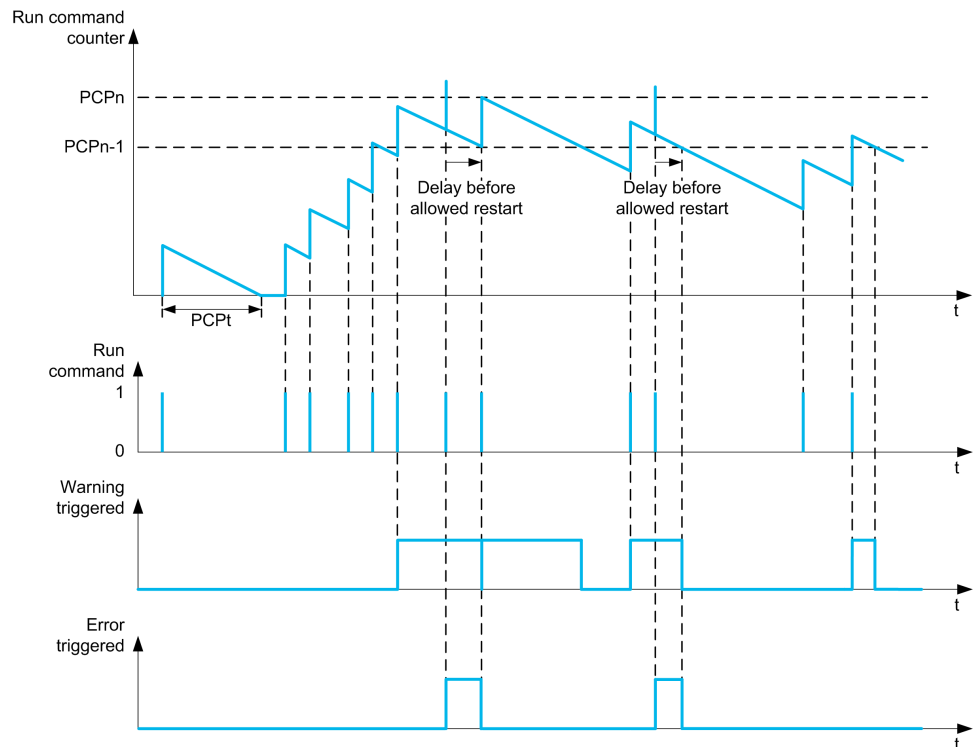

If **[PumpCycle Monitoring]** PCPN is set to **[Mode 1]** narN, the function is activated without power Off time management.

If **[PumpCycle Monitoring]** PCPN is set to **[Mode 2]** r t C, the function is activated with power Off time management. This requires a time clock source such as the Graphic Display Terminal plugged at power On of the drive, or a Time server configured over Ethernet.

[PumpCycle Monitoring] P C P Π

Pumpcycle monitoring mode.

Setting	Code / Value	Description
[No]	n o	Cyclic monitoring disabled Factory setting
[Mode 1]	n o r Π	Cyclic monitoring without power off time management
[Mode 2]	r t c	Cyclic monitoring with power off time management

[PumpCycle MaxStarts] P C P n ★

Maximum number of events to trip.

This parameter can be accessed if **[PumpCycle Monitoring] P C P Π** is not set to **[No] n o**.

Setting ()	Description
1...99	Setting range Factory setting: 6

[PumpCycle Timeframe] P C P t ★

Window time.

This parameter can be accessed if **P C P Π** is not set to **[Inactive] n o**.

Setting ()	Description
0...3,600 min	Setting range Factory setting: 60 min

[PumpCycleError Resp] P C P b ★

Pumpcycle monitoring response to a detected error.

This parameter can be accessed if **P C P Π** is not set to **[Inactive] n o**.

Setting	Code / Value	Description
[Ignore]	n o	Detected error ignored
[Freewheel Stop]	y e s	Freewheel stop
<p>¹ Because, in this case, the detected error does not trigger a stop, it is recommended to assign a relay or logic output to its indication.</p>		

[Pump monitoring] - [Thermal monitoring]

[Thermal monitoring] 5 - Menu

Access

[Complete settings] → [Pump monitoring] → [Thermal monitoring]

About This Menu

Identical to [Thermal monitoring] 5 - Menu , page 166.

[Master/Slave]

MultiDrive Link Mechanism

Introduction

MultiDrive Link function allows direct communication between a drives group. This communication is done through an Ethernet link between each drives. Some drive functions can be configured with the MultiDrive Link.

Topology

MultiDrive Link function is an Ethernet based protocol.

It can be used in following topologies:

- Daisy chain
- Star
- Redundant ring with RSTP

More information about topologies is available in ATV900 Embedded Ethernet Manual.

MultiDrive Link Properties

MultiDrive Link Group:

A MultiDrive Link group can be composed of:

- Master, which is mandatory.
- Up to 10 Slaves.

Only 1 master must be present in a MultiDrive Link group.

Each drive, acting as slave, must have its own slave identification.

Data Exchange Principle:

Each drive of the MultiDrive Link group sends data to all the drives of its group.

These data are sorted in data groups which are specific for each application used in combination.

These data are sent using UDP frames with multicast IP addressing.

Network Configuration

The MultiDrive Link function uses the following network resources:

- IP address: 239.192.152.143
- UDP ports: 6700 and 6732
- Non routed networks

If the MultiDrive Link function is used over an Ethernet network, it is mandatory to take into account these resources for its configuration.

Only one MultiDrive Link group can be used on a same Ethernet network.

Drive Configuration

Each drive used on a MultiDrive Link group must have an IP address.

This IP address can be set manually or assigned by a DHCP server.

MultiDrive Link Communication Monitoring

A permanent monitoring of the communication is performed by each drive of the MultiDrive Link Group to avoid:

- Execution of the same command
- Corruption of data on the MultiDrive Link group

Duplicate Slave ID:

The following table shows how the function reacts in case of duplicate slave ID detection:

If a Duplicate Slave ID is...	Then...
Detected at the same time in the MultiDrive Link group	<p>It is not possible to identify the valid drive.</p> <p>In this case, both drives:</p> <ul style="list-style-type: none"> • are considered invalid • are unavailable on the MultiDrive Link group • don't send data on the MultiDrive Link group
Detected and already one drive with this Slave ID is running	<p>The existing drive is considered valid.</p> <p>The duplicate drive:</p> <ul style="list-style-type: none"> • is considered invalid • is not available on the MultiDrive Link group • don't send data on the MultiDrive Link group <p>NOTE: There is no effect on the application in this case.</p>

Intruder:

A drive is considered as intruder of a MultiDrive Link group if its Slave ID is not consistent with the number of slaves declared on Master configuration.

If the drive Slave ID is not consistent with the configuration then it:

- Considers itself as invalid
- Don't send data on the MultiDrive Link group
- Don't accept data from the MultiDrive Link group

[M/S System Architecture] P 5 P - Menu

Access

[Complete settings] → [Master/Slave] → [M/S System Architecture]


About This Menu

This menu allows the user to configure its Master/Slave architecture.

Master/Slave architecture configuration: allows configuring the communication mode between the Master and Slaves. Which drive is the Master and which ones are the Slaves. It also allows to assign speed and torque reference values.

Master/Slave error response: allows configuring how the Master or Slaves react if an error is detected (Master not present, Slave not ready or communication link error).

The following diagram shows the Master/Slave related parameters depending on their configuration:

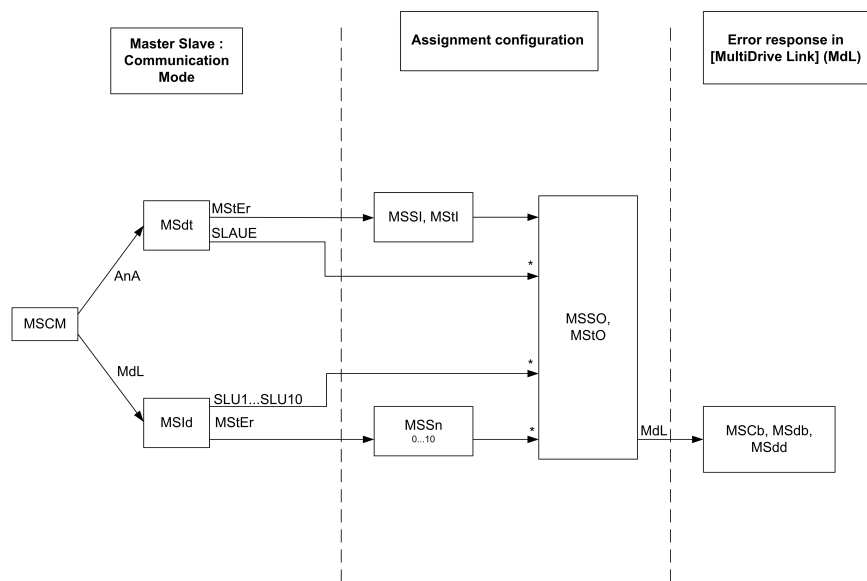

* [Access Level] L P L is set to [Expert] E P r

The following table shows the visibility of the parameters in **[Analog] A n A** or in **[MultiDrive Link] M d L** mode:

[M/S Comm Mode] n 5 C n M/S communication mode	Analog		MultiDrive Link	
	[M/S Device ID] n 5 i d: Master or Slave ID selection	-	-	Master
[M/S Device Role] n 5 d E: Master or Slave selection	Master	Slave	-	-
[M/S Number of Slaves] n 5 S n: M/S number of slaves	-	-	0 to 10	-
[M/S Speed Ref In Assign] n 5 S i: M/S Master speed reference input assignment	-	Analog Input	-	-
[M/S Trq Ref In Assign] n 5 E i: M/S Master torque reference input assignment	-	Analog Input	-	-
[M/S Speed Ref Out Assign] n 5 S o: M/S speed reference output assignment	Analog Output	Analog Output*	Analog Output*	Analog Output*
[M/S Trq Ref Out Assign] n 5 E o: M/S torque reference output assignment	Analog Output	Analog Output*	Analog Output*	Analog Output*
[M/S Local Mode Assign] n 5 d i: M/S local mode input assignment	-	-	Digital Input	Digital Input
[M/S Comm ErrorResp] n 5 C b: M/S Response to communication error	-	-	Error Response	Error Response
[M/S Device ErrorResp] n 5 d b: M/S Response to device error	-	-	Error Response	Error Response
[M/S Device Error Delay] n 5 d d: M/S device error delay	-	-	Error Delay	Error Delay
* Parameters that can be accessed if [Access Level] L R C is set to [Expert] E P r				

NOTE: Master/Slave function can be configured only if:

- [Motor Control Type] C E E is set to [SVC V] V V C or [FVC] F V C or [Sync. mot.] S Y n or [Sync.CL] F S Y.
- [Application Selection] A P P E is set to [All applications] A L L or [Hoisting] H o S E or [Conveyor] C o n V.
- [Forced Run] i n H S is set to [Disabled] n o.
- [BRH b0] b r H 0 is set to [0] 0.

NOTE: When a drive acts as a slave, [Low Speed] L S P and [High Speed] H S P must be configured same as master.

NOTE: The drive must be restart to apply the Master/Slave configuration.

[M/S Comm Mode] 5 5 ★

Master / Slave communication mode.

Activate Master Slave and select communication mode to exchange data between drives involved in the Master Slave architecture.

Setting	Code / Value	Description
[No]	n o	Master/Slave is not configured. Factory setting
[MultiDrive Link]	M d L	Master/Slave is configured using MultiDrive Link
[Analog]	A n A	Master/Slave is configured using Analog I/Os. It is recommended to wire a digital output of the slave assigned to [Operating State Fault] F L E to a digital input of the master set to [Ext Error assign] E E F , with this setting, an error on the slave drive generates a stop to the master. NOTE: If it is required, a digital output of the slaves assigned to [Operating State Fault] F L E can be wired to a digital input of the master sets to [Ext Error assign] E E F in order to stop the master if an error is detected on a slave drive.

[M/S Device ID] 5 5 , d ★

Master / Slave ID selection.

This parameter selects the Drive identification number for the Master Slave application.

This parameter can be accessed if **[M/S Comm Mode] 5 5** is set to **[MultiDrive Link] M d L**

Setting	Code / Value	Description
[Master]	M S E E r	Master Factory setting NOTE: Be sure that autotune has been done before selecting a drive as master. Otherwise, use the [M/S Local Mode Assign] 5 5 , d input to disable temporary the Master/Slave function and perform autotune.
[Slave1]... [Slave10]	S L V 1... S L V 1 0	Slave ID

[M/S Device Role] 5 5 d E ★

Master / Slave selection.

Select if the drive is the master or a slave.

This parameter can be accessed if **[M/S Comm Mode] 5 5** is set to **[Analog] A n A**

Setting	Code / Value	Description
[Master]	M S E E r	The Drive is configured as the Master Drive. (it provides the speed and torque reference value to Slaves). Factory setting
[Slave]	S L A V E	The Drive is configured as a Slave Drive. (it uses the speed and torque reference value from the Master).

[M/S Number of Slaves] 5 5 n ★

Master / Slave number of slaves.

Total number of slaves in the Master Slave architecture. The maximum number of slaves is 10 in multi-drive link architecture. In Analog architecture the maximum number of slaves depends on Analog I/O capabilities.

This parameter can be accessed if:

- [M/S Comm Mode] 5 5 5 is set to [MultiDrive Link] 5 5 5, and
- [M/S Device ID] 5 5 , d is set to [Master] 5 5 5 5 5 .

Setting	Description
0...10	Setting range Factory setting: 0

[M/S Speed Ref In Assign] 5 5 5 , ★

Master / Slave speed reference input assignment.

This parameter can be accessed if:

- [M/S Comm Mode] 5 5 5 is set to [Analog] 5 5 5, and
- [M/S Device Role] 5 5 5 is set to [Slave] 5 5 5 5 5 .

Depending on the selected analog input, [Speed Ref AI1 Config.] 5 5 5 1 - or ... or [Speed Ref AI5 Config.] 5 5 5 5 - menu is displayed. Access to the corresponding menu to configure the analog input according to your needs.

Setting	Code / Value	Description
[No]	no	Analog input is not configured Factory setting
[AI1]...[AI3]	1...3	Analog input AI1...AI3
[AI4]...[AI5]	4...5	Analog input AI4...AI5 if VW3A3203 I/O extension module has been inserted

[Speed Ref AI1 Config.] 5 5 5 1 - to [Speed Ref AI5 Config.] 5 5 5 5 - Menus ★

These menus allow to configure the analog input selected via [M/S Speed Ref In Assign] 5 5 5 .

Example: If [M/S Speed Ref In Assign] 5 5 5 is set to [AI3] 1...3, [Speed Ref AI3 Config.] 5 5 5 3 - menu can be accessed.

For more information on the configuration of the analog input refer to [Input/Output] - [Analog I/O].

[M/S Trq Ref In Assign] 5 5 ,★

Master / Slave torque reference input assignment.

This parameter can be accessed if:

- **[M/S Comm Mode] 5 5** is set to **[Analog] 0 0**
- **[M/S Device Role] 5 5** is set to **[Slave] 5 5**.

Depending on the selected analog input, **[Torque Ref AI1 Config.] 5 5 1 -** or **... or [Torque Ref AI5 Config.] 5 5 5 -** menu is displayed. Access to the corresponding menu to configure the analog input according to your needs.

Setting	Code / Value	Description
[No]	0 0	Analog input is not configured Factory setting
[AI1]...[AI3]	0 1...0 3	Analog input AI1...AI3
[AI4]...[AI5]	0 4...0 5	Analog input AI4...AI5 if VW3A3203 I/O extension module has been inserted

[Torque Ref AI1 Config.] 5 5 1 - to [Torque Ref AI5 Config.] 5 5 5 - Menus★

These menus allow to configure the analog input selected via **[M/S Trq Ref In Assign] 5 5 ,**

Example: If **[M/S Trq Ref In Assign] 5 5 ,** is set to **[AI3] 0 3**, **[Torque Ref AI3 Config.] 5 5 3 -** menu can be accessed.

For more information on the configuration of the analog input refer to **[Input/ Output] - [Analog I/O]**.

[M/S Speed Ref Out Assign] 5 5 5 ★

Master / Slave output speed reference.

Analog output selected for speed reference for the Master Drive.

This parameter can be accessed if:

- **[M/S Comm Mode] 5 5** is set to **[Analog] 0 0**, and
- **[M/S Device Role] 5 5** is set to **[Master] 5 5**.

NOTE: For monitoring purpose, this parameter can also be accessed if **[M/S Comm Mode] 5 5** is configured and **[Access Level] 5 5** is set to **[Expert] 5 5**.

Depending on the selected analog output, **[Speed Ref AQ1 Config.] 5 5 1 -** or **[Speed Ref AQ2 Config.] 5 5 2 -** menu is displayed. Access to the corresponding menu to configure the analog output according to your needs.

Setting	Code / Value	Description
[No]	0 0	Analog output for speed reference is not configured. Factory setting
[AQ1]	0 1	Analog Output for speed reference is configured to 0 1.
[AQ2]	0 2	Analog Output for speed reference is configured to 0 2.
In order to monitor the loss of signal, it is recommended to use a 4-20mA link between the master and the slave and to configure the monitoring function in the [4-20 mA loss] 5 5 - menu.		

NOTE: To allow configuration, outputs default configuration must be unconfigured.

[Speed Ref AQ1 Config.] 5 5 1 - to [Speed Ref AQ2 Config.] 5 5 2 - Menus★

These menus allow to configure the analog input selected via **[M/S Speed Ref Out Assign] 5 5 0**.

Example: If **[M/S Speed Ref Out Assign] 5 5 0** is set to **[AQ1] 0 1**, **[Speed Ref AQ1 Config.] 5 5 1** - menu can be accessed.

For more information on the configuration of the analog input refer to **[Input/Output] - [Analog I/O]**.

[M/S Trq Ref Out Assign] 5 5 0★

Master / Slave output torque reference.

Analog output selected for torque reference for the Master Drive.

This parameter can be accessed if:

- **[M/S Comm Mode] 5 5 0** is set to **[Analog] 0 0**, and
- **[M/S Device Role] 5 5 1** is set to **[Master] 5 5 1**.

NOTE: For monitoring purpose, this parameter can also be accessed if **[M/S Comm Mode] 5 5 0** is configured and **[Access Level] 5 5 1** is set to **[Expert] 5 5 1**.

Depending on the selected analog output, **[Torque Ref AQ1 Config.] 5 5 1** – or **[Torque Ref AQ2 Config.] 5 5 2** – menu is displayed. Access to the corresponding menu to configure the analog output according to your needs.

Setting	Code / Value	Description
[No]	0 0	Analog output for torque reference is not configured. Factory setting
[AQ1]	0 1	Analog Output for speed reference is configured to 0 1.
[AQ2]	0 2	Analog Output for speed reference is configured to 0 2.
In order to monitor the loss of signal, it is recommended to use a 4-20mA link between the master and the slave and to configure the monitoring function in the [4-20 mA loss] 5 5 1 - menu.		

NOTE: To allow configuration, outputs default configuration must be unconfigured.

[Torque Ref AQ1 Config.] 5 5 1 - to [Torque Ref AQ2 Config.] 5 5 2 - Menus★

These menus allow to configure the analog input selected via **[M/S Trq Ref Out Assign] 5 5 0**.

Example: If **[M/S Trq Ref Out Assign] 5 5 0** is set to **[AQ1] 0 1**, **[Torque Ref AQ1 Config.] 5 5 1** - menu can be accessed.

For more information on the configuration of the analog input refer to **[Input/Output] - [Analog I/O]**.

[M/S Local Mode Assign] 5 5 1 ★

Master / Slave local mode assignment.

Digital input used to switch between Master/Slave automatic operation and local control mode (for example in maintenance mode).

This parameter can be accessed if **[M/S Comm Mode] 5 5 1** is set to **[MultiDrive Link] 5 5 1**.

NOTE: It is recommended to use this mode when system is stopped and, if possible, motor mechanically disconnected.

Possible settings: Digital inputs (high level)

Factory setting: **[Not Assigned] 0 0**

[MDL Comm Timeout] 5 5 2 ★

MultiDrive Link communication timeout.

This parameter can be accessed if **[M/S Comm Mode] 5 5 1** is set to **[MultiDrive Link] 5 5 1**.

Setting	Description
0.01...10.00 s	Setting range Factory setting: 0.05 s

[M/S Comm ErrorResp] 5 5 3 ★

Master / Slave response to a communication error.

Define how will react the drive when a multi-drive link communication error is detected.

This parameter can be accessed if **[M/S Comm Mode] 5 5 1** is set to **[MultiDrive Link] 5 5 1**.

Setting	Code / Value	Description
[Freewheel Stop]	5 5 3	Freewheel stop Factory setting
[Per STT]	5 5 4	Stop according to [Type of stop] 5 5 4 parameter but without an error triggered after stop
[Ramp stop]	r 5 5	Stop on ramp
[Fast Stop]	F 5 5	Fast stop

NOTE: If the master is in **[Ramp stop] r 5 5** the slave has to be set to **[Freewheel Stop] 5 5 3**.

[M/S Device ErrorResp] 5 5 b ★

Master / Slave response to device error.

Define how will react the Drive when a device is lost

This parameter can be accessed if [M/S Comm Mode] 5 5 C 5 is set to [MultiDrive Link] 5 5 L .

Setting	Code / Value	Description
[Freewheel Stop]	5 5 5	Freewheel stop Factory setting
[Per STT]	5 5 5	Stop according to [Type of stop] 5 5 5 parameter but without an error triggered after stop
[Spd Maintained]	5 5 5	Speed maintained as long as the detected error persists and the run command has not been removed (1)
[Fallback Speed]	5 5 5	Change to fallback speed, maintained as long as the detected error persists and the run command has not been removed (1)
[Ramp stop]	5 5 5	Stop on ramp
[Fast Stop]	5 5 5	Fast stop

(1) Because, in this case, the detected error does not trigger a stop, it is recommended to assign a relay or logic output to its indication. This setting is only accessible if [M/S Device Role] 5 5 5 is set to [Master] 5 5 5 .

NOTE: If the master is in [Ramp stop] 5 5 5 the slave has to be set to [Freewheel Stop] 5 5 5, [Speed maintained] 5 5 5 and [Fallback Speed] 5 5 5 are not available for slave drives.

[M/S Device Error Delay] 5 5 d d ★

Master / Slave device error delay.

Monitoring delay before the system is ready. If one of the drives in the system is not ready after this delay, a [M/S Device Error] 5 5 d F is triggered.

This parameter can be accessed if [M/S Comm Mode] 5 5 C 5 is set to [MultiDrive Link] 5 5 L .

Setting	Code / Value	Description
[No]	5 5	Wait infinite time. Factory setting
0...60 s		Setting range

[Fallback Speed] 5 5 5 ★

Fallback speed.

This parameter can be accessed if the error response parameter is set to [Fallback Speed] 5 5 5 .

Setting	Description
0.0...599.0 Hz	Setting range Factory setting: 0.0 Hz

[M/S Control] 5 5 - Menu

Access

[Complete settings] → [Master/Slave] → [M/S Control]

About This Menu

This menu is used to configure the type of control used in Master/Slave.

This function can be accessed if [M/S Comm Mode] 5 5 5 is not set to [No] 0.

Master/Slave Mechanical Coupling

The Master / Slave mechanical coupling type allow selecting two types of coupling:

- **[Rigid] 5 5 5** coupling means that the rotor speed of each motor is forced to be the same by the application. This choice is typically used for coupling such as gearbox, toothed belt and when the elasticity is closed to '0'.
- In the **[Elastic] 5 5 5** coupling, the motors rotors are not the same, due to elasticity or slip in the coupling. This type of coupling is use for example for overhead conveyor (using a tension system), long belt.

Selecting the **[Elastic] 5 5 5** coupling give access to same parameters a **[Rigid] 5 5 5** coupling plus:

- **[M/S Filters] 5 5 5**
- **[Load Sharing M/S] 5 5 5**
- **[M/S Out Torque Ref Select] 5 5 5**

Configuring parameters in the **[Elastic] 5 5 5** coupling and then selecting **[Rigid] 5 5 5** coupling will disable the **[Elastic] 5 5 5** configured parameters. Conversely, switching from **[Rigid] 5 5 5** coupling to **[Elastic] 5 5 5** coupling has not effect on the **[Rigid] 5 5 5** coupling parameters.

Master/Slave Control Type

The Master / Slave control type allow selecting which type of control will be applied on slave and direction of slave related to direction of Master:

- **[Speed Direct] 5 5 5**: Slave follows speed reference of Master in same direction.
- **[Speed Reverse] 5 5 5**: Slave follows speed reference of Master in reverse direction. Typically for face to face motors.
- **[Torque Direct] 5 5 5**: Slave follows torque reference of Master in same direction.
- **[Torque Reverse] 5 5 5**: Slave follows torque reference of Master in reverse direction. Typically for face to face motors.
- **[Torque Custom] 5 5 5**: Slave follows torque reference of Master around speed reference. Direction of speed can be adjusted with **[Speed Ref Direction] 5 5 5** and direction of torque with **[Torque ref. sign] 5 5 5**.

Allows to apply a torque ratio or a torque ramp in case of application needs.

The following table shows the possible cases between **[Speed Ref Direction] 5 5 5** and **[Torque ref. sign] 5 5 5** when **[M/S Control Type] 5 5 5** is set to **[Torque Custom] 5 5 5**:

[Speed Ref Direction] 5 5 d	[Torque ref. sign] 5 5 d	[M/S Control Type] 1 5 5 5
Inactive	Inactive	Slave runs in same direction as Master (speed and torque)
Inactive	Active	Slave runs in same direction as Master but apply opposite torque
Active	Inactive	Slave runs in reverse direction of Master and applies opposite torque
Active	Active	Slave runs in reverse direction of Master for speed and torque.

Stop Configuration

The slaves have different stop behavior depending of their configuration and master stop type.

When the master stops in freewheel:

- If [M/S Control Type] 1 5 5 5 is set to [Speed Direct] 5 P d d or [Speed Reverse] 5 P d r, the slaves stop following its [Type of stop] 5 5 5 configuration.
- If [M/S Control Type] 1 5 5 5 is set to [Torque Direct] 5 r 9 d or [Torque Reverse] 5 r 9 r or [Torque Custom] 5 r 9 c, the slaves stop following [Torque control stop] 5 5 5 or [Type of stop] 5 5 5, depending of the priority between them.

Example: If [Torque control stop] 5 5 5 is set to [Freewheel Stop] n 5 5 and [Type of stop] 5 5 5 is set to [On Ramp] r 1 P, the slaves will stop in freewheel.

When the master stops on ramp:

- If [M/S Control Type] 1 5 5 5 is set to [Speed Direct] 5 P d d or [Speed Reverse] 5 P d r, the slaves stop following the master ramp in speed control.
- If [M/S Control Type] 1 5 5 5 is set to [Torque Direct] 5 r 9 d or [Torque Reverse] 5 r 9 r or [Torque Custom] 5 r 9 c, the slaves stop following the master ramp in torque control.

Brake management

Brake sequence is managed only by the Master.

The Master manages its brake according to its brake sequence, in [MultiDrive Link] 1 d L or [Analog] A n A. Optionally, the Master can manage the brakes of the slaves by the same brake command. The release and engage times of brakes in the application have to be the same.

Brake sequence is managed by the Master and Slaves.

In [MultiDrive Link] 1 d L brakes can be managed on each Drive. The synchronization of the release and engage times are managed by the Master through the [MultiDrive Link] 1 d L.

[M/S Coupling Type] 1 5 1 5

Master / Slave mechanical coupling type.

Setting	Code / Value	Description
[Rigid]	r i G i d	Rigid coupling Factory setting
[Elastic]	E L A 5 5	Elastic coupling

[M/S Control Type] 5 5 5 ★

Master / Slave control type.

This parameter can be accessed if **[M/S Device Role] 5 5 5** is set to **[Slave] 5 5 5 5** or **[M/S Device ID] 5 5 5** is set to **[Slave 1]** to **[Slave 10]**.

Setting	Code / Value	Description
[Torque Direct]	5 5 5 5	Torque direct control Factory setting
[Torque Reverse]	5 5 5 5	Torque reverse control
[Torque Custom]	5 5 5 5	Torque custom control Allow to apply a torque ratio a torque ramp in case of different motors
[Speed Direct]	5 5 5 5	Speed direct control Is not a available if [M/S Coupling Type] 5 5 5 5 is set to [Rigid] 5 5 5 5
[Speed Reverse]	5 5 5 5	Speed reverse control Is not a available if [M/S Coupling Type] 5 5 5 5 is set to [Rigid] 5 5 5 5

[M/S Torque Control] 7 5 9 - Menu

Access

[Complete settings] → [Master/Slave] → [M/S Control] → [M/S Torque Control]

About This Menu

This menu can be accessed if:

- [M/S Device Role] 7 5 1 is set to [Slave] 5 L R V E or [M/S Device ID] 7 5 2 is set to [Slave1] to [Slave10], and
- [M/S Control Type] 7 5 3 is set to:
 - [Torque Direct] 5 5 1, or
 - [Torque Reverse] 5 5 2, or
 - [Torque Custom] 5 5 3.

[Speed Ref Direction] 5 5 4★

Speed reference direction.

Assignment for sign inversion of reference speed value coming from the master.

This parameter can be accessed if:

- [M/S Comm Mode] 7 5 4 is not set to [No] n o, and
- [M/S Control Type] 7 5 3 is set to [Torque Custom] 5 5 3.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[Yes]	y e s	Yes
[DI1]...[DI8]	L 1...L 8	Digital input DI1...DI8
[DI11]...[DI16]	L 11... L 16	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	C 00... C 10	Virtual digital input CMD.0...CMD.10 in [I/O profile] i o configuration
[CD11]... [CD15]	C 11... C 15	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 101... C 110	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] i o configuration
[C111]... [C115]	C 111... C 115	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 201... C 210	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] i o configuration
[C211]... [C215]	C 211... C 215	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 301... C 310	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] i o configuration
[C311]... [C315]	C 311... C 315	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 501... C 510	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] i o configuration
[C511]... [C515]	C 511... C 515	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[Torque ref. sign] 5 5 d★

Assignment for the inversion of the sign of the reference for the torque regulation function.

This parameter can be accessed if:

- **[M/S Comm Mode] 5 5 C 5** is not set to **[No] n o**, and
- **[M/S Control Type] 5 5 C 5** is set to **[Torque Custom] 5 r 9 c**.

Identical to **[Speed Ref Direction] 5 5 d**.

[Torque ratio] 5 r 5 ★

Torque ratio.

This parameter is used in case of using a slave motor with a different nominal torque than the master motor, or to unbalance torque between master and slave.

This parameter applies a factor in % on the torque reference received from the master.

This parameter can be accessed if:

- **[M/S Comm Mode] 5 5 C 5** is not set to **[No] n o**, and
- **[M/S Control Type] 5 5 C 5** is set to **[Torque Custom] 5 r 9 c**.

Setting ()	Description
0.0...1000.0%	Coefficient applied to [Torque ref. channel] 5 r 1 or [Torque ref. 2 channel] 5 r 2 Factory setting: 100.0%

[Torque Ref Offset] 5 9 o P★

Torques reference offset.

This parameter is used to scale the torque reference value.

This parameter applies an offset in % on the torque reference.

This parameter can be accessed if:

- **[M/S Comm Mode] 5 5 C 5** is not set to **[No] n o**, and
- **[M/S Control Type] 5 5 C 5** is set to **[Torque Custom] 5 r 9 c**.

Setting ()	Description
-1000.0...1000.0%	Setting range Factory setting: 0.0%

[Torque ramp time] 5 r P★

Torque ramp time.

This parameter can be accessed if:

- **[M/S Comm Mode] 5 5 C 5** is not set to **[No] n o**, and
- **[M/S Control Type] 5 5 C 5** is set to **[Torque Custom] 5 r 9 c**.

Setting ()	Description
0.0...99.99 s	Rise and fall time for a variation of 100% of the rated torque Factory setting: 3.00 s

[Torque control stop] 5 5 5

Torque control stop type.

Setting	Code / Value	Description
[Speed]	5 P d	Speed regulation stop, in accordance with the type of stop configuration
[Freewheel Stop]	n 5 5	Factory setting: Freewheel stop
[Spin]	5 P n	Zero torque stop, but maintaining the flux in the motor (only in closed loop)

[Spin time] 5 P 5 ★

Torque regulation: spin time.

Spin time following stop in order to remain ready to restart quickly.

This parameter specifies the time the motor is maintained fluxed after the zero speed is attained.

This parameter can be accessed if [Torque control stop] 5 5 5 is set to [Spin] 5 P n.

Setting ()	Description
0.0...3600.0 s	Setting range Factory setting: 1.0 s

[Positive deadband] d b P

Torque regulation positive dead band.

The torque control is effective in an area defined by [Positive deadband] d b P and [Negative deadband] d b n around the speed reference value.

Outside of this area, the drive switch automatically in speed control to make speed returns inside the torque control area.

Value added algebraically to the speed reference.

Example for [Positive deadband] d b P = 10:

- If reference = + 50 Hz: + 50 + 10 = 60 Hz
- If reference = - 50 Hz: - 50 + 10 = - 40 Hz

Setting ()	Description
0.0...2 x [Max Frequency] 5 F r	Setting range Factory setting: 10.0 Hz

[Negative deadband] d b n

Torque regulation negative dead band.

The torque control is effective in an area defined by [Positive deadband] d b P and [Negative deadband] d b n around the speed reference value.

Outside of this area, the drive switch automatically in speed control to make speed returns inside the torque control area.

Value subtracted algebraically from the speed reference.

Example for [Negative deadband] d b n = 10:

- If reference = + 50 Hz: + 50 - 10 = 40 Hz
- If reference = - 50 Hz: - 50 - 10 = - 60 Hz

Setting ()	Description
0.0...2 x [Max Frequency] L F r	Setting range Factory setting: 10.0 Hz

[Torque ctrl time out] r L o

Torque control time-out.

Time following automatic exit of torque control mode in the event of an error or a warning has been triggered.

Setting	Description
0.0...999.9 s	Setting range Factory setting: 60 s

[Torque Ctrl ErrorResp] L o b

Response to torque control error.

Response of drive once time [Torque ctrl time out] r L o has elapsed.

Setting	Code / Value	Description
[Warning]	R L r n	Warning is triggered on timeout Factory setting
[Error]	F L L	An error is triggered with freewheel stop

[Low Torque] L L q

Low torque threshold limit.

Torque applied on slave will be limited between [Low Torque] L L q and [High Torque] H L q (expressed in % of nominal torque).

This parameter cannot be higher than [High Torque] H L q.

Setting ()	Description
-300.0...[High Torque] H L q	Setting range Factory setting: -300.0%

[High Torque] H L q

High torque threshold limit.

This parameter cannot be lower than [Low Torque] L L q.

Setting ()	Description
[Low Torque] L L q...300.0%	Setting range Factory setting: 300.0%

[M/S Control] 7 5 5 - Menu**Access**

[Complete settings] → [Master/Slave] → [M/S Control]

About This Menu

This menu can be accessed if [M/S Comm Mode] 7 5 5 7 is not set to [No] n o .

[Torque Filter] 5 r F ★

This function provides a filter on the torque reference for Slaves Drives to deal with dynamic control constraints (such as a communication delays). Select if the filtering on the input torque reference is present or not.

This parameter can be accessed if:

- [M/S Device Role] 7 5 d 5 is set to [Slave] 5 L R V E or [M/S Device ID] 7 5 , d is set to [Slave1] to [Slave10], and
- [M/S Control Type] 7 5 5 5 is set to:
 - [Torque Direct] 5 r 9 d, or
 - [Torque Reverse] 5 r 9 r, or
 - [Torque Custom] 5 r 9 5 .

Setting	Code / Value	Description
[No]	n o	Input torque reference filtering is disabled Factory setting
[Yes]	y e s	Input torque reference filtering is enabled

[Torque Filter Bandwidth] 5 r W ★

Defines the bandwidth of the filter in Hertz.

This parameter can be accessed if:

- [Torque Filter] 5 r F is set to [Yes] y e s, and
- [M/S Control Type] 7 5 5 5 is set to:
 - [Torque Direct] 5 r 9 d, or
 - [Torque Reverse] 5 r 9 r, or
 - [Torque Custom] 5 r 9 5 .

Setting	Description
1...1000 Hz	Setting range Factory setting: 20 Hz.

[M/S Filters] *Π S F - Menu*

Access


[Complete settings] → [Master/Slave] → [M/S Control] → [M/S Filters]

About This Menu

This menu can be accessed if [M/S Coupling Type] *Π S Π C* is set to [Elastic] *E L R S E* and [Access Level] *L R C* is set to [Expert] *E P r*.

Master control speed and Slave is torque controlled. This feature allows configuring the transfer function between Master and Slave according to the dynamic of the coupling (elastic).

The advanced filter can be set independently on Master or/and Slaves to compensate the elasticity of the coupling:

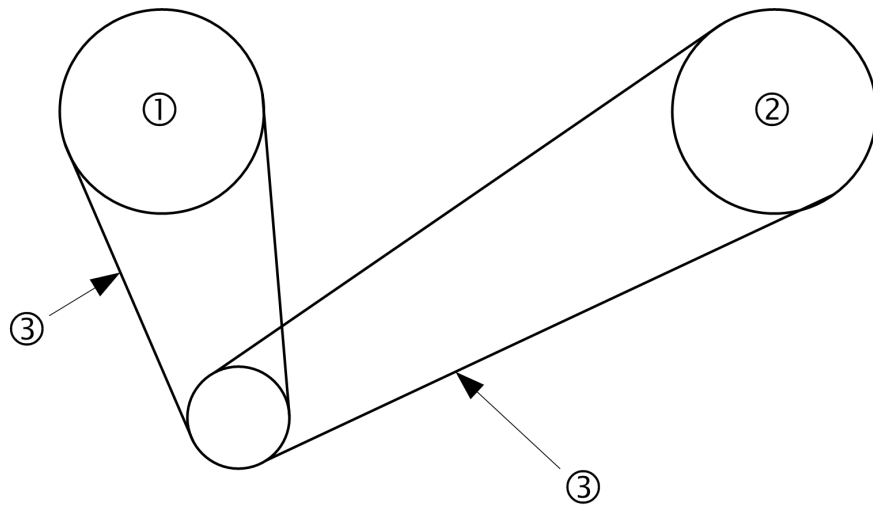

1 Master

2 Slave

3 Advanced filter can be set for this elastic coupling

[M/S Advanced Filter] *Π S F E*


Master / Slave advanced filter activation.

Setting	Code / Value	Description
[No]	<i>n o</i>	Advanced filtering disable Factory setting
[Yes]	<i>y e s</i>	Advanced filtering enable

[M/S Advanced Filter Freq] *Π S F F* ★

Defines the frequency of the filter in Hz.

Influence of the [M/S Advanced Filter Freq] *Π S F F* Parameter

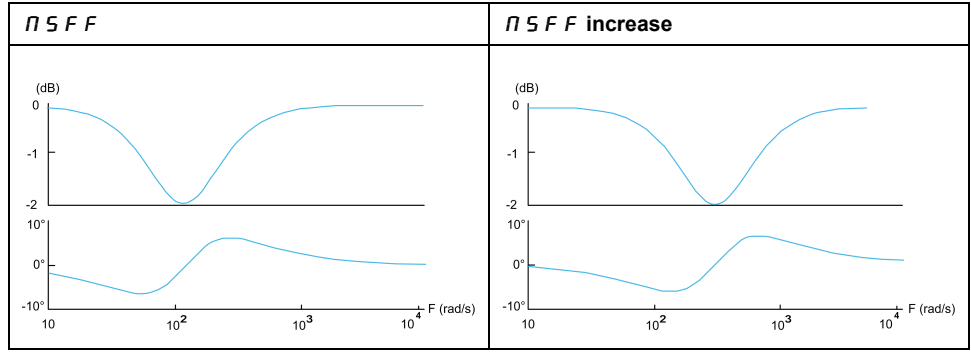


This parameter can be accessed if [M/S Advanced Filter] π 5 F E is not set to [No] n o .

Setting	Description
10.0...150 Hz	Setting range Factory setting: 15.0 Hz

[M/S Advanced Filter Bdw] π 5 F b ★

Defines the bandwidth. Means the width of the stop-band of the filter in % of the filter frequency.

Influence of the [M/S Advanced Filter Bdw] π 5 F b Parameter

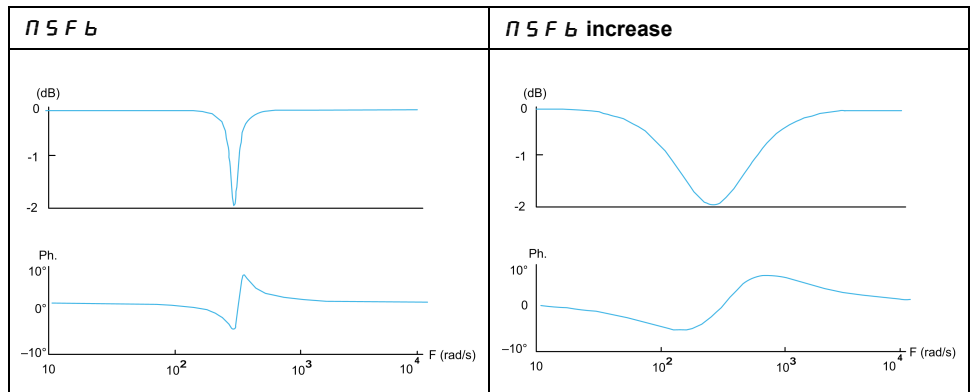


This parameter can be accessed if [M/S Advanced Filter] π 5 F E is not set to [No] n o .

Setting	Description
10...400%	Setting range Factory setting: 100%

[M/S Advanced Filter Depth] π 5 F d ★

Defines the attenuation level at the filter frequency.

Influence of the [M/S Advanced Filter Depth] π 5 F d Parameter

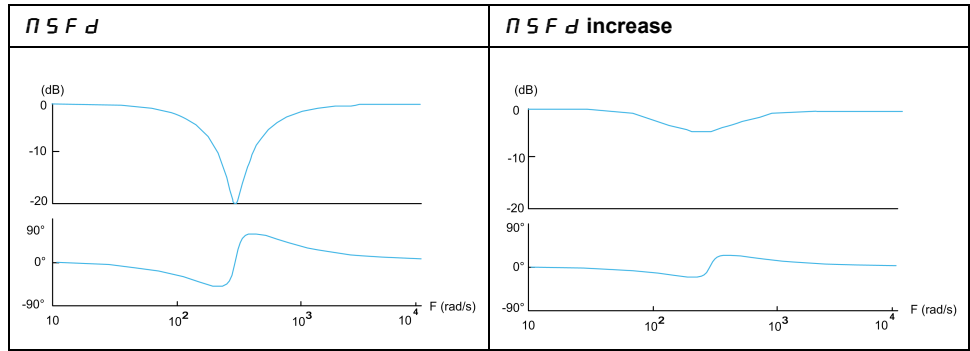


This parameter can be accessed if [M/S Advanced Filter] $\pi S F E$ is not set to [No] πO .

Setting	Description
0...99%	Setting range Factory setting: 10%

[M/S Advanced Filter Gain] $\pi S F G$ ★

Defines the gain of the filter. 100% means a unitary gain.

Influence of the [M/S Advanced Filter Gain] $\pi S F G$ Parameter

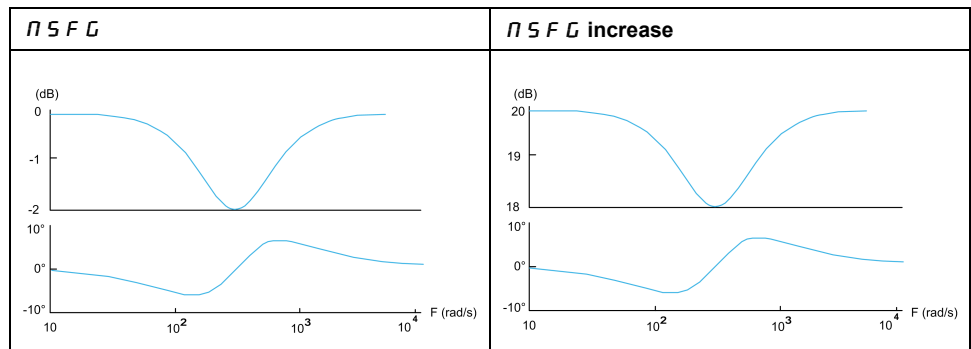


This parameter can be accessed if [M/S Advanced Filter] $\pi S F E$ is not set to [No] πO .

Setting	Description
0...1000%	Setting range Factory setting: 100%

[M/S Advanced Filter Coeff] $\pi S F C$ ★

Master / Slave advanced filter coefficient.

Influence of the [M/S Advanced Filter Coeff] $\pi S F C$ Parameter

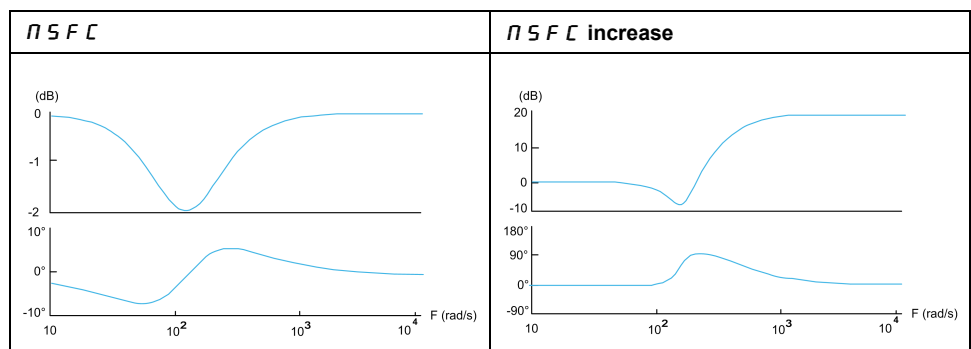

This parameter can be accessed if [M/S Advanced Filter] 7.5.F.E is not set to [No] n.o.

Setting	Description
0...1000%	Setting range Factory setting: 100%

[Load Sharing M/S] $\mathcal{N} \ 5 \ \mathcal{L} \ -$ Menu

Access

[Complete settings] \rightarrow [Master/Slave] \rightarrow [M/S Control] \rightarrow [Load Sharing M/S]

About This Menu

This menu can be accessed if:


- [M/S Coupling Type] $\mathcal{N} \ 5 \ \mathcal{N} \ \mathcal{L}$ is set to [Elastic] $\mathcal{E} \ \mathcal{L} \ \mathcal{A} \ \mathcal{S} \ \mathcal{L}$, and
- [M/S Device Role] $\mathcal{N} \ 5 \ \mathcal{d} \ \mathcal{L}$ or [M/S Device ID] $\mathcal{N} \ 5 \ , \ \mathcal{d}$ is set to [Master] $\mathcal{N} \ 5 \ \mathcal{L} \ \mathcal{E} \ \mathcal{r}$.

Or if:



- [M/S Device Role] $\mathcal{N} \ 5 \ \mathcal{d} \ \mathcal{L}$ is set to [Slave] $\mathcal{S} \ \mathcal{L} \ \mathcal{A} \ \mathcal{V} \ \mathcal{E}$ or [M/S Device ID] $\mathcal{N} \ 5 \ , \ \mathcal{d}$ is set to [Slave1] to [Slave10], and
- [M/S Control Type] $\mathcal{N} \ 5 \ \mathcal{L} \ \mathcal{L}$ is set to:
 - [Speed Direct] $\mathcal{S} \ \mathcal{P} \ \mathcal{d} \ \mathcal{d}$, or
 - [Speed Reverse] $\mathcal{S} \ \mathcal{P} \ \mathcal{d} \ \mathcal{r}$.

Load sharing, Parameters That can be Accessed at Expert Level

Principle:

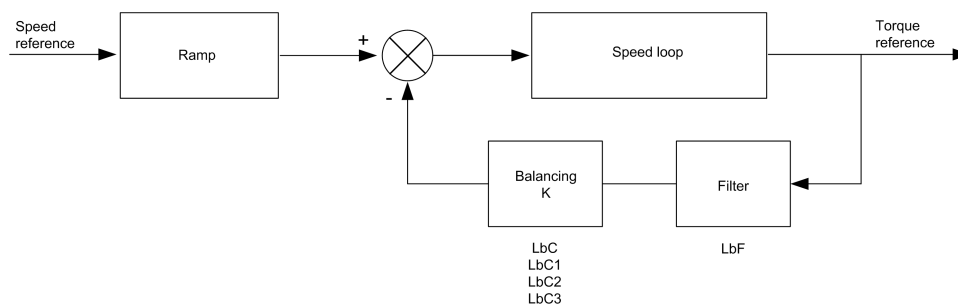

The load sharing factor K is determined by the torque and speed, with two factors K1 and K2 ($K = K1 \times K2$).

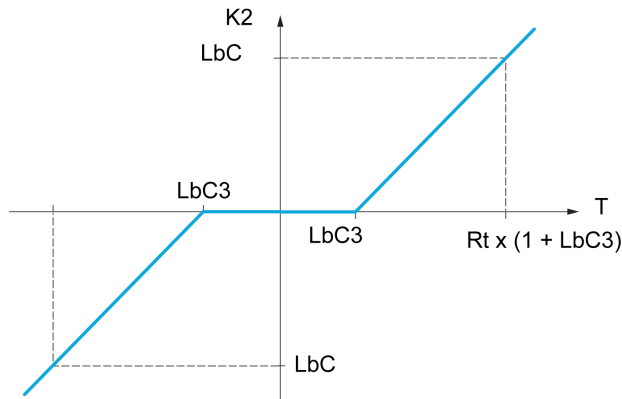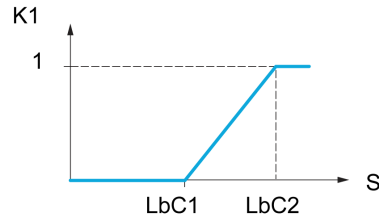

S Speed

T Torque

Rt Rated torque

[Load sharing] L b A

Load balancing configuration.


When 2 motors are connected mechanically and therefore at the same speed, and each is controlled by a drive, this function can be used to improve torque distribution between the two motors. To do this, it varies the speed based on the torque.

Setting	Code / Value	Description
[No]	n o	Function inactive Factory setting
[Yes]	y e s	Function active

[Load correction] L b C ★

Nominal speed load balance correction.

This parameter can be accessed if **[Load sharing] L b A** is not set to **[No] n o**.

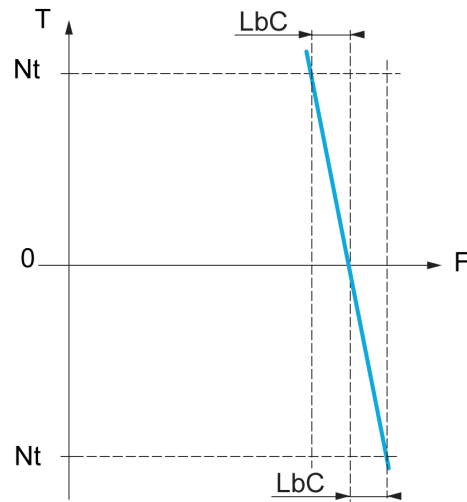

T Torque

Nt Nominal torque

F Frequency

Setting	Description
0.0...1000.0 Hz	Setting range Factory setting: 0.0 Hz

[Correction min spd] L b C 1★

Low Speed for torque decreasing function speed reference.

Minimum speed for load correction in Hz. Below this threshold, no corrections are made. Used to prevent correction at very low speed if this would hamper rotation of the motor.

This parameter can be accessed if:

- **[Access Level] L A C** is set to **[Expert] E P r**, and
- **[Load sharing] L b R** is not set to **[No] n o**.

Setting	Description
0.0...999.9 Hz	Setting range Factory setting: 0.0 Hz

[Correction max spd] L b C 2★

High speed for torque decreasing function speed reference.

Speed threshold in Hz above which maximum load correction is applied.

This parameter can be accessed if:

- **[Access Level] L A C** is set to **[Expert] E P r**, and
- **[Load sharing] L b R** is not set to **[No] n o**.

Setting	Description
L b C 1...1000.0 Hz	Setting range Factory setting: 0.0 Hz

[Torque offset] L b C 3★

Torque offset for torque correction.

Minimum torque for load correction as a % of the rated torque. Below this threshold, no corrections are made. Used to avoid torque instabilities when the torque direction is not constant.

This parameter can be accessed if:

- **[Access Level] L R C** is set to **[Expert] E P r**, and
- **[Load sharing] L b R** is not set to **[No] n o**.

Setting	Description
0...300%	Setting range Factory setting: 0%

[Sharing filter] L b F ★

Time constant filter.

This parameter can be accessed if:

- **[Access Level] L R C** is set to **[Expert] E P r**, and
- **[Load sharing] L b R** is not set to **[No] n o**.

Setting	Description
100...20,000 ms	Setting range Factory setting: 100 ms

[M/S Balance Trq Ref Sel] n 5 , b ★

Master / Slave load balancing torque reference selection.

This parameter can be accessed if **[Load sharing] L b R** is not set to **[No] n o**.

If **[M/S Advanced Filter] n 5 F E** is set to **[No] n o**, this parameter have no effect.

Setting	Code / Value	Description
[Not Applied]	n o	Not applied
[Before Advanced Filter]	b F , L E	Before advanced filter Factory setting
[After Advanced Filter]	R F , L E	After filter

[M/S Control] 5 5 - Menu


Access

[Complete settings] → [Master/Slave] → [M/S Control]

About This Menu

This function can be accessed if [M/S Comm Mode] 5 5 5 is not set to [No] 0.

The following diagram shows the influence of reference entries and selections in the Master/Slave structure:

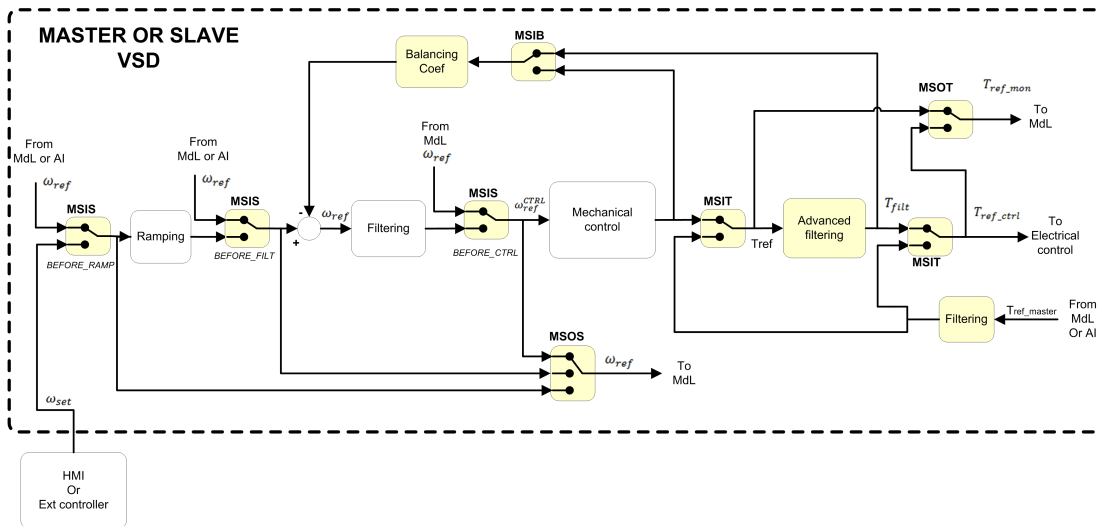

[M/S Torque Ref Entry] 5 5 5 ★

Master / Slave torque reference entry in control chain.

This parameter can be accessed if:

- [M/S Advanced Filter] 5 5 5 is not set to [No] 0.
- [M/S Coupling Type] 5 5 5 is set to [Elastic] 5 5 5, and
- [M/S Device Role] 5 5 5 is set to [Slave] 5 5 5 or [M/S Device ID] 5 5 5 is set to [Slave 1] to [Slave 10].

Setting	Code / Value	Description
[Not Applied]	0	Not applied
[Before Advanced Filter]	5 5 5	Before advanced filter Factory setting
[After Advanced Filter]	5 5 5	After advanced filter

[M/S Out Torque Ref Select] 5 5 5 ★

Master / Slave output torque reference selection.

Select the input routing of balancing feature.

This parameter can be accessed if:

- [M/S Coupling Type] 5 5 5 is set to [Elastic] 5 5 5, and
- [M/S Advanced Filter] 5 5 5 is not set to [No] 0.

Identical to [M/S Torque Ref Entry] 5 5 5.

[M/S Speed Ref Entry] 5 5 ★

Master / Slave speed reference entry in control chain.

Select the routing of the new speed reference input.

This parameter can be accessed if [M/S Device Role] 5 5 is set to [Slave] 5 L A V E or [M/S Device ID] 5 5 is set to [Slave 1] to [Slave 10].

Setting	Code / Value	Description
[Not Applied]	n o	Not applied
[Before Ramp]	b r P P	The input speed reference is before the ramp input in the control scheme Factory setting
[After Ramp]	A r P P	The input speed reference is after the ramp input in the control scheme
[Before Control Loop]	b C L r L	The input speed reference is before the control input in the control scheme

[M/S Out Speed Ref Select] 5 5

Master / Slave output speed reference selection.

Identical to [M/S Speed Ref Entry] 5 5.

[Backlash compensation]

[Backlash compensation] b 5 9 7 - Menu

Access


[Complete settings] → [Backlash compensation]

About This Menu

This menu presents:

- The backlash compensation sequence.
- The backlash compensation sequence dedicated to the Master/Slave on rigid coupling.

The purpose of this menu is to provide a dedicated sequence to compensate backlashes in order to reduce the wear gears by limiting the torque at the moment of the impact:

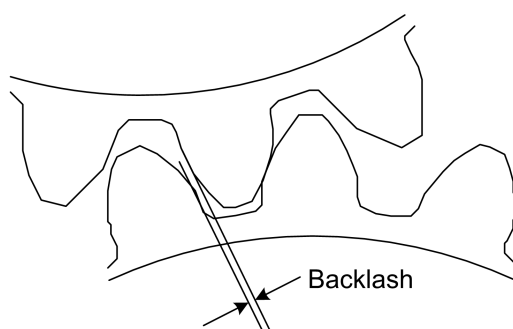

This menu is dedicated to non driving loads (horizontal movement) without brakes. It is available either in torque control or speed control.

Backlash Sequence

The purpose of the backlash sequence is to regulate speed startup under a torque limitation allowing motion until the backlash is fully compensated. The load torque will become greater than the torque limitation and stop the movement. Then the run can proceed starting from applied limitation torque.

There are three different use cases:


- Backlash sequence at startup only (UC-1)
- Stop at direction change (UC-2)
- Regulate 0Hz speed at direction change (UC-3)

Those use cases depends on the control mode:

	Torque control	Speed control
Open loop	(UC-1) (UC-2)	(UC-1) (UC-2)
Closed loop	(UC-1) (UC-3)	(UC-1) (UC-3)


Backlash sequence at startup only (UC-1)

The backlash sequence is configured only during starts of the drive and become transparent once it is in run:

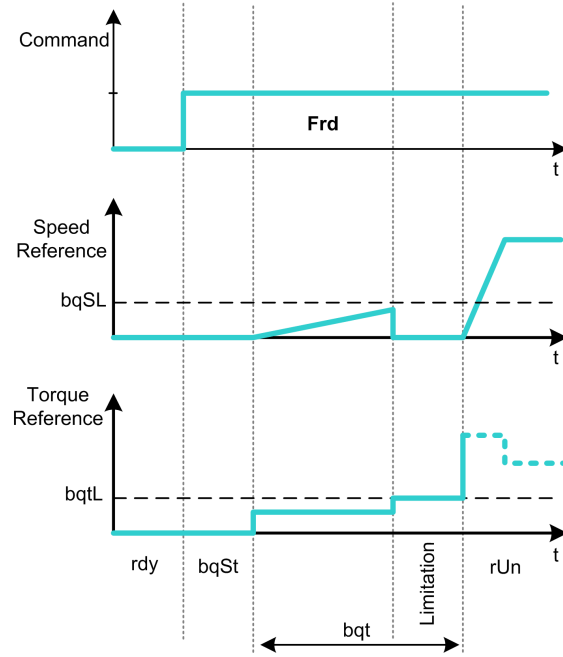


Stop at direction change (UC-2)

The drive stops when the direction of the movement changes and the drive will start if the run order is still present. Then do a backlash sequence according to its new direction:

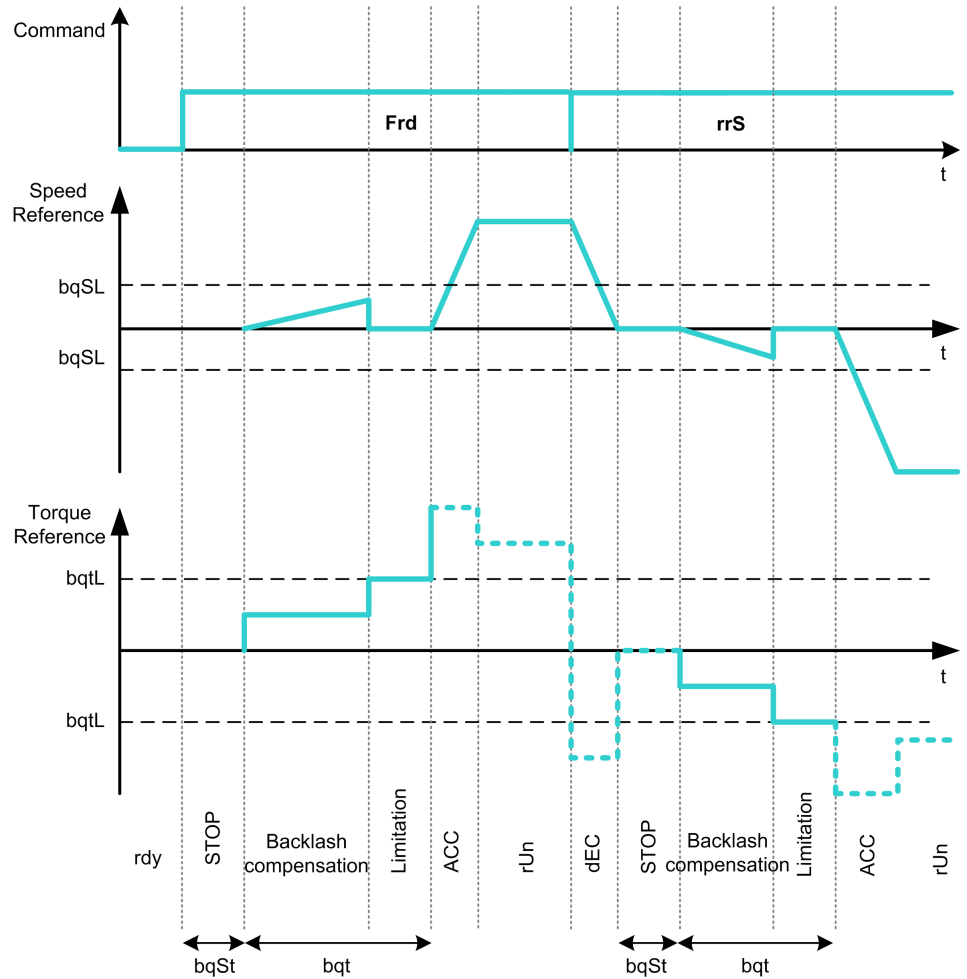

Regulate 0Hz speed at direction change (UC-3)

On a changing direction the drive will regulate the 0Hz speed and proceed to the backlash sequence according to the new direction of movement to come back in run at the end of the sequence:

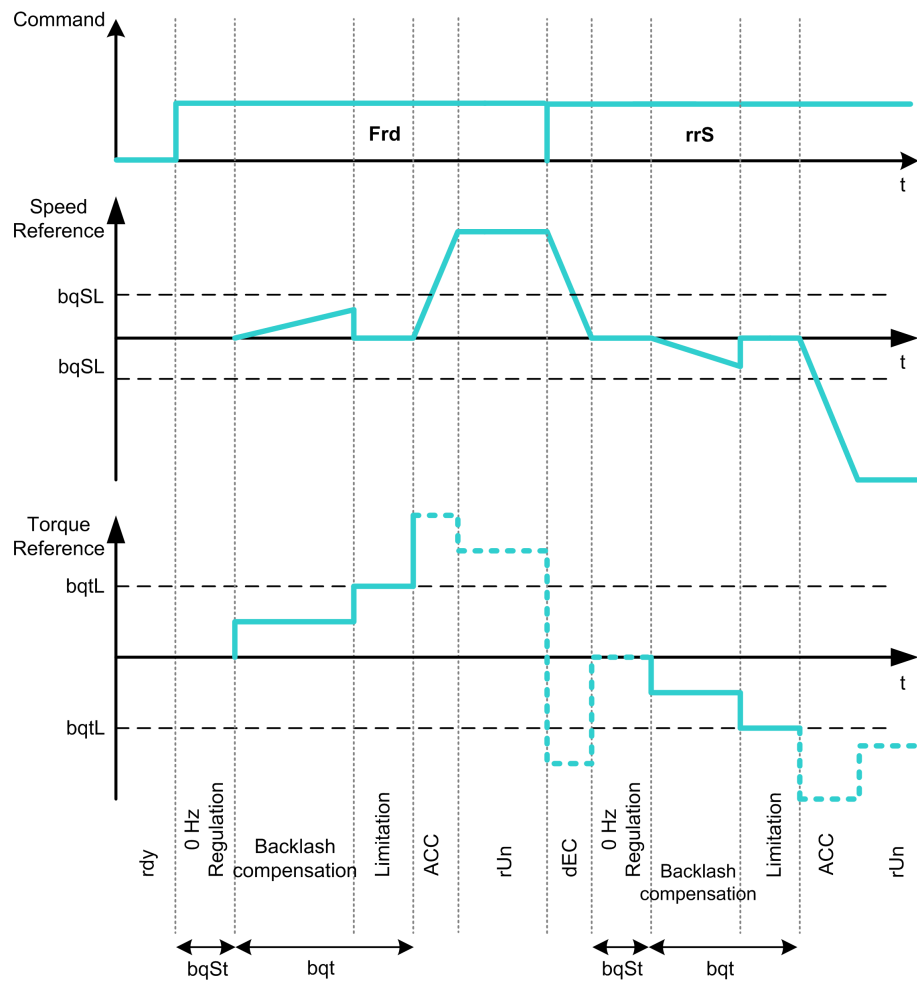


Backlash Sequence Dedicated to the Master/Slave on Rigid Coupling

The purpose of this menu is to provide backlash compensation dedicated to Master/Slave architectures in a rigid coupling context. The goal is to limit the impact torque on toothed wheels in order to reduce the wear.

There are four different Multiple Drive backlash compensation sequences strategies:


- Direct sequential slave backlash compensation (1)
- Direct simultaneous slave backlash compensation (2)
- Controlled sequential slave backlash compensation (3)
- Controlled simultaneous slave backlash compensation (4)

The following diagram shows how to configure the different compensation sequences strategies:

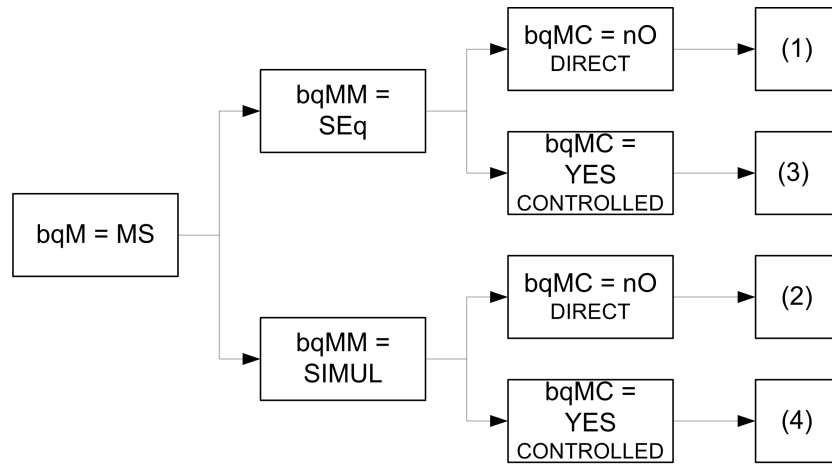

Direct sequential slave backlash compensation (1)


Each Slave will compensate its backlash by switching in speed control. Doing its sequence one at the time assuming that the settings allow compensating the backlash angle in the configured time. At the end, the master launches its own backlash sequence, meanwhile the Master stays in stop (open loop) or regulating 0Hz speed (closed loop):

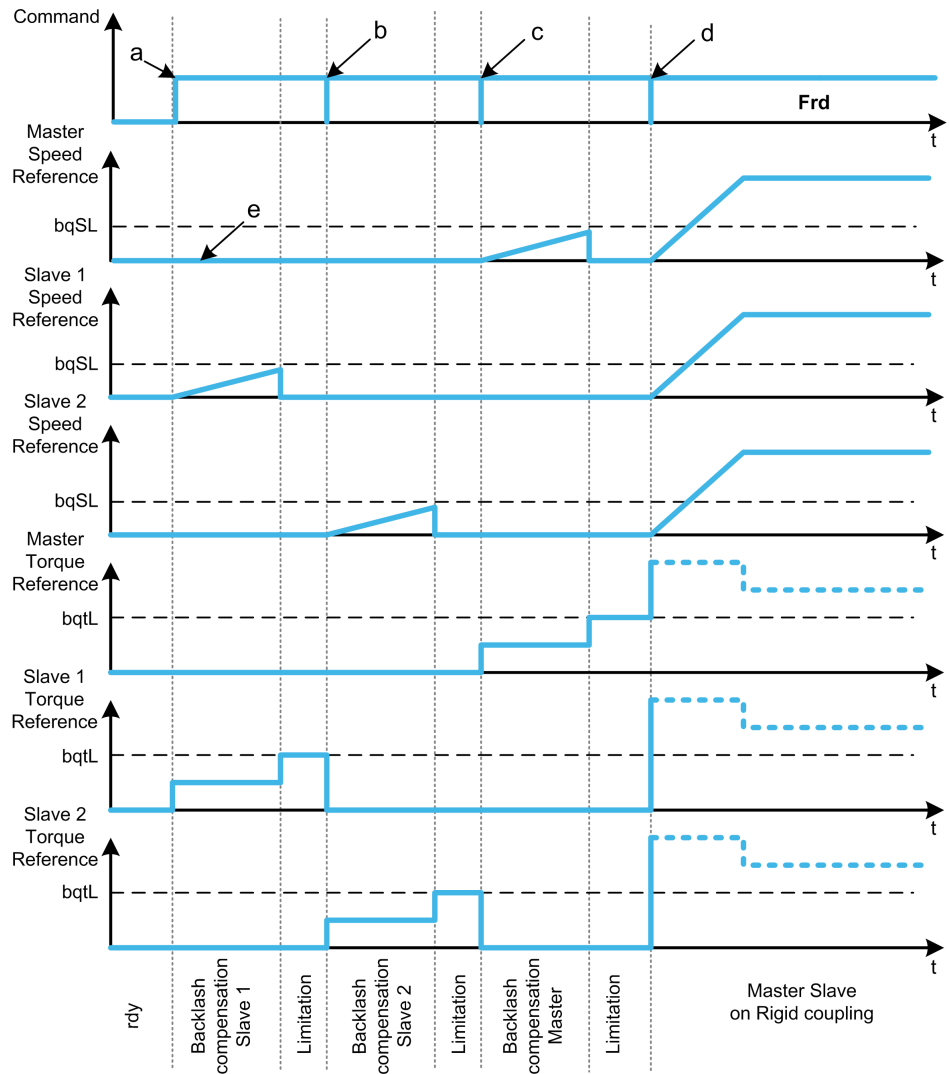

- a Slave 1 starts
- b Slave 2 starts, Slave 1 stops
- c Slave 2 stops
- d All slaves run start
- e 0Hz regulation or stop

Direct simultaneous slave backlash compensation (2)

All slaves will compensate their backlashes angle simultaneously assuming that the tuning allows compensating the backlash angle in the configured time. Meanwhile the Master stays in stop (open loop) or regulating 0Hz speed (closed loop):

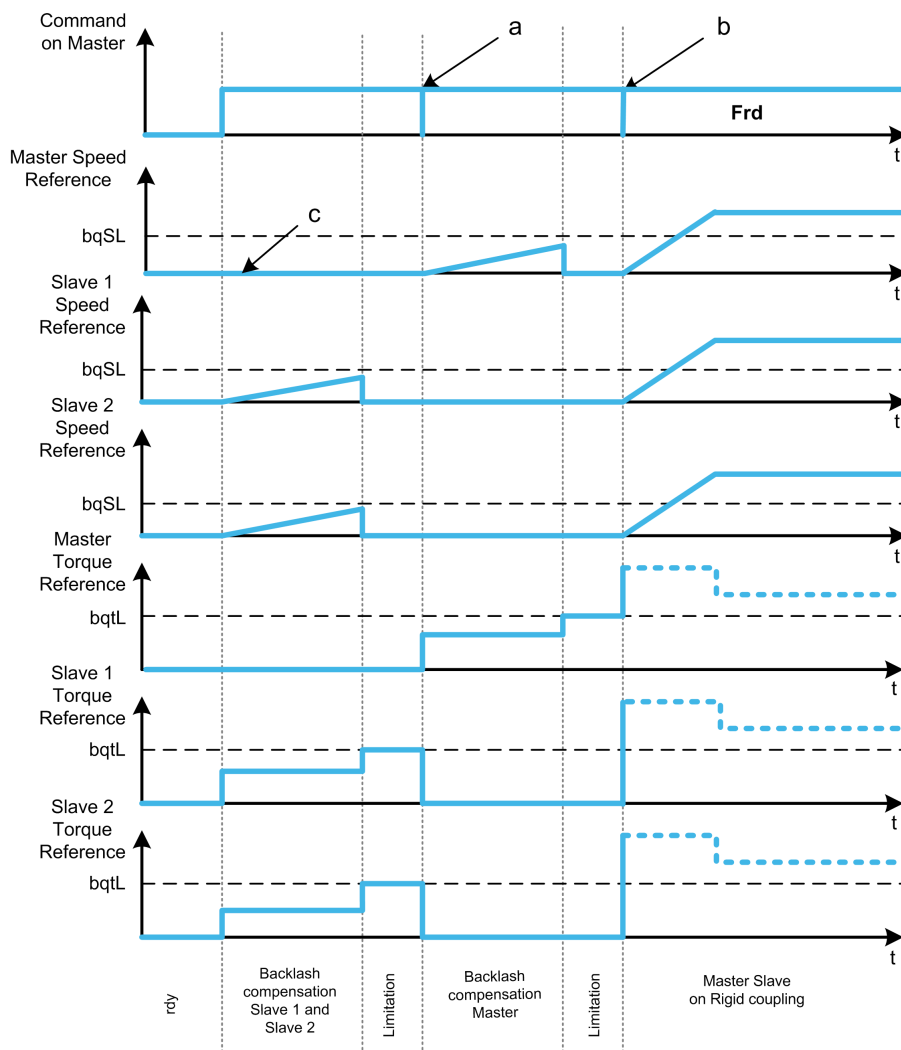


a All slaves stop

b All slaves start

c 0Hz regulation or stop

Controlled sequential slave backlash compensation (3)

All Slaves will compensate their backlashes angle one at the time. When it is done they notify to the Master. Meanwhile the Master stays in stop (open loop) or regulating 0Hz speed (closed loop). Then starts compensating its backlash and go in run as soon as the last Slave has compensated its backlash:

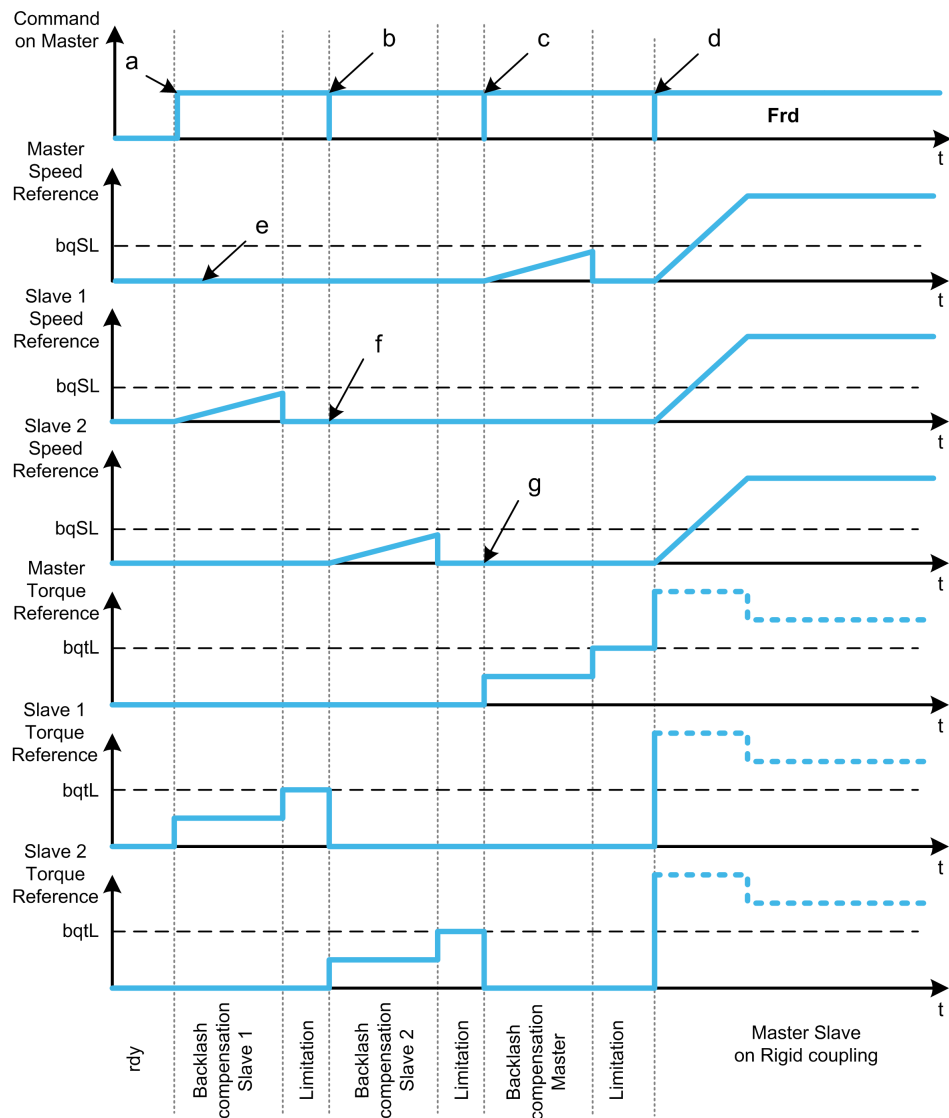


- a Slave 1 starts
- b Slave 2 starts, Slave 1 stops
- c Slave 2 stops
- d All slaves start
- e 0Hz regulation or stop
- f Slave 1 feedback
- g Slave 2 feedback

Controlled simultaneous slave backlash compensation (4)

All Slaves will compensate their backlashes angle simultaneously broadcasting to the Master when it is done. Meanwhile the Master drive stays in stop (open loop) or regulating 0Hz speed (closed loop).

Then starts compensating its backlash and go in run as soon as the last Slave has compensated its backlash:

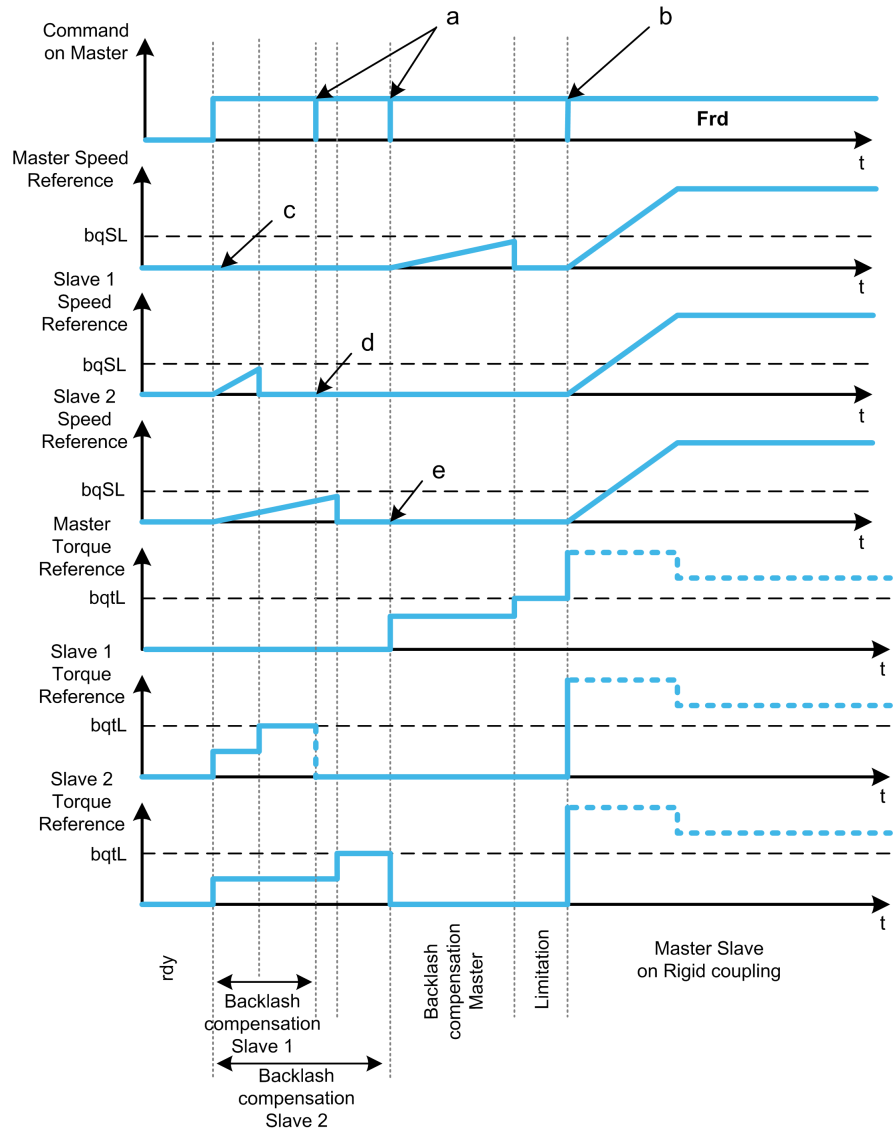

a Stop orders when feedback is done

b All slaves start

c 0Hz regulation or stop

d Slave 1 feedback

e Slave 2 feedback

[BL Mode] 6 9 7

Backlash mode.

Setting	Code / Value	Description
[Not Configured]	0 0	Backlash compensation not configured Factory setting
[On Start]	5 5 0 0 0	Backlash compensation is performed on each Drive start (run order appears or halt disappear)
[On Start + Dir Change]	5 5 0 0 1	Backlash compensation is performed on each Drive start (run order appears or halt disappear) and on each direction change
[On Master Request]	0 5	Backlash compensation managed through Master/Slave function.

[BL Type] 5 9 0 0 ★

Backlash type.

This parameter can be accessed if:

- **[BL Mode] 5 9 0** is not set to **[Not Configured] 0 0**, and
- **[M/S Comm Mode] 0 5 0 0** is set to **[MultiDrive Link] 0 0 0**, and
- **[M/S Device Role] 0 5 0 0** is set to **[Master] 0 5 0 0 0**.

Setting	Code / Value	Description
[Sequential]	5 0 0	Each slave will do its sequence one by one Factory setting
[Simultaneous]	5 0 1	Backlash compensation is performed on each Drive start (run order appears or halt disappear)

[BL Slave Fdbck] 5 9 0 1 ★

Backlash on slave(s) feedback.

This parameter can be accessed if:

- **[BL Mode] 5 9 0** is not set to **[Not Configured] 0 0**, and
- **[M/S Comm Mode] 0 5 0 0** is set to **[MultiDrive Link] 0 0 0**, and
- **[M/S Device Role] 0 5 0 0** is set to **[Master] 0 5 0 0 0**, and
- **[Access Level] 0 0 0** is set to **[Expert] 0 0 0**.


Setting	Code / Value	Description
[No]	0 0	Master does not take into account the slaves feedback
[Yes]	0 0 1	Master takes into account the slaves feedback Factory setting

[BL Time] 5 9 0 2 ★

Backlash time.

This parameter can be accessed if:


- **[BL Mode] 5 9 0** is not set to **[Not Configured] 0 0**, and
- **[M/S Comm Mode] 0 5 0 0** is set to **[MultiDrive Link] 0 0 0**, and
- **[M/S Device Role] 0 5 0 0** is set to **[Master] 0 5 0 0 0**, and
- **[Access Level] 0 0 0** is set to **[Expert] 0 0 0**, and
- **[BL Slave Fdbck] 5 9 0 1** is set to **[No] 0 0**.

Setting 	Description
0.1...100.0 s	Setting range Factory setting: 0.5 s

[BL Ref Freq] 5 9 5 0 ★

Backlash reference frequency.

This parameter can be accessed if **[BL Mode] 5 9 0** is not set to **[Not Configured] 0 0**.


Setting 	Description
0.0...599.0 Hz	Setting range Factory setting: 1% of [Nominal Motor Freq] F r 5 or [Sync Nominal Freq] F r 5 5 depending on [Motor control type] C E E.

[BL Acceleration] b 9 A ★

Backlash acceleration.

Backlash Acceleration ramp value.


This parameter can be accessed if [BL Mode] b 9 A is not set to [Not Configured] n o .

Setting 	Description
0.01...999.90 s ⁽¹⁾	Setting range Factory setting: 10.00 s
(1) Range 0.01 to 99.99 s or 0.1 to 999.9 s or 1 to 9,999 according to [Ramp increment] i n r	

[BL Trq Lim Value] b 9 E L ★

Backlash torque limitation value.

This parameter can be accessed if [BL Mode] b 9 A is not set to [Not Configured] n o .


Setting 	Description
0.0...100.0%	Setting range Factory setting: 5.0%

[BL Monit Delay] b 9 E ★

Backlash torque limitation monitoring delay.

Delay from beginning of backlash speed ramp and check of torque limitation.

This parameter can be accessed if [BL Mode] b 9 A is not set to [Not Configured] n o .

Setting 	Description
0.1...100.0 s	Setting range Factory setting: 0.5 s


NOTE: To adjust this parameter, the time needed by Angle test function must be considered.

[BL Start Delay] b 9 5 E ★

Backlash start delay.

Time spent in stop or standstill before backlash sequence.


This parameter can be accessed if [BL Mode] b 9 A is not set to [Not Configured] n o .

Setting 	Description
0.0...100.0 s	Setting range Factory setting: 0.0 s

[BL Timeout] b 9 F d ★

Backlash timeout.

This parameter can be accessed if **[BL Mode] b 9 n** is not set to **[Not Configured] n o**.

Setting 	Description
0.0...100.0 s	Setting range Factory setting: 5.0 s ([BL Monit Delay] b 9 E x10)

[BL ErrorResp] b 9 F b ★

Backlash compensation error response.

This parameter can be accessed if **[BL Mode] b 9 n** is not set to **[Not Configured] n o**.

Setting	Code / Value	Description
[Ignore]	n o	Detected error ignored
[Freewheel Stop]	4 E 5	Freewheel stop Factory setting

[Hoisting Functions]

[Brake logic control] ⌂ ⌂ ⌂ - Menu

Access

[Complete settings] → [Hoisting Functions] → [Brake logic control]

About This Menu

Used to control one or several electromagnetic brake(s) via a single output of the drive, for horizontal and vertical hoisting applications, and for unbalanced machines.

For vertical movements, the objective is to maintain motor torque in the lifting direction during the release and the application of the brake, in order to hold the load. Start smoothly when the brake is released and stop smoothly when the brake is applied.

For horizontal movements, the objective is to synchronize during the beginning of the movement the release of the brake with the built-up of torque and during stopping the application of the brake with the zero speed, in order to help prevent jerking.

NOTE: This function cannot be used with some other functions.

Instructions for Brake Logic Control for a Vertical Hoisting Application

Your application consists of a whole range of different interrelated mechanical, electrical, and electronic components, the drive being just one part of the application. The drive by itself is neither intended to nor capable of providing the entire functionality to meet all safety-related requirements that apply to your application. Depending on the application and the corresponding risk assessment to be conducted by you, a whole variety of additional equipment is required such as, but not limited to, external encoders, external brakes, external monitoring devices, guards, etc.

As a designer/manufacture of machines, you must be familiar with and observe all standards that apply to your machine. You must conduct a risk assessment and determine the appropriate Performance Level (PL) and/or Safety Integrity Level (SIL) and design and build your machine in compliance with all applicable standards. In doing so, you must consider the interrelation of all components of the machine. In addition, you must provide instructions for use that enable the user of your machine to perform any type of work on and with the machine such as operation and maintenance in a safe manner.

The present document assumes that you are fully aware of all normative standards and requirements that apply to your application. Since the drive cannot provide all safety-related functionality for your entire application, you must ensure that the required Performance Level and/or Safety Integrity Level is reached by installing all necessary additional equipment.

⚠ WARNING

INSUFFICIENT PERFORMANCE LEVEL/SAFETY INTEGRITY LEVEL AND/OR UNINTENDED EQUIPMENT OPERATION

- Conduct a risk assessment according to EN ISO 12100 and all other standards that apply to your application.
- Use redundant components and/or control paths for all critical control functions identified in your risk assessment.
- Implement all monitoring functions required to avoid any type of hazard identified in your risk assessment, for example, slipping or falling loads, in particular, if you do not operate the drive in closed loop mode which provides certain internal monitoring functions such as BRH3 [BRH b3], BRH4 [BRH b4] and BRH5 [BRH b5].
- Verify that the service life of all individual components used in your application is sufficient for the intended service life of your overall application.
- Perform extensive commissioning tests for all potential error situations to verify the effectiveness of the safety-related functions and monitoring functions implemented, for example, but not limited to, speed monitoring by means of encoders, short circuit monitoring for all connected equipment, correct operation of brakes and guards.
- Perform extensive commissioning tests for all potential error situations to verify that the load can be brought to a safe stop under all conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Take into account all information provided in the application note NHA80973 for hoisting machines that can be downloaded on se.com

When the drive transitions to operating state Fault, the mains contactor and the brake contactor must be deenergized.

⚠ WARNING

UNANTICIPATED EQUIPMENT OPERATION

- Assign [Operating state fault] (FLT) to output relay R1.
- Connect the coil of the mains contactor to output relay R1.
- Connect the contact of the brake contactor downstream of the mains contactor.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Step	Action
1	Enter the motor nameplate parameters.
2	Set [Motor Thermal Mode] E H E according to the cooling mode.
3	Verify [Autotuning Usage] E U U is set to [Therm mot] E P or set it, then perform a motor autotuning ([Autotuning] E U U to [Apply Autotuning] Y E 5). NOTE: The autotuning must be performed with a cold motor.
4	Assign [Brake assignment] b L C. It activates the function and the assigned output controls the command to release/apply the brake.
5	Verify [Movement type] b 5 E is set to [Hoisting] V E r.
6	Set [Brake Release Pulse] b , P to [Yes] Y E 5. Ensure that the direction of rotation forward (i.e. forward digital input with positive reference frequency) corresponds to the lift of the load. For applications in which the load being lowered is very different from the load being lifted, set [Brake Release Pulse] b , P = [2 IBR] 2 , b r (i.e., ascent always with a load and descent always without a load).

Step	Action
7	Assign [Brake contact] $b C$, to handle the brake contact feedback and/or [Brake Relay Fdbk] $b r$, to handle the brake contactor feedback. If necessary, adjust [brake fdbk filter] $F b C$, and/or [brake Rly Fdbk Filter] $F b r$.
8	Brake release current [Brk Release Current] $i b r$ and [Brake release I Rev] $i r d$ if [Brake Release Pulse] $b P = [2 IBR] 2$, $b r$: adjust the brake release current to the rated current indicated on the motor. During testing, adjust the brake release current in order to hold the load smoothly.
9	Acceleration time: for hoisting applications it is advisable to set the acceleration ramps to more than 0.5 seconds. Ensure that the drive does not exceed the current limit. The same recommendation applies for deceleration. Reminder: for a hoisting movement, a braking resistor should be used.
10	[Brake Release time] $b r t$: set according to the type of brake. It is the time required for the mechanical brake to release. This parameter must consider the maximum value of [brake fdbk filter] $F b C$, and [brake Rly Fdbk Filter] $F b r$.
11	[Brake release freq] $b r f$, in open-loop mode only: Leave in [Auto] $A u t o$, adjust if necessary.
12	[Brake engage freq] $b E n$: leave in [Auto], adjust if necessary.
13	[Brake engage time] $b E t$: set according to the type of brake. It is the time required for the mechanical brake to engage. This parameter must consider the maximum value of [brake fdbk filter] $F b C$, and [brake Rly Fdbk Filter] $F b r$.

Instructions for Brake Logic Control for an Horizontal Hoisting Application

Your application consists of a whole range of different interrelated mechanical, electrical, and electronic components, the drive being just one part of the application. The drive by itself is neither intended to nor capable of providing the entire functionality to meet all safety-related requirements that apply to your application. Depending on the application and the corresponding risk assessment to be conducted by you, a whole variety of additional equipment is required such as, but not limited to, external encoders, external brakes, external monitoring devices, guards, etc.

As a designer/manufacturer of machines, you must be familiar with and observe all standards that apply to your machine. You must conduct a risk assessment and determine the appropriate Performance Level (PL) and/or Safety Integrity Level (SIL) and design and build your machine in compliance with all applicable standards. In doing so, you must consider the interrelation of all components of the machine. In addition, you must provide instructions for use that enable the user of your machine to perform any type of work on and with the machine such as operation and maintenance in a safe manner.

The present document assumes that you are fully aware of all normative standards and requirements that apply to your application. Since the drive cannot provide all safety-related functionality for your entire application, you must ensure that the required Performance Level and/or Safety Integrity Level is reached by installing all necessary additional equipment.

⚠ WARNING**INSUFFICIENT PERFORMANCE LEVEL/SAFETY INTEGRITY LEVEL AND/OR UNINTENDED EQUIPMENT OPERATION**

- Conduct a risk assessment according to EN ISO 12100 and all other standards that apply to your application.
- Use redundant components and/or control paths for all critical control functions identified in your risk assessment.
- Implement all monitoring functions required to avoid any type of hazard identified in your risk assessment, for example, slipping or falling loads, in particular, if you do not operate the drive in closed loop mode which provides certain internal monitoring functions such as BRH3 [BRH b3], BRH4 [BRH b4] and BRH5 [BRH b5].
- Verify that the service life of all individual components used in your application is sufficient for the intended service life of your overall application.
- Perform extensive commissioning tests for all potential error situations to verify the effectiveness of the safety-related functions and monitoring functions implemented, for example, but not limited to, speed monitoring by means of encoders, short circuit monitoring for all connected equipment, correct operation of brakes and guards.
- Perform extensive commissioning tests for all potential error situations to verify that the load can be brought to a safe stop under all conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Take into account all information provided in the application note NHA80973 for hoisting machines that can be downloaded on se.com

When the drive transitions to operating state Fault, the mains contactor and the brake contactor must be deenergized.

⚠ WARNING**UNANTICIPATED EQUIPMENT OPERATION**


- Assign [Operating state fault] (FLT) to output relay R1.
- Connect the coil of the mains contactor to output relay R1.
- Connect the contact of the brake contactor downstream of the mains contactor.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Step	Action
1	Enter the motor nameplate parameters.
2	Set [Motor Thermal Mode] E H E according to the cooling mode.
3	Verify [Autotuning Usage] E U U is set to [Therm mot] E N or set it, then perform a motor autotuning ([Autotuning] E U N to [Apply Autotuning] Y E S). NOTE: The autotuning must be performed with a cold motor.
4	Assign [Brake assignment] b L C. It activates the function and the assigned output controls the command to release/apply the brake.
5	Set [Movement type] b 5 E to [Traveling] H o r.
6	Set [Brake Release Pulse] b , P to [No] n o.
7	Assign [Brake contact] b C , to handle the brake contact feedback and/or [Brake Relay Fdbk] b r , to handle the brake contactor feedback. If necessary, adjust [brake fdbk filter] F b C , and/or [brake Rly Fdbk Filter] F b r ,.
8	[Brk Release Current] , b r : set to 0.


Step	Action
9	<p>[Brake Release time] $b r t$: set according to the type of brake. It is the time required for the mechanical brake to release.</p> <p>This parameter must consider the maximum value of [brake fdbk filter] $F b C$, and [brake Rly Fdbk Filter] $F b r i$.</p>
10	<p>[Brake engage freq] $b E n$, in open-loop mode only: leave in [Auto] $R u t a$, adjust if necessary.</p>
11	<p>[Brake engage time] $b E t$: set according to the type of brake. It is the time required for the mechanical brake to engage.</p> <p>This parameter must consider the maximum value of [brake fdbk filter] $F b C$, and [brake Rly Fdbk Filter] $F b r i$.</p>

Horizontal Movement in Open-Loop Mode

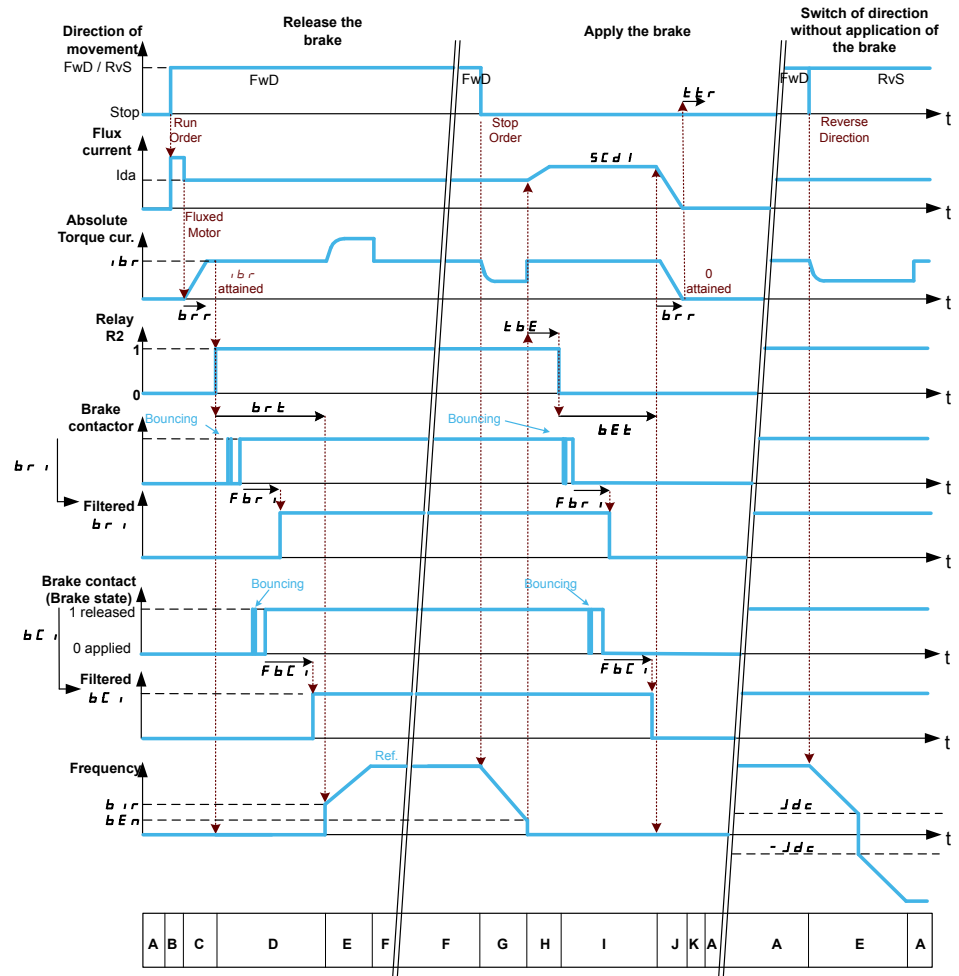


- | | |
|--|---|
| A: Waiting for run command | G: Deceleration due to stop command |
| B: Motor fluxing | H: Delay before command to apply the brake |
| C: Injection of the torque-generating current | I: Application of the brake |
| D: Release of the brake | J: Removal of current |
| E: Acceleration/deceleration | K: Restart delay |
| F: Reference value attained | |

Vertical Movement in Open-Loop Mode

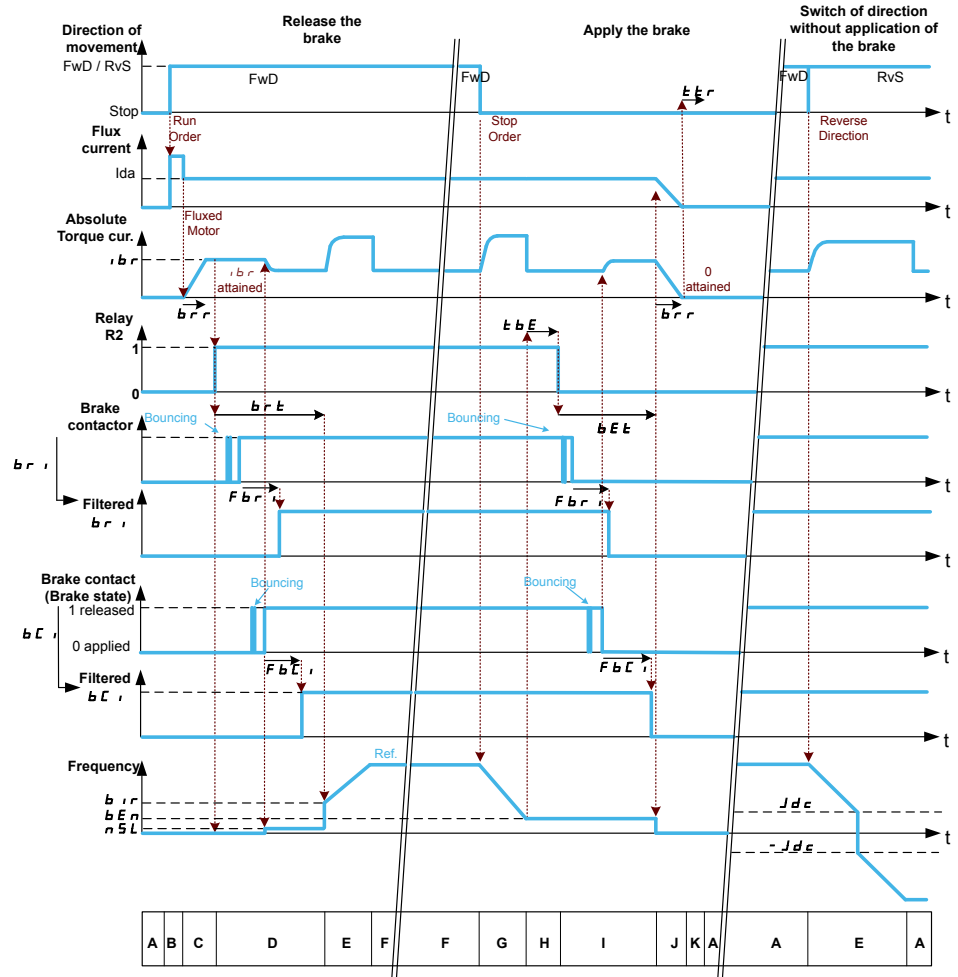


- | | |
|--|---|
| A: Waiting for run command | G: Deceleration due to stop command |
| B: Motor fluxing | H: Delay before command to apply the brake |
| C: Injection of the torque-generating current | I: Application of the brake |
| D: Release of the brake | J: Removal of current |
| E: Acceleration/deceleration | K: Restart delay |
| F: Reference value attained | |

Vertical or Horizontal Movement in Closed-Loop Mode

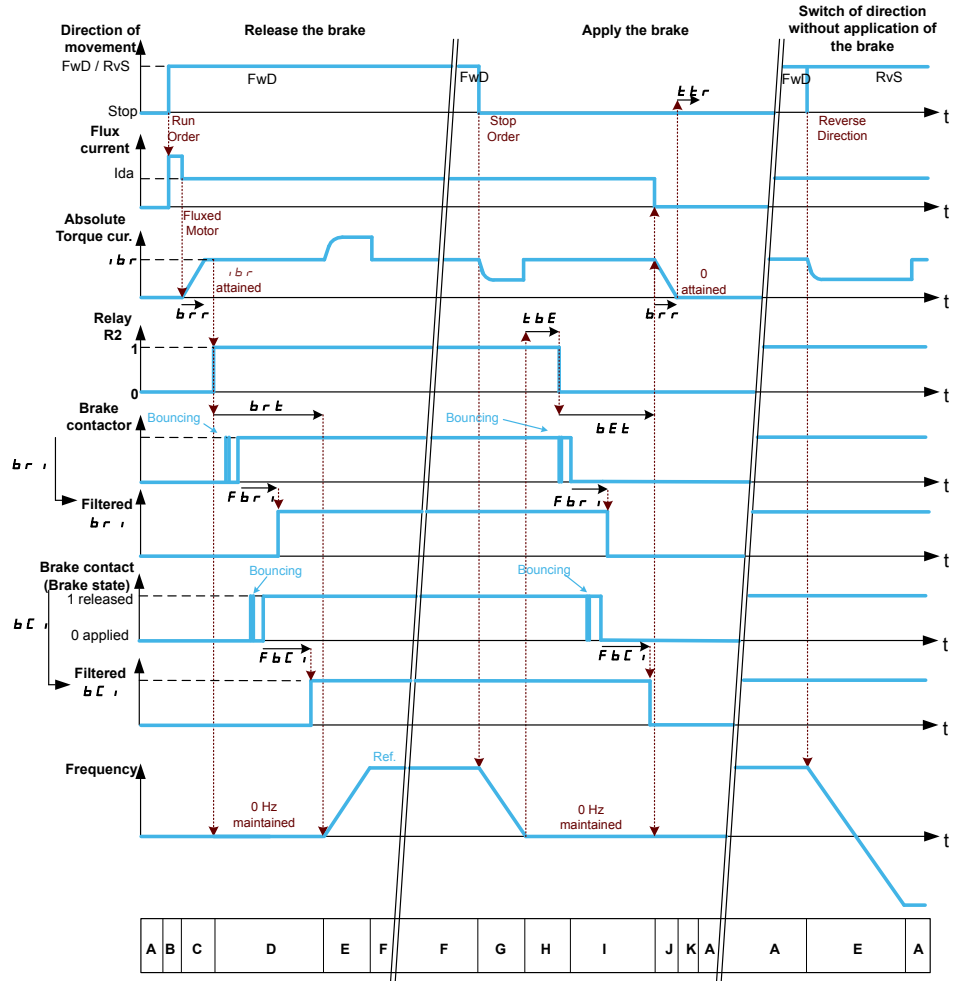

- A: Waiting for run command
- B: Motor fluxing
- C: Injection of the torque-generating current
- D: Release of the brake
- E: Acceleration/deceleration
- F: Reference value attained
- G: Deceleration due to stop command
- H: Delay before command to apply the brake
- I: Application of the brake
- J: Removal of current
- K: Restart delay

Behavior at run command

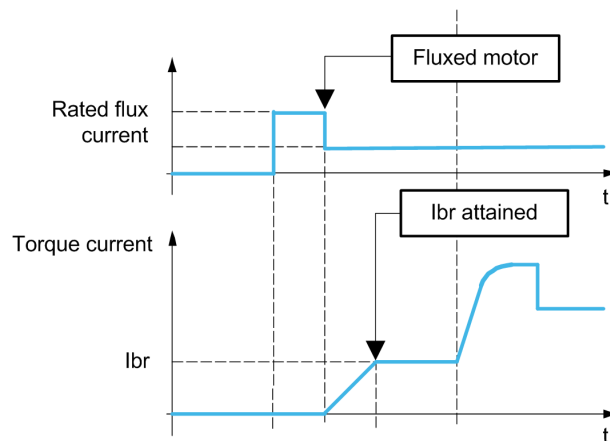

When run command is given, the drive over-fluxes the motor during a short time in order to generate a sufficient motor torque. The level of the torque is set with the

parameter **[Brk Release Current]** r_{br} . This torque is required to maintain the load during the release of the brake and before starting speed control.

The parameter **[Rotor Time Const]** t_r is the time needed by the motor to be fluxed. This parameter is computed by the drive using the values of the parameters **[Nom Motor Current]** i_{nr} , **[Motor 1 Cosinus Phi]** $\cos \phi$, **[Nom Motor Voltage]** u_n and **[Nominal Motor Speed]** n_{sp} which have to be set properly according to the motor specification.

Before releasing the brake, by the means of the relay output R2 set with the parameter **[Brake assignment]** b_{lc} , the drive verifies the two following conditions:

- The fluxing current is stable.
- The torque set point is reached.

If one of the both conditions is not fulfilled, the drive does not release the brake and triggers the error **[Brake Control]** b_{lf} .

This error can be triggered, for example, if one phase of the motor is not properly connected to the motor output of the drive.

[Brake assignment] b_{lc}

Brake function assignment.

[Brake assignment] b_{lc} is forced to **[No]** no if :

- **[Motor control type]** ct is set to **[U/F VC 5pts]** $uf5$, **[SYN_U VC]** $synu$, **[Sync. mot.]** syn , **[Reluctance Motor]** svl .
- **[DC Injection Assign]** dci is assigned.
- **[Catch On Fly]** flr is configured.
- **[Jog Assign]** jo is assigned.
- **[PID feedback]** pf is configured.
- **[OutPhaseLoss Assign]** apl is set to **[No Error Triggered]** ar
- **[BL mode]** b_{pn} is configured.

NOTE: From firmware version V3.4, enabling **[Brake logic control]** b_{lc} - function (i.e. assigning this parameter to an output) presets **[Auto tuning usage]** $etnu$ to **[Therm Mot]** etn .

Setting	Code / Value	Description
[No]	no	Not assigned Factory setting
[R2]...[R3]	$r_2...r_3$	Relay output R2...R3
[R4]...[R6]	$r_4...r_6$	Relay output R4...R6 if VW3A3204 relay output option module has been inserted
[DQ1 Digital Output]...[DQ2 Digital Output]	$do_1...do_2$	Digital output DQ1
[DQ11 Digital Output]... [DQ12 Digital Output]	$do_11...do_12$	Digital output DQ11...DQ12 if VW3A3203 I/O extension module has been inserted
[R61]...[R66]	$r_61...r_66$	Relay R61 ...R66 NOTE: This selection can be accessed on ATV960, ATV980 equipped with Cabinet IO.

[Movement type] b_{st} ★

Brake sequence type.

This parameter can be accessed if **[Brake assignment] b L C** is assigned (i.e. different from **[No] n o**).

This parameter is forced to **[Hoisting] V E r** if **[Weight sensor Assign] P E 5** is assigned.

Setting	Code / Value	Description
[Traveling]	<i>H o r</i>	Resistive-load movement (translational motion of overhead crane, for example).
[Hoisting]	<i>V E r</i>	Driving-load movement (hoisting winch, for example). Factory setting

[Brake contact] b C , ★

Brake contact input.

This parameter can be accessed if **[Brake assignment] b L C** is assigned (i.e. different from **[No] n o**).

If the brake has a monitoring contact (closed for released brake).

Setting	Code / Value	Description
[Not Assigned]	<i>n o</i>	Not assigned Factory setting
[DI1]...[DI8]	<i>L , 1...L , 8</i>	Digital input DI1...DI8
[DI11]...[DI16]	<i>L , 11... L , 16</i>	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	<i>C d 0 0... C d 1 0</i>	Virtual digital input CMD.0...CMD.10 in [I/O profile] , o configuration
[CD11]... [CD15]	<i>C d 1 1... C d 1 5</i>	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	<i>C 1 0 1... C 1 1 0</i>	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , o configuration
[C111]... [C115]	<i>C 1 1 1... C 1 1 5</i>	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	<i>C 2 0 1... C 2 1 0</i>	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , o configuration
[C211]... [C215]	<i>C 2 1 1... C 2 1 5</i>	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	<i>C 3 0 1... C 3 1 0</i>	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , o configuration
[C311]... [C315]	<i>C 3 1 1... C 3 1 5</i>	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	<i>C 5 0 1... C 5 1 0</i>	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , o configuration
[C511]... [C515]	<i>C 5 1 1... C 5 1 5</i>	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[Brake Fdbk Filter] F b C , ★

Brake feedback filter.

The parameter can be accessed if **[Brake contact] b C ,** is assigned (i.e. different from **[No] n o**).

Setting ()	Description
0...5000 ms (step: 1 ms)	Setting range Factory setting: 100 ms

[Brake Relay Fdbk] *b r i*

Brake relay feedback input. (also known as brake contactor feedback input)

The parameter can be accessed if **[Brake assignment] *b L C*** is assigned (i.e. different from **[No] *n o***).

Possible settings: Identical to **[Brake contact] *b C i***.

[Brake Rly Fdbk Filter] *F b r i*

Brake relay feedback filter. (also known as brake contactor feedback filter)

The parameter can be accessed if **[Brake Relay Fdbk] *b r i*** is assigned (i.e. different from **[No] *n o***).

Setting ()	Description
0...1000 ms (step: 1 ms)	Setting range Factory setting: 100 ms

[Brake Release Pulse] *b i P* ★

Brake release pulse.

This parameter can be accessed if:

- **[Brake assignment] *b L C*** is assigned (i.e. different from **[No] *n o***), and
- **[Weight Sensor Assign] *P E 5*** is set to **[Not configured] *n o***.

Setting ()	Code / Value	Description
[No]	<i>n o</i>	The motor torque is given in the required operating direction, at current [Brk Release Current] <i>i b r</i> . Factory setting: if [Movement type] <i>b 5 E</i> = [Traveling] <i>H o r</i>
[Yes]	<i>Y E 5</i>	The motor torque is always Forward (check that this direction corresponds to ascending), at current [Brk Release Current] <i>i b r</i> . Factory setting: if [Movement type] <i>b 5 E</i> = [Hoisting] <i>V E r</i>
[2 IBR]	<i>2 i b r</i>	The torque is in required direction, at current [Brk Release Current] <i>i b r</i> Forward and [Brake release l Rev] <i>i r d</i> for Reverse, for certain specific applications.

[Brk Release Current] *i b r* ★

Brake release current level.

This parameter can be accessed if:

- **[Brake assignment] *b L C*** is assigned (i.e. different from **[No] *n o***), and
- **[Weight Sensor Assign] *P E 5*** is set to **[Not configured] *n o***.

Setting ()	Description
0...1.1 In ⁽¹⁾ (step: 0.01 A) ⁽²⁾	Setting range Factory setting: [Nom Motor Current] n C r
<p>(1): In corresponds to the rated drive current indicated in the Installation Manual and on the drive nameplate.</p> <p>(2): For drives with power range ≤ 15 kW. If the power range is between 18 and 160 kW the step is 0.1 A else the step is 1 A.</p>	

[Brake release I Rev] i r d

Brake release current level for going down.

This parameter can be accessed if:

- **[Brake assignment] b L C** is assigned (i.e. different from **[No] n o**), and
- **[Brake Release Pulse] b i P** is set to **[2 IBR] 2 i b r**, and
- **[Weight Sensor Assign] P E S** is set to **[Not configured] n o**.

Setting ()	Description
0...1.1 In ⁽¹⁾ (step: 0.01 A) ⁽²⁾	Setting range Factory setting: 0
<p>(1): In corresponds to the rated drive current indicated in the Installation Manual and on the drive nameplate.</p> <p>(2): For drives with power range ≤ 15 kW. If the power range is between 18 and 160 kW the step is 0.1 A else the step is 1 A.</p>	

[Brake Release time] b r t ★

Brake release time.

The parameter can be accessed if **[Brake assignment] b L C** is assigned (i.e. different from **[No] n o**).

Setting ()	Description
0.0...5.00 s (step: 0.01 s)	Setting range Factory setting: 0.50 s
<p>NOTE: The minimum value considered internally by the drive is the maximum of [Brake Fdbk Filter] F b C, and [Brake Rly Fdbk Filter] F b r i.</p>	

[Brake release freq] b i r ★

Brake release frequency.

The parameter can be accessed if **[Motor control type] C E E** is not **[FVC] F V C** or **[Sync.CL] F S Y** and if **[Movement type] b S E** is set to **[Hoisting] V E r**.

Setting ()	Code / Value	Description
[Auto]	Auto	The drive takes a value based on the rated slip of the motor, calculated using the drive parameters
0.0...10.0 Hz (step: 0.1 Hz)		Manual control Factory setting: <ul style="list-style-type: none"> 0 if [Movement type] b 5 E is set to [Traveling] H o r or [Hoisting] V E r and in closed loop. [Auto] Auto if [Movement type] b 5 E is set to [Hoisting] V E r and in open loop

[Brake engage frequency] b E n ★

Brake engage frequency threshold.

The parameter can be accessed if [Motor control type] C E E is not set to [FVC] F V C or [Sync.CL] F 5 Y and if [Brake assignment] b L C is not set to [No] n o .

Setting ()	Code / Value	Description
[Auto]	Auto	The drive takes a value based on the rated slip of the motor, calculated using the drive parameters
0.0...10.0 Hz (step: 0.1 Hz)		Manual control Factory setting: <ul style="list-style-type: none"> 0 in closed loop. [Auto] Auto in open loop

[Brake engage at 0] b E C d ★

Brake engage delay when 0 speed is attained with a reference frequency = 0 Hz.

This parameter can be accessed if [Motor control type] C E E is set to:

- [FVC] F V C , or
- [Sync.CL] F 5 Y .

This parameter can be used to adjust the brake engage delay once zero speed has been reached.

Setting	Code / Value	Description
[No]	n o	Brake does not engage while zero speed is maintained. Factory setting
0.0...30.0 s (step: 0.1 s)		Brake engage delay once zero speed is reached. NOTE: The brake engagement type depends on [BRH b6] b r H 6 setting value.

[Brake engage delay] E b E ★

Temporization at brake engage frequency.

The parameter can be accessed if [Brake assignment] b L C is assigned (i.e. different from [No] n o).

Time delay before request to engage brake. To delay brake engagement, if you wish the brake to be engaged when the drive comes to a complete stop.

Setting ()	Description
0.00...5.00 s (step: 0.01 s)	Factory setting: 0.00 s

[Brake engage time] b E E ★

Brake engage time.

The parameter can be accessed if [Brake assignment] b L E is assigned (i.e. different from [No] n o).

Setting ()	Description
0.00...5.00 s (step: 0.01 s)	Factory setting: 0.50 s
NOTE: The minimum value considered internally by the drive is the maximum of [Brake Fdbk Filter] F b E , and [Brake Rly Fdbk Filter] F b r .	

[Auto DC inj Level 1] S D E I ★

Auto DC injection level 1.

NOTICE	
OVERHEATING	
Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time.	
Failure to follow these instructions can result in equipment damage.	

This parameter can be accessed if:

- [Movement Type] b S E is set to [Traveling] H o r , and
- [Motor control type] E E E is not set to [FVC] F V E or [Sync.CL] F S Y .

Setting ()	Description
0...1.1 In ⁽¹⁾ (step: 0.01 A) ⁽²⁾	Setting range Factory setting: 0.7 In ⁽¹⁾
^{(1):} In corresponds to the rated drive current indicated in the Installation Manual and on the drive nameplate. ^{(2):} For drives with power range ≤ 15 kW. If the power range is between 18 and 160 kW the step is 0.1 A else the step is 1 A.	

[Engage at reversal] b E d ★

Brake engage at speed inversion.

Can be used to select whether or not the brake engages on transition to zero speed when the operating direction is reversed.

The parameter can be accessed if [Brake assignment] b L E is assigned (i.e. different from [No] n o).

Setting ()	Code / Value	Description
[No]	n o	The brake does not engage Factory setting
[Yes]	y e s	The brake engages

[Jump at reversal] J D E ★

Brake: Jump frequency at direction change.

This parameter can be accessed if

- **[Motor control type] C 5 E** is not set to:
 - **[FVC] F V C**, or
 - **[Sync.CL] F 5 Y**, and
- **[Movement type] b 5 E** is set to **[Hoisting] V E r**.

When the reference direction is reversed, this parameter can be used to avoid loss of torque (and consequential release of load) on transition to zero speed. Parameter is not applicable if **[Engage at reversal] b E d** is set to **[Yes] Y E 5**.

Setting (°)	Code / Value	Description
[Auto]	<i>R u t o</i>	The drive takes a value based on the rated slip of the motor, calculated using the drive parameters
0.0...10.0Hz (step: 0.1 Hz)		Manual control Factory setting: <ul style="list-style-type: none"> • 0 if [Movement type] b 5 E is set to [Traveling] H o r or [Hoisting] V E r and in closed loop. • [Auto] R u t o if [Movement type] b 5 E is set to [Hoisting] V E r and in open loop

[Time to restart] t t r ★

Brake time to restart.

Time between the end of a brake sequence and the start of the next brake release sequence.

The parameter can be accessed if **[Brake assignment] b L C** is assigned (i.e. different from **[No] n o**).

Setting (°)	Description
0.00...15.00 s (step: 0.01 s)	Factory setting: 0.00 s

[BRH b0] b r H 0 ★

Selection of the brake restart sequence if a run command is repeated while the brake is engaging.


This parameter can be accessed if:

- **[Access Level] L R C** is set to **[Expert] E P r**,
- **[Brake assignment] b L C** is assigned (i.e. different from **[No]**),,
- **[M/S Comm Mode] n 5 C n** is set to **[No] n o**.

Use in open-loop and closed-loop mode

NOTE: **[BRH b0] b r H 0** is forced to **[0] 0** if Master/Slave function is enabled (**[M/S Comm Mode] n 5 C n** is set to a value different from **[No] n o**).

A run command may be requested during the brake engagement phase. Whether or not the brake release sequence is executed depends on the value selected for **[BRH b0] b r H 0**.

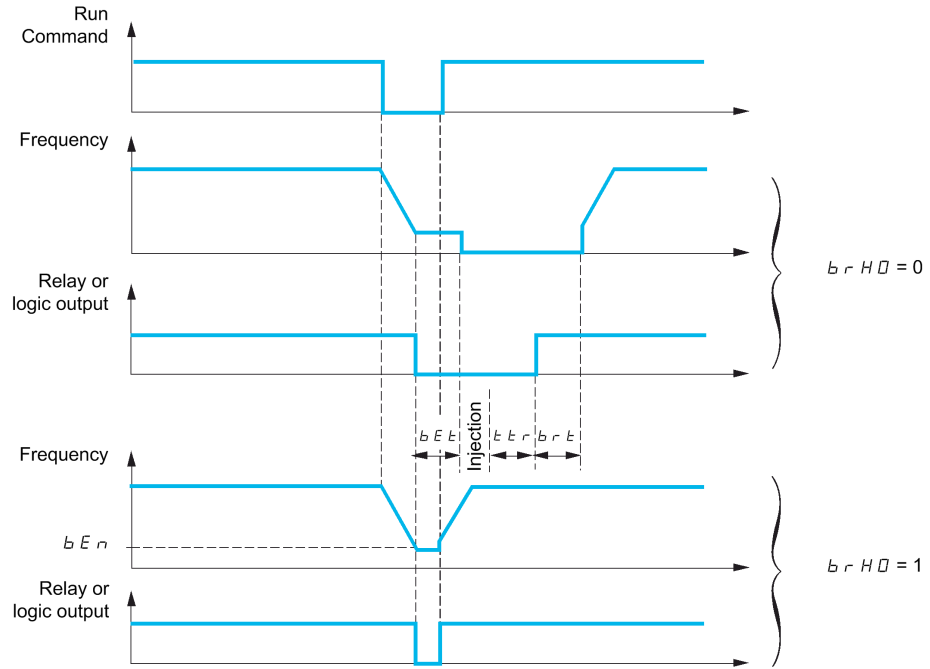

NOTE:

- if a run command is requested during the **[Time to restart]** $t t r$ phase, the complete brake control sequence is initialized.
- If a run command is requested with **[Engage at reversal]** $b E d$ active, the complete brake control sequence is initialized.

Setting	Code / Value	Description
[0]	0	The engage/release sequence is executed in full. Factory setting
[1]	1	During the brake engagement phase, if the run command is request: <ul style="list-style-type: none"> • Before the end of [Brake engage delay] $t b E$, the run command is considered immediately, • During [Brake engage time] $b E t$ phase, the run command is considered with the handling of [Brake release time] $b r t$ time before the restart; • After [Brake engage time] $b E t$ phase, the brake logic sequence is completed in full.

[BRH b1] $b r H 1$ ★

Deactivation of the brake contact in steady state error.

This parameter can be accessed if **[Brake assignment]** $b L C$ is assigned (i.e. different from **[No]** $n o$) and if **[Access Level]** $L A C$ is set to **[Expert]** $E P r$.

Setting	Code / Value	Description
[0]	0	The brake contact in steady state error is active (error is triggered if the contact is open during operation). [Brake Feedback] $b r F$ is monitored in all operating phases Factory setting
[1]	1	The brake contact in steady state error is inactive. [Brake Feedback] $b r F$ is only monitored during the brake release and engage phases.


[BRH b2] $b r H 2$ ★

Taking the brake contact into account for the brake control sequence.

This parameter can be accessed if **[Brake assignment] b L C** is assigned (i.e. different from **[No] n o**) and if **[Access Level] L R C** is set to **[Expert] E P r**.

If a digit input is assigned to the brake contact.

- **[BRH b2] b r H 2 = [0] 0**: During the brake release sequence, the reference is enabled at the end of the time **[Brake Release time] b r t**. During the brake engage sequence, the current changes to **[0] 0** according to the ramp **[Current ramp time] b r r** at the end of the **[Brake engage time] b E t**.
- **[BRH b2] b r H 2 = [1] 1**: When the brake is released, the reference is enabled when the **[brake contact] b C**, digit input changes to **1**. When the brake is engaged, the current changes to **0** according to the ramp **[Current ramp time] b r r** when the **[brake contact] b C**, digit input changes to **0**.

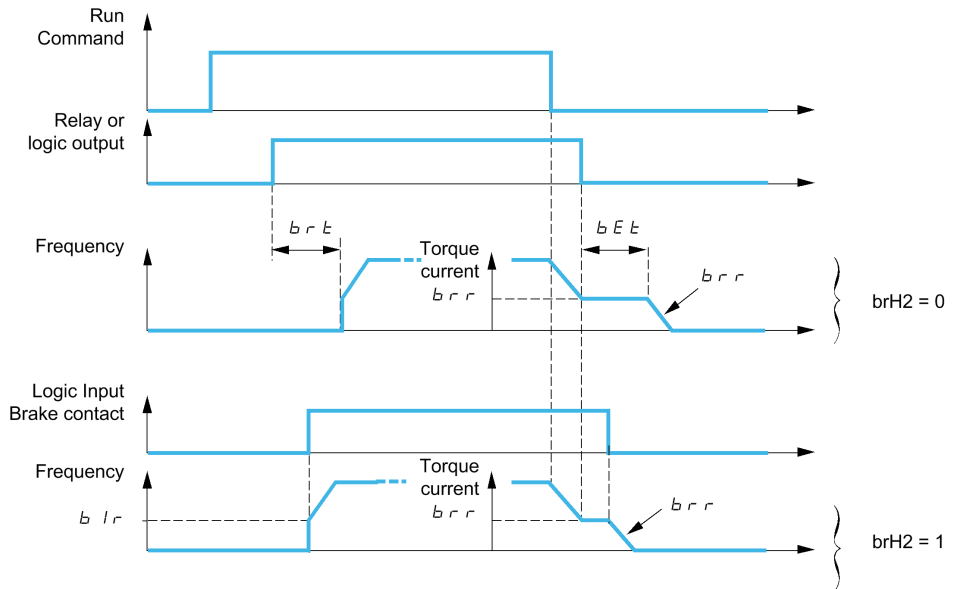

Setting	Code / Value	Description
[0]	0	The engage/release sequence is executed in full. Factory setting
[1]	1	The brake is released immediately.

[BRH b3] b r H 3 ★

In closed-loop mode only. Management of the absence of **[Brake contact] b C**, and/or **[Brake Relay Fdbk] b r i**, response, if it is assigned.

⚠ WARNING

FALLING LOAD

- Only set **[BRH b3] BRH3** to **[1] 1** if your application monitors the associated warning **[Brake Cont Warn] BCA**, for example, by assigning the warning **[Brake Cont Warn] BCA** to an output.
- If the warning **[Brake Cont Warn] BCA** is triggered, the following action must be taken by the user.

- 1) Move the load to a safe position.
- 2) Power off the drive.
- 3) Identify and remove the cause of the warning.
- 4) Verify correct operation of all electrical and mechanical components of the brake before resuming regular operation.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

▲ WARNING

LOSS OF CONTROL

Depending on some conditions such as power rating of the drive, load, etc. the activation of the catch on fly function used prior to maintain zero speed may not be achieved and may trigger an error.

- When setting this function to **[1] 1**, perform extensive commissioning tests to verify that no error is triggered and that the load can be brought to a safe stop under all conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

This parameter can be accessed if **[Brake assignment] b L C** is assigned (i.e. different from **[No] n 0**) and if **[Access Level] L A C** is set to **[Expert] E P r**.

Setting	Code / Value	Description
[0]	0	During the brake engage sequence, the brake contact and brake contactor (relay) feedback must be open before the end of [Brake engage time] b E E , otherwise the drive locks in a [Brake Feedback] b r F brake contact error. Factory setting
[1]	1	During the brake engage sequence, the brake contact and brake contactor (relay) feedback must be open before the end of [Brake engage time] b E E , otherwise a [Brake Contact Warn] b C R is triggered and zero speed is maintained. If this setting is used, behavior of the drive depends on the setting of [BRH b5] b r H 5 . Refer to the description of [BRH b5] b r H 5 for appropriate settings depending on your needs.

[BRH b4] b r H 4 ★

▲ WARNING

FALLING LOAD

- Only set the parameter **[BRH b4] BRH4** to **[1]** if your application monitors the associated warning **[Load Mvt Warn] BSA**, for example, by assigning the warning **[Load Mvt Warn] BSA** to an output.
- If the warning **[Load Mvt Warn] BSA** is triggered, the following action must be taken by the user.
 - 1) Move the load to a safe position.
 - 2) Power off the drive.
 - 3) Identify and remove the cause of the warning.
 - 4) Verify correct operation of all electrical and mechanical components of the brake before resuming regular operation.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

▲ WARNING**LOSS OF CONTROL**

Depending on some conditions such as power rating of the drive, load, etc. the activation of the catch on fly function used prior to maintain zero speed may not be achieved and may trigger an error.

- When setting this function to **[1] 1**, perform extensive commissioning tests to verify that no error is triggered and that the load can be brought to a safe stop under all conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

In closed-loop mode only. Out of the brake sequence (after **[Time to restart] *E E r*** time) and depending **[BRH b4] *b r H 4*** setting, triggering of an error or activation of the speed loop at zero if a movement, for which no command has been given, occurs (measurement of a speed greater than a fixed minimum threshold determined by **[BRH_b4_freq] *b F E d***).

This parameter can be accessed if **[Access Level] *L R C*** is set to **[Expert] *E P r***.

Setting	Code / Value	Description
[0]	<i>0</i>	<p>If a movement occurs for which no command has been given, [Load Mvt Error] <i>n d C F</i> error is triggered.</p> <p>Factory setting</p> <p>Note:</p> <ul style="list-style-type: none"> • If this setting is used, behavior of the drive depends on the setting of [BRH_b4_freq] <i>b F E d</i>. Refer to the description of [BRH_b4_freq] <i>b F E d</i> for appropriate settings depending on your needs. • This behavior is irrespective of the command profile and available in all drive operating state except 2 - Switch on disabled, 7 - Fault Reaction Active and 8 - Fault states.
[1]	<i>1</i>	<p>If a movement occurs for which no command has been given, the drive switches to zero speed regulation, with no brake release command, and a [Load Mvt Warn] <i>b 5 R</i> warning is triggered.</p> <p>NOTE: If this setting is used, behavior of the drive depends on the setting of [BRH_b4_freq] <i>b F E d</i> and [BRH b5] <i>b r H 5</i>. Refer to the description of these parameters for appropriate settings depending on your needs.</p>

[BRH b5] *b r H 5* ★

This parameter can be accessed if **[Brake assignment] *b L C*** is assigned (i.e. different from **[No] *n 0***) and if **[Access Level] *L R C*** is set to **[Expert] *E P r***.

The setting of this parameter impacts the operating states of the drive within load movement is monitored, and the priority of the zero speed maintain compared to some events. It is linked to the parameters **[BRH b3] *b r H 3*** and **[BRH b4] *b r H 4***.

Irrespective of the setting, the zero speed maintain has no priority compared to:

- A new run command in order to control the drive and move the load,
- An active STO,
- A lock of the drive with the function linked to the parameter **[drive lock] *L E 5***.
- A stop command coming from a channel other than the active command channel if **[BRH b5] *b r H 5*** is set to **[0] 0** (see the table below).
- A triggered error if **[BRH b5] *b r H 5*** is set to **[0] 0** (see the table below).

If one of this event occurs, the zero speed maintain is interrupted.

Setting	Code / Value	Description
[0]	0	<p>Load movement is monitored only in the following drive operating states:</p> <ul style="list-style-type: none"> CIA402 command profile: 5-Operation Enabled, 6-Quick Stop Active. Other command profiles (Graphic Display Terminal, I/O, etc): 3-Ready to switch on, 4-Switched-on, 5-Operation enabled. <p>For example, when the product is controlled under Cia402 profile:</p> <ul style="list-style-type: none"> In Freewheel stop (NST) or in Operating State Fault (FLT), the load movement detection is not monitored. If the drive is stopped by a halt command (bit 8 of the command word CMD), the drive remains in operation enabled then, the load movement detection is monitored. <p>The zero speed maintain has no priority compared to a triggered error and a stop command coming from a channel other than the active command channel.</p> <p>Factory setting</p>
[1]	1	<p>Irrespective of the command profile, in all drive operating state except 7- Fault Reaction Active and 8 - Fault states, the load movement monitoring function is active.</p> <p>The zero speed maintain has priority compared to an error that can be disabled (see [Disable Error Detect] 1.11).</p>

[BRH b6] b r H 6 ★

This parameter can be accessed if [Access Level] L R C is set to [Expert] E P r .

Selection of the brake engage type if [Brake engage at 0] b E C d is set to a numeric value.

Setting	Code / Value	Description
[0]	0	<p>The brake is closed (including the handling of [Brake Engage Time] b E t) and the zero speed is still maintained. Then:</p> <ul style="list-style-type: none"> If a reference frequency other than zero is requested, the command to release the brake is sent following torque application with the handling of [Brake Release Time] b r t . If a stop command (external to the drive) is requested, the brake engage sequence is completed. <p>Factory setting</p> <p>NOTE: the stop command is only considered after [Brake Engage Time] b E t .</p>
[1]	1	<p>After the delay set by [Brake engage at 0] b E C d , A stop command is executed by the drive, the brake engage sequence is fully executed.</p>

[Current ramp time] b r r ★

Brake current ramp.

This parameter can be accessed if [Brake assignment] b L C is assigned (i.e. different from [No] n o).

Torque current ramp time (increase and decrease) for a current variation equal to [Brk Release Current] i b r .

Setting ()	Description
0.00...5.00 s (step: 0.01 s)	Factory setting: 0.00 s

[BRH_b4_freq] b F E d ★

BRH_b4 frequency threshold detection.

This parameter represents the detection threshold for **[BRH b4] b r h 4**. The required value depends on the response of the mechanical installation.

If the value of the parameter **[BRH_b4_freq] BFTD** is too low, this may lead to unwanted triggering of load movement monitoring.

If the value of the parameter **[BRH_b4_freq] BFTD** is too high, load movement monitoring may not trigger when required.

⚠ WARNING**LOSS OF CONTROL**

Verify that the setting of this parameter is suitable for the application by performing comprehensive commissioning tests for all load conditions and all potential error conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Setting **[BRH_b4_freq] BFTD** to **[NO] NO** disables load movement monitoring. Unintended movements and falling of the load are not detected with this setting.

⚠ WARNING**FALLING LOAD**

Verify that the setting of this parameter does not result in unsafe conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

This parameter can be accessed if

- **[Brake assignment] b L C** is assigned (i.e. different from **[No] n o**), and,
- **[Motor Control Type] C E E** is set to **[FVC] F V C** or **[Sync.CL] F S Y**.

This parameter cannot be set to **[No] n o** if **[BRH b4] b r H 4** is set **[1] 1**. Setting back **[BRH b4] b r H 4** to **[0] 0** does not set **[BRH_b4_freq] b F E d** to **[No] n o**.

Setting ()	Code / Value	Description
[No]	n o	The load movement monitoring function is disabled.
0.1...10 Hz (step: 0.1 Hz)		Setting range Factory setting: 10% of [Nominal Motor Freq] F r S or [Sync Nominal Freq] F r S S depending on [Motor control type] C E E .

[Load Maintain Time] n d F E

Load maintain time before error.

When zero speed maintain is activated, **[Load Mvt Error] n d C F** error is triggered at the end of this duration.

If zero speed maintain is active, the remaining time before triggering the error is displayed with the parameter **[Load Maintain Delay] n E b F**. If a new run command is applied, the load movement monitoring function is temporary inactive and the remaining time **[Load Maintain Delay] n E b F** is frozen.

Reset of **[Load Maintain Delay] n E b F** requires a power cycle or a product restart.

This parameter can be accessed if:

- [BRH b5] b r H 5 is set to [1] 1 and,
- [Motor Control Type] 5 5 5 is set to [FVC] F V 5 or [Sync.CL] F 5 4.

Setting ()	Code / Value	Description
[No]	n a	Time before error is deactivated. Factory setting
1...60 min (step: 1 min)		Setting range

[Load Maintain Delay] n l b f

Load maintain remaining time before error.

Read-only parameter.

This parameter can be accessed if [Load Maintain Time] n d f l is configured (i.e. different from [No] n a).

Setting	Description
0...3,600 s (step: 1 s)	Setting range Factory setting: -

[High speed hoisting] H 5 H - Menu

Access

[Complete settings] → [Hoisting Functions] → [High speed hoisting]

About This Menu


NOTE: This function cannot be used with some other functions.

This function can be used to optimize the cycle times for hoisting movements for zero or lightweight loads. It authorizes operation at "constant power" in order to reach a speed greater than the rated speed without exceeding the rated motor current.

The speed remains limited by the [High speed] H 5 P.

The function acts on the speed reference pedestal and not on the reference itself.


Principle

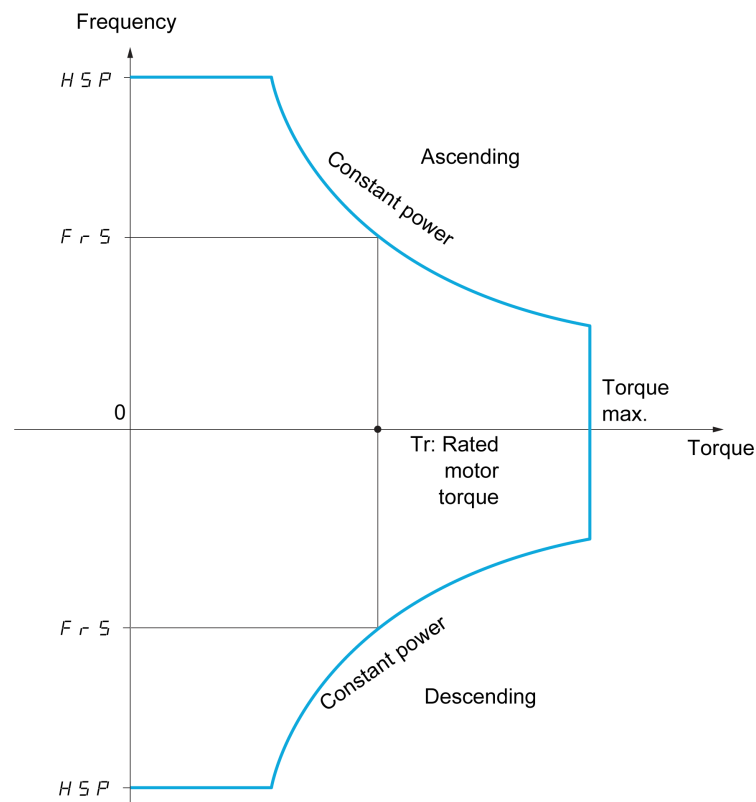

There are two possible operating modes:

- Speed reference mode: the maximum permissible speed is calculated by the drive during a speed step that is set so that the drive can measure the load.
- Current limitation mode: the maximum permissible speed is the speed that supports current limitation in motor mode, in the "ascending" direction only. For the "descending" direction, operation is in Speed reference mode.

Speed Reference Mode

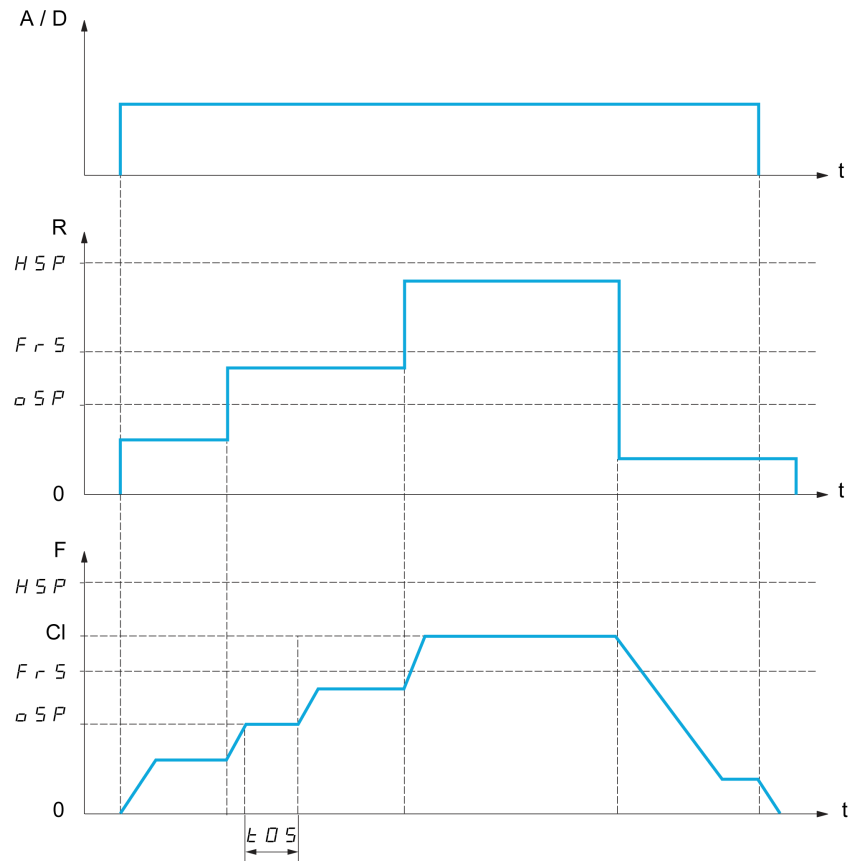

A / D Ascend or descend command

R Reference

F Frequency


CI Calculated limit

oSP Adjustable speed step for load measurement

tOS Load measuring time

2 parameters are used to reduce the speed calculated by the drive, for ascending and descending.

Current Limiting Mode

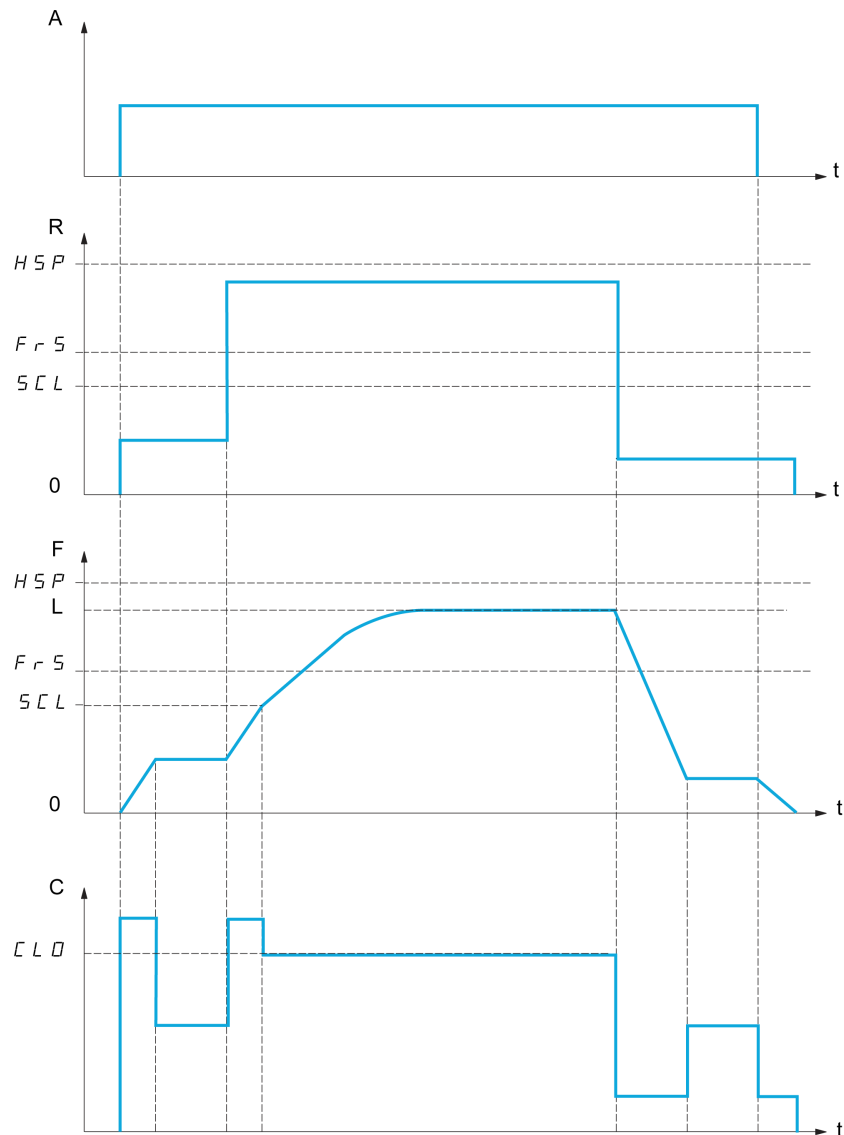

A Ascend command

R Reference

F Frequency

L Limit imposed by current limitation

C Current

SCL Adjustable speed threshold, above which current limitation is active

CLO Current limitation for high-speed function

NOTE: The speed reached for a specific current will be lower in case of network undervoltage in comparison with nominal network voltage.

Working at Constant Torque up to 87Hz

Depending of the motor isolation class, it is possible to supply motor with a voltage greater than one specified for its coupling.

For example, a 230/400 Vac motor wired and coupled (in delta) to work at 230 Vac / 50 Hz can be supplied at 400 V to work with constant torque up to 87 Hz.



Some motors have information on nameplate to work at 400 Vac / 87 Hz

To allow the high speed hoisting function working at 87 Hz, the following parameters must be configured as follows:

Step	Action
1	Configure [Max Frequency] f_{max} to 87 Hz.
2	Configure [High Speed] HSP to 87 Hz.
3	Configure [Nom Motor Current] n_{cr} with the nominal current for delta coupling written on motor nameplate.
4	Configure [Nominal Motor Freq] f_{r5} to 87 Hz.
5	Configure [Nom Motor Voltage] u_{n5} with the result of following formula: $UNS_{87Hz} = UNS_{50Hz} \times \frac{FRS_{87Hz}}{FRS_{50Hz}}$
6	Configure [Nominal Motor Speed] n_{5P} with the result of following formula: $NSP_{87Hz} = \frac{60}{n_p} \times 87 - \left(\frac{60}{n_p} \times 50 - NSP_{50Hz} \right)$ NOTE: With $n_p = \frac{FRS_{50Hz} \times 60}{NSP_{50Hz}}$ with $n_p \in \mathbb{N}$
7	Configure [Nominal motor power] n_{Pr} with the result of following formula: $NPR_{87Hz} = NPR_{50Hz} \times \frac{n_p NSP_{87Hz} + 30FRS_{87Hz}}{n_p NSP_{50Hz} + 30FRS_{50Hz}}$ NOTE: With $n_p = \frac{FRS_{50Hz} \times 60}{NSP_{50Hz}}$ with $n_p \in \mathbb{N}$
8	Perform an autotuning of the motor by setting [Autotuning] t_{un} to value [Yes] YES .

Rope Slack

The Rope slack function can be used to help to prevent starting up at high speed when a load has been set down ready for lifting but the rope is still slack (as illustrated below).

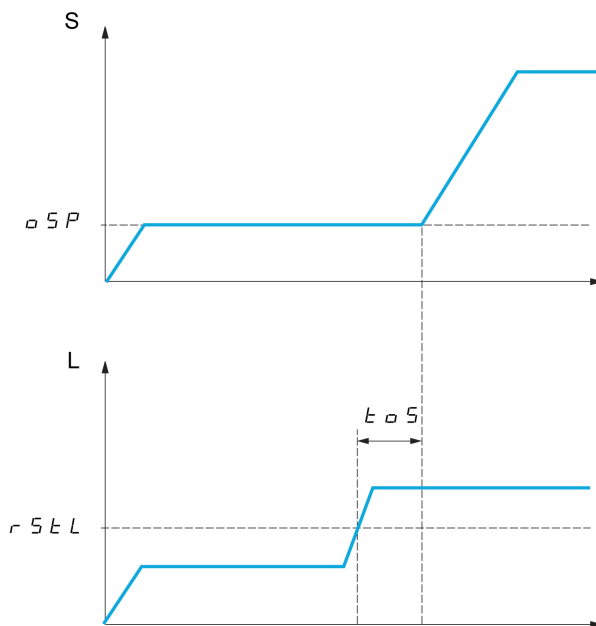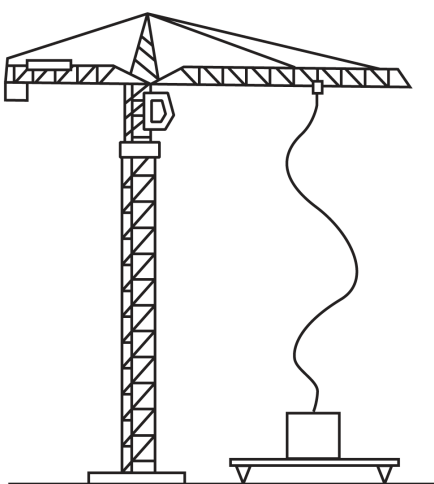

S Speed

L Load

The speed step (OSP parameters) is used to measure the load. The effective measurement cycle will not be triggered until the load reaches the adjustable threshold **[Rope slack trq level] 5 5 5**, which corresponds to the weight of the hook.

A digital output or a relay can be assigned to the indication of the Rope slack state in the **[Input/Output] 5 5 5** menu.

NOTE: The speed reached for a specific current will be lower in case of network undervoltage in comparison with nominal network voltage.

[High speed hoisting] 5 5 5

High Speed Optimized activation function.

Setting	Code / Value	Description
[No]	0 0	Function inactive Factory setting
[Reference Frequency]	5 5 0	Speed reference mode
[Current Limit]	5 5 0	Current limitation mode

[Motor speed coeff.] 5 5 5 ★

Coefficient Optimize Forward (motor quadrant).

This parameter can be accessed if **[High speed hoisting] 5 5 5** is set to **[Speed ref] 5 5 0**.

Setting ()	Description
0...100%	Setting range Factory setting: 100%

[Gen. speed coeff] 5 5 5 ★

Coefficient Optimize Reverse (generator quadrant).

This parameter can be accessed if **[High speed hoisting] 5 5 5** is not set to **[No] 0 0**.

Setting ()	Description
0...100%	Setting range Factory setting: 50%

[Load measuring tm.] 5 5 5 ★

Torque measuring time.

This parameter can be accessed if **[High speed hoisting] 5 5 5** is not set to **[No] 0 0**.

Setting ()	Description
0.10...65.00 s	Setting range Factory setting: 0.50 s

[Measurement spd] 0 5 P ★

Optimize Speed.

This parameter can be accessed if [High speed hoisting] H 5 0 is not set to [No] n 0.

Setting ()	Description
0.0...599.0 Hz	Setting range Factory setting: 40 Hz

[High speed I Limit] C L 0 ★

Current Limitation Optimize.

This parameter can be accessed if [High speed hoisting] H 5 0 is set to [I Limit] C 5 0.

NOTE: If the setting is less than 0.25 I_n, the drive may lock in [Output Phase Loss] 0 P L error if this has been enabled.

Setting ()	Description
0...1.1 I _n ⁽¹⁾	Setting range Factory setting: I _n ⁽¹⁾
⁽¹⁾ I _n corresponds to the rated drive current indicated in the Installation Manual and on the drive nameplate.	

[I Limit. frequency] 5 C L ★

Frequency threshold, above which the high-speed limitation current is active.

This parameter can be accessed if [High speed hoisting] H 5 0 is set to [I Limit] C 5 0.

Setting ()	Description
0.0...599.0 Hz	Setting range Factory setting: 40.0 Hz

[Rope slack config.] r 5 d ★

Load measurement feedback.


This parameter can be accessed if [High speed hoisting] H 5 0 is not set to [No] n 0.

Setting	Code / Value	Description
[No]	n 0	Function inactive Factory setting
[Weight Estimation]	d r i	Measurement of the load by estimating the torque generated by the drive
[Ext Weight Sensor]	P E 5	Measurement of the load using a weight sensor. It can only be assigned if [Ext Weight Sensor] P E 5 is not set to [Not configured] n 0.

[Rope slack trq level] [r 5 L L](#) ★

Adjustment threshold corresponding to a load weighing slightly less than the hook when off-load, as a % of the rated load.

This parameter can be accessed if **[Rope slack config.]** [r 5 d](#) has been assigned.

Setting 	Description
0...100%	Setting range Factory setting: 0%


[Load Sharing] L d 5 - Menu

Access



[Complete settings] → [Hoisting Functions] → [Load Sharing]

About This Menu

Principle:

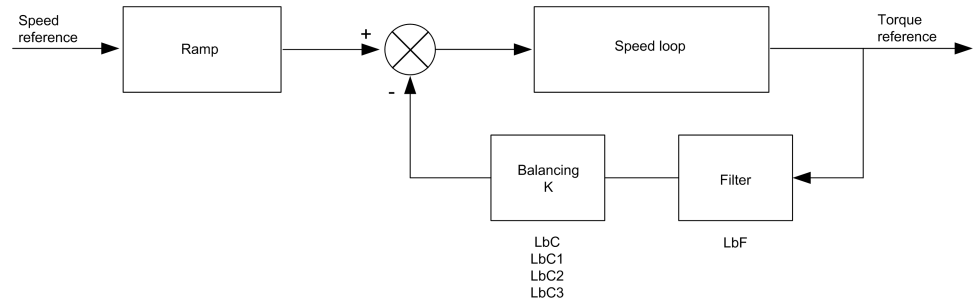

The load sharing factor K is determined by the torque and speed, with two factors K1 and K2 ($K = K1 \times K2$).

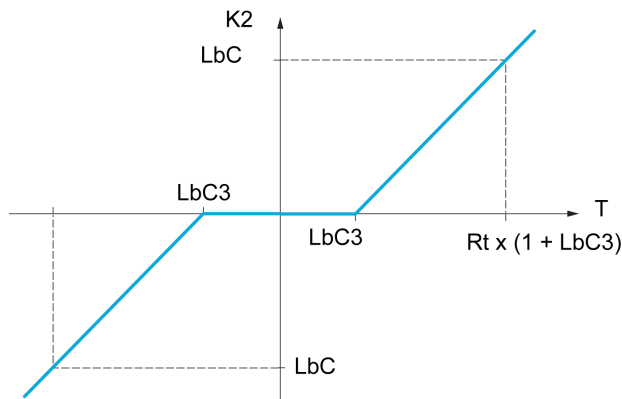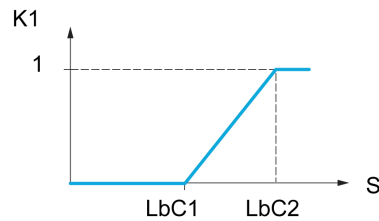

S Speed

T Torque

Rt Rated torque

[Load sharing] L b A

Load balancing configuration

When 2 motors are connected mechanically and therefore at the same speed, and each is controlled by a drive, this function can be used to improve torque distribution between the two motors. To do this, it varies the speed based on the torque.


This parameter can only be accessed if [Motor control type] L L L is set to [SVC V] V V L or [FVC] F V L or [Sync. mot]. 5 4 n or [Sync.CL] F 5 4.

Setting	Code / Value	Description
[No]	n o	Function inactive Factory setting
[Yes]	y e s	Function active

[Load correction] L b C

Nominal speed load balance correction.

This parameter can be accessed if [Load sharing] L b R is set to [Yes] y e s.

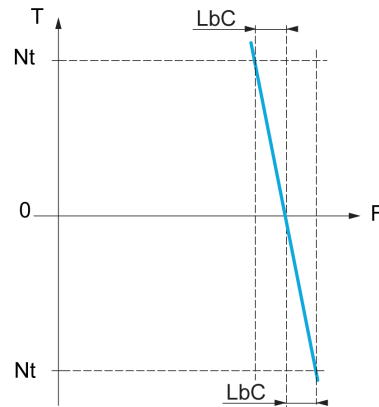

T Torque

t Nominal torque

F Frequency

Setting	Description
0...1000.0 Hz	Setting range Factory setting: 0.0 Hz

[Correction min spd] L b C 1

Low Speed for torque decreasing function speed reference

Minimum speed for load correction in Hz. Below this threshold, no corrections are made. Used to prevent correction at very low speed if this would hamper rotation of the motor.

This parameter can be accessed if [Access Level] L R C is set to [Expert] E P r and if [Load sharing] L b R = [Yes] y e s

Setting	Description
0...999.9 Hz	Setting range Factory setting: 0.0 Hz

[Correction max spd] L b C 2

High speed for torque decreasing function speed reference.

Speed threshold in Hz above which maximum load correction is applied.

This parameter can be accessed if [Access Level] L R C is set to [Expert] E P r and if [Load sharing] L b R = [Yes] y e s

Setting	Description
L b C 1 Hz at 1000.0 Hz	Setting range Factory setting: 0 Hz

[Torque offset] L b C 3

Torque offset for torque correction.

Minimum torque for load correction as a % of the rated torque. Below this threshold, no corrections are made. Used to avoid torque instabilities when the torque direction is not constant.

This parameter can be accessed if **[Access Level] L R C** is set to **[Expert] E P r** and if **[Load sharing] L b R = [Yes] Y E 5**

Setting	Description
0...300%	Setting range Factory setting: 0%

[Sharing filter] L b F

Time constant filter.

This parameter can be accessed if **[Load sharing] L b R = [Yes] Y E 5** and if **[Access Level] L R C** is set to **[Expert] E P r**. Used in the event of flexible mechanical coupling in order to avoid instabilities.

Setting	Description
100...20000 ms	Setting range Factory setting: 100 ms

[Rope Slack Handling] \mathcal{S} \mathcal{D} \mathcal{R} - Menu**Access**

[Complete settings] → [Hoisting Functions] → [Rope Slack Handling]

About This Menu

This menu can be accessed if [High speed hoisting] \mathcal{H} \mathcal{S} \mathcal{D} is not set to [No] \mathcal{N} \mathcal{O} .

[Rope slack config.] \mathcal{R} \mathcal{S} \mathcal{D} ★

Load measurement feedback.

Setting	Code / Value	Description
[No]	\mathcal{N} \mathcal{O}	Function not active Factory setting
[Weight Estimation]	\mathcal{D} \mathcal{R} \mathcal{I}	Drive motor torque estimation
[Ext Weight Sensor]	\mathcal{P} \mathcal{E} \mathcal{S}	Measurement of the load using a weight sensor. It can only be assigned if [Ext Weight Sensor] \mathcal{P} \mathcal{E} \mathcal{S} is not set to [Not configured] \mathcal{N} \mathcal{O} .

[Rope slack trq level] \mathcal{R} \mathcal{S} \mathcal{L} ★

Torque level for rope slack detection.

This parameter can be accessed if [Rope slack config.] \mathcal{R} \mathcal{S} \mathcal{D} is not set to [No] \mathcal{N} \mathcal{O} .

Setting	Description
0...100%	Setting range Factory setting: 0%

[Hoisting monitoring]

[Dynamic load detect.] dLd - Menu

Access

[Complete settings] \rightarrow [Hoisting monitoring] \rightarrow [Dynamic load detect.]

About This Menu

This detection is only possible with the high-speed hoisting function. It can be used to detect if an obstacle has been reached, triggering a sudden (upward) increase or (downward) decrease in the load.

Load variation detection triggers a **[Dynamic Load Error]** $dL F$. The **[Dyn. load Mgt.]** $dL b$ parameter can be used to configure the response of the drive in the event of this detected error.

Load variation detection can also be assigned to a relay or a digital output.

There are two possible detection modes, depending on the configuration of high-speed hoisting:

- Speed reference mode

[High speed hoisting] $H5 a$ is set to **[Speed ref]** $55 a$.

Torque variation detection.

During high-speed operation, the load is compared to that measured during the speed step. The permissible load variation and its duration can be configured. If exceeded, an error is triggered.

- Current limitation mode

[High speed hoisting] $H5 a$ is set to **[Current Limit]** $\llcorner 5 a$. On ascend, during high-speed operation, an increase in load will result in a drop in speed. Even if high-speed operation has been activated, if the motor frequency drops below the **[I Limit Frequency]** $\llcorner \llcorner L$ threshold, an error is triggered. The detection is realized only for a positive variation of the load and only in the high-speed area (area upper to **[I Limit Frequency]** $\llcorner \llcorner L$). On descend, operation takes the form of speed reference mode.

[Dynamic load time] tLd

Activation of load variation detection and adjustment of time delay for taking load variation detected an error **[Dynamic Load Error]** $dL F$ into account.

Setting	Code / Value	Description
[No]	$n a$	No load variation detection Factory setting
0.00...10.00 s		Adjustment of the time delay for taking detected an error into account.

[Dyn. load threshold] dLd

Adjustment of the trip threshold for load variation detection, as a % of the load measured during the speed step.

Setting ⌚	Description
1...100%	Setting range Factory setting: 100%

[Dyn. load Mgt.] d L b

Drive response in the event of a load variation detected error.

Setting	Code / Value	Description
[Ignore]	n o	Detected error ignored
[Freewheel Stop]	y e s	Freewheel stop Factory setting
[Per STT]	s t t	Stop according to [Type of stop] s t t parameter but without an error triggered after stop
[Fallback Speed]	l f f	Change to fallback speed, maintained as long as the detected error persists and the run command has not been removed ⁽¹⁾
[Spd maintained]	r l s	Speed maintained as long as the detected error persists and the run command has not been removed ⁽¹⁾
[Ramp stop]	r n p	Stop on ramp
[Fast stop]	f s t	Fast stop

¹ Because, in this case, the detected error does not trigger a stop, it is recommended to assign a relay or logic output to its indication.

[Conveyor Functions]


[Load Sharing] L d 5 - Menu

Access



[Complete settings] → [Conveyor Functions] → [Load Sharing]

About This Menu

Principle:

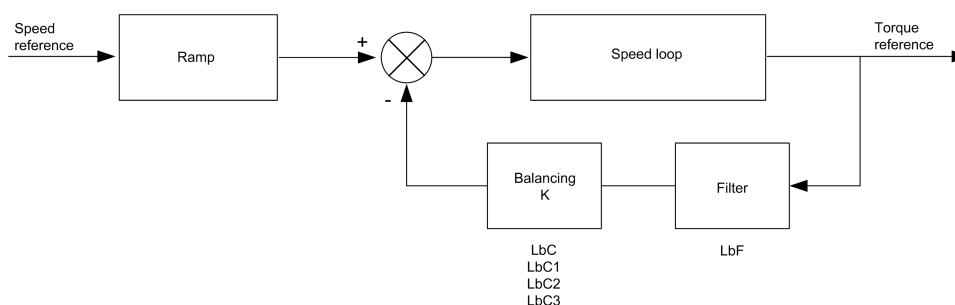

The load sharing factor K is determined by the torque and speed, with two factors K1 and K2 ($K = K1 \times K2$).

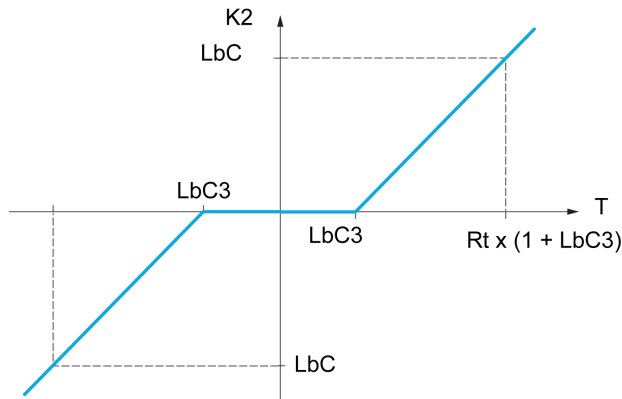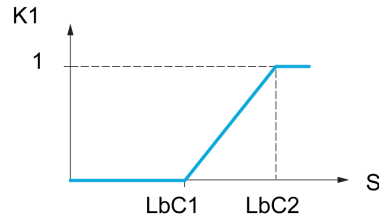

S Speed

T Torque

Rt Rated torque

[Load sharing] L b A ★

Load balancing configuration.

When 2 motors are connected mechanically and therefore at the same speed, and each is controlled by a drive, this function can be used to improve torque distribution between the two motors. To do this, it varies the speed based on the torque.

This parameters can be accessed if **[Motor control type] L E E** is set to:


- **[Sync. mot.] 5 Y n**, or
- **[Sync.CL.] F 5 Y**, or
- **[SVC V] v v L**, or
- **[FVC] F v L**.

Setting	Code / Value	Description
[No]	n o	Function inactive Factory setting
[Yes]	y e s	Function active

[Load correction] L b C ★

Nominal speed load balance correction.

This parameter can be accessed if **[Load sharing] L b A** is not set to **[No] n o**.

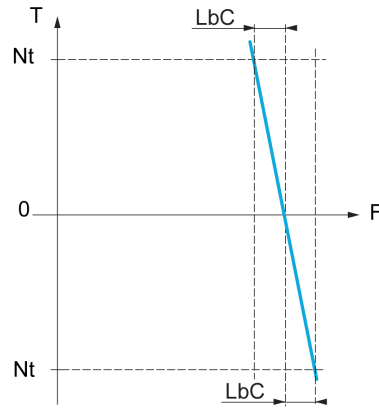

T Torque

Nt Nonimal torque

F Frequency

Setting	Description
0...1000.0 Hz	Setting range Factory setting: 0.0 Hz

[Correction min spd] L b C 1★

Low Speed for torque decreasing function speed reference.

Minimum speed for load correction in Hz. Below this threshold, no corrections are made. Used to prevent correction at very low speed if this would hamper rotation of the motor.

This parameter can be accessed if:

- **[Access Level] L A C** is set to **[Expert] E P r**, and
- **[Load sharing] L b R** is not set to **[No] n o**.

Setting	Description
0...999.9 Hz	Setting range Factory setting: 0.0 Hz

[Correction max spd] L b C 2★

High speed for torque decreasing function speed reference.

Speed threshold in Hz above which maximum load correction is applied.

This parameter can be accessed if:

- **[Access Level] L A C** is set to **[Expert] E P r**, and
- **[Load sharing] L b R** is not set to **[No] n o**.

Setting	Description
L b C 2 +0.1 Hz at 1000.0 Hz	Setting range Factory setting: 0.1 Hz

[Torque offset] L b C 3★

Torque offset for torque correction.

Minimum torque for load correction as a % of the rated torque. Below this threshold, no corrections are made. Used to avoid torque instabilities when the torque direction is not constant.

This parameter can be accessed if:

- **[Access Level]** *L A C* is set to **[Expert]** *E P r*, and
- **[Load sharing]** *L b A* is not set to **[No]** *n o*.

Setting	Description
0...300%	Setting range Factory setting: 0%

[Sharing filter] *L b F* ★

Time constant filter.

This parameter can be accessed if:

- **[Access Level]** *L A C* is set to **[Expert]** *E P r*, and
- **[Load sharing]** *L b A* is not set to **[No]** *n o*.

Setting	Description
100...20,000 ms	Setting range Factory setting: 100 ms

[Generic functions] - [Speed limits]

[Speed limits] S L 7 - Menu

Access

[Complete settings] → [Generic functions] → [Speed limits]

[Low Speed] L 5 P

Motor frequency at low speed.

Setting ()	Description
0.0...599.0 Hz	Setting range Factory setting: 0 Hz

[High Speed] H 5 P

Motor frequency at high speed.

To help prevent **[Motor Overspeed] S 0 F** error, it is recommended to have **[Max Frequency] L F r** equal to or higher than 110% of **[High Speed] H 5 P**.



Setting ()	Description
0.0...599.0 Hz	Setting range Factory setting: 50.0 Hz


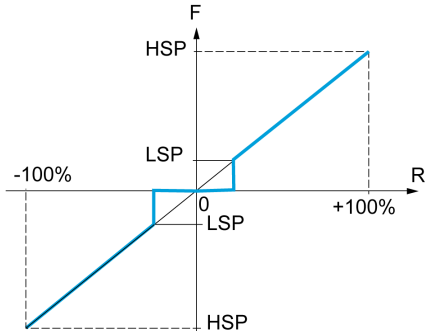
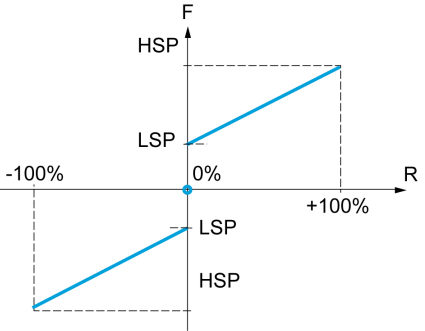
[Ref Freq Template] b 5 P

Low speed management (template).

This parameter defines how the speed reference is taken into account, for analog inputs and pulse input only. In the case of the PID controller, this is the PID output reference.

The limits are set by the **[Low speed] L 5 P** and **[High speed] H 5 P** parameters.

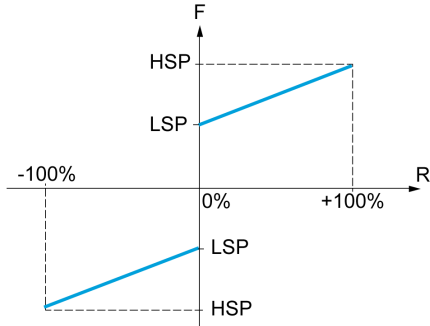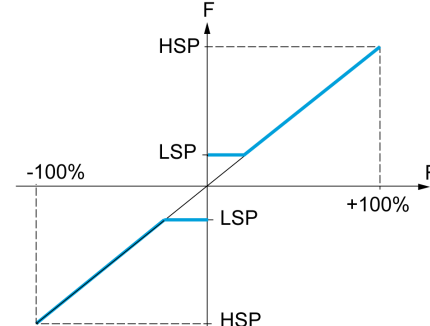Setting (↻)	Code / Value	Description
[Standard]	b 5 d	 <p>F Frequency</p> <p>R Reference At reference = 0, the frequency = [Low speed] L 5 P</p> <p>Factory setting</p>
[Pedestal]	b L 5	 <p>F Frequency</p> <p>R Reference At reference = 0 to [Low speed] L 5 P, the frequency = [Low speed] L 5 P</p>

Setting 	Code / Value	Description
[Deadband]	<i>b n 5</i>	 <p>F Frequency</p> <p>R Reference At reference = 0 to <i>L S P</i> the frequency = 0</p>
[Deadband at 0%]	<i>b n 5 0</i>	 <p>F Frequency</p> <p>R Reference This operation is the same as [Standard] <i>b 5 d</i>, except that in the following cases at zero reference, the frequency = 0: The signal is less than [Min value], which is greater than 0 (example: 1 Vdc on a 2–10 Vdc input). The signal is greater than [Min value], which is greater than [Max value] (example: 11 Vdc on a 10–0 Vdc input).</p> <p>If the input range is configured as “bidirectional”, the operation remains identical to [Standard] <i>b 5 d</i>.</p>

[Generic functions] - [Ramp]

[Ramp] r A P - Menu

Access

[Complete settings] → [Generic functions] → [Ramp]

[Ramp Type] r P t

Type of ramp.

Setting	Code / Value	Description
[Linear]	L 00	Linear ramp Factory setting
[S-Ramp]	S	S ramp
[U-Ramp]	u	U ramp
[Customized]	L u S	Customer ramp

[Ramp increment] i n r

This parameter is valid for [Acceleration] A C C, [Deceleration] d E C, [Acceleration 2] A C 2 and [Deceleration 2] d E 2.

Setting ()	Code / Value	Description
[0.01]	0.01	Ramp up to 99.99 seconds
[0.1]	0.1	Ramp up to 999.9 seconds Factory setting
[1]	1	Ramp up to 6,000 seconds

[Acceleration] A C C

Time to accelerate from 0 to the [Nominal Motor Freq] F r 5.


To have repeatability in ramps, the value of this parameter must be set according to the possibility of the application (for example, the inertia must be considered).

Setting ()	Description
0.00...6,000.00 s ⁽¹⁾	Setting range Factory setting: 3.00 s
(1) Range 0.01 to 99.99 s or 0.1 to 999.9 s or 1 to 6,000 according to [Ramp increment] i n r	

[Deceleration] d E C

Time to decelerate from the [Nominal Motor Freq] F r 5 to 0.

To have repeatability in ramps, the value of this parameter must be set according to the possibility of the application (for example, the inertia must be considered).


Setting 	Description
0.00...6,000.00 s ⁽¹⁾	Setting range Factory setting: 3.00 s
(1) Range 0.01 to 99.99 s or 0.1 to 999.9 s or 1 to 6,000 according to [Ramp increment] <i>r P 1</i>	

[Begin Acc round] E A 1★

Rounding of start of acceleration ramp as a percentage of the **[Acceleration]** *A C 1* or **[Acceleration 2]** *A C 2* ramp time.

Can be set from 0 to 100%.

This parameter can be accessed if the **[Ramp type]** *r P E* is set to **[Customized]** *C u 5*.


Setting 	Description
0...100%	Setting range Factory setting: 10%

[End Acc round] E A 2★

Rounding of end of acceleration ramp as a percentage of the **[Acceleration]** *A C 1* or **[Acceleration 2]** *A C 2* ramp time.

Can be set between 0 and (100% - **[Begin Acc round]** *E A 1*).

This parameter can be accessed if the **[Ramp type]** *r P E* is set to **[Customized]** *C u 5*.


Setting 	Description
0...100%	Setting range Factory setting: 10%

[Begin Dec round] E A 3★

Rounding of start of deceleration ramp as a percentage of the **[Deceleration]** *d E 1* or **[Deceleration 2]** *d E 2* ramp time.

Can be set from 0 to 100%.

This parameter can be accessed if the **[Ramp type]** *r P E* is set to **[Customized]** *C u 5*.


Setting 	Description
0...100%	Setting range Factory setting: 10%

[End Dec round] E A 4★

Rounding of end of deceleration ramp as a percentage of the **[Deceleration]** *d E 1* or **[Deceleration 2]** *d E 2* ramp time.


Can be set between 0 and (100% - **[Begin Dec round]** *E A 3*).

This parameter can be accessed if the **[Ramp type]** *r P E* is **[Customized]** *C u 5*.

Setting 	Description
0...100%	Setting range Factory setting: 10%

[Dec.Ramp Adapt] *brA*

Deceleration ramp adaptation.

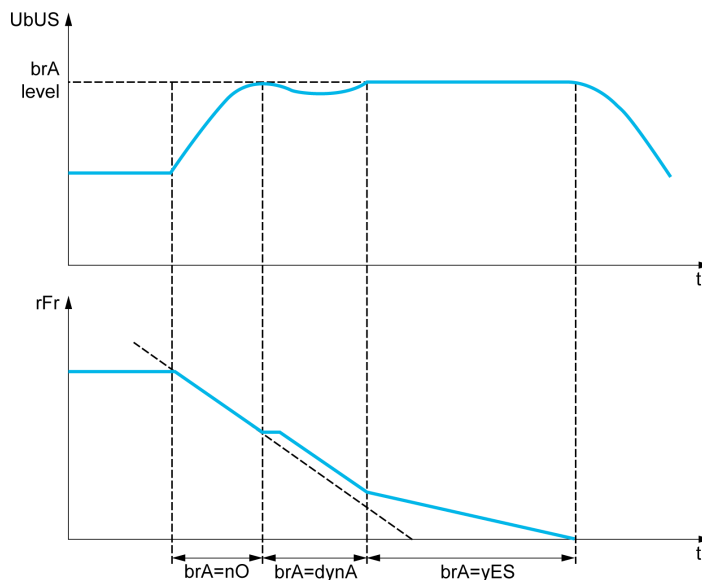

Activating this function automatically adapts the deceleration ramp, if this has been set at a too low value according to the inertia of the load, which can cause an overvoltage detected error.

The function is incompatible with applications requiring:

- Positioning on a ramp

NOTE: The factory setting value of the parameter is changed to **[No]** *no* if:

- **[ENA activation]** *EN A* is set to **[Yes]** *YES*, or
- **[DC Bus Source Type]** *DC b S* is set to **[Supply Unit AFE]** *S u R F* or **[Drive with AFE]** *P C E L H*.

NOTE: During generator mode with ATV9B0...Q6, if **[Dec.Ramp Adapt]** *brA* is equal to **[Yes]** *YES*, the drive may remain in current limitation state to stabilize the DC bus voltage.

Setting	Code / Value	Description
[No]	n o	Function inactive. NOTE: [Dec.Ramp Adapt] b r A if forced to [No] n o if: <ul style="list-style-type: none"> • [Brake assignment] b L C is configured, or • [Braking balance] b b A is set to [Yes], or • [Motor control type] C E E is set to [Reluctance Motor] S r V C and [Dec.Ramp Adapt] b r A was set to [High Torque] d Y n A.
[Yes]	Y E S	Function active, for applications that do not require strong deceleration Factory setting
[High Torque]	d Y n A	Addition of a constant current flow component. The [High Torque] d Y n A selection appears depending on the rating of the drive and [Motor control type] C E E . It enables stronger deceleration to be obtained than with [Yes] Y E S . Use comparative testing to determine your selection. When [Dec.Ramp Adapt] b r A is configured on [High Torque] d Y n A , the dynamic performances for braking are improved by the addition of a current flow component. The aim is to increase the iron loss and magnetic energy stored in the motor.

[Braking balance] b b A

Braking balance

This parameter is used to balance the braking power between drives linked through the DC bus.

This parameter is forced to [No] n o if [Dec.Ramp Adapt] b r A is set to a value different from [No] n o .

Setting ()	Code / Value	Description
[No]	n o	Function inactive. Factory setting
[Yes]	Y E S	Function active.

[Braking Resistor] b r C

Braking resistor connected.

NOTE: The factory setting value of the parameter is changed to [Yes] Y E S if [Brake assignment] b L C is configured.

Setting	Code / Value	Description
[No]	n o	Function inactive Factory setting NOTE: With this selection [DB unit op. circuit] b u F o error can't be triggered.
[Yes]	Y E S	Function active NOTE: This parameter is forced to [Yes] Y E S if: <ul style="list-style-type: none"> • [Dec.Ramp Adapt] b r A is set to [No] n o , and • [DC Bus Source Type] d C b S is set to [Not configured] n o , [Drive with AFE] P C E L H or [Drive with REC] P C P E .

[Braking Current Level] b d C L

Maximum braking current level.

This parameter modifies the maximum current level that can be reached during the adaptation of the braking deceleration. Increasing the maximum value increases the motor current loss via iron loss and magnetic energy stored in the motor.

It is expressed in % of nominal magnetizing current ([Magnetizing current] i d R).

This parameter can be accessed if:

- [Access Level] L A C is set to [Expert] E P r , and
- [Dec. Ramp Adapt] b r R is set to [High Torque] d Y n R.

Setting	Code / Value	Description
[Auto]	A u t o	Automatic: it corresponds to 125 %. Factory setting.
0.1...500.0%		Settings range.

[Generic functions] - [Ramp switching]

[Ramp switching] $r P \llcorner$ - Menu

Access

[Complete settings] \rightarrow [Generic functions] \rightarrow [Ramp switching]

[Ramp 2 Thd] $F r \llcorner$

Ramp 2 frequency threshold

The second ramp is switched if the value of [Ramp 2 Thd] $F r \llcorner$ is not 0 (0 deactivates the function) and the output frequency is greater than [Ramp 2 Thd] $F r \llcorner$.

Threshold ramp switching can be combined with [Ramp Switch Assign] $r P 5$ switching as follows:

DI or Bit	Frequency	Ramp
0	$< F r \llcorner$	$R C \llcorner, d E \llcorner$
0	$> F r \llcorner$	$R C 2, d E 2$
1	$< F r \llcorner$	$R C 2, d E 2$
1	$> F r \llcorner$	$R C 2, d E 2$

Setting \odot	Description
0.0...599.0 Hz	Setting range Factory setting: 0.0 Hz

[Ramp Switch Assign] $r P 5$

Ramp switching.

Setting	Code / Value	Description
[Not Assigned]	$n o$	Not assigned Factory setting
[DI1]...[DI8]	L, I, L, B	Digital input DI1...DI8
[DI11]...[DI16]	L, I, I, L, I, B	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	$C d 0 0, \dots, C d 1 0$	Virtual digital input CMD.0...CMD.10 in [I/O profile] \circ configuration
[CD11]... [CD15]	$C d 1 1, \dots, C d 1 5$	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	$C 1 0 1, \dots, C 1 1 0$	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] \circ configuration
[C111]... [C115]	$C 1 1 1, \dots, C 1 1 5$	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	$C 2 0 1, \dots, C 2 1 0$	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] \circ configuration
[C211]... [C215]	$C 2 1 1, \dots, C 2 1 5$	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	$C 3 0 1, \dots, C 3 1 0$	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] \circ configuration
[C311]... [C315]	$C 3 1 1, \dots, C 3 1 5$	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration

Setting	Code / Value	Description
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[Acceleration 2] A C 2 ★

Acceleration 2 ramp time.

Time to accelerate from 0 to the [Nominal Motor Freq] F r 5. To have repeatability in ramps, the value of this parameter must be set according to the possibility of the application.

This parameter can be accessed if [Ramp 2 Thd] F r 4 is greater than 0 or if [Ramp Switch Assign] r P 5 is assigned.

Setting ()	Description
0.0...6,000 s ⁽¹⁾	Setting range Factory setting: 5.0 s
(1) Range 0.01 to 99.99 s or 0.1 to 999.9 s or 1...6,000 s according to [Ramp increment] r n r .	

[Deceleration 2] d E 2 ★

Time to decelerate from the [Nominal Motor Freq] F r 5 to 0. To have repeatability in ramps, the value of this parameter must be set according to the possibility of the application.

This parameter can be accessed if:

- [Ramp 2 Thd] F r 4 is greater than 0, or
- [Ramp Switch Assign] r P 5 is assigned.

Setting ()	Description
0.0...6,000 s ⁽¹⁾	Setting range Factory setting: 5.0 s
(1) Range 0.01 to 99.99 s or 0.1 to 999.9 s or 1...6,000 s according to [Ramp increment] r n r .	

[Generic functions] - [Stop configuration]

[Stop configuration] 5 5 5 - Menu

Access

[Complete settings] → [Generic functions] → [Stop configuration]

About This Menu

NOTE: This function cannot be used with some other functions.

[Type of stop] 5 5 5

Normal stop mode.

Stop mode on disappearance of the run command or appearance of a stop command.

Setting	Code / Value	Description
[On Ramp]	r P P	Stop on ramp, if [Brake assignment] b L C or [Low speed time out] t L S are configured, or if [Motor fluxing] F L u is set to [Continuous] F C E only a [On Ramp] r P P is possible. Factory setting
[Fast stop]	F 5 5	Fast stop
[Freewheel]	n 5 5	Freewheel stop
[DC injection]	d C i	DC injection stop. Available if [Motor control type] C E E is not set to: <ul style="list-style-type: none"> • [Sync. mot.] S Y n, or • [Sync.CL.] F S Y, or • [SYN_U VC] S Y n u, or • [Reluctance Motor] S r V C

[Freewheel stop] n 5 5

Freewheel stop.

The stop is activated when the input or the bit changes to 0. If the input returns to state 1 and the run command is still active, the motor will only restart if [2/3-wire control] t C C is set to [2-Wire Control] z C and if [2-wire type] t C E is set to [Level] L E L or [Fwd priority] P F o. If not, a new run command must be sent.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[CD00]... [CD10]	C d 0 0... C d 1 0	Virtual digital input CMD0.0...CMD.10 in [I/O profile] i o configuration
[CD11]... [CD15]	C d 1 1... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] i o configuration
[C111]... [C115]	C 1 1 1... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] i o configuration

Setting	Code / Value	Description
[C211]... [C215]	C 2 1 1... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , 0 configuration
[C311]... [C315]	C 3 1 1... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , 0 configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration
[DI1 (Low level)]...[DI8 (Low level)]	L 1 L ... L 8 L	Digital input DI1...DI8 used at low level
[DI11 (Low level)]...[DI16 (Low level)]	L 1 1 L ... L 1 6 L	Digital input DI11...DI16 used at low level if VW3A3203 I/O extension module has been inserted
[DI52 (Low level)]...[DI59 (Low level)]	d 5 2 L ... d 5 9 L	Cabinet low level assignment digital inputs NOTE: This selection can be accessed on ATV960, ATV980 equipped with Cabinet IO.

[Freewheel stop Thd] F F E ★

Freewheel stop threshold.

Speed threshold below which the motor switches to freewheel stop.

This parameter supports switching from a ramp stop or a fast stop to a freewheel stop below a low speed threshold.

This parameter can be accessed if:

- [Type of stop] S E E is set to [Fast stop] F 5 E or [On Ramp] r P P, and
- [Auto DC Injection] R d C is configured, and
- [Brake Assignment] b L C is not configured.

Setting ()	Description
0.2...599.0 Hz	Setting range Factory setting: 0.2 Hz

[Fast stop Assign] F 5 E

Fast stop.

The stop is activated when the input changes to 0 or the bit changes to 1 (bit in [I/O profile] , 0 at 0).

If the input returns to state 1 and the run command is still active, the motor will only restart if [2/3-wire control] E C C is set to [2-Wire Control] 2 C and if [2-wire type] E C E is set to [Level] L E L or [Fwd priority] P F 0.

If not, a new run command must be sent.

NOTE: This function cannot be used with some other functions.

Setting	Code / Value	Description
[Not Assigned]	n 0	Not assigned Factory setting
[CD00]... [CD10]	C d 0 0... C d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] , 0 configuration

Setting	Code / Value	Description
[CD11]... [CD15]	C d 1 1... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , a configuration
[C111]... [C115]	C 1 1 1... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , a configuration
[C211]... [C215]	C 2 1 1... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , a configuration
[C311]... [C315]	C 3 1 1... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , a configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration
[D11 (Low level)]...[D18 (Low level)]	L 1 1 L ... L 1 8 L	Digital input D11...D18 used at low level
[D111 (Low level)]...[D116 (Low level)]	L 1 1 1 L ... L 1 1 6 L	Digital input D111...D116 used at low level if VW3A3203 I/O extension module has been inserted
[D152 (Low level)]...[D159 (Low level)]	d 5 2 L ... d 5 9 L	Cabinet low level assignment digital inputs NOTE: This selection can be accessed on ATV960, ATV980 equipped with Cabinet IO.

[Ramp Divider] d E F ★

Fast Stop deceleration ramp reduction coefficient.

The ramp that is enabled ([Deceleration] d E C or [Deceleration 2] d E 2) is then divided by this coefficient when stop requests are sent.

Value 0 corresponds to a minimum ramp time.

Setting ()	Description
0...10	Setting range Factory setting: 4

[DC Injection Assign] d E ,

DC injection brake assignment.

⚠ WARNING
<p>UNINTENDED MOVEMENT</p> <ul style="list-style-type: none"> Do not use DC injection to generate holding torque when the motor is at a standstill. Use a holding brake to keep the motor in the standstill position. <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p>

This parameter can be accessed if:

- Brake assignment] b L C is set to [No] n a , or

- Motor control type 5 5 5 is not set to [Sync. mot.] 5 4 n or [Sync.CL] F 5 4 or [Reluctance Motor] 5 r v l or [SYN_U VC] 5 4 n u.

DC injection braking is initiated when the assigned input or bit changes to state 1.

If the input returns to state 0 and the run command is still active, the motor will only restart if [2/3-wire control] 5 5 5 is set to [2-Wire Control] 2 5 and if [2-wire type] 5 5 5 is set to [Level] L E L or [Fwd priority] P F o. If not, a new run command must be sent.

NOTE: This function cannot be used with some other functions.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[DI1]...[DI8]	L , 1...L , 8	Digital input DI1...DI8
[DI11]...[DI16]	L , 1 1... L , 1 6	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	C d 0 0... C d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] , o configuration
[CD11]... [CD15]	C d 1 1... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , o configuration
[C111]... [C115]	C 1 1 1... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , o configuration
[C211]... [C215]	C 2 1 1... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , o configuration
[C311]... [C315]	C 3 1 1... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , o configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[DC inject. level 1] , d l ★

DC injection current.

NOTICE
OVERHEATING
Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time.
Failure to follow these instructions can result in equipment damage.

Level of DC injection braking current activated via digital input or selected as stop mode.

This parameter can be accessed if:

- [Type of stop] 5 5 5 is set to [DC injection] d l , , or
- [DC.Brake DI] d l , is not set to [No] n o.

Setting ()	Description
0.1...1.41 In ⁽¹⁾	Setting range This setting is independent of the [Auto DC Injection] <i>R d C</i> - function. Factory setting: 0.7 In ⁽¹⁾
(1) In corresponds to the rated drive current indicated in the Installation Manual and on the drive nameplate.	

[DC injection time 1] *t d 1* ★

DC injection time 1.

NOTICE	
OVERHEATING	
Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time.	
Failure to follow these instructions can result in equipment damage.	

Maximum current injection time [DC inject. level 1] *i d C 1*. After this time, the injection current becomes [DC inject. level 2] *i d C 2*.

This parameter can be accessed if:

- [Type of stop] *S t t* is set to [DC injection] *d C 1*, or
- [DC.Brake DI] *d C 1* is not set to [No] *n o*.

Setting ()	Description
0.1...30 s	Setting range This setting is independent of the [Auto DC Injection] <i>R d C</i> - function. Factory setting: 0.5 s

[DC inject. level 2] *i d C 2* ★

DC injection current 2.

NOTICE	
OVERHEATING	
Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time.	
Failure to follow these instructions can result in equipment damage.	

Injection current activated by digital input or selected as stop mode once period [DC injection time 1] *t d 1* has elapsed.

This parameter can be accessed if:

- [Type of stop] *S t t* is set to [DC injection] *d C 1*, or
- [DC Injection Assign] *d C 1* is not set to [No] *n o*.

Setting ()	Description
0.1 In ⁽¹⁾ ...[DC inject. level 1] , d C	Setting range This setting is independent of the [Auto DC Injection] A d C - function. Factory setting: 0.5 In ⁽¹⁾
(1) In corresponds to the rated drive current indicated in the Installation Manual and on the drive nameplate.	

[DC Inj Time 2] 5 d C ★

2nd DC injection time.

NOTICE	
OVERHEATING	
Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time.	
Failure to follow these instructions can result in equipment damage.	

Maximum injection time [DC inject. level 2] , d C 2 for injection, selected as stop mode only.

This parameter can be accessed if [Type of stop] 5 5 5 is set to [DC injection] d C 1.

Setting ()	Description
0.1...30 s	Setting range This setting is independent of the [Auto DC Injection] A d C - function. Factory setting: 0.5 s

[SwitchOnDisable Stp] d o 5 d

Disable operation stop mode.

Setting	Code / Value	Description
[Freewheel Stop]	n 5 5	The drive stops in freewheel when switching from the operating state Operation enabled to the operating state Switched on.
[Ramp Stop]	r n P	The drive stops on ramp when switching from the operating state Operation enabled to the operating state Switched on. Factory setting

[Generic functions] - [Auto DC injection]

[Auto DC injection] R d C - Menu

Access


[Complete settings] → [Generic functions] → [Auto DC injection]

About This Menu

This menu presents the automatic injection of motor current function. This is used to hold the rotor of the motor at the end of the deceleration ramp.

[Auto DC Injection] R d C

Automatic DC Injection.


 DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

If the parameter **[Auto DC Injection] R d C** is set to **[Continuous] C E**, DC injection is always active, even if the motor does not run.

- Verify that using this setting does not result in unsafe conditions.

Failure to follow these instructions will result in death or serious injury.

 WARNING

UNINTENDED MOVEMENT


- Do not use DC injection to generate holding torque when the motor is at a standstill.
- Use a holding brake to keep the motor in the standstill position.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Automatic current injection on stopping (at the end of the ramp).

NOTE: There is an interlock between this function and **[Motor fluxing] F L u**. If **[Motor fluxing] F L u** is set to **[Continuous] F C E**, **[Auto DC Injection] R d C** must be **[No] n o**.

[Auto DC Injection] R d C is forced to **[No] n o** when **[Brake assignment] b L C** is not set to **[No] n o**. This parameter gives rise to the injection of current even if a run command has not been sent.

Setting 	Code / Value	Description
[No]	n o	No injection Factory setting
[Yes]	y e s	Adjustable injection time
[Continuous]	C E	Continuous standstill injection

[Auto DC inj Level 1] S d C I★

Auto DC injection level 1.

NOTICE
<p>OVERHEATING</p> <p>Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time.</p> <p>Failure to follow these instructions can result in equipment damage.</p>

Level of standstill DC injection current.

This parameter can be accessed if:

- **[Auto DC Injection] R d C** is not set to **[No] n o**, and
- **[Motor control type] C E E** is not set to **[FVC] F V C** or **[Sync.CL] F 5 Y**.

Setting ()	Description
0...1.1 In ⁽¹⁾	Setting range Factory setting: 0.7 In ⁽¹⁾
(1) In corresponds to the rated drive current indicated in the Installation Manual and on the drive nameplate.	

[Auto DC Inj Time 1] E d C 1 ★

Auto DC injection time 1.

NOTICE
<p>OVERHEATING</p> <p>Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time.</p> <p>Failure to follow these instructions can result in equipment damage.</p>

This parameter can be accessed if **[Auto DC Injection] R d C** is not set to **[No] n o**.

This time corresponds to the zero speed maintenance time, if **[Motor control type] C E E** is set to:

- **[Sync. mot.] 5 Y n**, or
- **[Sync.CL.] F 5 Y**, or
- **[SYN_U VC] 5 Y n u**, or
- **[Reluctance Motor] 5 r V C**

Setting ()	Description
0.1...30.0 s	Setting range Factory setting: 0.5 s

[Auto DC inj Level 2] 5 d C 2 ★

Auto DC injection level 2.

NOTICE
<p>OVERHEATING</p> <p>Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time.</p> <p>Failure to follow these instructions can result in equipment damage.</p>

Second level of standstill DC injection current.

This parameter can be accessed if:

- **[Auto DC Injection] R d C** is not set to **[No] n o**, and
- **Motor control type] C E E** is not set to **[FVC] F V C** or **[Sync.CL] F S Y**

Setting (C)	Description
0...1.1 In ⁽¹⁾	Setting range Factory setting: 0.5 In ⁽¹⁾
(1) In corresponds to the rated drive current indicated in the Installation Manual and on the drive nameplate.	

[Auto DC Inj Time 2] E d C 2★


Auto DC injection time 2.

NOTICE
<p>OVERHEATING</p> <p>Verify that the connected motor is properly rated for the DC injection current to be applied in terms of amount and time.</p> <p>Failure to follow these instructions can result in equipment damage.</p>

Second standstill injection time.

This parameter can be accessed if:

- **[Auto DC Injection] R d C** is set to **[Yes] Y E S**, and
- **[Motor control type] C E E** is not set to **[FVC] F V C** or **[Sync.CL] F S Y**.

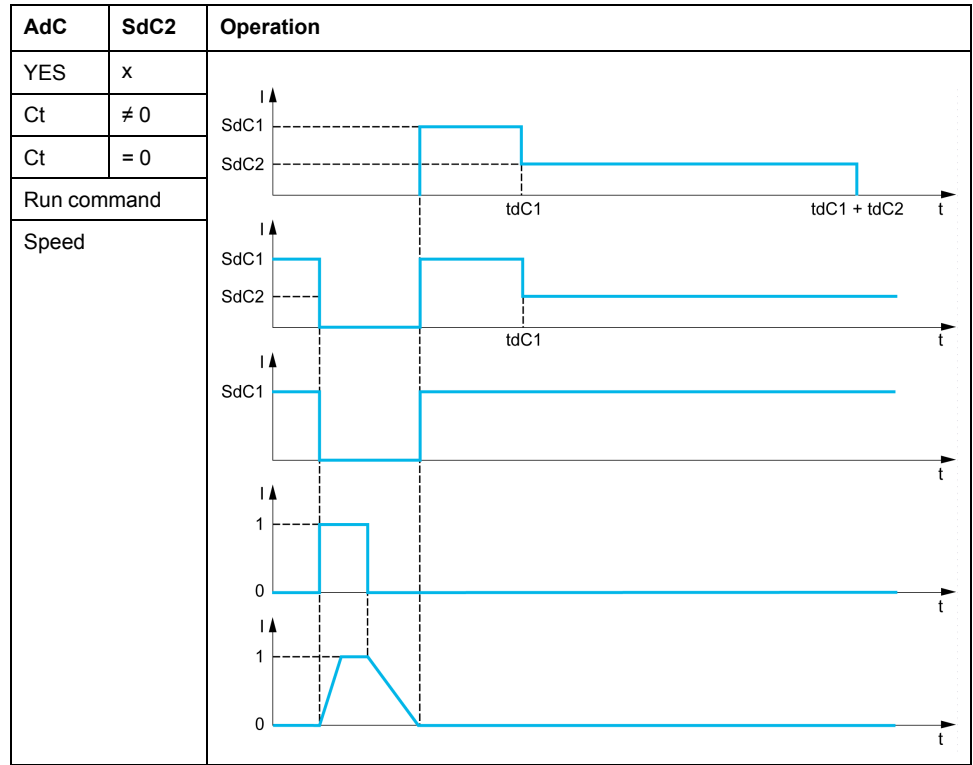

Setting	Description
0.0...30.0 s	Setting range Factory setting: 0.0 s

[Generic functions] - [Ref. operations]


[Ref. operations] *U S E* - Menu

Access

[Complete settings] → [Generic functions] → [Ref. operations]

About This Menu

Summing input / subtraction input / multiplier

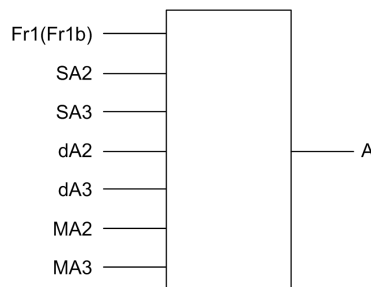

$$A = (Fr1 \text{ or } Fr1b + SA2 + SA3 - dA2 - dA3) \times MA2 \times MA3$$

NOTE:

- If *SA2*, *SA3*, *dA2*, *dA3* are not assigned, they are set to 0.
- If *MA2*, *MA3* are not assigned, they are set to 1.
- A is limited by the minimum *LSP* and maximum *HSP* parameters.
- For a multiplication, the signal on *MA2* or *MA3* is interpreted as a %. 100% corresponds to the maximum value of the corresponding input. If *MA2* or *MA3* is sent via the communication bus or Graphic Display Terminal, an *FFr* multiplication variable must be sent via the bus or Graphic Display Terminal.
- Reversal of the direction of operation in the event of a negative result can be blocked (see [Reverse Disable] *U S E*).

[Summing Input 2] *SA2*

Summing input 2.

Selection of a reference to be added to [Ref Freq 1 Config] *Fr1* or [Ref.1B channel] *Fr1b*.

Setting	Code / Value	Description
[Not Configured]	<i>no</i>	Not assigned Factory Setting
[AI1]	<i>A1</i>	Analog input AI1
[AI2]...[AI3]	<i>A2</i> ... <i>A3</i>	Analog input AI2...AI3
[AI4]...[AI5]	<i>A4</i> ... <i>A5</i>	Analog input AI4...AI5 if VW3A3203 I/O extension module has been inserted
[Ref. Freq- Rmt. Term]	<i>LLC</i>	Reference Frequency via remote terminal
[Ref. Freq- Modbus]	<i>ndb</i>	Reference frequency via Modbus
[Ref. Freq- CANopen]	<i>Can</i>	Reference frequency via CANopen if a CANopen module has been inserted
[Ref. Freq-Com. Module]	<i>net</i>	Reference frequency via fieldbus module if a fieldbus module has been inserted

Setting	Code / Value	Description
[Embedded Ethernet]	E E H	Embedded Ethernet
[AI Virtual 1]	A , V 1	Virtual analogic input 1
[DI7 PulseInput]...[DI8 PulseInput]	P , 7... P , 8	Digital input DI7...DI8 used as pulse input
[Encoder]	P G	Encoder reference if an encoder module has been inserted.

[Summing Input 3] S A 3

Summing input 3.

Selection of a reference to be added to [Ref Freq 1 Config] F r 1 or [Ref.1B channel] F r 1 b.

Identical to [Summing Input 2] S A 2

[Subtract Ref Freq 2] d A 2

Subtract reference frequency 2.

Selection of a reference to be subtracted from [Ref Freq 1 Config] F r 1 or [Ref.1B channel] F r 1 b.

Identical to [Summing Input 2] S A 2

[Subtract Ref Freq 3] d A 3

Subtract reference frequency 3.

Selection of a reference to be subtracted from [Ref Freq 1 Config] F r 1 or [Ref.1B channel] F r 1 b.

Identical to [Summing Input 2] S A 2.

[Ref Freq 2 Multiply] n A 2

Reference frequency 2 multiply (in % of the source range).

Selection of a multiplier reference [Ref Freq 1 Config] F r 1 or [Ref.1B channel] F r 1 b.

Identical to [Summing Input 2] S A 2.

[Ref Freq 3 Multiply] n A 3

Reference frequency 3 multiply (in % of the source range).

Selection of a multiplier reference [Ref Freq 1 Config] F r 1 or [Ref.1B channel] F r 1 b.

Identical to [Summing Input 2] S A 2.

[Generic functions] - [Preset speeds]

[Preset speeds] 5 5 - Menu

Access

[Complete settings] → [Generic functions] → [Preset speeds]

About This Menu

NOTE: This function cannot be used with some other functions.

Combination Table for Preset Speed Inputs

2, 4, 8 or 16 speeds can be preset, requiring 1, 2, 3 or 4 digital inputs respectively.

It is necessary to configure:

- 2 and 4 speeds in order to obtain 4 speeds.
- 2, 4 and 8 speeds in order to obtain 8 speeds.
- 2, 4, 8 and 16 speeds in order to obtain 16 speeds.

16 Preset Freq (PS16)	8 Preset Freq (PS8)	4 Preset Freq (PS4)	2 Preset Freq (PS2)	Speed Reference
0	0	0	0	Reference 1 ⁽¹⁾
0	0	0	1	SP2
0	0	1	0	SP3
0	0	1	1	SP4
0	1	0	0	SP5
0	1	0	1	SP6
0	1	1	0	SP7
0	1	1	1	SP8
1	0	0	0	SP9
1	0	0	1	SP10
1	0	1	0	SP11
1	0	1	1	SP12
1	1	0	0	SP13
1	1	0	1	SP14
1	1	1	0	SP15
1	1	1	1	SP16

(1) Reference 1 = 5 P 1, refer to diagram , page 205

[2 Preset Freq] 5 2

2 preset freq assignment.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[DI1]...[DI8]	L , I...L , B	Digital input DI1...DI8
[DI11]...[DI16]	L , I I... L , I B	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted

Setting	Code / Value	Description
[CD00]... [CD10]	C d 0 0... C d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] configuration
[CD11]... [CD15]	C d 1 1... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] configuration
[C111]... [C115]	C 1 1 1... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] configuration
[C211]... [C215]	C 2 1 1... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] configuration
[C311]... [C315]	C 3 1 1... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[4 Preset Freq] P 5 4

4 preset freq assignment.

Identical to **[2 Preset Freq] P 5 2**

To obtain 4 speeds, you must also configure 2 speeds.

[8 Preset Freq] P 5 8

8 preset freq assignment.

Identical to **[2 Preset Freq] P 5 2**

To obtain 8 speeds, you must also configure 2 and 4 speeds.

[16 Preset Freq] P 5 16


16 preset freq assignment.

Identical to **[2 Preset Freq] P 5 2**

To obtain 16 speeds, you must also configure 2, 4 and 8 speeds.

[Preset speed 2] 5 P 2 to [Preset speed 16] 5 P 16★

Preset speed 2 to preset speed 16. See the combination table for preset speed inputs, page 356.

Setting 	Description
0.0...599.0 Hz	<p>Setting range</p> <p>Factory setting:</p> <ul style="list-style-type: none">• [Preset speed 2] <i>SP 2</i>: 10.0 Hz• [Preset speed 3] <i>SP 3</i>: 15.0 Hz• [Preset speed 4] <i>SP 4</i>: 20.0 Hz• [Preset speed 5] <i>SP 5</i>: 25.0 Hz• [Preset speed 6] <i>SP 6</i>: 30.0 Hz• [Preset speed 7] <i>SP 7</i>: 35.0 Hz• [Preset speed 8] <i>SP 8</i>: 40.0 Hz• [Preset speed 9] <i>SP 9</i>: 45.0 Hz• [Preset speed 10] <i>SP 10</i>: 50.0 Hz• [Preset speed 11] <i>SP 11</i>: 55.0 Hz• [Preset speed 12] <i>SP 12</i>: 60.0 Hz• [Preset speed 13] <i>SP 13</i>: 70.0 Hz• [Preset speed 14] <i>SP 14</i>: 80.0 Hz• [Preset speed 15] <i>SP 15</i>: 90.0 Hz• [Preset speed 16] <i>SP 16</i>: 100.0 Hz

[Generic functions] - [+/- speed]

[+/- speed] u P d - Menu

Access

[Complete settings] → [Generic functions] → [+/- speed]

About This Menu

This function can be accessed if reference channel [Ref Freq 2 Config] F r 2 is set to [Ref Frequency via DI] u P d t

NOTE: This function cannot be used with some other functions.


2 types of operations are available:

- **Use of single action keys:** 2 digital inputs are required in addition to the operating directions.
The input assigned to the “+ speed” command increases the speed, the input assigned to the “– speed” command decreases the speed.
- **Use of double action keys:** Only one digital input assigned to “+ speed” is required.

+/- speed with double-press buttons:

Description: 1 button pressed twice (2 steps) for each direction of rotation. A contact closes each time the button is pressed.


Setting	Released (– Speed)	First Press (Speed Maintained)	Second Press (Faster)
Forward button	–	a	a and b
Reverse button	–	c	c and d

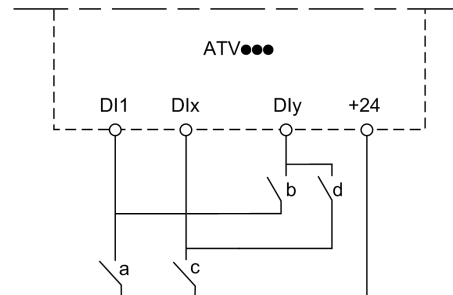

DI1 Forward

DIx Reverse

DIy + speed

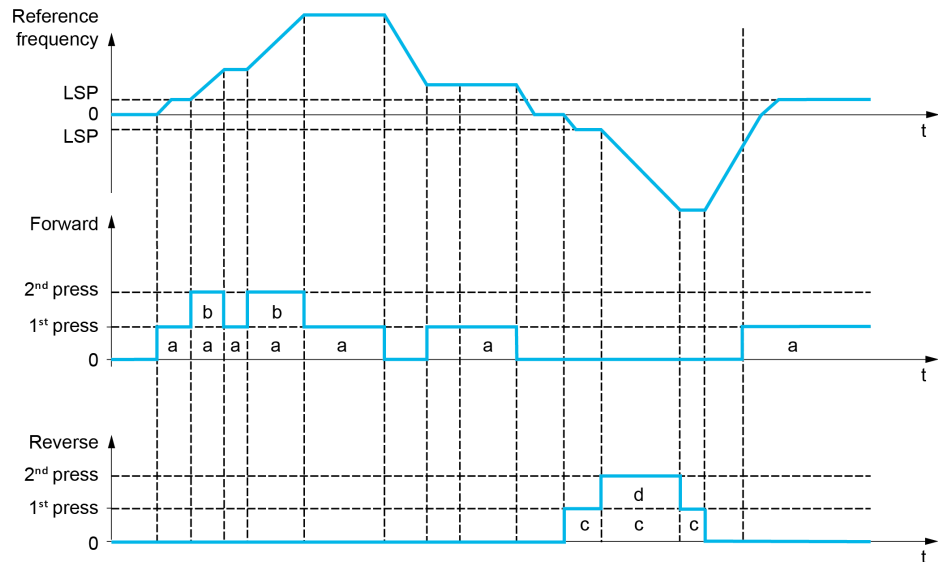

Do not use this +/- speed type with a 3-wire control.

Whichever type of operation is selected, the max. speed is set by **[High speed] H 5 P**.

NOTE: If the reference is switched via **[Freq Switch Assign] r F C** from any reference channel to another reference channel with "+/- speed", the value of reference **[Motor Frequency] r F r** (after ramp) may be copied at the same time in accordance with the **[Copy Ch1-Ch2] C o P** parameter.

This helps to prevent the speed from being incorrectly reset to zero when switching takes place.

[+ Speed Assign] u 5 P

Increase speed input assignment.

Function active if the assigned input or bit is at 1.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[DI1]...[DI8]	L , I ... L , B	Digital input DI1...DI8
[DI11]...[DI16]	L , I I ... L , I B	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	C d D 0 ... C d I 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] i o configuration
[CD11]... [CD15]	C d I I ... C d I 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C I D 1 ... C I I 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] i o configuration
[C111]... [C115]	C I I I ... C I I 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 D 1 ... C 2 I 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] i o configuration
[C211]... [C215]	C 2 I I ... C 2 I 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 D 1 ... C 3 I 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] i o configuration
[C311]... [C315]	C 3 I I ... C 3 I 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration

Setting	Code / Value	Description
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[- Speed Assign] d 5 P

Down speed input assignment. See the assignment conditions.

Parameter settings identical to **[+ Speed Assign] u 5 P**.

Function active if the assigned input or bit is at 1.

[Ref Frequency Save] 5 E r ★

Reference frequency saves. This parameter can be accessed if **[+ Speed Assign] u 5 P** is not set to **[Not Assigned] n o** or **[- Speed Assign] d 5 P** is not set to **[Not Assigned] n o**.

Associated with the "+/- speed" function, this parameter can be used to save the reference:

- When the run commands disappear (saved to RAM).
- When the supply mains or the run commands disappear (saved to EEPROM).

Therefore, next time the drive starts up, the speed reference is the last reference frequency saved.

Setting	Code / Value	Description
[No save]	n o	Not saved Factory setting
[Save to RAM]	r R Π	+/- speed with saving of the reference frequency in RAM
[Save to EEPROM]	E E P	+/- speed with saving of the reference frequency in EEPROM

[+/- Speed Reference] 5 r E

+/- Speed Reference selection.

This parameter can be accessed if **[+ Speed Assign] u 5 P** is not set to **[Not Assigned] n o** or **[- Speed Assign] d 5 P** is not set to **[Not Assigned] n o**.

This parameter can be used to select the type of +/- speed reference value.

Setting	Code / Value	Description
[Motor Speed]	n o	Frequency reference from motor frequency. Factory setting
[Reference Speed]	Y E 5	Frequency reference from the reference frequency.

[Generic functions] - [+/- speed around ref]

[+/- speed around ref] 5 5 5 - Menu

Access

[Complete settings] → [Generic functions] → [+/- speed around ref]

About This Menu


The function can be accessed for reference channel [Ref Freq 1 Config] F_{r1} .

NOTE: This function cannot be used with some other functions.

The reference is given by [Ref Freq 1 Config] F_{r1} or [Ref.1B channel] F_{r1B} with summing/subtraction/multiplication functions and preset speeds if relevant (see the diagram below).

For improved clarity, it calls this reference A. The action of the +speed and -speed keys can be set as a % of this reference A. On stopping, the reference (A +/- speed) is not saved, so the drive restarts with reference A+ only.

The maximum total reference is limited by [High Speed] HSP and the minimum reference by [Low Speed] LSP .

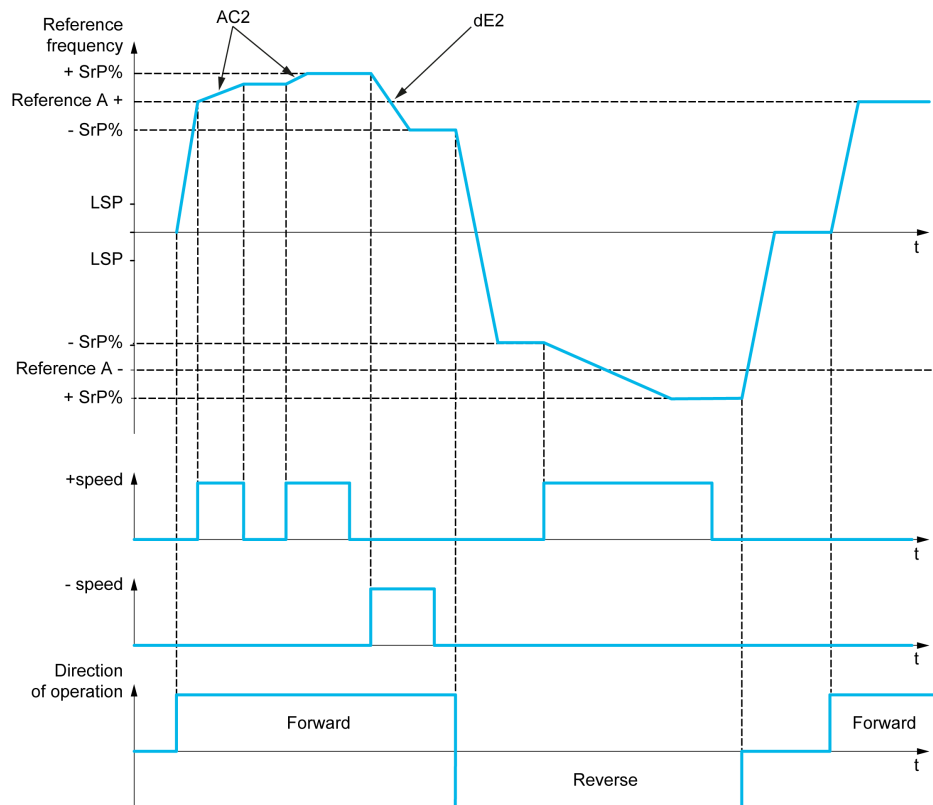

[+ Speed Assign] 5 5 5

Upper speed assignment.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[DI1]...[DI8]	L 1 1...L 1 B	Digital input DI1...DI8
[DI11]...[DI16]	L 1 1 1... L 1 1 B	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted

Setting	Code / Value	Description
[CD00]... [CD10]	C d 0 0... C d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] , 0 configuration
[CD11]... [CD15]	C d 1 1... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , 0 configuration
[C111]... [C115]	C 1 1 1... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , 0 configuration
[C211]... [C215]	C 2 1 1... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , 0 configuration
[C311]... [C315]	C 3 1 1... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , 0 configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[- Speed Assign] d 5 ,

Down speed assignment. See the assignment conditions.

Function active if the assigned input or bit is at 1.

Possible assignments: Identical to [+ Speed Assign] u 5 , (see above).

[+/-Speed limitation] 5 r P★

Up/Down speed limit.

This parameter limits the variation range with +/- speed as a % of the reference. The ramps used in this function are [Acceleration 2] A C 2 and [Deceleration 2] d E 2.

This parameter can be accessed if [+ Speed Assign] u 5 , or [- Speed Assign] d 5 , is not set to [No] n 0.


Setting ()	Description
0...50%	Setting range Factory setting: 10%

[Acceleration 2] A C 2★

Acceleration 2 ramp time.

Time to accelerate from 0 to the [Nominal Motor Freq] F r 5. To have repeatability in ramps, the value of this parameter must be set according to the possibility of the application.

This parameter can be accessed if [+ Speed Assign] u 5 , or [- Speed Assign] d 5 , is not set to [No] n 0.


Setting 	Description
0.00...6,000 s ⁽¹⁾	Setting range Factory setting: 5.00 s
(1) Range 0.01 to 99.99 s or 0.1 to 999.9 s or 1...6,000 s according to [Ramp increment] <i>U 0 0</i> .	

[Deceleration 2] *d E 2* ★

Deceleration 2.

Time to decelerate from the **[Nominal Motor Freq]** *F r 5* to 0. To have repeatability in ramps, the value of this parameter must be set according to the possibility of the application.

This parameter can be accessed if **[+ Speed Assign]** *U 5*, or **[- Speed Assign]** *d 5*, is not set to **[No]** *n 0*.

Setting 	Description
0.00...6,000 s ⁽¹⁾	Setting range Factory setting: 5.00 s
(1) Range 0.01 to 99.99 s or 0.1 to 999.9 s or 1...6,000 s according to [Ramp increment] <i>U 0 0</i> .	

[Generic functions] - [Jump frequency]

[Jump frequency] JUF - Menu

Access


[Complete settings] → [Generic functions] → [Jump frequency]

About This Menu

This function helps to prevent prolonged operation within an adjustable range around the regulated frequency.

This function can be used to help prevent reaching a frequency, which could cause resonance. Setting the parameter to 0 disables the function.

The following figure is an example of the jump frequency function with one skip frequency defined by [Skip Frequency] JPF:

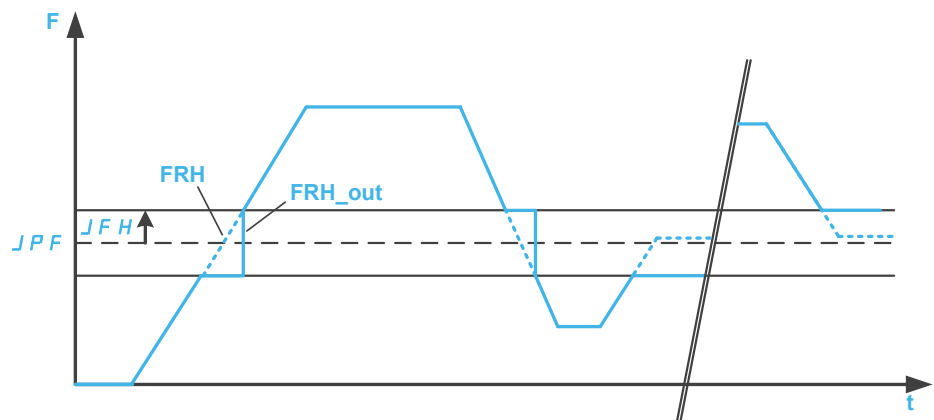

F Frequency

t time

JPF [Skip frequency]

JFH [Skip.Freq.Hysteresis]

FRH [Pre-Ramp Ref Freq]

FRH_out [Pre-Ramp Ref Freq] after the jump frequency function

[Skip Frequency] JPF

Jump frequency.

Setting ()	Description
0.0...599.0 Hz	Setting range Factory setting: 0.0 Hz


[Skip Frequency 2] JF2

Jump frequency 2.

Setting ()	Description
0.0...599.0 Hz	Setting range Factory setting: 0.0 Hz

[3rd Skip Frequency] JF3

Jump frequency 3.

Setting 	Description
0.0...599.0 Hz	Setting range Factory setting: 0.0 Hz


[Skip.Freq.Hysteresis] JFH★

Jump frequency bandwidth.

This parameter can be accessed if at least one skip frequency *JPF*, *JF2*, or *JF3* is different from 0.

Skip frequency range: between $JPF - JFH$ and $JPF + JFH$ for example.

This adjustment is common to the 3 frequencies *JPF*, *JF2*, *JF3*.

Setting 	Description
0.1...10.0 Hz	Setting range Factory setting: 1.0 Hz

[Generic functions] - [PID controller]


[PID controller] *P i d* - Overview

About This Menu

NOTE: This function cannot be used with some other functions.

Block Diagram

The function is activated by assigning an analog input to the PID feedback (measurement).

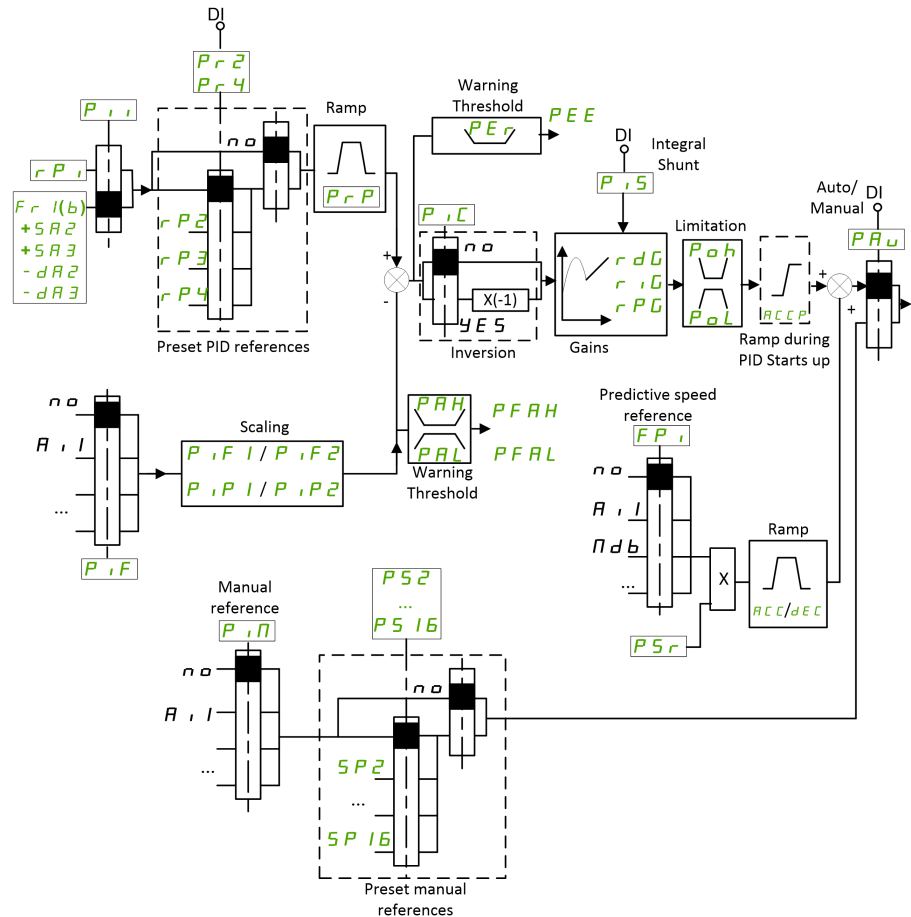

The PID feedback needs to be assigned to one of the analog inputs A11 to A15 or a pulse input, according to whether any I/O extension module has been inserted.

The PID reference needs to be assigned to the following parameters:

- Preset references via digital inputs ([Ref PID Preset 2] *r P 2*, [Ref PID Preset 3] *r P 3*, [Ref PID Preset 4] *r P 4*).
- In accordance with the configuration of [Intern PID Ref] *P i r*:
 - [Internal PID ref] *r P i*, or
 - Reference A [Ref Freq 1 Config] *F r 1* or [Ref.1B channel] *F r 1 b*.

Combination Table for Preset PID References:

DI (<i>P r 4</i>)	DI (<i>P r 2</i>)	<i>P r 2 = n o</i>	Reference
			<i>r P i</i> or <i>F r 1 b</i>
0	0		<i>r P i</i> or <i>F r 1 b</i>
0	1		<i>r P 2</i>

DI (Pr4)	DI (Pr2)	Pr2 = no	Reference
1	0		rP3
1	1		rP4

A predictive speed reference can be used to initialize the speed on restarting the process.

Scaling of feedback and references:


- **[Min PID feedback] P, F 1, [Max PID feedback] P, F 2** parameters can be used to scale the PID feedback (sensor range). **This scale MUST be maintained for all other parameters.**
- **[Min PID Process] P, P 1, [Max PID Process] P, P 2** parameters can be used to scale the adjustment range, for example the reference. **Check that the adjustment range remains within the sensor range.**

The maximum value of the scaling parameters is 32,767. To facilitate the installation, it is recommended to use values as close as possible to this maximum level, while retaining powers of 10 in relation to the actual values. The scaling is without unit if **[Type of control] E o C E** is set to **[NA] n B**, in % if set to **[OTHER] o E H E r**.

Example

Adjustment of the volume in a tank, 6...15 m³.

- Probe used 4-20 mA, 4.5 m³ for 4 mA and 20 m³ for 20 mA, with the result that **P, F 1** = 4,500 and **P, F 2** = 20,000.
- Adjustment range 6 to 15 m³, with the result that **P, P 1** = 6,000 (min. reference) and **P, P 2** = 15,000 (max. reference).
- Example references:
 - **r P 1** (internal reference) = 9,500
 - **r P 2** (preset reference) = 6,500
 - **r P 3** (preset reference) = 8,000
 - **r P 4** (preset reference) = 11,200

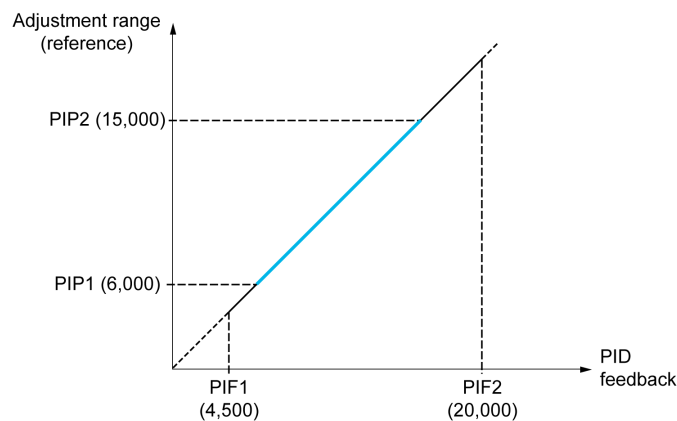

Other parameters:

- Reversal of the direction of correction **[PID Inversion] P, C**. If **[PID Inversion] P, C** is set to **[No] n o**, the speed of the motor increases when the detected error is positive (for example pressure control with a compressor). If **[PID Inversion] P, C** is set to **[Yes] y E 5**, the speed of the motor decreases when the detected error is positive (for example temperature control using a cooling fan).
- The integral gain may be short-circuited by a digital input.
- A warning on the **[PID feedback] P, F** may be configured.
- A warning on the **[PID error] r P E** may be configured.

"Manual - Automatic" Operation with PID

This function combines the PID controller, the preset speeds, and a manual reference. Depending on the state of the digital input, the speed reference is given by the preset speeds or by a manual reference input via the PID function.

Manual PID reference **[Manual PID reference]** P , Π:

- Analog inputs AI1 to AI5
- Pulse inputs

Predictive speed reference **[Predictive Speed Ref]** F P , :

- **[AI1]** R , 1: analog input
- **[AI2]** R , 2: analog input
- **[AI3]** R , 3: analog input
- **[AI4]** R , 4: analog input if VW3A3203 I/O extension module has been inserted
- **[AI5]** R , 5: analog input if VW3A3203 I/O extension module has been inserted
- **[DI7 PulseInput]** P , 7: pulse input
- **[DI8 PulseInput]** P , 8: pulse input
- **[Ref.Freq-Rmt.Term]** L C C : Graphic Display Terminal
- **[Modbus]** Π d b : integrated Modbus
- **[CANopen]** C R n : CANopen® (if inserted)
- **[Com. Module]** n E E : fieldbus option module (if inserted)
- **[Embedded Ethernet]** E E H : integrated Ethernet

Setting Up the PID Controller

1. Configuration in PID mode.

Refer to the Block Diagram, page 367.


2. Perform a test in factory settings mode.

To optimize the drive, adjust **[PID Prop.Gain]** r P G or **[PID Intgl.Gain]** r , G gradually and independently, and observe the effect on the PID feedback in relation to the reference.

3. If the factory settings are unstable or the reference is incorrect.

Step	Action
1	Perform a test with a speed reference in manual mode (without PID controller) and with the drive on load for the speed range of the system: <ul style="list-style-type: none"> • In steady state, the speed must be stable and comply with the reference, and the PID feedback signal must be stable. • In transient state, the speed must follow the ramp and stabilize quickly, and the PID feedback must follow the speed. If not, see the settings for the drive and/or sensor signal and wiring.
2	Switch to PID mode.
3	Set [PID ramp] P r P to the minimum permitted by the mechanism without triggering an [DC Bus Overvoltage] o b F.
4	Set the integral gain [PID Intgl.Gain] r , G to minimum.
5	Leave the derivative gain [PID derivative gain] r d G at 0.
6	Observe the PID feedback and the reference.
7	Switch the drive ON/OFF a number of times or vary the load or reference rapidly a number of times.
8	Set the proportional gain [PID Prop.Gain] r P G in order to ascertain the compromise between response time and stability in transient phases (slight overshoot and 1 to 2 oscillations before stabilizing).

Step	Action
9	If the reference varies from the preset value in steady state, gradually increase the integral gain [PID Intgl.Gain] $r_i G$, reduce the proportional gain [PID Prop.Gain] $r_p G$ in the event of instability (pump applications), find a compromise between response time and static precision (see diagram).
10	Lastly, the derivative gain may permit the overshoot to be reduced and the response time to be improved, although this is more difficult to obtain a compromise in terms of stability, as it depends on 3 gains.
11	Perform in-production tests over the whole reference range.

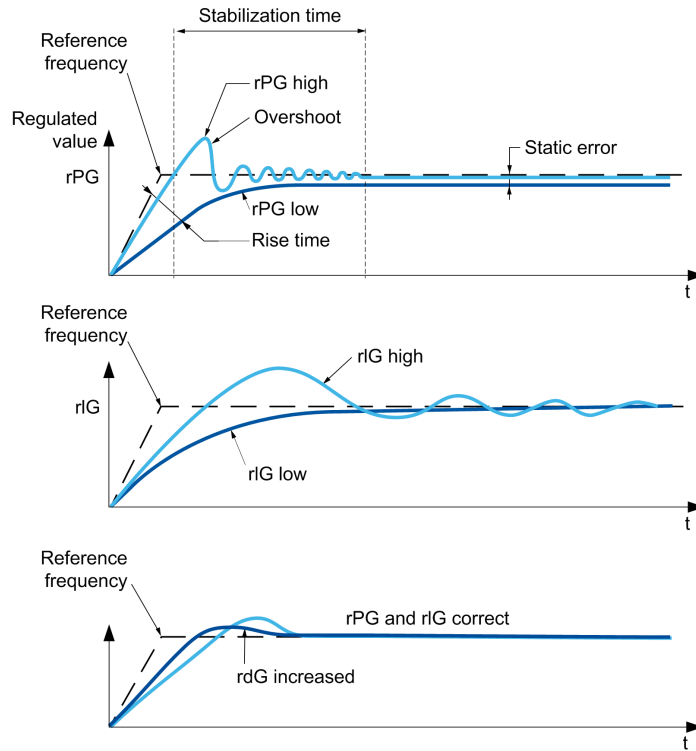

The oscillation frequency depends on the system kinematics:

Parameter	Rise time	Overshoot	Stabilization time	Static error
rPG +	--	+	=	-
rIG +	-	++	+	--
rdG +	=	-	-	=

[PID Feedback] *F d b* - Menu

Access

[Complete settings] → [Generic functions] → [PID controller] → [Feedback]

About This Menu

NOTE: This function cannot be used with some other functions.

[Type of Control] *U o C t*

Type of control for the PID = unit choice.

Setting	Code / Value	Description
[nA]	<i>n A</i>	No units Factory setting
[Other]	<i>o t h e r</i>	Other control and unit (%)

[PID Feedback] *P , F*

PID controller feedback.

Setting	Code / Value	Description
[No]	<i>n o</i>	Not assigned Factory setting
[AI1]...[AI3]	<i>A , 1...A , 3</i>	Analog input AI1...AI3
[AI4]...[AI5]	<i>A , 4...A , 5</i>	Analog input AI4...AI5 if VW3A3203 I/O extension module has been inserted
[AI Virtual 1]	<i>A , V I</i>	Virtual analogic input 1
[DI7 PulseInput]... [DI8 PulseInput]	<i>P , 7...P , 8</i>	Digital input DI7...DI8 used as pulse input
[Encoder]	<i>P G</i>	Encoder reference if an encoder module has been inserted.

[AI1 Type] *A , I t* ★

Configuration of analog input AI1.

This parameter can be accessed if [PID Feedback] *P , F* is set to [AI1] *A , I*.

Setting	Code / Value	Description
[Voltage]	<i>I D V</i>	0-10 Vdc Factory setting
[Current]	<i>D A</i>	0-20 mA

[AI1 min value] *u , L I* ★

AI1 voltage scaling parameter of 0%.

This parameter can be accessed if:

- [PID Feedback] *P , F* is set to [AI1] *A , I*, and
- [AI1 Type] *A , I t* is set to [Voltage] *I D V*.

Setting	Description
0.0...10.0 Vdc	Setting range Factory setting: 0.0 Vdc

[AI1 max value] U , H I ★

AI1 voltage scaling parameter of 100%.

This parameter can be accessed if:

- **[PID Feedback] P , F** is set to **[AI1] R , I**, and
- **[AI1 Type] R , I E** is set to **[Voltage] I O U**.

Setting	Description
0.0...10.0 Vdc	Setting range Factory setting: 10.0 Vdc

[AI1 min. value] C r L I ★

AI1 current scaling parameter of 0%.

This parameter can be accessed if:

- **[PID Feedback] P , F** is set to **[AI1] R , I**, and
- **[AI1 Type] R , I E** is set to **[Current] O R**.

Setting	Description
0.0...20.0 mA	Setting range Factory setting: 0.0 mA

[AI1 max. value] C r H I ★

AI1 current scaling parameter of 100%.

This parameter can be accessed if:

- **[PID Feedback] P , F** is set to **[AI1] R , I**, and
- **[AI Type] R , I E** is set to **[Current] O R**.

Setting	Description
0.0...20.0 mA	Setting range Factory setting: 20.0 mA

[AI1 range] R , I L ★

AI1 scaling selection.

This parameter can be accessed if:

- **[PID Feedback] P , F** is set to **[AI1] R , I**, and
- **[AI1 Type] R , I E** is set to **[Current] O R**

This parameter is forced to **[0-100%] P o 5** if:

- **[AI1 Type] R , I E** is not set to **[Current] O R**, or
- **[AI1 min. value] C r L I** is lower than 3.0 mA.

Setting	Code / Value	Description
[0-100%]	<i>P 0 5</i>	Unidirectional: AI1 current scaling is 0% up to 100%. Factory setting
[-/+100%]	<i>P 0 5 n E G</i>	Bidirectional: AI1 current scaling is -100% up to 100%. [AI1 min. value] <i>C r L I</i> corresponds to -100%. [AI1 max. value] <i>C r H I</i> corresponds to 100%.

[AI2 Type] *R , 2 E* ★

Configuration of analog input AI2.

This parameter can be accessed if **[PID Feedback] *P , F*** is set to **[AI2] *R , 2***

Setting	Code / Value	Description
[Voltage]	<i>1 0 u</i>	0-10 Vdc
[Voltage +/-]	<i>n 1 0 u</i>	-10/+10 Vdc Factory setting

[AI2 min value] *u , L 2* ★

AI2 voltage scaling parameter of 0%.

This parameter can be accessed if:

- **[PID Feedback] *P , F*** is set to **[AI2] *R , 2***, and
- **[AI2 Type] *R , 2 E*** is set to **[Voltage] *1 0 u***.

Identical to **[AI1 min value] *u , L 1***, page 371.

[AI2 max value] *u , H 2* ★

AI2 voltage scaling parameter of 100%.

This parameter can be accessed if:

- **[PID Feedback] *P , F*** is set to **[AI2] *R , 2***, and
- **[AI2 Type] *R , 2 E*** is set to **[Voltage] *1 0 u***.

Identical to **[AI1 max value] *u , H 1***, page 372.

[AI3 Type] *R , 3 E* ★

Configuration of analog input AI3.

This parameter can be accessed if **[PID Feedback] *P , F*** is set to **[AI3] *R , 3***.

Identical to **[AI2 Type] *R , 2 E***, page 372 with factory setting: **[Current] *0 R***.

[AI3 min value] *u , L 3* ★

AI3 voltage scaling parameter of 0%.

This parameter can be accessed if:

- **[PID Feedback] *P , F*** is set to **[AI3] *R , 3***, and
- **[AI3 Type] *R , 3 E*** is set to **[Voltage] *1 0 u***.

Identical to **[AI1 min value] *u , L 1***, page 371.

[AI3 max value] U , H 3 ★

AI3 voltage scaling parameter of 100%.

This parameter can be accessed if:

- **[PID Feedback] P , F** is set to **[AI3] R , 3**, and
- **[AI3 Type] R , 3 E** is set to **[Voltage] I 0 U**.

Identical to **[AI1 max value] U , H 1**, page 372.

[AI3 min. value] C r L 3 ★

AI3 current scaling parameter of 0%.

This parameter can be accessed if:

- **[PID Feedback] P , F** is set to **[AI3] R , 3**, and
- **[AI3 Type] R , 3 E** is set to **[Current] 0 R**.

Identical to **[AI1 min. value] C r L 1**, page 372.

[AI3 max. value] C r H 3 ★

AI3 current scaling parameter of 100%.

This parameter can be accessed if:

- **[PID Feedback] P , F** is set to **[AI3] R , 3**, and
- **[AI3 Type] R , 3 E** is set to **[Current] 0 R**.

Identical to **[AI1 max. value] C r H 1**, page 372.

[AI3 range] R , 3 L ★

AI3 scaling selection.

This parameter can be accessed if:

- **[PID Feedback] P , F** is set to **[AI3] R , 3**, and
- **[AI3 Type] R , 3 E** is set to **[Current] 0 R**

Identical to **[AI1 range] R , 1 L**, page 372.

[AI4 Type] R , 4 E ★

Configuration of analog input AI4.

This parameter can be accessed if:

- VW3A3203 I/O extension module has been inserted, and
- **[PID Feedback] P , F** is set to **[AI4] R , 4**.

Setting	Code / Value	Description
[Voltage]	I 0 U	0-10 Vdc
[Current]	0 R	0-20 mA Factory setting
[Voltage +/-]	n I 0 U	-10/+10 Vdc

[AI4 min value] U , L 4 ★

AI4 voltage scaling parameter of 0%.

This parameter can be accessed if:

- **[PID Feedback] P , F** is set to **[AI4] R , 4**, and
- **[AI4 Type] R , 4 E** is set to **[Voltage] I 0 u**.

Identical to **[AI1 min value] u , L 1**, page 371.

[AI4 max value] u , H 4★

AI4 voltage scaling parameter of 100%.

This parameter can be accessed if:

- **[PID Feedback] P , F** is set to **[AI4] R , 4**, and
- **[AI4 Type] R , 4 E** is set to **[Voltage] I 0 u**.

Identical to **[AI1 max value] u , H 1**, page 372.

[AI4 min. value] C r L 4★

AI4 current scaling parameter of 0%.

This parameter can be accessed if:

- **[PID Feedback] P , F** is set to **[AI4] R , 4**, and
- **[AI4 Type] R , 4 E** is set to **[Current] 0 R**.

Identical to **[AI1 min. value] C r L 1**, page 372.

[AI4 max. value] C r H 4★

AI4 current scaling parameter of 100%.

This parameter can be accessed if:

- **[PID Feedback] P , F** is set to **[AI4] R , 4**, and
- **[AI4 Type] R , 4 E** is set to **[Current] 0 R**.

Identical to **[AI1 max. value] C r H 1**, page 372.

[AI4 range] R , 4 L★

AI4 scaling selection.

This parameter can be accessed if:

- **[PID Feedback] P , F** is set to **[AI4] R , 4**, and
- **[AI4 Type] R , 4 E** is set to **[Current] 0 R**

Identical to **[AI1 range] R , 1 L**, page 372.

[AI5 Type] R , 5 E★

Configuration of analog input AI5.

This parameter can be accessed if:

- VW3A3203 I/O extension module has been inserted, and
- **[PID Feedback] P , F** is set to **[AI5] R , 5**.

Identical to **[AI4 Type] R , 4 E**.

[AI5 min value] u , L 5★

AI5 voltage scaling parameter of 0%.

This parameter can be accessed if:

- **[PID Feedback] P , F** is set to **[AI5] R , 5**, and

- **[AI4 Type] A , 5 E** is set to **[Voltage] I 0 U**.

Identical to **[AI1 min value] U , L I**, page 371.

[AI5 max value] U , H 5 ★

AI5 voltage scaling parameter of 100%.

This parameter can be accessed if:

- **[PID Feedback] P , F** is set to **[AI5] A , 5**, and
- **[AI4 Type] A , 5 E** is set to **[Voltage] I 0 U**.

Identical to **[AI1 max value] U , H I**, page 372.

[AI5 min. value] C r L 5 ★

AI5 current scaling parameter of 0%.

This parameter can be accessed if:

- **[PID Feedback] P , F** is set to **[AI5] A , 5**, and
- **[AI5 Type] A , 5 E** is set to **[Current] 0 A**.

Identical to **[AI1 min. value] C r L I**, page 372.

[AI5 max. value] C r H 5 ★

AI5 current scaling parameter of 100%.

This parameter can be accessed if:

- **[PID Feedback] P , F** is set to **[AI5] A , 5**, and
- **[AI5 Type] A , 5 E** is set to **[Current] 0 A**.

Identical to **[AI1 max. value] C r H I**, page 372.

[AI5 range] A , 5 L ★

AI5 scaling selection.

This parameter can be accessed if:

- **[PID Feedback] P , F** is set to **[AI5] A , 5**, and
- **[AI5 Type] A , 5 E** is set to **[Current] 0 A**.

Identical to **[AI1 range] A , I L**, page 372.

[Min PID feedback] P , F I ★

Minimum PID feedback.


This parameter can be accessed if **[PID Feedback] P , F** is not set to **[Not Configured] n o**.

Setting ()	Description
0... [Max PID feedback] P , F 2	Setting range Factory setting: 100

[Max PID feedback] P , F 2 ★

Maximum PID feedback.

This parameter can be accessed if **[PID Feedback] P , F** is not set to **[Not Configured] n o**.

Setting 	Description
[Min PID feedback] <i>P, F 1...32,767</i>	Setting range Factory setting: 1,000

[PID feedback] *r P F* ★

Value for PID feedback, display only.


This parameter can be accessed if **[PID Feedback]** *P, F* is not set to **[Not Configured]** *n a*.

Setting	Description
0...65,535	Setting range Factory setting: 0

[Min Fbk Warning] *P R L* ★

Minimum feedback level warning (for **[PID Low Fdbck Warn]** *P F R L* warning).


This parameter can be accessed if **[PID Feedback]** *P, F* is not set to **[Not Configured]** *n a*.

Setting 	Description
0...65,535	Setting range Factory setting: 100

[Max Fbk Warning] *P R H* ★

Maximum feedback level warning (for **[PID High Fdbck Warn]** *P F R H* warning).

This parameter can be accessed if **[PID Feedback]** *P, F* is not set to **[Not Configured]** *n a*.

Setting 	Description
0...65,535	Setting range Factory setting: 1,000

[PID Reference] *r F - Menu*

Access

[Complete settings] → [Generic functions] → [PID controller] → [PID Reference]

About This Menu

NOTE: This function cannot be used with some other functions.

[Intern PID Ref] *r P i* ★

Internal PID reference.

This parameter can be accessed if [PID Feedback] *r P i F* is not set to [Not Configured] *n o*.

Setting	Code / Value	Description
[No]	<i>n o</i>	The PID controller reference is given by [Ref Freq 1 Config] <i>F r 1</i> or [Ref.1B channel] <i>F r 1 b</i> with summing/subtraction/multiplication functions. Refer to the block diagram, page 221. Factory setting
[Yes]	<i>y e s</i>	The PID controller reference is internal via [Internal PID ref] <i>r P i</i> .

[Ref Freq 1 Config] *F r 1* ★

Configuration reference frequency 1.

This parameter can be accessed if:

- [PID Feedback] *r P i F* is not set to [Not Configured] *n o*, and
- [Intern PID Ref] *r P i* is set to [No] *n o*.

Setting	Code / Value	Description
[Not Configured]	<i>n o</i>	Not assigned
[AI1]	<i>A i 1</i>	Analog input AI1 Factory Setting
[AI2]...[AI3]	<i>A i 2</i> ... <i>A i 3</i>	Analog input AI2...AI3
[AI Virtual 1]	<i>A i v 1</i>	Virtual analogic input 1
[AI4]...[AI5]	<i>A i 4</i> ... <i>A i 5</i>	Analog input AI4...AI5 if VW3A3203 I/O extension module has been inserted
[Ref.Freq-Rmt. Term]	<i>L C C</i>	Reference Frequency via remote terminal
[Ref. Freq-Modbus]	<i>M d b</i>	Reference frequency via Modbus
[Ref. Freq-CANopen]	<i>C A n</i>	Reference frequency via CANopen if a CANopen module has been inserted
[Ref. Freq-Com. Module]	<i>n E E</i>	Reference frequency via fieldbus module if a fieldbus module has been inserted
[Embedded Ethernet]	<i>E E H</i>	Embedded Ethernet
[DI7 PulseInput]...[DI8 PulseInput]	<i>P i 7</i> ... <i>P i 8</i>	Digital input DI7...DI8 used as pulse input
[Encoder]	<i>P E</i>	Encoder reference if an encoder module has been inserted.

[Min PID reference] P , P 1★

Minimum PID reference.

This parameter can be accessed if **[PID Feedback] P , F** is not set to **[Not Configured] n o**.

Setting ()	Description
[Min PID feedback] P , F 1... [Max PID reference] P , P 2	Setting range Factory setting: 150

[Max PID reference] P , P 2★

Maximum PID reference.

This parameter can be accessed if **[PID Feedback] P , F** is not set to **[Not Configured] n o**.

Setting ()	Description
[Min PID reference] P , P 1... [Max PID feedback] P , F 2	Setting range Factory setting: 900

[Internal PID ref] r P , ★

Internal PID reference.

This parameter can be accessed if:

- **[PID Feedback] P , F** is not set to **[Not Configured] n o**, and
- **[Intern PID Ref] P , r** is set to **[Yes] y e s**.

Setting ()	Description
[Min PID reference] P , P 1... [Max PID reference] P , P 2	Setting range Factory setting: 150

[Auto/Manual assign.] P A u★

Auto/Manual select input.

This parameter can be accessed if **[PID Feedback] P , F** is not set to **[Not Configured] n o**.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[DI1]...[DI8]	L , 1...L , 8	Digital input DI1...DI8
[DI11]...[DI16]	L , 11... L , 16	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	C d 0 0... C d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] , o configuration
[CD11]... [CD15]	C d 1 1... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , o configuration
[C111]... [C115]	C 1 1 1... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration

Setting	Code / Value	Description
[C201]... [C210]	C 2 0 1... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , 0 configuration
[C211]... [C215]	C 2 1 1... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , 0 configuration
[C311]... [C315]	C 3 1 1... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , 0 configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[Manual PID Reference] P , n ★

Manual PID reference.

Reference input in manual mode.

This parameter can be accessed if:

- **[PID Feedback] P , F** is not set to **[Not Configured] n 0** , and
- **[Auto/Manual assign.] P R u** is not set to **[No] n 0** .

The preset speeds are active on the manual reference if they have been configured.

Setting	Code / Value	Description
[No]	n 0	Not assigned Factory setting
[AI1]...[AI3]	R , 1...R , 3	Analog input AI1...AI3
[AI4]...[AI5]	R , 4...R , 5	Analog input AI4...AI5 if VW3A3203 I/O extension module has been inserted
[Ref.Freq-Rmt.Term]	L C C	Display terminal source
[Ref. Freq-Modbus]	n d b	Reference frequency via Modbus
[Ref. Freq-CANopen]	C R n	Reference frequency via CANopen
[Ref. Freq-Com. Module]	n E E	Reference frequency via Com Module
[Embedded Ethernet]	E E H	Embedded Ethernet source
[DI7 PulseInput]... [DI8 PulseInput]	P , 7...P , 8	Digital input DI7...DI8 used as pulse input
[Encoder]	P G	Encoder reference if an encoder module has been inserted.

[PID preset references] *P r 1 - Menu*

Access

[Complete settings] → [Generic functions] → [PID controller] → [Reference frequency] → [PID preset references]

About This Menu

The function can be accessed if [PID feedback Assign] *P r F* is assigned.

[2 PID Preset Assign] *P r 2*

2 PID Preset assignment.

If the assigned input or bit is at 0, the function is inactive.

If the assigned input or bit is at 1, the function is active.

Setting	Code / Value	Description
[Not Assigned]	<i>n a</i>	Not assigned Factory setting
[DI1]...[DI8]	<i>L 1...L 8</i>	Digital input DI1...DI8
[DI11]...[DI16]	<i>L 11...L 16</i>	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	<i>C d 0 0...C d 1 0</i>	Virtual digital input CMD.0...CMD.10 in [I/O profile] <i>i o</i> configuration
[CD11]... [CD15]	<i>C d 1 1...C d 1 5</i>	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	<i>C 1 0 1...C 1 1 0</i>	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] <i>i o</i> configuration
[C111]... [C115]	<i>C 1 1 1...C 1 1 5</i>	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	<i>C 2 0 1...C 2 1 0</i>	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] <i>i o</i> configuration
[C211]... [C215]	<i>C 2 1 1...C 2 1 5</i>	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	<i>C 3 0 1...C 3 1 0</i>	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] <i>i o</i> configuration
[C311]... [C315]	<i>C 3 1 1...C 3 1 5</i>	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	<i>C 5 0 1...C 5 1 0</i>	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] <i>i o</i> configuration
[C511]... [C515]	<i>C 5 1 1...C 5 1 5</i>	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[4 PID Preset Assign] *P r 4*

4 PID Preset assignment.

Identical to [2 PID Preset Assign] *P r 2*, page 381.

Verify that [2 PID Preset Assign] *P r 2* has been assigned before assigning this function.

[Ref PID Preset 2] *r P 2*★

Second PID preset reference.

This parameter can be accessed only if **[2 PID Preset Assign] P r 2** is assigned.

Setting ()	Description
[Min PID reference] P , P 1... [Max PID reference] P , P 2	Setting range Factory setting: 300

[Ref PID Preset 3] r P 3★

Third PID preset reference.

This parameter can be accessed only if **[4 PID Preset Assign] P r 4** is assigned.

Setting ()	Description
[Min PID reference] P , P 1... [Max PID reference] P , P 2	Setting range Factory setting: 600

[Ref PID Preset 4] r P 4★

Fourth PID preset reference.

This parameter can be accessed only if **[4 PID Preset Assign] P r 4** and **[2 PID Preset Assign] P r 2** are assigned.

Setting ()	Description
[Min PID reference] P , P 1... [Max PID reference] P , P 2	Setting range Factory setting: 900

[PID Reference] *r F - Menu*

Access

[Complete settings] → [Generic functions] → [PID controller] → [PID Reference]

[Predictive Speed Ref] *F P , ★*

Predictive speed reference.

This parameter can be accessed if [Access Level] *L R L* is set to [Expert] *E P r*.

Setting	Code / Value	Description
[No]	<i>n o</i>	Not assigned Factory setting
[AI1]...[AI3]	<i>A , 1...A , 3</i>	Analog input AI1...AI3
[AI4]...[AI5]	<i>A , 4...A , 5</i>	Analog input AI4...AI5 if VW3A3203 I/O extension module has been inserted
[Ref.Freq-Rmt.Term]	<i>L L L</i>	Reference frequency via remote terminal
[Ref. Freq-Modbus]	<i>n d b</i>	Reference frequency via Modbus
[Ref. Freq-CANopen]	<i>C A n</i>	Reference frequency via CANopen
[Ref. Freq-Com. Module]	<i>n E L</i>	Reference frequency via communication module
[Embedded Ethernet]	<i>E t H</i>	Embedded Ethernet
[DI7 PulseInput]... [DI8 PulseInput]	<i>P , 7...P , 8</i>	Digital input DI7...DI8 used as pulse input
[Encoder]	<i>P G</i>	Encoder reference if an encoder module has been inserted.

[Speed Input %] *P S r ★*

PID speed input % reference.

This parameter can be accessed if [Access Level] *L R L* is set to [Expert] *E P r*.

Setting ()	Description
1...100%	Setting range Factory setting: 100%

[Settings] 5 5 - Menu**Access**

[Complete settings] → [Generic functions] → [PID controller] → [Settings]

About This Menu

Following parameters can be accessed if [PID Feedback] $P_r F$ is not set to [Not Configured] $n o$.

NOTE: This function cannot be used with some other functions.

[PID Prop.Gain] $r P G$ ★

PID proportional gain.

Setting ()	Description
0.01...100.00	Setting range Factory setting: 1.00

[PI Intgl.Gain] $r I G$ ★

Integral gain.

Setting ()	Description
0.01...100.00	Setting range Factory setting: 1.00

[PID derivative gain] $r d G$ ★

Derivative gain.

Setting ()	Description
0.00...100.00	Setting range Factory setting: 0.00

[PID ramp] $P_r P$ ★

PID acceleration/deceleration ramp, defined to go from [Min PID reference] $P_r P 1$ to [Max PID reference] $P_r P 2$ and conversely.

Setting ()	Description
0.0...99.9 s	Setting range Factory setting: 0.0 s

[PID Inversion] $P_r I$ ★

PID inversion.

Setting	Code / Value	Description
[No]	<i>n o</i>	No Factory setting
[Yes]	<i>y e s</i>	Yes

[PID Min Output] *P o L* ★

PID controller minimum output in Hz.

Setting (↻)	Description
-599.0...599.0 Hz	Setting range Factory setting: 0.0 Hz

[PID Max Output] *P o H* ★

PID controller maximum output in Hz.

Setting (↻)	Description
0.0...599.0 Hz	Setting range Factory setting: 60.0 Hz

[PID Error Warning] *P E r* ★

PID error warning.

Setting (↻)	Description
0...65,535	Setting range Factory setting: 100

[PID Integral OFF] *P i S* ★

Integral shunt.

If the assigned input or bit is at 0, the function is inactive (the PID integral is enabled).

If the assigned input or bit is at 1, the function is active (the PID integral is disabled).


Setting	Code / Value	Description
[Not Assigned]	<i>n o</i>	Not assigned Factory setting
[DI1]...[DI8]	<i>L i 1...L i 8</i>	Digital input DI1...DI8
[DI11]...[DI16]	<i>L i 11...L i 16</i>	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	<i>C d 0 0...C d 1 0</i>	Virtual digital input CMD.0...CMD.10 in [I/O profile] <i>i o</i> configuration
[CD11]... [CD15]	<i>C d 1 1...C d 1 5</i>	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	<i>C i 0 1...C i 1 0</i>	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] <i>i o</i> configuration

Setting	Code / Value	Description
[C111]... [C115]	C 1 1 1... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , 0 configuration
[C211]... [C215]	C 2 1 1... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , 0 configuration
[C311]... [C315]	C 3 1 1... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , 0 configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[PID acceleration time] ACCP★

PID: acceleration during start-up.

PID start ramp can be applied before starting the PID controller to allow reaching quickly the PID reference without increasing PID gains.

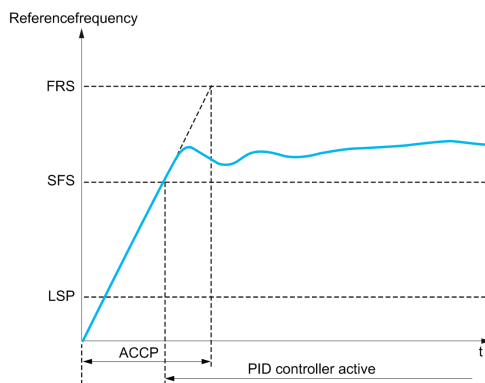

Setting (C)	Description
0.01...99.99 s	Setting range Factory setting: 5.00 s
(1) Range 0.01 to 99.99 s or 0.1 to 999.9 s or 1 to 6,000 according to [Ramp increment] , 0 r	

[PID Start Ref Freq] SF5★

PID start reference frequency.

Setting (C)	Description
0.0...599.0 Hz	Setting range If [PID Start Ref Freq] SF 5 is lower than [Low speed] L 5 P, this function has no effect. Factory setting: 0.0 Hz

[Generic functions] - [Feedback mon.]

[Feedback monitoring] *F K Π* - Menu

Access

[Complete settings] → [Generic functions] → [Feedback monitoring]

About This Menu

Identical to [Feedback monitoring] *F K Π* - Menu , page 248.

[Generic functions] - [Threshold reached]

[Threshold reached] E H r E - Menu

Access

[Complete settings] → [Generic functions] → [Threshold reached]

[Low I Threshold] C E d L

Current low threshold value (for [Low Current Reached] C E R L warning).

Setting ()	Description
0...65,535 A	Setting range Factory setting: 0 A

[High Current Thd] C E d

Current high threshold value (for [Current Thd Reached] C E R warning).

Setting ()	Description
0...65,535 A	Setting range Factory setting: Drive nominal current

[Low Freq. Threshold] F E d L

Motor low frequency threshold (for [Mot Freq Low Thd] F E R L warning).

Setting ()	Description
0.0...599.0 Hz	Setting range Factory setting: 0.0 Hz

[Motor Freq Thd] F E d

Motor frequency threshold (for [Mot Freq High Thd] F E R warning).

Setting ()	Description
0.0...599.0 Hz	Setting range Factory setting: 50.0 Hz

[2 Freq. Threshold] F 2 d L

Motor low frequency second threshold (for [Mot Freq Low Thd 2] F 2 R L warning).

Setting ()	Description
0.0...599.0 Hz	Setting range Factory setting: 0.0 Hz

[Freq. threshold 2] F 2 d

Motor frequency threshold 2 (for [Mot Freq High Thd 2] F 2 R warning).

Setting ()	Description
0.0...599.0 Hz	Setting range Factory setting: 50.0 Hz

[Motor Thermal Thd] 5 5 d

Motor thermal state threshold (for [Motor Therm Thd reached] 5 5 R warning).

Setting ()	Description
0...118%	Setting range Factory setting: 100%

[Motor2 therm. level] 5 5 d 2

Motor 2 thermal state threshold (for [Mot2 Therm Thd reached] 5 5 2 warning).

Setting ()	Description
0...118%	Setting range Factory setting: 100%

[Motor3 therm. level] 5 5 d 3

Motor 3 thermal state threshold (for [Mot3 Therm Thd reached] 5 5 3 warning).

Setting ()	Description
0...118%	Setting range Factory setting: 100%

[Motor4 therm. level] 5 5 d 4

Motor 4 thermal state threshold (for [Mot4 Therm Thd reached] 5 5 4 warning).

Setting ()	Description
0...118%	Setting range Factory setting: 100%

[Reference high Thd] r 5 d

Reference frequency high threshold (for [Ref Freq High Thd reached] r 5 R H warning).

Setting ()	Description
0.0...599.0 Hz	Setting range Factory setting: 0.0 Hz

[Reference low Thd] r L L

Reference frequency low threshold (for **[Ref Freq Low Thd reached] r L R L** warning).

Setting ()	Description
0.0...599.0 Hz	Setting range Factory setting: 0.0 Hz

[High torque thd.] L L H

High torque threshold (for **[High Torque Warning] L L H R** warning).

Setting ()	Description
-300...300%	Setting range Factory setting: 100%

[Low torque thd.] L L L

Low torque threshold (for **[Low Torque Warning] L L L R** warning).

Setting ()	Description
-300...300%	Setting range Factory setting: 50%

[Generic functions] - [Mains contactor command]

[Mains contactor command] L L L - Menu

Access

[Complete settings] → [Generic functions] → [Mains contactor command]


About This Menu

The line contactor closes every time a run command (forward or reverse) is sent and opens after every stop, as soon as the drive is locked. For example, if the stop mode is stop on ramp, the contactor opens when the motor reaches zero speed.

NOTE: The drive control power supply must be provided via an external 24 Vdc source.

NOTICE
DAMAGE TO THE DRIVE
Do not use this function at intervals of less than 60 s.
Failure to follow these instructions can result in equipment damage.

Example circuit (24 Vdc power supply):

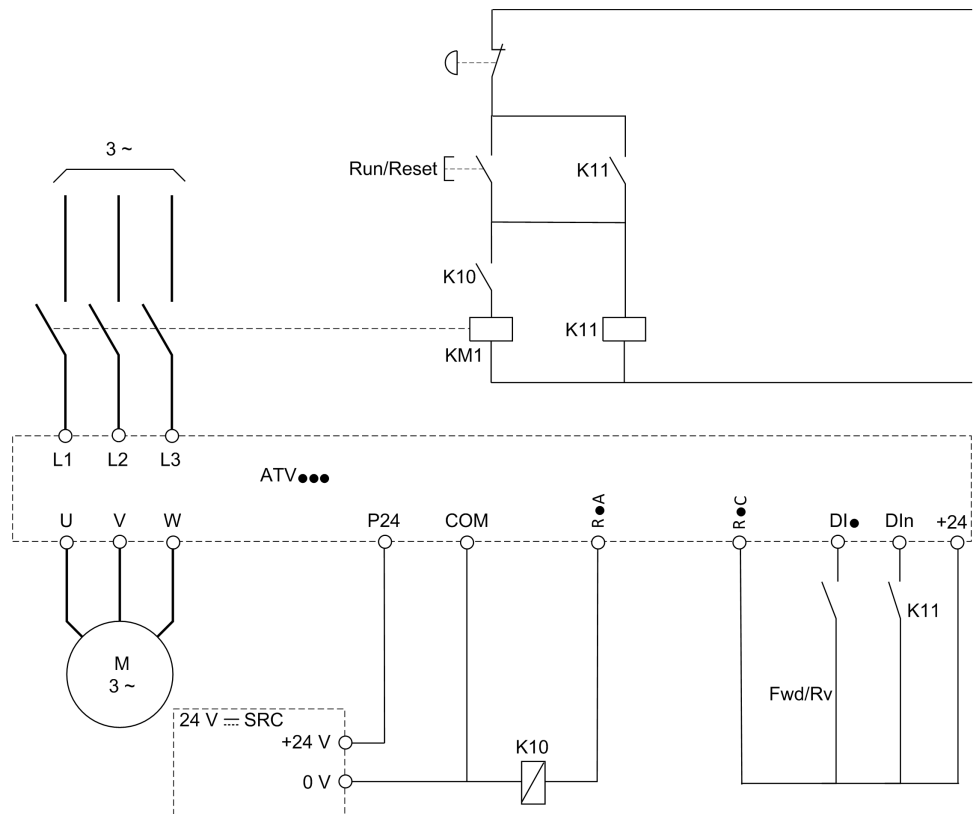

DI• = Run command **[Forward]** F r d or **[Reverse]** r r 5

R•A/R•C = **[Mains Contactor]** L L L

DI• = **[Drive Lock]** L E 5

NOTE: The Run/Reset key must be pressed once the emergency stop key has been released.

[Mains Contactor] L L L

Mains contactor control.

Setting	Code / Value	Description
[No]	n o	Not assigned Factory setting
[R2]...[R3]	r 2...r 3	Relay output R2...R3
[R4]...[R6]	r 4...r 6	Relay output R4...R6 if VW3A3204 relay output option module has been inserted
[DQ1 Digital Output]	d o 1	Digital output DQ1
[DQ11 Digital Output]... [DQ12 Digital Output]	d o 1 1... d o 1 2	Digital output DQ11...DQ12 if VW3A3203 I/O extension module has been inserted
[R61]...[R66]	r 6 1...r 6 6	Relay R61 ...R66 NOTE: This selection can be accessed on ATV960, ATV980 equipped with Cabinet IO.

[Drive Lock] L E 5★

Drive lock assignment.

This parameter can be accessed if:

- **[Mains Contactor] L L L** is assigned, or
- **[CB start pulse activated] L b E P** is assigned, or
- **[CB stop pulse activated] L b d P** is assigned.

The drive locks when the assigned input or bit changes to 0.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[CD00]... [CD10]	C d 0 0... C d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] , o configuration
[CD11]... [CD15]	C d 1 1... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , o configuration
[C111]... [C115]	C 1 1 1... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , o configuration
[C211]... [C215]	C 2 1 1... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , o configuration
[C311]... [C315]	C 3 1 1... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , o configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration
[DI1 (Low level)]...[DI8 (Low level)]	L 1 L ...L 8 L	Digital input DI1...DI8 used at low level

Setting	Code / Value	Description
[DI11 (Low level)]...[DI16 (Low level)]	L 1 1 L ... L 1 6 L	Digital input DI11...DI16 used at low level if VW3A3203 I/O extension module has been inserted
[DI52 (Low level)]...[DI59 (Low level)]	d 5 2 L ... d 5 9 L	Cabinet low level assignment digital inputs NOTE: This selection can be accessed on ATV960, ATV980 equipped with Cabinet IO.

[Mains V. time out] L L L

Monitoring time for closing of line contactor.

Setting	Description
1...999 s	Setting range Factory setting: 5 s

[Generic functions] - [Output contactor cmd]

[Output contactor cmd] 5 5 - Menu

Access

[Complete settings] → [Generic functions] → [Output contactor cmd]


About This Menu

This function allows the drive to control and/or monitor a contactor installed between the drive and the motor.

The control of the output contactor by the drive is activated by assigning **[Out. contactor Assign]** 5 5. A request to close the contactor is done when a run command is activated. A request to open the contactor is done when no current is applied to the motor.


The monitoring of the output contactor by the drive is activated by assigning the feedback to **[Output contact. Fdbk]** 5 5. In the event of an inconsistency, the drive triggers:

- **[Out Contact Opened Error]** 5 5 2 error, if the **[Output contact. Fdbk]** 5 5 is not closed before the end of **[Delay to motor run]** 5 5 5 or if the **[Output contact. Fdbk]** 5 5 opens if the motor is running.
- **[Out Contact Closed Error]** 5 5 1 error, if **[Output contact. Fdbk]** 5 5 is not opened before the end of **[Delay to open con.]** 5 5 5 or if the **[Output contact. Fdbk]** 5 5 closes if the motor is stopped.

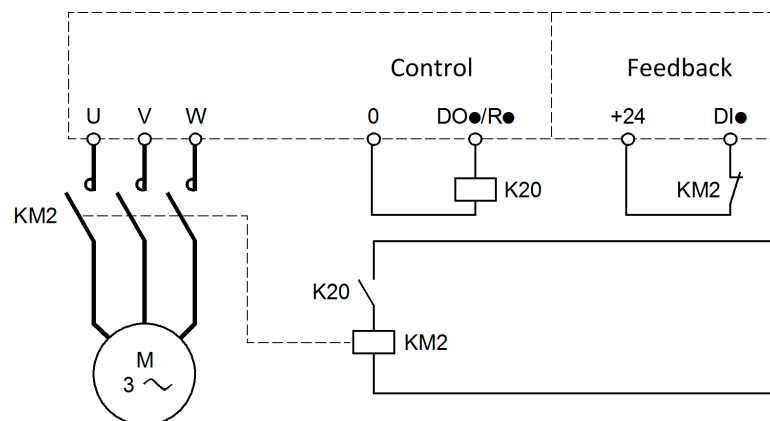

NOTE:

- **[Out Contact Opened Error]** 5 5 2 error can be cleared by a transition from 1 to 0 of the run command.
- **[Out. contactor Assign]** 5 5 and **[Output contact. fdbk]** 5 5 can be used individually.
- If the DC injection braking function is used, the output contactor does not close as long as DC injection braking is active

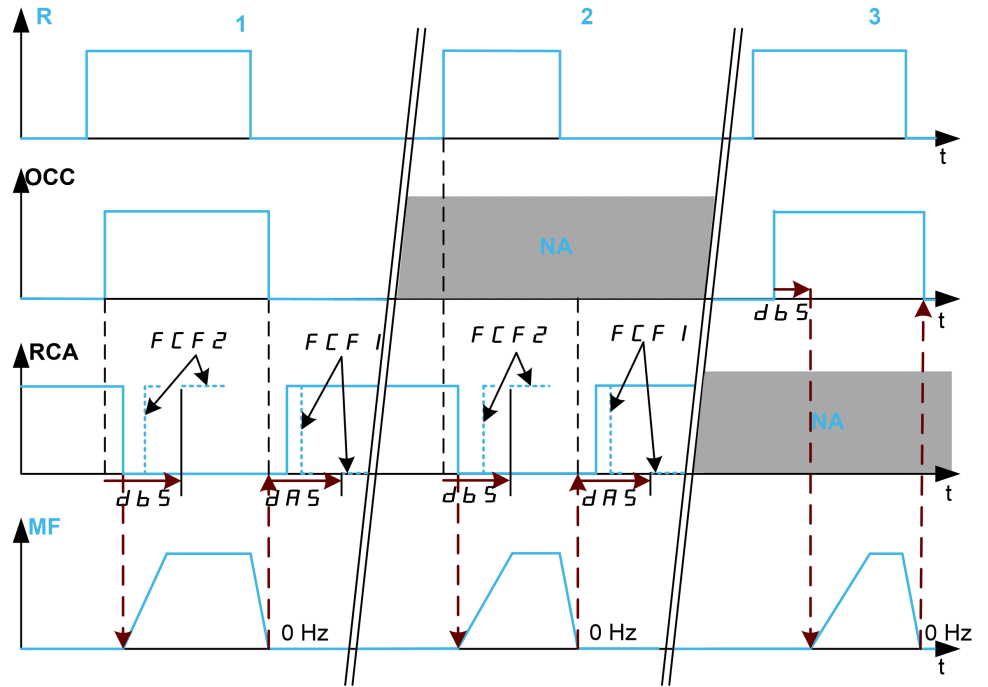

1 OCC and RCA assigned

2 RCA assigned

3 OCC assigned

t Time

R Run command

OCC Output contactor

RCA Output contactor feedback

NA Not Assigned

MF Motor frequency

[Out. Contactor Assign] 5.5.5

Output contactor control.

Setting	Code / Value	Description
[No]	no	Function not assigned. Factory setting
[R2]...[R3]	r 2...r 3	Relay output R2...R3
[R4]...[R6]	r 4...r 6	Relay output R4...R6 if VW3A3204 relay output option module has been inserted.
[DQ1 Digital Output]	do 1	Digital output DQ1.
[DQ11 Digital Output]... [DQ12 Digital Output]	do 11... do 12	Digital output DQ11...DQ12 if VW3A3203 I/O extension module has been inserted.
[R61]...[R66]	r 6 1...r 6 6	Relay R61 ...R66 NOTE: This selection can be accessed on ATV960, ATV980 equipped with Cabinet IO.

[Output contact fdbk] 5.5.6

Output contactor fdbk.

The motor starts to run when the assigned digital input or bit switches to 0.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[DI1 (Low level)]...[DI8 (Low level)]	L 1 L ... L 8 L	Digital input DI1...DI8 used at low level
[DI11 (Low level)]...[DI16 (Low level)]	L 1 1 L ... L 1 6 L	Digital input DI11...DI16 used at low level if VW3A3203 I/O extension module has been inserted
[C101]... [C110]	C 1 0 1 ... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , o configuration
[C111]... [C115]	C 1 1 1 ... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1 ... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , o configuration
[C211]... [C215]	C 2 1 1 ... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1 ... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , o configuration
[C311]... [C315]	C 3 1 1 ... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1 ... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , o configuration
[C511]... [C515]	C 5 1 1 ... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[Delay to motor run] d b 5

Delay to close o/p cont.

This parameter delays:

- Motor control following the sending of a run command when the drive only monitors the output contactor.
- The [Out Contact Opened Error] F C F 2 error monitoring if the [Output contact fdbk] r C R is assigned.

The time delay must be greater than the closing time of the output contactor.

This parameter can be accessed if [Out. contactor Assign] o C C or [Output contact fdbk] r C R is assigned.

Setting	Description
0.05...60.00 s	Setting range Factory setting: 0.15 s

[Delay to open con.] d R 5

Delay to open contactor

This delay must be greater than the opening time of the output contactor.

If the value of digital input assigned to the [Output contact fdbk] r C R is not 0 at the end of this delay, [Out Contact Closed Error] F C F 1 error is triggered. If this parameter is set to 0, the [Out Contact Closed Error] F C F 1 error is not monitored.

This parameter can be accessed if [Output contact fdbk] r C R is assigned.

Setting	Description
0.00...5.00 s	Setting range Factory setting: 0.10 s

[Generic functions] - [Reverse disable]

[Reverse disable] r E 1 n - Menu

Access

[Complete settings] → [Generic functions] → [Reverse disable]

[Reverse Disable] r 1 n

Reverse direction disable.

Reverse direction requests sent by digital inputs are taken into account.

Reverse direction requests sent by the Graphic Display Terminal or sent by the line are not taken into account.

Any reverse speed reference originating from the PID, summing input, and so on, is interpreted as a zero reference (0 Hz).

Setting	Code / Value	Description
[No]	n 0	No Factory setting
[Yes]	Y E 5	Yes

[Generic functions] - [Torque limitation]

[Torque limitation] E 0 L - Menu

Access

[Complete settings] → [Generic functions] → [Torque limitation]


About This Menu

There are 2 types of torque limitation:

- With a value that is fixed by a parameter (torque or power)
- With a value that is set by an analog input (AI or pulse)

If both types are enabled, the lowest value is taken into account.

These 2 types can be configured or switched remotely using a digital input or via the communication bus.

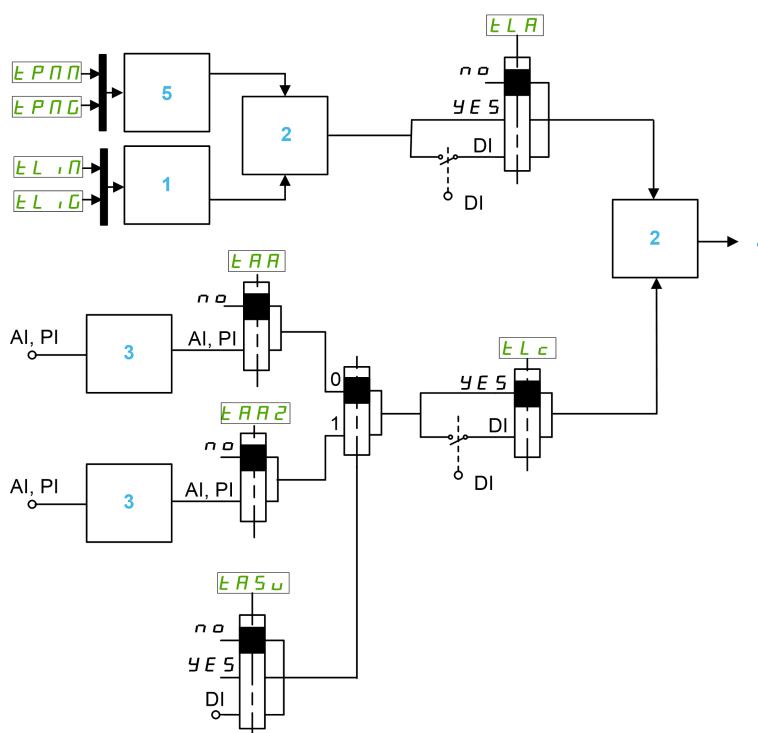

- 1 Torque limitation via parameter
- 2 Lowest value taken into account
- 3 Torque limitation via analog input, RP
- 4 Limitation value
- 5 Torque limitation via parameter in power

[Torque limit activ.] E L A

Activation of the permanent torque limitation.

If the assigned input or bit is at 0, the function is inactive.

If the assigned input or bit is at 1, the function is active.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[Yes]	Y E S	Yes
[DI1]...[DI8]	L , I ... L , B	Digital input DI1...DI8
[DI11]...[DI16]	L , I I ... L , I B	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	C d 0 0 ... C d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] , o configuration
[CD11]... [CD15]	C d 1 1 ... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1 ... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , o configuration
[C111]... [C115]	C 1 1 1 ... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1 ... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , o configuration
[C211]... [C215]	C 2 1 1 ... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1 ... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , o configuration
[C311]... [C315]	C 3 1 1 ... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1 ... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , o configuration
[C511]... [C515]	C 5 1 1 ... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[Pmax Motor] E P n n ★

Maximum power in motor mode.

This parameter can be accessed if [Torque limit activ.] E L R is not set to [Not Assigned] n o.

Setting ()	Description
10...300%	Setting range Factory setting: 300%

[Pmax Generator] E P n G ★

Maximum acceptable power in generator mode.

This parameter can be accessed if [Torque limit activ.] E L R is not set to [Not Assigned] n o.

Setting ()	Description
10...300%	Setting range Factory setting: 300%

[Torque increment] , n E P ★

Torque limitation increment.

This parameter can be accessed if **[Torque limit activ.] 5.1.1** is not set to **[No]**.

Selection of units for the **[Motoring torque lim] 5.1.1** and **[Gen. torque limit] 5.1.2** parameters.

Setting	Code / Value	Description
0.1%	0.1	Unit 0.1%
1%	1	Unit 1% Factory setting

[Motoring torque lim] 5.1.1★

Motor torque limitation.

This parameter can be accessed if **[Torque limit activ.] 5.1.1** is no set to **[No]**.

Torque limitation in motor mode, as a % or in 0.1% increments of the rated torque in accordance with the **[Torque increment] 5.1.3** parameter.

Setting ()	Description
0...300%	Setting range Factory setting: 100%

[Gen. torque limit] 5.1.2★

Generative torque limitation.

This parameter can be accessed if **[Torque limit activ.] 5.1.1** is not set to **[No]**.

Torque limitation in generator mode, as a % or in 0.1% increments of the rated torque in accordance with the **[Torque increment] 5.1.3** parameter.

Setting ()	Description
0...300%	Setting range Factory setting: 100%

[Analog limit activ.] 5.1.4★

Activation (analog input) by a digital input.

This parameter can be accessed if **[Ref Torque Assign] 5.1.5** or **[Ref Torque 2 Assign] 5.1.6** is configured.

Identical to **[Torque limit activ.] 5.1.1**.

If the assigned input or bit is at 0:

- The limitation is specified by the **[Motor torque lim] 5.1.1** and **[Gen. torque limit] 5.1.2** parameters if **[Torque limit activ.] 5.1.1** is not set to **[No]**.
- No limitation if **[Torque limit activ.] 5.1.1** is set to **[No]**.

If the assigned input or bit is at 1: the limitation depends on the input assigned by **[Ref Torque Assign] 5.1.5** or **[Ref Torque 2 Assign] 5.1.6**.

NOTE: If both limitation (by input assigned and parameter) are enabled at the same time, the lowest value is taken into account.

[Ref Torque Assign] 5 5 5

Activation by an analog value.

If the function is assigned, the limitation varies between 0% and 300% of the rated torque based on the 0% to 100% signal applied to the assigned input.

Examples: 12 mA on a 4-20 mA input results in a limitation to 150% of the rated torque
2.5 Vdc on a 10 Vdc input results in 75% of the rated torque.

Setting	Code / Value	Description
[No]	n o	Analog input is not assigned Factory setting
[AI1]...[AI3]	A 1 , 1 ... A 1 , 3	Analog input AI1...AI3
[AI4]...[AI5]	A 1 , 4 ... A 1 , 5	Analog input AI4...AI5 if VW3A3203 I/O extension module has been inserted
[AI Virtual 1]	A 1 , V 1	Virtual analogic input 1
[DI7 PulseInput]... [DI8 PulseInput]	P 1 , 7 ... P 1 , 8	Digital input DI7...DI8 used as pulse input
[Encoder]	P G	Encoder reference if an encoder module has been inserted.

[Ref Torque Switch Assign] 5 5 5

Reference torque switch assignment.

This parameter can be accessed if **[Ref Torque Assign] 5 5 5** or **[Ref Torque 2 Assign] 5 5 5** are not set to **[No] n o**.

Identical to **[Torque limit activ.] 5 5 5**.

[Ref Torque 2 Assign] 5 5 5

Activation by another analog value.

Identical to **[Ref Torque Assign] 5 5 5**.


[Trq/I limit. stop] 5 5 5

Torque current limitation: behavior configuration.

Setting	Code / Value	Description
[Ignore]	n o	Detected error ignored Factory setting
[Freewheel Stop]	F 5 5	Freewheel stop
[Per STT]	S 5 5	Stop according to [Type of stop] 5 5 5 parameter but without an error triggered after stop
[Fallback Speed]	L F F	Change to fallback speed, maintained as long as the detected error persists and the run command has not been removed ⁽¹⁾
[Spd maintained]	r L S	Speed maintained as long as the detected error persists and the run command has not been removed ⁽¹⁾
[Ramp stop]	r P P	Stop on ramp
[Fast stop]	F 5 5	Fast stop
[DC injection]	d C i	DC injection
<p>¹ Because, in this case, the detected error does not trigger a stop, it is recommended to assign a relay or logic output to its indication.</p>		

[Trq/I limit. time out] 5 E 0

Torque current limitation: **[Torque Limitation Error] 5 5 F** error delay and **[Torque Limit Reached] 5 5 R** warning delay.

Setting 	Description
0...9,999 ms	Setting range Factory setting: 1,000 ms

[Generic functions] - [2nd current limit.]

[2nd current limit.] L L , - Menu

Access

[Complete settings] → [Generic functions] → [2nd current limit.]

[Current Limitation2] L L 2

Current limitation switching assignment

If the assigned input or bit is at 0, the first current limitation is active.

If the assigned input or bit is at 1, the second current limitation is active.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[DI1]...[DI8]	L , 1...L , 8	Digital input DI1...DI8
[DI11]...[DI16]	L , 11... L , 16	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	C d 0 0... C d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] , o configuration
[CD11]... [CD15]	C d 1 1... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , o configuration
[C111]... [C115]	C 1 1 1... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , o configuration
[C211]... [C215]	C 2 1 1... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , o configuration
[C311]... [C315]	C 3 1 1... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , o configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[Current Limit2 Value] L L 2★

Current limitation 2 value.

This parameter can be accessed if [Current Limitation2] L L 2 is not set to [No] n o.

NOTICE
<p>OVERHEATING</p> <ul style="list-style-type: none"> • Verify that the motor is properly rated for the maximum current to be applied to the motor. • Verify that the parameter [Current Limitation] C L is set to a value lower or equal to the value shown in this table. • Consider the duty cycle of the motor and all factors of your application including derating requirements in determining the current limit. <p>Failure to follow these instructions can result in equipment damage.</p>

The adjustment range is limited to 1.5 In.

NOTE: If the setting is less than 0.25 In, the drive may lock in **[Output Phase Loss] OP L** if this has been enabled. If it is less than the no-load motor current, the motor cannot run.

Setting (C)	Description
0...1.5 In ⁽¹⁾	Setting range Factory setting: 1.2 In ⁽¹⁾
(1) In corresponds to the rated drive current indicated in the Installation Manual and on the drive nameplate.	

[Current limitation] C L ★

First current limitation value

NOTICE
<p>OVERHEATING</p> <ul style="list-style-type: none"> • Verify that the motor is properly rated for the maximum current to be applied to the motor. • Verify that the parameter [Current Limitation] C L is set to a value lower or equal to the value shown in this table. • Consider the duty cycle of the motor and all factors of your application including derating requirements in determining the current limit. <p>Failure to follow these instructions can result in equipment damage.</p>

The adjustment range is limited to 1.5 In.

NOTE: If the setting is less than 0.25 In, the drive may lock in **[Output Phase Loss] OP L** if this has been enabled. If it is less than the no-load motor current, the motor cannot run.

Setting (C)	Description
0...1.5 In ⁽¹⁾	Setting range Factory setting: 1.2 In ⁽¹⁾
(1) In corresponds to the rated drive current indicated in the Installation Manual and on the drive nameplate.	

[Generic functions] - [Jog]

[Jog] J 0 0 - Menu

Access

[Complete settings] → [Generic functions] → [Jog]

[Jog Assign] J 0 0

Jog assignment.


The JOG function is only active if the command channel and the reference channels are on the terminals.

This function can be used if:

- **[PID Feedback] P 1 F** is set to **[Not Configured] n 0**, and
- **[Brake logic control] b L C** is set to **[No] n 0**, and
- **[High speed hoisting] H S 0** is set to **[No] n 0**, and
- **[+ Speed Assign] u S 1** and **[- Speed Assign] d S 1** are set to **[Not Assigned] n 0**, and
- **[Ref Freq 2 Config] F r 2** is set to **[Ref Frequency via DI] u P d 1**.

The function is active when the assigned input or bit is at 1.

Example: 2-wire control operation (**[2/3-Wire Control] t C C = [2-Wire Control] 2 C**).

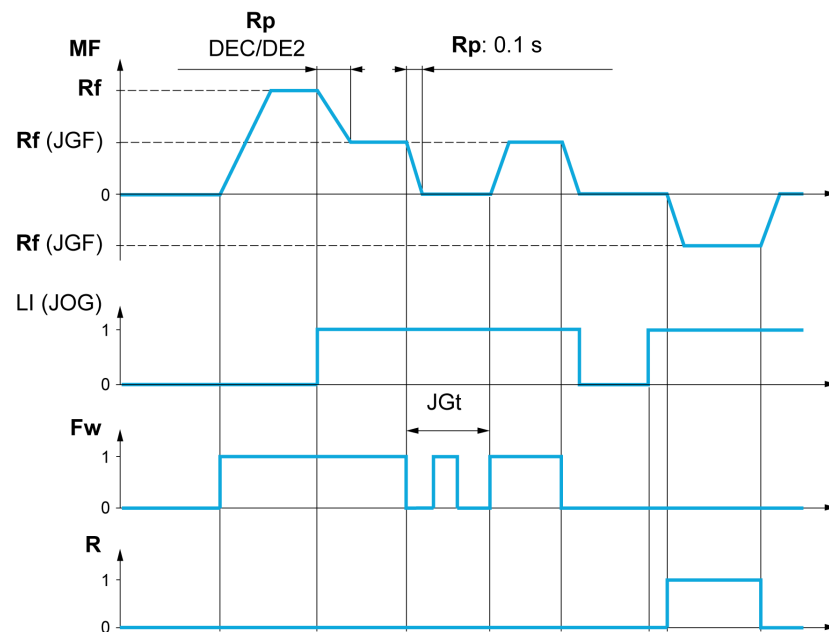

MF Motor frequency

Rf Reference

Rp Ramp

Rp: 0.1 s Ramp forced to 0.1 S

Fw Forward

R Reverse

Setting	Code / Value	Description
[Not Assigned]	<i>n o</i>	Not assigned Factory setting
[DI1]...[DI8]	<i>L , 1...L , 8</i>	Digital input DI1...DI8
[DI11]...[DI16]	<i>L , 11... L , 16</i>	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	<i>C d 0 0... C d 1 0</i>	Virtual digital input CMD.0...CMD.10 in [I/O profile] , <i>o</i> configuration
[CD11]... [CD15]	<i>C d 1 1... C d 1 5</i>	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	<i>C 1 0 1... C 1 1 0</i>	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , <i>o</i> configuration
[C111]... [C115]	<i>C 1 1 1... C 1 1 5</i>	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	<i>C 2 0 1... C 2 1 0</i>	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , <i>o</i> configuration
[C211]... [C215]	<i>C 2 1 1... C 2 1 5</i>	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	<i>C 3 0 1... C 3 1 0</i>	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , <i>o</i> configuration
[C311]... [C315]	<i>C 3 1 1... C 3 1 5</i>	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	<i>C 5 0 1... C 5 1 0</i>	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , <i>o</i> configuration
[C511]... [C515]	<i>C 5 1 1... C 5 1 5</i>	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[Jog frequency] J G F ★

This parameter can be accessed if [Jog Assign] J o G is not set to [No] n o .

Setting ()	Description
0.0...10.0 Hz	Setting range Factory setting: 10.0 Hz

[Jog Delay] J G E ★

This parameter can be accessed if [Jog Assign] (J o G) is not set to [No] (n o) .

Setting ()	Description
0.0...2.0 s	Setting range Factory setting: 0.5 s

[Generic functions] - [High Speed Switching]

[High Speed Switching] L H 5 - Menu

Access

[Complete settings] → [Generic functions] → [High Speed Switching]

[2 High speed] 5 H 2

2 High speed assign.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[Mot Freq High Thd]	F E R	Motor frequency high threshold reached
[2nd Freq Thd Reached]	F 2 R	Second frequency threshold reached
[DI1]...[DI8]	L , 1...L , 8	Digital input DI1...DI8
[DI11]...[DI16]	L , 11... L , 16	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	C d 0 0... C d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] , o configuration
[CD11]... [CD15]	C d 1 1... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , o configuration
[C111]... [C115]	C 1 1 1... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , o configuration
[C211]... [C215]	C 2 1 1... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , o configuration
[C311]... [C315]	C 3 1 1... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , o configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[4 High speed] 5 H 4

4 High speed assign.

NOTE: In order to obtain 4 High speed, [2 High speed] 5 H 2 must also be configured.

Identical to [2 High speed] 5 H 2.

[High speed] H 5 P

Motor frequency at maximum reference, can be set between [Low speed] L 5 P and [Max frequency] E F r .

The factory setting changes to 60 Hz if **[Motor Standard] b F r** is set to **[60Hz NEMA] 5 D**.

To help prevent **[Motor Overspeed] 5 o F** error, it is recommended to have **[Max Frequency] 5 F r** equal to or higher than 110% of **[High Speed] H 5 P**.

Setting ()	Description
0...599 Hz	Setting range Factory setting: 50 Hz

[High speed 2] H 5 P 2★

Visible if **[2 High speed] 5 H 2** is not set to **[No] n o**.

Identical to **[High speed] H 5 P**.

[High speed 3] H 5 P 3★

Visible if **[4 High speed] 5 H 4** is not set to **[No] n o**.

Identical to **[High speed] H 5 P**.

[High speed 4] H 5 P 4★

Visible if **[4 High speed] 5 H 4** is not set to **[No] n o**.

Identical to **[High speed] H 5 P**.

[Generic functions] - [Memo reference frequency]

[Memo reference frequency] 5 P 11 - Menu


Access

[Complete settings] → [Generic functions] → [Memo reference frequency]

About This Menu

Saving a speed reference value using a digital input command lasting longer than 0.1 s.

- This function is used to control the speed of several drives alternately via a single analog reference and one digital input for each drive.
- It is also used to confirm a line reference (communication bus or network) on several drives via a digital input. This allows movements to be synchronized by getting rid of variations when the reference is set.
- The reference is acquired 100 ms after the rising edge of the request. A new reference is not then acquired until a new request is made.

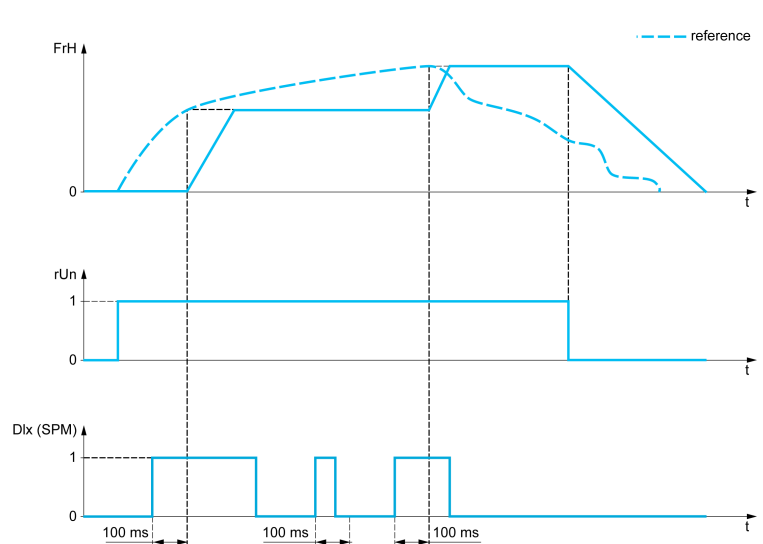

FrH Reference frequency before ramp

rUn Run command

Dlx (SPM) [Ref Freq Memo assign] 5 P 11

[Ref Freq Memo assign] 5 P 11

Reference frequency memory assignment

Function active if the assigned input is at active state.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[DI1]...[DI8]	L , I ... L , B	Digital input DI1...DI8
[DI11]...[DI16]	L , I I ... L , I B	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted

[Generic functions] - [Brake logic control]

[Brake logic control] 5 - Menu

Access

[Complete settings] → [Generic functions] → [Brake logic control]

About This Menu

Identical to [Brake logic control] 5 - menu .

[Generic functions] - [Limit switches]

[Limit switches] L 5 E - Menu

Access


[Complete settings] → [Generic functions] → [Limit switches]

About This Menu

This function can be used to manage trajectory limits using limit switches

The stop mode is configurable. When the stop contact is activated, startup in the other direction is authorized.

Example:

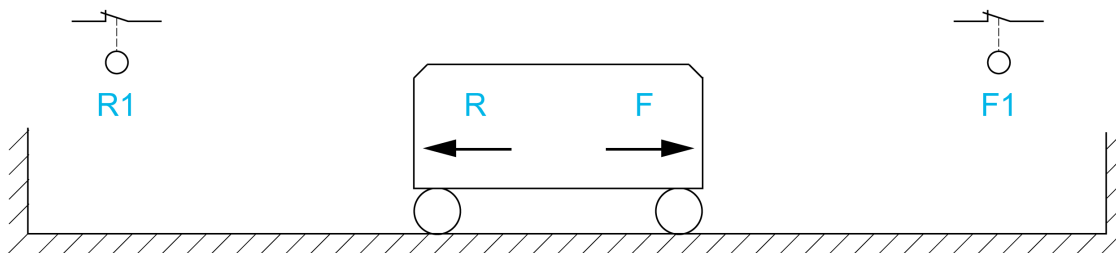

R Reverse

R1 Reverse stop

F Forward

F1 Forward stop

The stop is activated when the input is at 0 (contact open).

[Stop FW assign] L R F

Stop forward limit assignment.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[CD00]... [CD10]	C d 0 0 ... C d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] , o configuration
[CD11]... [CD15]	C d 1 1 ... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1 ... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , o configuration
[C111]... [C115]	C 1 1 1 ... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1 ... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , o configuration
[C211]... [C215]	C 2 1 1 ... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1 ... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , o configuration
[C311]... [C315]	C 3 1 1 ... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1 ... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , o configuration

Setting	Code / Value	Description
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration
[DI1 (Low level)]...[DI8 (Low level)]	L 1 L ... L 8 L	Digital input DI1...DI8 used at low level
[DI11 (Low level)]...[DI16 (Low level)]	L 1 1 L ... L 1 6 L	Digital input DI11...DI16 used at low level if VW3A3203 I/O extension module has been inserted
[DI52 (Low level)]...[DI59 (Low level)]	d 5 2 L ... d 5 9 L	Cabinet low level assignment digital inputs NOTE: This selection can be accessed on ATV960, ATV980 equipped with Cabinet IO.

[Stop RV assign] L R r

Stop reverse limit assignment.

Identical to [Stop FW assign] L R F .

[Stop type] L R S

Stop type on limit switch.

This parameter can be accessed if [Stop FW assign] L R F or [Stop RV assign] L R r is assigned.

When the assigned input changes to 0, the stop is controlled in accordance with the selected type. Restarting is only authorized for the other operating direction once the motor has stopped. If the two inputs [Stop FW assign] L R F and [Stop RV assign] L R r are assigned and at state 0, restarting will be impossible.

Setting	Code / Value	Description
[On Ramp]	r n P	Stop on ramp
[Fast stop]	F 5 L	Fast stop
[Freewheel Stop]	n 5 L	Freewheel stop Factory setting

[Generic functions] - [Positioning by sensors]

[Positioning by sensors] L P 0

Access


[Complete settings] → [Generic functions] → [Positioning by sensors]

About This Menu

This function is used for managing positioning using position sensors or limit switches linked to digital inputs or using control word bits:

- Slowing down
- Stopping

The activation level for the inputs and bits can be configured on a rising edge (change from 0 to 1) or a falling edge (change from 1 to 0). The example below has been configured on a falling edge:

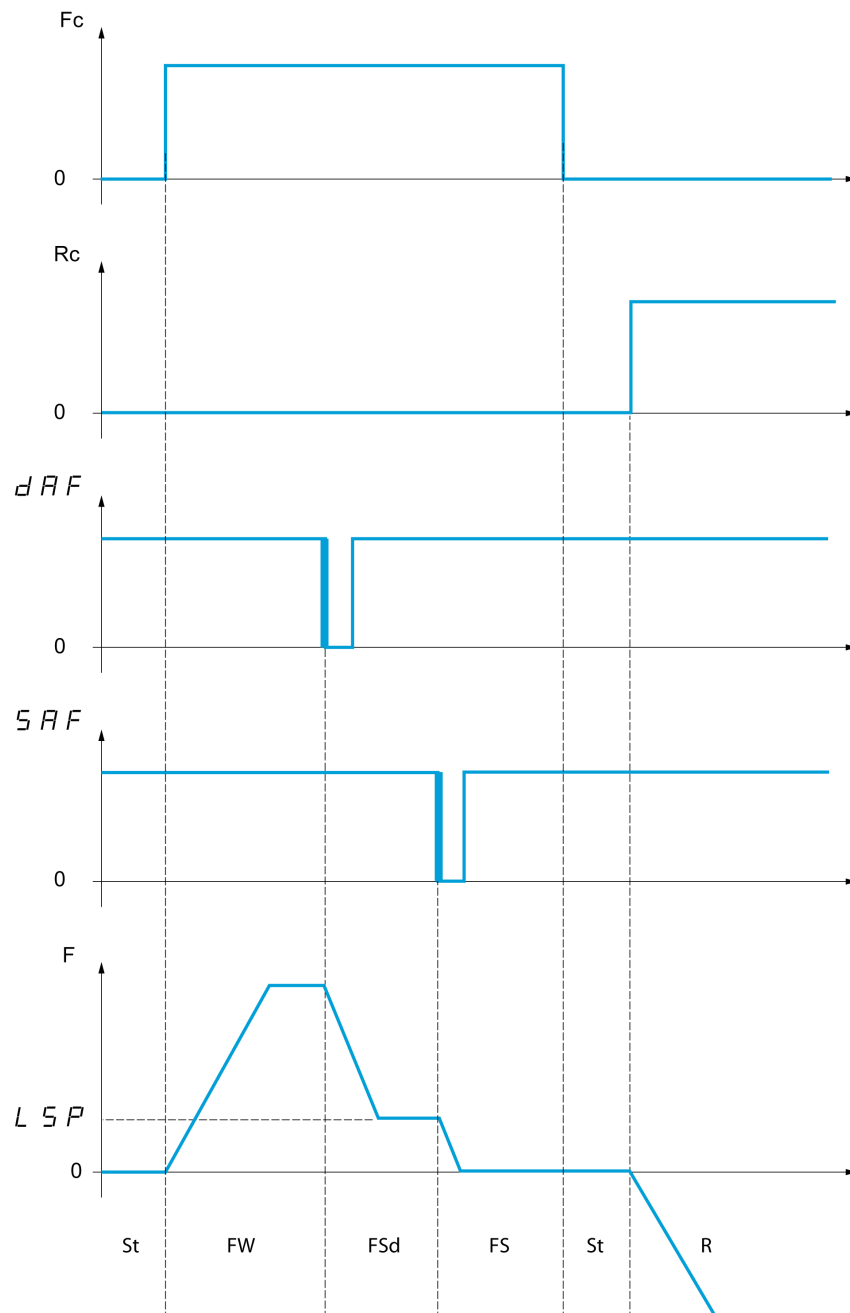

- Fc** Forward run command
- Rc** Reverse run command
- F** Frequency
- FW** Forward
- FSd** Forward Slowdown
- FS** Forward Stopping
- St** Stop
- R** Reverse


The slowdown mode and stop mode can be configured.

The operation is identical for both directions of operation. Slowdown and stopping operate according to the same logic, described below.

Example: Forward slowdown, on falling edge

- The forward slowdown takes place on a falling edge (switch from 1 to 0) of the input assigned to forward slowdown if it occurs in forward direction. The reference frequency value is limited to **[Low Speed] L 5 P**.
- In the forward slowdown area, the movement in the opposite direction is authorized at high speed.
- The slowdown command is deleted on a rising edge (switch from 0 to 1) of the input assigned to forward slowdown if it occurs in reverse direction.
- A forward slowdown is stored, even in the event of a power outage.
- A bit or a digital input can be assigned to disable this function.
- Although forward slowdown is disabled while the disable input or bit is at 1, sensor changes continue to be monitored and saved.

Example: Positioning on a limit switch, on falling edge

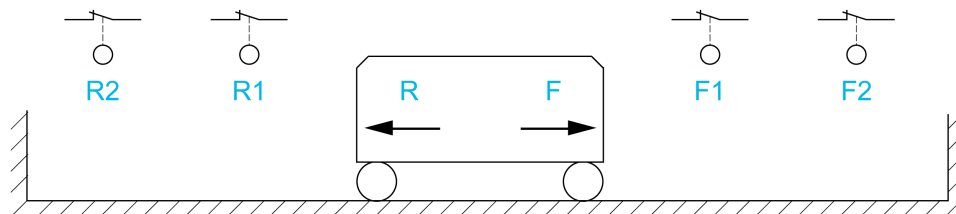

- R** Reverse
- R1** Reverse slowdown
- R2** Reverse stop
- F** Forward
- F1** Forward slowdown
- F2** Forward stop

▲ WARNING
<p>LOSS OF CONTROL</p> <ul style="list-style-type: none"> • Verify correct connection of the limit switches. • Verify the correct installation of the limit switches. The limit switches must be mounted in a position far enough away from the mechanical stop to allow for an adequate stopping distance. • You must release the limit switches before you can use them. • Verify the correct function of the limit switches. <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p>

Operation with short cams:

After the switches have been configured, the drive does not yet have a valid position.

⚠ WARNING**LOSS OF CONTROL**

- Verify that the drive is between the reverse deceleration switch and the forward deceleration switch before you enable the drive for the first time if you have configured deceleration switches and stop switches.
- Verify that the drive is between the reverse stop switch and the forward stop switch before you enable the drive for the first time if you have configured stop switches, but no deceleration switches.
- If you have configured switches, verify that the drive is within the permissible movement range before you use the function for the first time.

Failure to follow these instructions can result in death, serious injury, or equipment damage.


⚠ WARNING**LOSS OF CONTROL**

When the drive is switched off, it stores the range which it is currently in.

- If the system is moved manually while the drive is off, you must restore the original position before switching it on again.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

In this instance, when operating for the first time or after restoring the factory settings, the drive must initially be started outside the slowdown and stop zones in order to initialize the function.

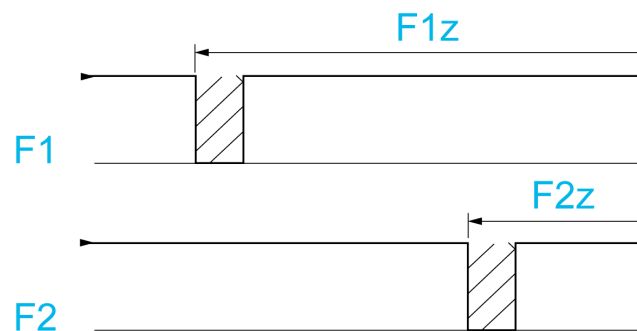

F1 Forward slowdown


F1z Forward slowdown zone

F2 Forward stop

F2z Forward stop zone

Operation with long cams:

In this instance, there is no restriction, which means that the function is initialized across the whole trajectory.

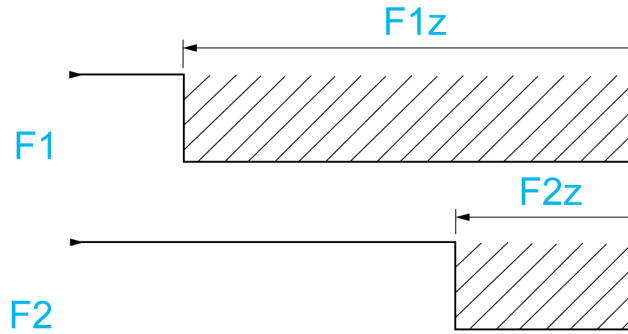

F1 Forward slowdown

F1z Forward slowdown zone


F2 Forward stop

F2z Forward stop zone

Stop at distance calculated after deceleration limit switch

This function can be used to control the stopping of the moving part automatically once a preset distance has been traveled after the slowdown limit switch. On the basis of the rated linear speed and the speed estimated by the drive when the slowdown limit switch is tripped, the drive will induce the stop at the configured distance. This function is useful in applications where one manual-reset overtravel limit switch is common to both directions. It will then only respond to help management if the distance is exceeded. The stop limit switch retains priority in respect of the function.

The **[Deceleration type]** $d5F$ parameter can be configured to obtain either of the functions described below:

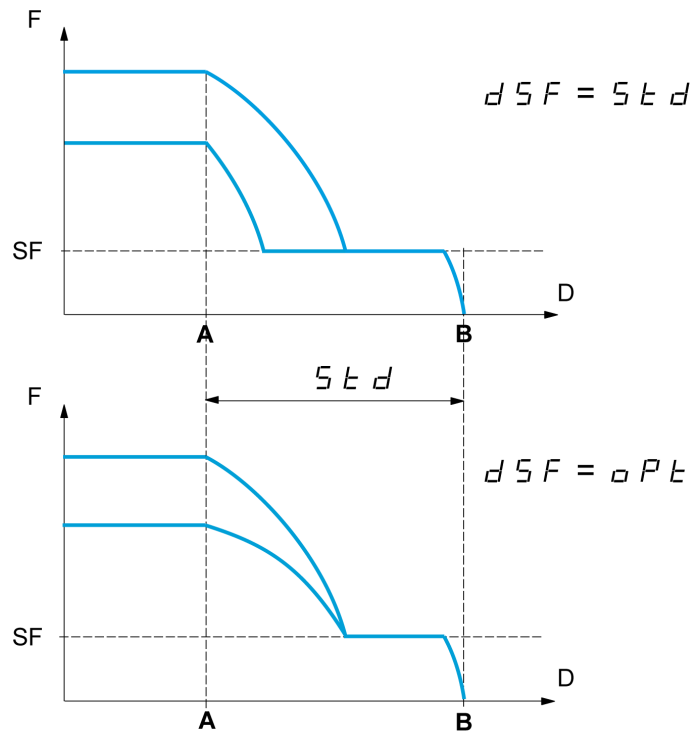

A Slowdown limit switch reached

B Automatic stop at a distance

D Distance

F Frequency

SF Slowdown frequency

Note:

- If the deceleration ramp is modified while stopping at a distance is in progress, this distance will not be observed.
- If the direction is modified while stopping at a distance is in progress, this distance will not be observed.

⚠ WARNING
LOSS OF CONTROL
This function does not replace the limit switch.
<ul style="list-style-type: none"> • Verify that the configured distance is actually possible.
Failure to follow these instructions can result in death, serious injury, or equipment damage.

[Stop FW limit sw.] 5 5 5

Stop switch forward.

If the parameters SAF, SA_r, dAF and dA_r are set in such a way that the signal is triggered with a rising edge, no command is triggered in the case of an interruption of the signal cable to the switch or if the switch becomes inoperative.

⚠ WARNING
LOSS OF CONTROL
In your risk assessment, take into account all potential consequences of triggering a signal with a rising edge.
Failure to follow these instructions can result in death, serious injury, or equipment damage.

If this parameter is assigned to a virtual digital, the function is active if the assigned input or bit is at 0.

Setting	Code / Value	Description
[Not Assigned]	n 0	Not assigned Factory setting.
[DI1]...[DI8]	L , I ... L , B	Digital input DI1...DI8
[DI11]...[DI16]	L , I I ... L , I B	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[DI1 (Low level)] ... [DI8 (Low level)]	L I L ... L B L	Digital input DI1...DI8 used at low level
[DI11 (Low level)]...[DI16 (Low level)]	L I I L ... L I B L	Digital input DI11...DI16 used at low level if VW3A3203 I/O extension module has been inserted
[CD00]... [CD15]	C d 0 0 ... C d 1 5	Virtual digital input CMD.0...CMD.15 in [I/O profile] , 0 configuration
[C101]... [C115]	C 1 0 1 ... C 1 1 5	Virtual digital input CMD1.01...CMD1.15 with integrated Modbus Serial in [I/O profile] , 0 configuration
[C201]... [C215]	C 2 0 1 ... C 2 1 5	Virtual digital input CMD2.01...CMD2.15 with CANopen® fieldbus module [I/O profile] , 0 configuration
[C301]... [C315]	C 3 0 1 ... C 3 1 5	Virtual digital input CMD3.01...CMD3.15 with a fieldbus module in [I/O profile] , 0 configuration
[C501]... [C515]	C 5 0 1 ... C 5 1 5	Virtual digital input CMD5.01...CMD5.15 with integrated Ethernet in [I/O profile] , 0 configuration

[Stop RV limit sw.] S R r

Stop switch reverse.

Identical to [Stop FW limit sw.] S R F.

[Forward Slowdown] d R F

Slowdown attained forward.

Identical to [Stop FW limit sw.] S R F.

[Reverse Slowdown] d R r

Slowdown attained reverse.

Identical to [Stop FW limit sw.] S R F.

[Disable limit sw.] C L 5★

Limits switches clearing.

⚠ WARNING
<p>LOSS OF CONTROL</p> <p>If [Disable limit sw.] C L 5 is set to an input and activated, the limit switch management will be disabled.</p> <ul style="list-style-type: none"> • Verify that activating this function does not result in unsafe conditions. <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p>

The action of the limit switches is disabled when the assigned bit or input is at 1. If, at this time, the drive is stopped or being slowed down by limit switches, it will restart up to its speed reference.

This parameter can be accessed if at least one limit switch or one sensor has been assigned.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[DI1]...[DI8]	L , 1...L , 8	Digital input DI1...DI8
[DI11]...[DI16]	L , 11... L , 16	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	C d 0 0... C d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] , o configuration
[CD11]... [CD15]	C d 1 1... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , o configuration
[C111]... [C115]	C 1 1 1... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , o configuration
[C211]... [C215]	C 2 1 1... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , o configuration

Setting	Code / Value	Description
[C311]... [C315]	C 3 1 1... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration
[DI52 (High level)]... [DI59 (High level)]	d 5 2 H... d 5 9 H	Cabinet high level digital inputs NOTE: This selection can be accessed on ATV960, ATV980 equipped with Cabinet IO.

[Stop type] P R 5 ★

Stop type on limit switch activation.

This parameter can be accessed if at least one limit switch or one sensor has been assigned.

Setting	Code / Value	Description
[On Ramp]	r n P	Follow ramp Factory setting
[Fast stop]	F 5 E	Fast stop (ramp time reduced by [Ramp Divider] d C F
[Freewheel Stop]	n 5 E	Freewheel stop

[Deceleration type] d 5 F ★

Limit switch deceleration adaptation.

This parameter can be accessed if at least one limit switch or one sensor has been assigned.

Setting	Code / Value	Description
[Standard]	S E d	Uses the [Deceleration] d E C or [Deceleration 2] d E 2 ramp (depending on which has been enabled) Factory setting
[Optimized]	o P E	The ramp time is calculated on the basis of the actual speed when the slowdown contact switches, in order to limit the operating time at low speed (optimization of the cycle time: the slowdown time is constant regardless of the initial speed)

[Stop distance] S E d ★

Stop distance.

This parameter can be accessed if at least one limit switch or one sensor has been assigned. Activation and adjustment of the "Stop at distance calculated after the slowdown limit switch" function.

Setting	Code / Value	Description
[No]	n o	Function inactive Factory setting
[0.01...10.00]	0 . 0 1... 1 - 0 . 0 0	Stop distance range in meters

[Nom linear speed] n L 5 ★

Rated linear speed.

This parameter can be accessed if at least one limit switch or one sensor has been assigned and **[Stop distance] 5 E d** is not set to **[No] n o**.

Setting	Description
0.20...5.00 m/s	Factory setting: 1.00 m/s

[Stop corrector] 5 F d ★

Scaling factor applied to the stop distance to compensate, for example, a non-linear ramp.

This parameter can be accessed if at least one limit switch or one sensor has been assigned and **[Stop distance] 5 E d** is not set to **[No] n o**.

Setting	Description
50...200%	Factory setting: 100%

[Memo Stop] n 5 E P ★

Stop switch memorization.

This parameter can be accessed if at least one limit switch or one sensor has been assigned.

Setting	Code / Value	Description
[No]	n o	No memorization of limit switch
[Yes]	Y E 5	Memorization of limit switch Factory setting

[Priority restart] P r 5 E ★

Priority given to the starting even if stop switch is activated.

This parameter can be accessed if at least one limit switch or one sensor has been assigned.

Setting	Code / Value	Description
[No]	n o	No restart priority if stop switch is activated Factory setting
[Yes]	Y E 5	Priority to restart even if stop switch is activated

[Memo Slowdown] n 5 L o ★

Slowdown switch memorization.

This parameter can be accessed if at least one limit switch or one sensor has been assigned.

Setting	Code / Value	Description
[No]	n o	No memorization of the slowdown switch.
[Yes]	Y E 5	Memorization of the slowdown switch. Factory setting

[Generic functions] - [Torque control]

[Torque control] 5 0 5 - Menu

Access


[Complete settings] → [Generic functions] → [Torque control]

About This Menu

This function can be used if [Motor control type] 5 5 5 is set to [SVCV] 5 5 5 or [FVC] 5 5 5 or [Sync. mot.] 5 5 5 or [Sync.CL] 5 5 5.

NOTE: This function cannot be used with some other functions.

NOTE: This function is not compatible with the handling of the [Load slipping] 5 5 5 error.

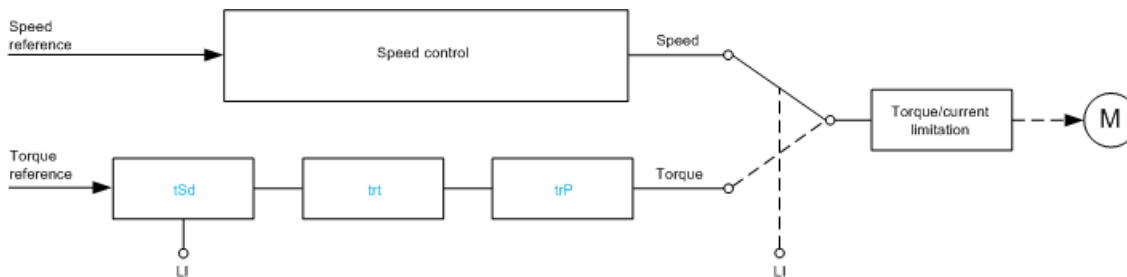

The function can be used to switch between operation in speed regulation mode and operation in torque control mode.

In torque control mode, the speed may vary within a configurable "deadband". When it reaches a lower or upper limit, the drive automatically reverts to speed regulation mode and remains at this limit speed. The regulated torque is therefore no longer maintained and two scenarios may occur.


- If the torque returns to the required value, the drive returns to torque control mode.
- If the torque does not return to the required value at the end of a configurable period, the drive switches to [Torque Reg Warning] 5 5 5 or [Torque timeout] 5 5 5.

⚠ WARNING

UNANTICIPATED EQUIPMENT OPERATION

Verify that activating this function does not result in unsafe conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

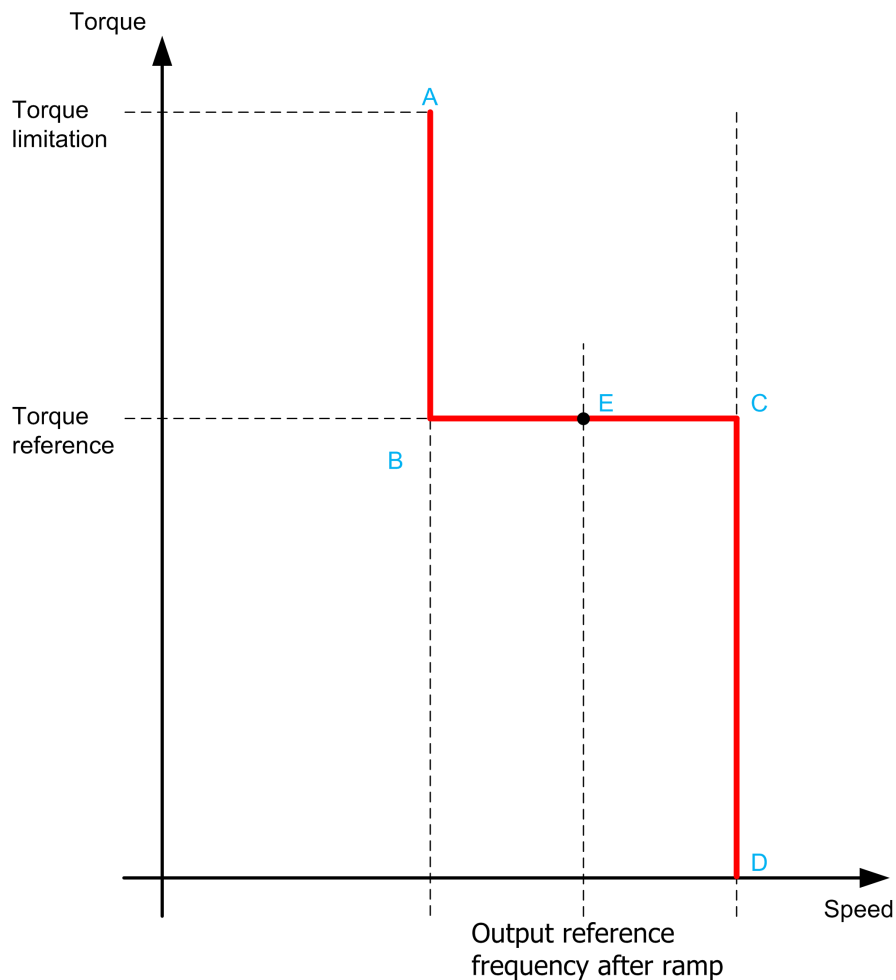

AB, CD Fallback" to speed regulation

BC Torque control zone

E Ideal operating point

The torque sign and value can be transmitted via a logic output and an analog output.

[Trq/spd switching] 5.5

Torque / speed regulation switching by a logic input.

Setting	Code / Value	Description
[Not Assigned]	n a	Not assigned Factory setting
[Yes]	y e s	Yes
[DI1]...[DI8]	L , 1...L , 8	Digital input DI1...DI8
[DI11]...[DI16]	L , 11... L , 16	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	C d 0 0... C d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] , a configuration
[CD11]... [CD15]	C d 1 1... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , a configuration
[C111]... [C115]	C 1 1 1... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration

Setting	Code / Value	Description
[C201]... [C210]	C 2 0 1... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , 0 configuration
[C211]... [C215]	C 2 1 1... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , 0 configuration
[C311]... [C315]	C 3 1 1... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , 0 configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[Torque ref. channel] 5 5 1★

Channel for torque reference.

This parameter can be accessed if [Trq/spd switching] 5 5 is not set to [No] .

NOTE: [Torque reference] 5 5 can be accessed in [Display] menu, [Drive parameters] submenu.

Setting	Code / Value	Description
[Not Configured]	0 0	Not assigned Factory setting
[AI1]...[AI3]	A , 1...A , 3	Analog input AI1...AI3
[AI4]...[AI5]	A , 4...A , 5	Analog input AI4...AI5 if VW3A3203 I/O extension module has been inserted
[Ref. Freq-Rmt.Term]	L C C	Reference frequency via remote terminal
[Ref. Freq-Modbus]	Π d b	Reference frequency via Modbus
[Ref. Freq-CANopen]	C A n	Reference frequency via CANopen
[Ref. Freq-Com. Module]	n E t	Reference frequency via communication module
[Embedded Ethernet]	E t H	Embedded Ethernet
[DI7 PulseInput]... [DI8 PulseInput]	P , 7...P , 8	Digital input DI7...DI8 used as pulse input
[Encoder]	P G	Encoder reference if an encoder module has been inserted.

[Torque Ref Assign] 5 5 1★

Torque reference channel assignment.

This parameter can be accessed if [Trq/spd switching] 5 5 is not set to [No] .

Setting	Code / Value	Description
[DI1]...[DI8]	L , 1...L , 8	Digital input DI1...DI8
[DI11]...[DI16]	L , 1 1... L , 1 6	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted

Setting	Code / Value	Description
[C101]... [C110]	C 1 0 1... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] configuration
[C111]... [C115]	C 1 1 1... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] configuration
[C211]... [C215]	C 2 1 1... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] configuration
[C311]... [C315]	C 3 1 1... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration
[Torque ref. channel]	t r 1	Torque reference channel 1
[Torque ref. 2 channel]	t r 2	Torque reference channel 2

[Torque ref. 2 channel] t r 2 ★

Torque reference channel 2.

This parameter can be accessed if [Trq/spd switching] 5 5 is not set to [No] n a .

Identical to [Torque ref. channel] t r 1 , page 424.

[Torque ref. sign] 5 d ★

Assignment for the inversion of the sign of the reference for the torque regulation function.

This parameter can be accessed if [Trq/spd switching] 5 5 is not set to [No] n a .

Identical to [Trq/spd switching] 5 5 , page 423.

[Torque ratio] t r t ★

Torque regulation: torque ratio.

This parameter can be accessed if [Trq/spd switching] 5 5 is not set to [No] n a .

Setting ()	Description
0.0...1000.0%	Coefficient applied to [Torque ref. channel] t r 1 or [Torque ref. 2 channel] t r 2 Factory setting: 100.0%

[Torque Ratio Assign] t 9 r ★

Torque regulation: torque ratio value selection.

This parameter can be accessed if [Trq/spd switching] 5 5 is not set to [No] n a .

Setting	Code / Value	Description
[No]	n o	Analog input is not assigned Factory setting
[AI1]...[AI3]	R , 1...R , 3	Analog input AI1...AI3
[AI4]...[AI5]	R , 4...R , 5	Analog input AI4...AI5 if VW3A3203 I/O extension module has been inserted
[AI Virtual 1]	R , V 1	Virtual analogic input 1
[DI7 PulseInput]... [DI8 PulseInput]	P , 7...P , 8	Digital input DI7...DI8 used as pulse input
[Encoder]	P G	Encoder reference if an encoder module has been inserted.

[Torque Ref Offset] 5 9 0 P ★

Torque reference offset.

This parameter can be accessed if [Trq/spd switching] 5 5 is not set to [No] n o.

Setting ()	Description
-1000.0...1000.0%	Setting range Factory setting: 0.0%

[Torque Offset Assign] 5 9 0 ★

Torque regulation: Torque offset value selection

This parameter can be accessed if [Trq/spd switching] 5 5 is not set to [No] n o.

Identical to [Torque Ratio Assign] 5 9 r , page 425.

[Low Torque] L 5 9 ★

Low torque threshold.

This parameter can be accessed if [Trq/spd switching] 5 5 is not set to [No] n o.

This parameter cannot be higher than [High Torque] H 5 9 .

Setting ()	Description
-300.0...[High Torque] H 5 9	Setting range Factory setting: -300.0%

[High Torque] H 5 9 ★

High torque threshold.

This parameter can be accessed if [Trq/spd switching] 5 5 is not set to [No] n o.

This parameter cannot be lower than [Low Torque] L 5 9 .

Setting ()	Description
[Low Torque] E 9...300.0%	Setting range Factory setting: 300.0%

[Torque ramp time] E r P ★

Torque ramp time.

This parameter can be accessed if [Trq/spd switching] E 5 5 is not set to [No] n a .

Setting ()	Description
0.00...99.99 s	Rise and fall time for a variation of 100% of the rated torque Factory setting: 3.00 s

[Torque Filter] E r F ★

Torque filter activation.

This parameter can be accessed if [Trq/spd switching] E 5 5 is not set to [No] n a .

Setting	Code / Value	Description
[No]	n a	Not activated. Factory setting
[Yes]	y E 5	Activated

[Torque Filter Bandwidth] E r W ★

Torque filter bandwidth.

This parameter can be accessed if [Torque Filter] E r F is set to [Yes] y E 5 .

Setting ()	Description
1...1000 Hz	Setting range Factory setting: 20 Hz

[Torque control stop] E 5 E ★

Torque regulation: stop command type.

This parameter can be accessed if [Trq/spd switching] E 5 5 is not set to [No] n a .

Setting	Code / Value	Description
[Speed]	S P d	Speed regulation stop, in accordance with the [Type of stop] S E E configuration
[Freewheel Stop]	n S E	Freewheel stop Factory setting
[Spin]	S P n	Zero torque stop, but maintaining the flux in the motor (only in close loop)

[Spin time] 5 P E ★

Torque regulation: spin time.

Spin time following stop, in order to remain ready to restart quickly.

This parameter can be accessed if:

- **[Trq/spd switching] E 5 5** is not set to **[No] n o**, and
- **[Torque control stop] E 5 E** is set to **[Spin] 5 P n**.

Setting ()	Description
0.0...3600.0 s	Setting range Factory setting: 1.0 s

[Positive deadband] d b P ★

Torque regulation positive deadband.

This parameter can be accessed if **[Trq/spd switching] E 5 5** is not set to **[No] n o**.

Value added algebraically to the speed reference.

Example for $d b P = 10$:

- If reference = +50 Hz : $+50 + 10 = 60$ Hz
- If reference = -50 Hz : $-50 + 10 = -40$ Hz

Setting ()	Description
0...2 x [Max Frequency] E F r	Setting range Factory setting: 10 Hz

[Negative deadband] d b n ★

Torque regulation negative deadband.

This parameter can be accessed if **[Trq/spd switching] E 5 5** is not set to **[No] n o**.

Value subtracted algebraically from the speed reference.

Example for $d b n = 10$:

- If reference = +50 Hz: $+50 - 10 = 40$ Hz
- If reference = -50 Hz: $-50 - 10 = -60$ Hz

Setting ()	Description
0...2 x [Max Frequency] E F r	Setting range Factory setting: 10 Hz

[Torque ctrl time out] r t o ★

Torque control time-out.

This parameter can be accessed if **[Trq/spd switching] E 5 5** is not set to **[No] n o**.

Time following automatic exit of torque control mode in the event of an error or a warning has been triggered.

Setting	Description
0.0...999.9 s	Setting range Factory setting: 60 s

[Torque Ctrl ErrorResp] E 0 b ★

Response to torque control error.

This parameter can be accessed if **[Trq/spd switching] E 5 5** is not set to **[No] n 0**.

Response of drive once time **[Torque ctrl time out] r E 0** has elapsed.

Setting	Code / Value	Description
[Warning]	<i>R L r 0</i>	Warning is triggered on time-out Factory setting
[Error]	<i>F L E</i>	An error is triggered with freewheel stop

[Generic functions] - [Parameters switching]

[Parameters switching] P L P - Menu

Access

[Complete settings] → [Generic functions] → [Parameters switching]

About This Menu

A set of 1 to 15 parameters from the [Parameter Selection] S P 5 list, page 431 can be selected and 2 or 3 different values assigned. These 2 or 3 sets of values can then be switched using 1 or 2 digital inputs or control word bits. This switching can be performed during operation (motor running). It can also be controlled based on 1 or 2 frequency thresholds, whereby each threshold acts as a digital input (0 = threshold not reached, 1 = threshold reached).

	Values 1	Values 2	Values 3
Parameter 1	Parameter 1	Parameter 1	Parameter 1
...
Parameter 15	Parameter 15	Parameter 15	Parameter 15
Input DI or bit or frequency threshold 2 values	0	1	0 or 1
Input DI or bit or frequency threshold 3 values	0	0	1

NOTE: Do not modify the parameters in [Parameter Selection] S P 5, page 431, because any modifications made in this menu will be lost on the next power-up. The parameters can be adjusted during operation in the [Parameters switching] P L P - menu, on the active configuration.

[2 Parameter sets] C H R I

Parameter switching assignment 1.

Switching 2 parameter sets.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[Mot Freq High Thd]	F E R	Motor frequency high threshold reached
[2nd Freq Thd Reached]	F 2 R	Second frequency threshold reached
[DI1]...[DI8]	L , I ... L , B	Digital input DI1...DI8
[DI11]...[DI16]	L , I I ... L , I B	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	C d 0 0 ... C d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] , o configuration
[CD11]... [CD15]	C d 1 1 ... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1 ... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , o configuration
[C111]... [C115]	C 1 1 1 ... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1 ... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , o configuration

Setting	Code / Value	Description
[C211]... [C215]	C 2 1 1... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] configuration
[C311]... [C315]	C 3 1 1... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[3 Parameter sets] C H R 2

Parameter switching assignment 2.

Identical to [2 Parameter sets] C H R 1.

Switching 3 parameter sets.

NOTE: In order to obtain 3 parameter sets, it is necessary to configure first [2 Parameter sets] C H R 1.

[Parameter Selection] S P 5

This parameter can be accessed if [2 Parameter sets] C H R 1 is not set to [No] n a.

Making an entry in this parameter opens a window containing all the adjustment parameters that can be accessed. Select 1 to 15 parameters using **OK** key. Parameter(s) can also be deselected using **OK** key.

Available parameters for parameters switching function are:

Parameter	Code
[Ramp increment]	i n r
[Acceleration]	A C C
[Deceleration]	d E C
[Acceleration 2]	A C 2
[Deceleration 2]	d E 2
[Begin Acc round]	t A 1
[End Acc round]	t A 2
[Begin Dec round]	t A 3
[End Dec round]	t A 4
[Low Speed]	L S P
[High Speed]	H S P
[High Speed 2]	H S P 2
[High Speed 3]	H S P 3
[High Speed 4]	H S P 4
[Motor Th Current]	i t H
[IR compensation]	u F r
[Slip compensation]	S L P
[K speed loop filter]	S F C
[Speed time integral]	S i t

Parameter	Code
[Speed prop. gain]	<i>S P G</i>
[Inertia Factor]	<i>S P G u</i>
[Ramp Divider]	<i>d C F</i>
[DC Inj Level 1]	<i>i d C 1</i>
[DC Inj Time 1]	<i>t d i</i>
[DC Inj Level 2]	<i>i d C 2</i>
[DC Inj Time 2]	<i>t d C</i>
[Auto DC inj Level 1]	<i>S d C 1</i>
[Auto DC Inj Time 1]	<i>t d C 1</i>
[Auto DC inj Level 2]	<i>S d C 2</i>
[Auto DC Inj Time 2]	<i>t d C 2</i>
[Switching frequency]	<i>S F r</i>
[Current Limitation]	<i>C L i</i>
[Current Limit2 Value]	<i>C L 2</i>
[Motor fluxing]	<i>F L u</i>
[Low Speed Timeout]	<i>t L S</i>
[Sleep Offset Thres.]	<i>S L E</i>
[Jog frequency]	<i>J G F</i>
[Jog Delay]	<i>J G t</i>
[Preset speed 2]...[Preset speed 16]	<i>S P 2... S P 16</i>
[+/- Speed limitation]	<i>S r P</i>
[Multiplying coeff.]	<i>Π F r</i>
[ENA prop gain]	<i>G P E</i>
[ENA integral gain]	<i>G i E</i>
[Brk Release Current]	<i>i b r</i>
[Brake release I Rev]	<i>i r d</i>
[Brake Release time]	<i>b r t</i>
[Brake release freq]	<i>b i r</i>
[Brake engage freq]	<i>b E n</i>
[Brake engage delay]	<i>t b E</i>
[Brake engage time]	<i>b E t</i>
[Jump at reversal]	<i>J d C</i>
[Time to restart]	<i>t t r</i>
[BRH b4 freq]	<i>b F t d</i>
[Motor torque limit]	<i>t L i Π</i>
[Gen. torque limit]	<i>t L i G</i>
[Torque ratio]	<i>t r t</i>
[Low Torque]	<i>L t 9</i>
[High Torque]	<i>H t 9</i>
[PID Prop.Gain]	<i>r P G</i>
[PID Intgl.Gain]	<i>r i G</i>
[PID derivative gain]	<i>r d G</i>

Parameter	Code
[PID ramp]	<i>P r P</i>
[PID Min Output]	<i>P o L</i>
[PID Max Output]	<i>P o H</i>
[PID Start Ref Freq]	<i>S F S</i>
[PID acceleration time]	<i>A C C P</i>
[Min fbk Warning]	<i>P A L</i>
[Max fbk Warning]	<i>P A H</i>
[PID error Warning]	<i>P E r</i>
[Speed input %]	<i>P S r</i>
[Ref PID Preset 2]	<i>r P 2</i>
[Ref PID Preset 3]	<i>r P 3</i>
[Ref PID Preset 4]	<i>r P 4</i>
[PID Fdbk Range]	<i>P F Π r</i>
[PID Fdbk Error Delay]	<i>P F Π d</i>
[Low Freq.Threshold]	<i>J G t</i>
[High Current Thd]	<i>C t d</i>
[Low I Threshold]	<i>C t d L</i>
[High torque thd.]	<i>t t H</i>
[Low torque thd.]	<i>t t L</i>
[Motor Freq Thd]	<i>F t d</i>
[Low Freq.Threshold]	<i>F t d L</i>
[Freq. threshold 2]	<i>F 2 d</i>
[2 Freq. Threshold]	<i>F 2 d L</i>
[Freewheel stop Thd]	<i>F F t</i>
[Motor Therm Thd]	<i>t t d</i>
[Reference high Thd]	<i>r t d</i>
[Reference low Thd]	<i>r t d L</i>
[Skip Frequency]	<i>J P F</i>
[Skip Frequency 2]	<i>J F 2</i>
[3rd Skip Frequency]	<i>J F 3</i>
[Skip Freq.Hysteresis]	<i>J F H</i>
[Unld.Thr.Nom.Speed]	<i>L u n</i>
[Unld.Thr.0.Speed]	<i>L u L</i>
[Unld. FreqThr. Det.]	<i>r Π u d</i>
[Hysteresis Freq]	<i>S r b</i>
[Underload T.B.Rest.]	<i>F t u</i>
[Ovld Detection Thr.]	<i>L o C</i>
[Overload T.B.Rest.]	<i>F t o</i>
[Fan mode]	<i>F F Π</i>
[Pmax Motor]	<i>t P Π Π</i>
[Pmax Generator]	<i>t P Π G</i>
[Stall Max Time]	<i>S t P I</i>

Parameter	Code
[Stall Current]	<i>5 ℄ P 2</i>
[Stall Frequency]	<i>5 ℄ P 3</i>
[AI1 Th Warn Level]	<i>℄ H 1 R</i>
[AI3 Th Warn Level]	<i>℄ H 3 R</i>
[AI4 Th Warn Level]	<i>℄ H 4 R</i>
[AI5 Th Warn Level]	<i>℄ H 5 R</i>
[AI1 Th Error Level]	<i>℄ H 1 F</i>
[AI3 Th Error Level]	<i>℄ H 3 F</i>
[AI4 Th Error Level]	<i>℄ H 4 F</i>
[AI5 Th Error Level]	<i>℄ H 5 F</i>
[Sleep Min Speed]	<i>5 L 5 L</i>
[Sleep Power Level]	<i>5 L P r</i>
[Sleep Delay]	<i>5 L P d</i>
[Sleep Boost Speed]	<i>5 L b 5</i>
[Sleep Boost Time]	<i>5 L b t</i>
[Wake Up Process level]	<i>W u P F</i>
[Wake Up Process Error]	<i>W u P E</i>
[Load correction]	<i>L b ℄</i>
[AFE Generator Mode]	<i>℄ L , G</i>

[Set 1] *P 5 1 -* to [Set 3] *P 5 3 -*

3 possible sets of values.

Making an entry in this menu opens a settings window containing the selected parameters in the order in which they were selected.

Access to each menu in order to configure their own set of values.

[Generic functions] - [Stop after speed timeout]

[Stop after speed timeout] P r δ P - Menu

Access

[Complete settings] \rightarrow [Generic functions] \rightarrow [Stop after speed timeout]

Sleep/Wake-Up in Speed Control Mode

The drive is in Speed control mode, when PID is not active, typically when:


- PID is not configured (the motor speed setpoint is controlled by an external PLC, for example).
- PID is in manual mode (manual application mode, for example).
- PID is not active because Channel 1 is not selected (forced local mode enabled, for example).

When the drive is used in Speed Control (PID not used or not active), a speed condition is used to switch the application to the sleep state. When the drive is in sleep state, the motor is restarted if the sleep condition disappears.

This function avoids prolonged operation at low speeds when neither useful nor compliant with the system constraints. It stops the motor after a period of operation at reduced speed. This time and speed can be adjusted.

In Speed control mode, Sleep/Wake-up is managed according to the following rules:

- The motor is stopped when **[Pre-Ramp Ref Freq] F r H** and **[Output frequency] r F r** become and stay lower than **[Low speed] L δ P + [Sleep Offset Thres.] δ L ϵ** during **[Low Speed Timeout] ϵ L δ** .
- The motor is restarted when **[Pre-Ramp Ref Freq] F r H > [Low speed] L δ P + [Sleep Offset Thres.] δ L ϵ** .

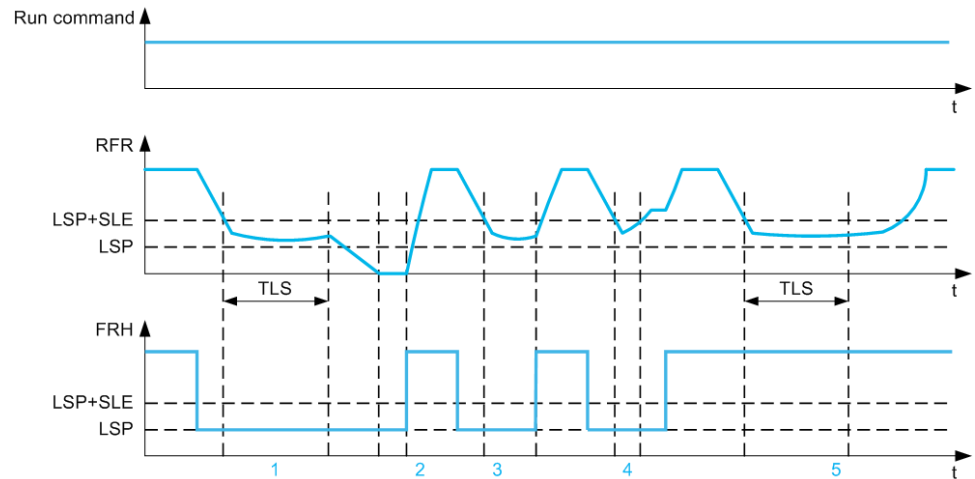

1 Nominal **[Low Speed Timeout] L 5** function action: after **[Low Speed Timeout] L 5** time, the motor is stopped according to the current deceleration ramp

2 **[Pre-Ramp Ref Freq] F r H** becomes greater than **[Low speed] L 5 P + [Sleep Offset Thres.] S L E** and run order still present **[Low Speed Timeout] L 5** function is deactivated

3 **[Low Speed Timeout] L 5** function is not activated because **[Pre-Ramp Ref Freq] F r H** becomes greater than **[Low speed] L 5 P + [Sleep Offset Thres.] S L E** before **[Low Speed Timeout] L 5** has expired

4 **[Low Speed Timeout] L 5** function is not activated because **[Output frequency] r F r** becomes greater than **[Low speed] L 5 P + [Sleep Offset Thres.] S L E** before **[Low Speed Timeout] L 5** has expired

5 **[Low Speed Timeout] L 5** function is not activated because **[Pre-Ramp Ref Freq] F r H** stays greater than **[Low speed] L 5 P + [Sleep Offset Thres.] S L E**

[Low Speed Timeout] L 5

Low speed timeout

Setting ()	Description
0.0...999.9 s	Setting range Factory setting: 0.0 s

[Sleep Offset Thres.] S L E ★

Sleep offset threshold.

This parameter can be accessed if **[Low Speed Timeout] L 5** is not set to 0.

Adjustable restart threshold (offset) following a stop after prolonged operation at **[Low speed] L 5 P + [Sleep Offset Thres.] S L E**, in Hz. The motor restarts if the reference rises above (LSP + SLE) and if a run command is still present.

Setting ()	Description
1.0... [Max Frequency] L F r	Setting range Factory setting: 1.0 Hz

[Generic functions] - [Active Front End]

[Active Front End] $A F E$ - Menu

Access

[Complete settings] \rightarrow [Generic functions] \rightarrow [Active Front End]

About This Menu

This menu is used to set the current limitation for active front end used in generator mode.

If the active front end is running in motor mode, a warning **[AFE Motor Limitation]** \llcorner \llcorner \llcorner is triggered if the current limitation of 120% is reached, a warning **[AFE Regen Limitation]** \llcorner \llcorner \llcorner is triggered when the limitation set with parameter **[AFE Generator Mode]** \llcorner \llcorner \llcorner is reached.

NOTE: This menu can be accessed on ATV980 and ATV9B0.

[AFE Generator Mode] \llcorner \llcorner \llcorner ★

AFE Generator Mode

This parameter sets the current limitation in generator operation mode. If the parameter is set to **[Low Harmonic]** \llcorner \llcorner \llcorner the drive will operate in Low Harmonic but not regenerate energy to the mains.

Setting	Code / Value	Description
[Low Harmonic]	\llcorner \llcorner \llcorner	Low Harmonic mode (current to the mains less than 10%).
[Low Harmonic & Regen]	\llcorner \llcorner \llcorner	Low Harmonic and Regeneration mode (120%). Factory setting
0.0...120.0 %		Current limitation in generator mode (for specific setting).

[Generic functions] - [Bus Ref Link]

[Bus Ref Link] 5 5 -

Access

[Complete settings] → [Generic functions] → [Bus Ref Link]

About This Menu

This menu is used to configure the DC bus link on Multi-Drive configuration with common DC bus supply.

This menu can be access if [Access Level] 5 5 is set to [Expert] 5 5 .

[DC Bus Source Type] 5 5 5

DC bus source type.

This parameter is used to select the type of product used as DC Bus source.

Setting	Code / Value	Description
[Not configured]	no	Function inactive. Factory setting
[Supply Unit REC]	5 5 5 5	The drive is connected to a common DC bus which is supplied by a MultiDrive Rectifier Supply Unit.
[Supply Unit AFE]	5 5 5 5 5	The drive is connected to a common DC bus which is supplied by a MultiDrive AFE Supply Unit. The DC voltage level has to be shared between the AFE Supply Unit and all connected drives - set by parameter [AFE Bus Ref Link] 5 5 5 .
[Drive with AFE]	5 5 5 5 5 5	The drive is connected to the DC bus of a Regenerative Drive System. The DC voltage level has to be shared between the Regenerative Drive System and all connected drives - set by parameter [AFE Bus Ref Link] 5 5 5 .
[Drive with REC]	5 5 5 5 5	The drive is connected to a common DC bus which is supplied by an other drive.

[AFE Bus Ref Link] 5 5 5 ★

AFE bus reference link

This parameter is used to select the transmission type used to send the DC bus reference.

This parameter can be accessed if [DC Bus Source Type] 5 5 5 is set to:

- [Supply Unit AFE] 5 5 5 5 5 , or
- [MCE with AFE] 5 5 5 5 5 5 .

Setting	Code / Value	Description
[No]	no	Function inactive Factory setting
[PTO]	5 5 5 5 5	PTO is used
[Modbus]	5 5 5 5 5 5	Modbus communication is used

[DC Bus Charge Time] *d C t* ★

DC Bus charge option time.

This parameter can be accessed if **[DC Bus Source Type]** *d C b 5* is set to:

- **[Supply Unit AFE]** *S U A F E*, or
- **[MCE with AFE]** *M C E L H*.

Setting	Description
0.00...10.00 s	Factory setting: 0.00 s

[Generic functions] - [DC bus supply]

[DC bus supply] Ⓛ Ⓜ Ⓟ - Menu

Access

[Complete settings] → [Generic functions] → [DC bus supply]


About This Menu

This menu can be accessed on 220V Drives with power **greater than 15kW** or 480V Drives with power **greater than 22kW**.

It gives the possibility to switch off/on drives supplied by a common DC bus without stopping the supply unit. Direct power supply via the DC bus requires a protected direct current source with adequate power and voltage as well as a suitably dimensioned resistor and capacitor precharging contactor. Consult Schneider Electric for information about specifying these components.

The **Direct Power Supply via Dc Bus** function can be used to control the precharging contactor via a relay or a logic input on the drive.

Example circuit using R2 relay:

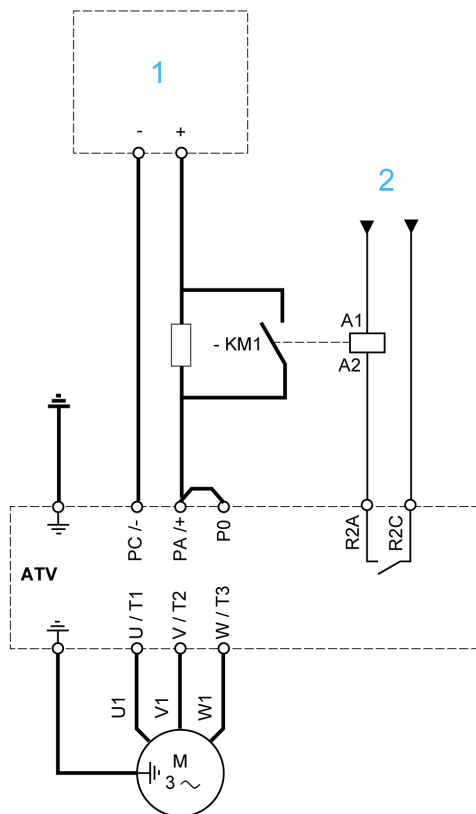

1 DC power supply

2 +24 Vdc

[DC Charging Assign] Ⓛ Ⓜ Ⓟ ★

DC Bus charge assignment.

Setting	Code / Value	Description
[No]	00	Not assigned Factory setting
[R2]...[R3]	r 2 ... r 3	Relay output R2...R3

Setting	Code / Value	Description
[R4]...[R6]	r 4...r 6	Relay output R4...R6 if VW3A3204 relay output option module has been inserted
[DQ1 Digital Output]	d o 1	Digital output DQ1
[DQ11 Digital Output]... [DQ12 Digital Output]	d o 1 1... d o 1 2	Digital output DQ11...DQ12 if VW3A3203 I/O extension module has been inserted
[R61]...[R66]	r 6 1...r 6 6	Relay R61 ...R66 NOTE: This selection can be accessed on ATV960, ATV980 equipped with Cabinet IO.

[DC Bus Charge Time] ƒ ƒ ƒ ★

DC Bus charge option time.

This parameter can be accessed if [DC Charging Assign] ƒ ƒ ƒ is not set to [Not Assigned] n o .

Setting	Description
0.00...10.00 s	Factory setting: 0.00 s

[Generic functions] - [Multimotors config]

[Multimotors config] Π Π C - Menu

Access

[Complete settings] → [Generic functions] → [Multimotors config]

About This Menu

This function is used to switch between up to 4 configurations using digital inputs or bits.

2 Different modes exist:

- **Multi-Configuration** mode ([Multimotors] C H Π set to [No] n o): Up to 4 different configurations for a single motor. The drive parameters linked to the motor are shared between the configurations.
- **Multi-Motor** mode ([Multimotors] C H Π set to [Yes] Y E 5): Up to 4 different motor configuration. The drive parameters linked to the motor depends on the configuration; they must be defined for each configuration.

NOTE: The two modes cannot be combined.

Observe the following conditions:

- Switching may take place when stopped (drive locked). If a switching request is sent during operation, it will be executed at next stop.
- When switching between motors, the concerned power and control terminals must be switched as appropriate.
- All configurations must share the same hardware configuration, i.e. the option modules cannot be removed or replaced by another when switching between configuration; otherwise the drive locks in **[Incorrect Configuration]** C F F .
- Switching to a configuration that does not exist causes the drive to lock in **[Empty Configuration]** C F , 4. Use **[Save Configuration]** 5 C 5 , to save the current drive configuration.

NOTE: To help set the multi-configurations or the multi-motor configurations, a dedicated view exists in SoMove/DTM. Access **Device > Configuration management > Multi-Configuration**.

Menus and Parameters Switched in Multi-Motor Mode

In multi-configurations mode, communication parameters are not switched.

- **[Motor parameters]** Π Π A - menu.
- **[Input/Output]** , o - menu.
- **[Generic functions]** C 5 G F - menu except for the **[Multimotors config]** Π Π C - function (to be configured once only).
- **[Generic monitoring]** G P r - menu.
- **[My menu]** Π Y Π n - menu.

Define/Enter a drive configuration

Irrespective of the mode (multi-motor or multi-configuration), each one of the configurations must be entered in the drive; otherwise, the error **[Empty Configuration]** C F , 4 is triggered.

The followings can be used to define/enter a drive configuration:

- Use **[Save Configuration]** 5 C 5 , to save the current drive configuration in the corresponding memory slot.
- Use **[Copy to the drive]** o P F to copy a configuration from the Graphic Display Terminal into the drive. It replaced the current drive configuration

selected according to the level of the inputs assigned to **[2 Configurations] C n F 1** and **[3 Configurations] C n F 2**.


- Use the toolbar or the dedicated view in SoMove/DTM (refer to the DTM online help for more information).

Switching Command

Depending on the number of motors or selected configurations (Up to 4), the switching command is sent using one or two digital inputs (or bits). The table below lists the possible combinations.

DI or bit assigned to [2 Configurations] C n F 1	DI or bit assigned to [3 Configurations] C n F 2	Selected configuration or motor
0	0	Config 0
1	0	Config 1
0	1	Config 2
1	1	Config 3

Schematic Diagram for Multi-Motor Mode

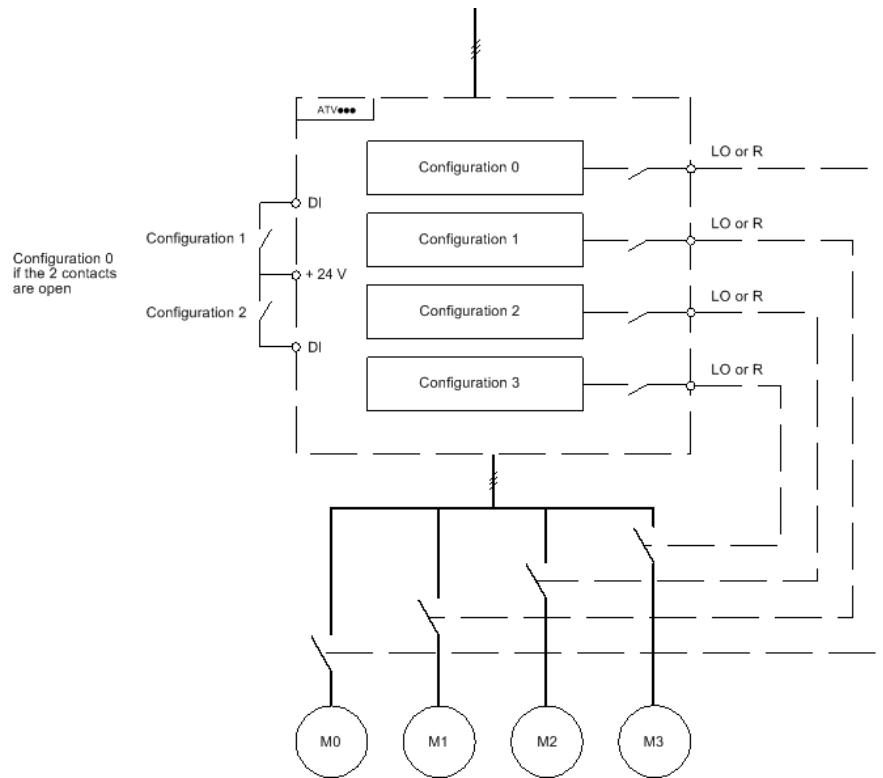

Auto-Tuning in Multi-Motor Mode

On Multi-Motor mode, autotuning parameters for each motor are handled and stored. However, it is necessary to firstly perform autotuning on each motor.

This auto-tuning can be performed:

- Manually using a Digital input when the motor changes.
- Automatically on the selected motor at drive power-up if the **[Automatic autotune] A u E** is set to **[Yes] Y E 5**.

Motor thermal states in multi-motor mode:

The drive helps to protect the four motors individually. Each thermal state takes into account all stop times if the drive power is not switched off.

NOTICE

MOTOR OVERHEATING

When the drive is switched off, the thermal states of the connected motors are not saved. When the drive is switched on again, the drive is not aware of the thermal states of the connected motors.

- Use separate temperature sensors for each connected motor for thermal monitoring.

Failure to follow these instructions can result in equipment damage.

Configuration Information Output

In the **[Input/Output]** *IO* - menu, a digital output can be assigned to each configuration or motor (2 to 4) for remote information transmission.

NOTE: As the **[Input/Output]** *IO* - menu is switched, these outputs must be assigned in all configurations in which information is required.

[Multimotors] C H Π

Multimotors selection.

Setting	Code / Value	Description
[No]	<i>no</i>	Multi-configuration possible Factory setting
[Yes]	<i>yes</i>	Multi-motor possible

[2 Configurations] C n F 1 and [3 Configurations] C n F 2

2 configurations assign and 3 configurations assign.

To switch between configurations (multi-configuration or multi-motor).

NOTE: In order to obtain 4 motors or 4 configurations, **[2 Configurations]** *C n F 1* and **[3 Configurations]** *C n F 2* must be configured.

Setting	Code / Value	Description
[Not Assigned]	<i>no</i>	Not assigned Factory setting
[DI1]...[DI8]	<i>L 1 L 8</i>	Digital input DI1...DI8
[DI11]...[DI16]	<i>L 11 L 16</i>	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[C101]... [C110]	<i>C 101 C 110</i>	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] <i>IO</i> configuration
[C111]... [C115]	<i>C 111 C 115</i>	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	<i>C 201 C 210</i>	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] <i>IO</i> configuration
[C211]... [C215]	<i>C 211 C 215</i>	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	<i>C 301 C 310</i>	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] <i>IO</i> configuration
[C311]... [C315]	<i>C 311 C 315</i>	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration

Setting	Code / Value	Description
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[Generic functions] - [Liquid Cooled Drive]

[Liquid Cooled Drive] L 9 d L - Menu

Access

[Complete settings] → [Generic functions] → [Liquid Cooled Drive]

About

This menu contains features dedicated to Altivar Process Module Liquid Cooled drives: it can only be accessed with ATV9L0.

[High Start Current] L L , b

This parameter can only be accessed with ATV9L0 if [Access Level] L H L is set to [Expert] E P r .


This parameter is used to allow an overload up 162 % of the nominal current (In) after a start of the motor. This overload is limited to a maximum time of 120 s within 600 s. This overload can only be activated one time per run of the motor.

NOTICE

OVERHEATING

- Verify that the motor is properly rated for the maximum current to be applied to the motor.
- Consider the duty cycle of the motor and all factors of your application including derating requirements in determining the current limit.

Failure to follow these instructions can result in equipment damage.

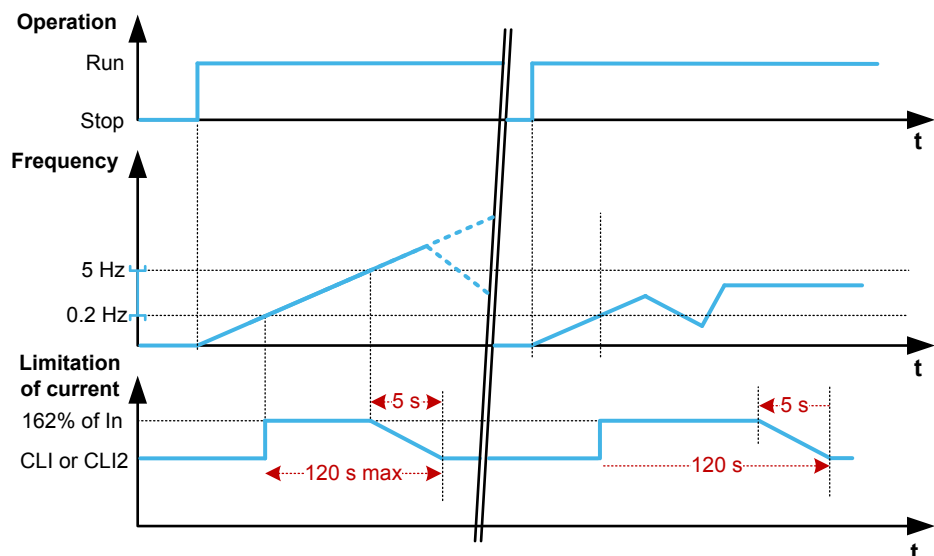

Note:

- This overload can exceed [Current Limitation] L L , and [Current Limit2 Value] L L 2 .
- A recovery time is necessary to return to a normal thermal state before the function can be activated again. During this time, the motor can still be started but the current limitation is defined by [Current Limitation] L L , (or [Current Limit2 Value] L L 2). With 162% overload for 120s, the recovery time is 480s.
- This overload can only be active on output frequencies greater than 0.2 Hz and lower than 5.0 Hz.

- This parameter is forced to **[No]** *n 0* if **[Drive Overload Monit]** *5 5 5* is enabled.

Setting	Code / Value	Description
[No]	<i>n 0</i>	Function inactive Factory setting
[Yes]	<i>5 5 5</i>	Function active

[Generic Functions] [External Weight Measurement]

[External weight meas.] E L E - Menu

Access

[Complete settings] → [Generic Functions] → [External weight meas.]


About This Menu

⚠ WARNING
LOSS OF CONTROL
Perform a comprehensive commissioning test to verify correct operation of the weight sensor under all operating and error conditions.
Failure to follow these instructions can result in death, serious injury, or equipment damage.

This function uses the information supplied by a weight sensor to adapt the **[Brk Release Current]** *i_{br}* (the torque current) of the **[Brake logic control]** *b L E -* function. Depending on the settings, the brake release current can be positive or negative. The signal from the weight sensor can be assigned to an analog input (usually a 4 - 20 mA signal), to the pulse-in input or to the encoder input, according to the type of weight sensor.

For example, but not limited to, the weight sensor can measure the total weight of a hoisting winch and its load.

The brake release current is adapted in accordance with the curve below.

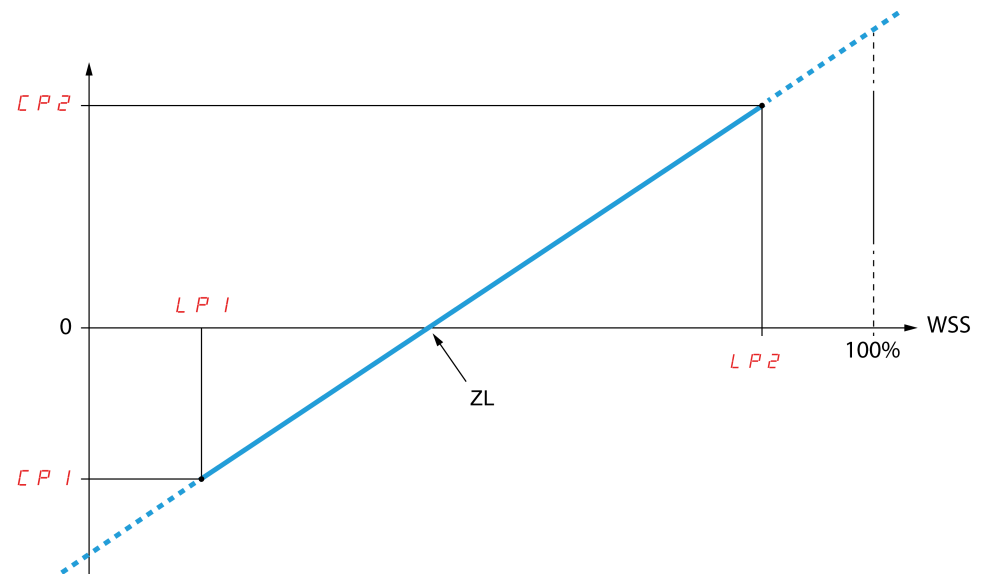

CP1 Point 1 Y

CP2 Point 2 Y

LP1 Point 1 X

LP2 Point 2 X

ZL Zero Load

WSS Weight Sensor Signal

This curve can represent a weight sensor on an application, where zero load on the motor is different from zero load on the application.

[Weight Sensor Assign] *P E 5*

Weight sensor assignment.

If [Brake assignment] *b L C* is not configured, this parameter is forced to [Not Configured] *n o*.

Setting	Code / Value	Description
[Not Configured]	<i>n o</i>	Not configured. Factory setting
[AI1]...[AI3]	<i>A , 1..A , 3</i>	Analog input AI1...AI3.
[AI4]...[AI5]	<i>A , 4..A , 5</i>	Analog input AI4...AI5 if VW3A3203 I/O extension module has been inserted.
[AI Virtual 1]	<i>A , V 1</i>	Virtual analogic input 1.
[DI7 PulseInput]... [DI8 PulseInput]	<i>P , 7..P , 8</i>	Digital input DI7...DI8 used as pulse input.
[Encoder]	<i>P G</i>	Encoder reference if an encoder module has been inserted.

[Point 1 X] *L P 1*

Ext weight point 1 X.

This parameter can be accessed if [Weight sensor Assign] *P E 5* is assigned.

Setting	Description
0.0...99.99 %	Setting range This parameter can't be equal or higher than [Point 2 X] <i>L P 2</i> . Factory setting: 0.00 %

[Point 1Y] *C P 1*

Ext weight point 1Y.

This parameter can be accessed if [Weight sensor Assign] *P E 5* is assigned.

Setting	Description
-1.1...1.1 In ⁽¹⁾	Setting range in A Factory setting: 0.7 * [Nom Motor Current] <i>n C r</i>
(1) In corresponds to the rated drive current indicated in the Installation Manual and on the drive nameplate.	

[Point 2 X] *L P 2*

Ext weight point 2 X.

This parameter can be accessed if [Weight sensor Assign] *P E 5* is assigned.

Setting	Description
0.01...100.00 %	Setting range This parameter can't be equal or higher than [Point 1 X] <i>L P 1</i> . Factory setting: 50.00 %

[Point 2Y] C P 2

Ext weight point 2Y.

This parameter can be accessed if **[Weight sensor Assign] P E 5** is assigned.

Setting	Description
-1.1...1.1 In ⁽¹⁾	Setting range in A Factory setting: [Nom Motor Current] n C r
(1) In corresponds to the rated drive current indicated in the Installation Manual and on the drive nameplate.	

[Ibr 4-20 mA loss] i b r A

Brake release current in the event of the loss of the weight sensor information.

This parameter can be accessed if the weight sensor is assigned to an analog current input (PES = Alx) and the 4-20 mA loss monitoring function is deactivated (LFLx = No).

[Alx min. value] C r L X must be equal or greater than 4 mA and **[Ibr 4-20 mA loss] i b r A** must be set to a value consistent with your application.

For a hoisting application, the advisable setting is **[Nom Motor Current] n C r**.

Setting	Description
0...1.1 In ⁽¹⁾	Setting range in A. Factory setting: 0 A
(1) In corresponds to the rated drive current indicated in the Installation Manual and on the drive nameplate.	

[Generic functions] — [Power backup]

[Power Backup] ⏪ ⏩ ⏴ ⏵ - Menu

Access

[Complete settings] → [Generic functions] → [Power Backup]

About This Menu

This function can only be used on ATV930...N4• and ATV95...N4• with power up to 18.5 kW.

This function is used to supply the drive, in case of power outage, with a backup power supply connected to the drive in order to operate temporarily the drive. This backup power supply is at a reduced voltage, and only allows a derated operating mode, at reduced speed, up to a given torque linked to the capability of the backup power supply.

To operate the drive within this derated operating mode, a digital input of the drive is assigned to this function. This assigned digital input must not be activated when the drive is powered with the mains supply.

When this function is enabled, the [Input phase loss] , P L - monitoring function is disabled.

Switching between the mains supply and the backup power supply must only be done with changeover contactors.


⚠ DANGER

HAZARD OF FIRE OR EXPLOSION

You must refer to the application note "Power Backup" to implement this function.

Failure to follow these instructions will result in death or serious injury.

The synoptic below shows an example of implementation.

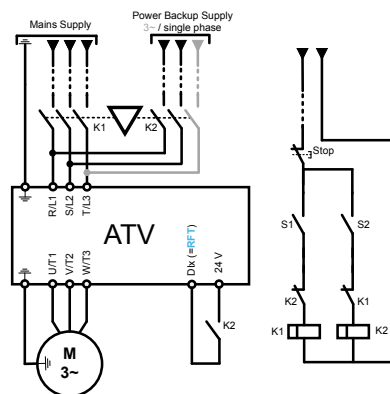

[Power Backup Assign] 5 F 5

Power backup input assignment.

The assigned input is used to activate the power backup mode of the drive (state at 1). This input must not be activated when the drive is powered with the mains supply.

Setting	Code / Value	Description
[Not Assigned]	00	Not assigned Factory setting
[DI1]... [DI8]	L, I... L, B	Digital input DI1...DI8
[DI11]... [DI16]	L, I I... L, I B	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted

[Pwr Backup Voltage] 5 5 U

Power backup voltage.

Minimum permissible AC voltage value of the backup power supply.

This parameter can be accessed if the power backup has been enabled (i.e [Power Backup Assign] 5 F 5 is assigned).


Setting	Description
220...320 V (step: 1 V)	Setting range Factory setting: 220 V

[Pwr Backup Ref Freq] 5 5 P

Power backup reference frequency.

Value of the frequency reference in power backup mode: the value must be adapted according to the application requirements, especially the required torque within the derated operating mode.

Find below the power backup reference frequency setting range according to the power backup voltage:

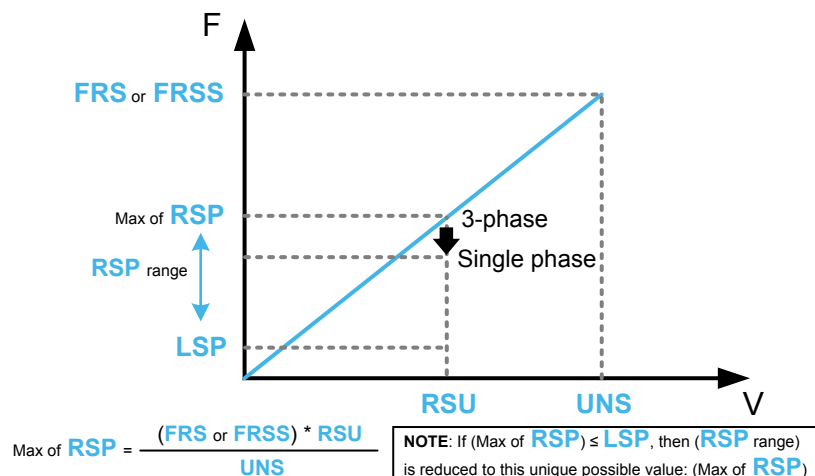

NOTE: Compared to a 3-phase power backup supply, the [Pwr Backup Ref Freq] 5 5 P value may need to be reduced in order to provide the nominal torque with a single phase power backup supply. For more information, you must refer to the application note "Power Backup".

This parameter can be accessed if the power backup has been enabled (i.e. **[Power Backup Assign]** r F E is assigned).

Setting ()	Description
0.0...6,553.5 Hz (step: 0.1 Hz)	Setting range: [Low speed] L 5 P up to a maximum calculated according to [Pwr Backup Voltage] r 5 u, [Nom Motor Voltage] u n 5 and F r 5 (for an asynchronous law) or [Sync Nominal Freq] F r 5 5 (for a synchronous law). The setting range can be reduced to a single value. See the figure above. Factory setting: 5.0 Hz

[Generic monitoring]

[Process underload] u L d - Menu

Access


[Complete settings] → [Generic monitoring] → [Process underload]

Process Underload Detected Error

A process underload is detected when the next event occurs and remains pending for a minimum time [Unld T. Del. Detect] u L t, which is configurable:

- The motor is in steady state and the torque is below the set underload limit ([Unld.Thr.0.Speed] L u L, [Unld.Thr.Nom.Speed] L u n, [Unld. FreqThr. Det.] r n u d parameters).
- The motor is in steady state when the offset between the frequency reference and motor frequency falls below the configurable threshold [Hysteresis Freq] S r b.

Between zero frequency and the rated frequency, the curve reflects the following equation: $\text{torque} = L u L + (L u n - L u L) \times (\text{frequency})^2 / (\text{rated frequency})^2$ The underload function is not active for frequencies below r n u d.

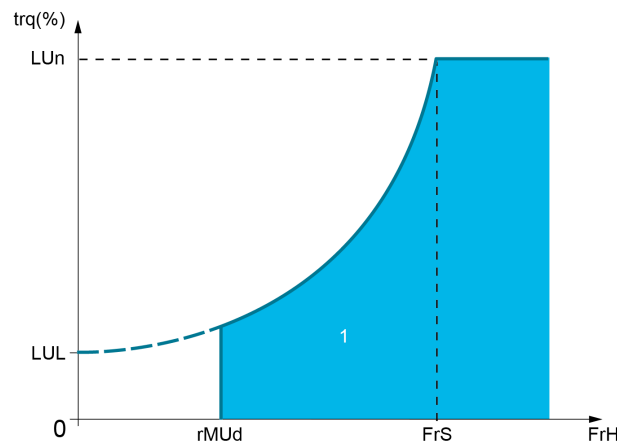

1 Underload zone.

A relay or a digital output can be assigned to the signaling of this detected error in the [Input/Output] i o -, [I/O assignment] i o A 5 - menus.

[Unld T. Del. Detect] u L t

Underload detection time delay.

A value of 0 deactivates the function and makes the other parameters inaccessible.

Setting	Description
0...100 s	Setting range Factory setting: 0 s

[Unld.Thr.Nom.Speed] L u n ★

Underload threshold at nominal motor speed [Nominal Motor Freq] F r 5, as a % of the rated motor torque.

This parameter can be accessed if [Unld T. Del. Detect] u L t is not set to 0.

Setting ()	Description
20...100%	Setting range Factory setting: 60%

[Unld.Thr.0.Speed] L u L ★

Underload threshold at zero frequency as a % of the rated motor torque.

This parameter can be accessed if [Unld T. Del. Detect] u L L is not set to 0.

Setting ()	Description
0...[Unld.Thr.Nom.Speed] L u n	Setting range Factory setting: 0%

[Unld. FreqThr. Det.] r n u d ★

Minimum frequency underload detection threshold.

This parameter can be accessed if [Unld T. Del. Detect] u L L is not set to 0.

Setting ()	Description
0.0...599.0 Hz	Setting range Factory setting: 0.0 Hz

[Hysteresis Freq] S r b ★

Maximum deviation between the frequency reference and the motor frequency, which defines a steady state operation.

This parameter can be accessed if [Unld T. Del. Detect] u L L or [Ovld Time Detect.] L o L is not set to 0.

Setting ()	Description
0.3...599.0 Hz	Setting range Factory setting: 0.3 Hz

[Underload Mangmt.] u d L ★

Underload management.

Behavior on switching to underload detection.

This parameter can be accessed if [Unld T. Del. Detect] u L L is not set to 0.

Setting	Code / Value	Description
[Ignore]	n o	Detected error ignored
[Freewheel stop]	Y E S	Freewheel stop Factory setting
[Ramp stop]	r n P	Stop on ramp
[Fast stop]	F S L	Fast stop

[Underload T.B.Rest.] *F E U* ★

Minimum time permitted between an underload being detected and any automatic restart.

To allow an automatic restart, the value of **[Fault Reset Time]** *E R T* must exceed this parameter by at least 1 minute.

This parameter can be accessed if **[Underload Mangmt.]** *U d L* is not set to **[Ignore]** *n o*.

Setting (i)	Description
0...6 min	Setting range Factory setting: 0 min

[Process overload] σ L d - Menu

Access


[Complete settings] \rightarrow [Generic monitoring] \rightarrow [Process overload]

About This Menu


A process overload error is detected when the next event occurs and remains pending for a minimum time [Ovld Time Detect.] ϵ σ L, which is configurable:

- The drive is in [Current limitation] ϵ L, mode during acceleration, deceleration, or,
- The motor is in steady state and the [Motor Current] L ϵ r is above the set overload threshold [Ovld Detection Thr.] L σ ϵ .

The motor is in steady state when the offset difference between [Pre-Ramp Ref Freq] F r H and [Motor Frequency] r F r is less than the configurable threshold [Hysteresis Freq] S r b.

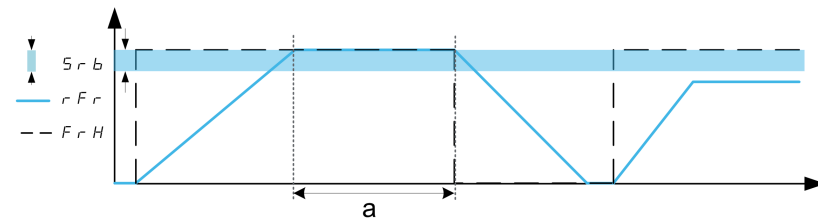

NOTE: Process overload monitoring is always active in [Current limitation] ϵ L, state.

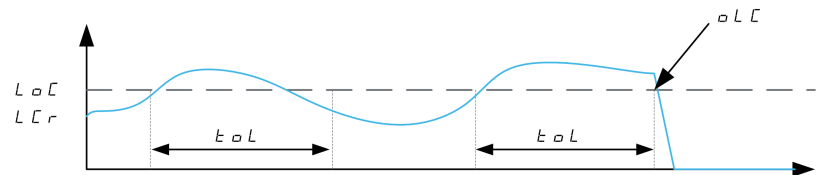

[Ovld Time Detect.] ϵ σ L

Overload reaction time.

A value of 0 deactivates the function and makes the other parameters inaccessible.

Setting	Description
0...100 s	Setting range Factory setting: 0 s

[Ovld Detection Thr.] L σ ϵ ★

Overload threshold.

Overload detection threshold, as a % of the rated motor current [Nom Motor Current] σ ϵ r. This value must be less than the limit current in order for the function to work.

This parameter can be accessed if [Ovld Time Detect.] ϵ σ L is not set to 0.

Setting (°)	Description
70...150%	Setting range Factory setting: 110%

[Hysteresis Freq] 5 r b ★

Hysteresis for steady state.

Maximum deviation between the frequency reference and the motor frequency, which defines a steady state operation.

This parameter can be accessed if **[Ovld Time Detect.] 5 o L** or **[Unld T. Del. Detect.] u L 5** is not set to 0.

Setting ()	Description
0.3...599.0 Hz	Setting range Factory setting: 0.3 Hz

[Ovld.Proces.Mngmt] o d L ★

Behavior on switching to overload detection.

This parameter can be accessed if **[Ovld Time Detect.] 5 o L** is not set to 0.

Setting	Code / Value	Description
[Ignore]	n o	Detected error ignored
[Freewheel stop]	5 E 5	Freewheel stop Factory setting
[Ramp stop]	r n P	Stop on ramp
[Fast stop]	F 5 5	Fast stop

[Overload T.B.Rest.] F 5 o ★

Minimum time permitted between an overload being detected and any automatic restart.

In order to allow an automatic restart, the value of **[Fault Reset Time] 5 A r** must exceed this parameter by at least 1 minute.

This parameter can be accessed if **[Ovld Time Detect.] 5 o L** or **[Ovld.Process.Mngmt] o d L** is not set to 0.

Setting ()	Description
0...6 min	Setting range Factory setting: 0 min

[Stall monitoring] 5 5 P r - Menu

Access

[Complete settings] → [Generic monitoring] → [Stall monitoring]

About This Menu

This function helps to prevent a motor overload by monitoring the motor current and the speed rise time.

A stalling condition is when:

- An output frequency is smaller than the stalling frequency [Stall Frequency] 5 5 P 3
- And an output current is higher than the stalling current [Stall Current] 5 5 P 2
- During a time longer than the stalling time [Stall Max Time] 5 5 P 1

When a stalling condition occurs, a [Motor Stall Error] 5 5 F error is triggered.

[Stall Monitoring] 5 5 P C

Stall monitoring activation.

Setting	Code / Value	Description
[No]	n o	Function disabled Factory setting
[Yes]	y e s	Function enabled

[Stall Max Time] 5 5 P 1 ★

Motor stall maximum time.

This parameter can be accessed if [Stall Monitoring] 5 5 P C is not set to [No] n o.

Setting ()	Description
0.0...200 s	Setting range Factory setting: 60.0 s

[Stall Current] 5 5 P 2 ★

Stall monitoring current level, as a % of the rated motor current [Nom Motor Current] n C r.

This parameter can be accessed if [Stall Monitoring] 5 5 P C is not set to [No] n o.

The factory setting changes to 150.0 % if [Dual rating] d r t is set to [Heavy Duty] H i G h.

Setting ()	Description
0.0...120.0%	Setting range Factory setting: 150.0%

[Stall Frequency] 5 5 P 3★

Stall monitoring frequency level.

This parameter can be accessed if **[Stall Monitoring] 5 5 P 1** is not set to **[No]** *n o*.

Setting ()	Description
0.0... [Max Frequency] 5 5 F 1	Setting range Factory setting: 2.0 Hz

[Thermal monitoring] 5 - Menu

Access

[Complete settings] → [Generic monitoring] → [Thermal monitoring]

About This Menu

Identical to [Thermal monitoring] 5 - Menu , page 166.

[Frequency meter] F 9 F - Menu

Access


[Complete settings] → [Generic monitoring] → [Frequency meter]

About This Menu

This function uses the "Pulse input" input and can only be used if the "Pulse input" input is not being used for another function.

Example of Use

An indexed disk driven by the motor and connected to a proximity sensor can be used to generate a frequency signal that is proportional to the speed of rotation of the motor.

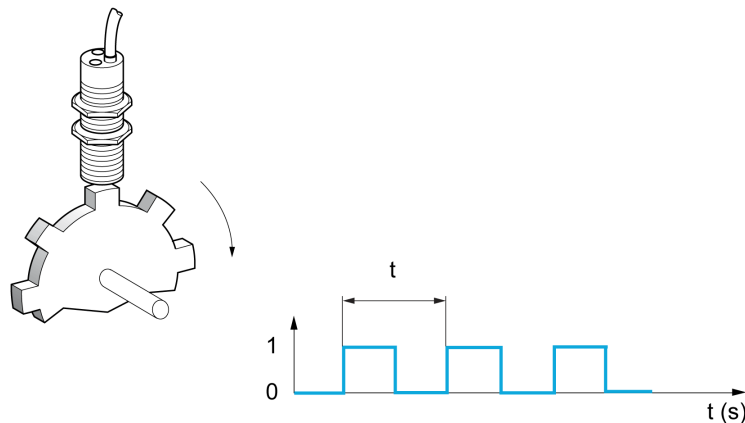

When applied to the "Pulse input" input, this signal supports:

- Measurement and display of the motor speed: signal frequency = 1/T. This frequency is displayed with the **[Measured Freq] F 9 5**.
- Overspeed detection (if the measured speed exceeds a preset threshold, the drive triggers an error).
- Brake failure detection if brake logic control has been configured: If the speed does not drop sufficiently quickly following a command to engage the brake, the drive triggers an error. This function can be used to detect worn brake linings.
- Detection of a speed threshold that can be adjusted using **[Pulse warning thd.] F 9 L**, page 464 and is assignable to a relay or digital output.

[Frequency meter] F 9 F

Frequency Meter function activation.

Setting	Code / Value	Description
[Not Configured]	n o	Not assigned Factory Setting
[DI7 PulseInput]...[DI8 PulseInput]	P , 7... P , 8	Digital input DI7...DI8 used as pulse input

[Pulse scal. divider] F 9 C

Coefficient for measure.

The frequency measured is displayed with the **[Measured Freq] F 9 5** parameter.

Setting ()	Description
1.0...100.0	Setting range Factory setting: 1.0

[Overspd. pulse thd.] F 9 R

Maximum frequency authorized.

Activation and adjustment of overspeed monitoring: **[Motor Overspeed] 5 0 F**.

Setting	Code / Value	Description
[No]	n 0	No motor overspeed monitoring Factory setting
0...30 kHz		Adjustment of the frequency tripping threshold on the "Pulse input" input divided by [Pulse scal. divider] F 9 C .

[Pulse overspd delay] 5 0 S

Time before triggering in over-speed.

Setting	Description
0.0...10.0 s	Setting range Factory setting: 0.0 s

[Level fr. pulse ctrl] F 0 E

Feedback detection threshold.

Activation and adjustment of monitoring for the pulse input (speed feedback): **[Encoder Feedback Loss] 5 P F**.

Setting	Code / Value	Description
[No]	n 0	No monitoring of speed feedback Factory setting
0.0...599 Hz		Adjustment of the motor frequency threshold for tripping a speed feedback detection. (difference between the estimated frequency and the measured speed).

[Pulse thd. wo Run] F 9 E

Frequency threshold wear brake.

Activation and adjustment of brake feedback monitoring: **[Brake Feedback] b r F**. If brake logic control **[Brake assignment] b L C** is not configured, this parameter is forced to **[No] n 0**.

Setting	Code / Value	Description
[No]	n 0	No brake monitoring Factory setting
1...1,000 Hz		Adjustment of the motor frequency threshold to trigger a [Brake Feedback] b r F error (detection of speeds other than 0).

[Pulse wo Run delay] E 9 B

Time before triggering in wear brake.

Setting	Description
0.0...10.0 s	Setting range Factory setting: 0.0 s

[Pulse warning thd.] F 9 L

Frequency level.

This parameter can be accessed if **[Frequency meter] F 9 F** is not set to **[Not configured] n a**.

Setting	Description
0...30,000 Hz	Setting range Factory setting: 0 Hz

[Input/Output] - [I/O assignment]

[DI1 assignment] \llcorner I R - to [DI8 assignment] \llcorner B R - Menus

Access

[Complete settings] \rightarrow [Input/Output] \rightarrow [I/O assignment] \rightarrow [DI8 assignment]

[DI1 Low Assignment] \llcorner I L to [DI8 Low Assignment] \llcorner B L

DI1 low assignment to DI8 low assignment.

Read-only parameter, cannot be configured. It displays all the functions associated with digital input in order to verify, for example, for compatibility problems.

If no functions have been assigned, **[No]** \square is displayed.

[DI1 High Assignment] \llcorner I H to [DI8 High Assignment] \llcorner B H

DI1 high assignment to DI8 high assignment.

Read-only parameter, cannot be configured. It displays all the functions associated with digital input in order to verify, for example, for compatibility problems.

If no functions have been assigned, **[No]** \square is displayed.

[DI11 assignment] *L I I R -* to [DI16 assignment] *L I E R -* Menus

Access

[Complete settings] → [Input/Output] → [I/O assignment] → [DI11 assignment] to [DI16 assignment]

About These Menus

Identical to [DI1 assignment] *L I R -* menu , page 465.

These menus can be accessed if VW3A3203 I/O extension module has been inserted.

[DI11 Low Assignment] *L I I L* to [DI16 Low Assignment] *L I E L*★

DI11 to DI16 low assignment.

Read-only parameters, cannot be configured. It displays all the functions associated with the digital input in order to verify, for example, for compatibility problems.

If no functions have been assigned, [No] *n o* is displayed.

[DI11 High Assignment] *L I I H* to [DI16 High Assignment] *L I E H*★

DI11 to DI16 high assignment.

Read-only parameters, cannot be configured. It displays all the functions associated with the digital input in order to verify, for example, for compatibility problems. If no functions have been assigned, [No] *n o* is displayed.

[DI7 Pulse Input Assign] P , $7A$ - Menu

Access

[Complete settings] \rightarrow [Input/Output] \rightarrow [I/O assignment] \rightarrow [DI7 Pulse Input Assign]

About This Menu

Following parameters can be accessed on the Graphic Display Terminal by pressing the OK key on the [DI7 Frequency Measured] $P F \llcorner 7$ parameter.

[DI7 Pulse Input Assign] P , $7A$

DI7 pulse input assignment.

It displays all the functions associated with the pulse input in order to verify, for example, for compatibility problems.

If no functions have been assigned, [No] $n o$ is displayed.

Setting	Code / Value	Description
[No]	$n o$	Not assigned
[Torque Ref Offset]	$t 9 o$	Torque offset source
[Torque Ref Ratio]	$t 9 r$	Torque ratio source
[Ref Frequency 1]	$F r 1$	Reference frequency 1
[Ref Frequency 2]	$F r 2$	Reference frequency 2
[Ref Frequency 2 Summing]	$S R 2$	Reference frequency 2 summing
[PID Feedback]	P , F	PI controller feedback
[Torque limitation]	$t R R$	Torque limitation: activation by an analog value
[Torque limitation 2]	$t R R 2$	Torque limitation: activation by an analog value
[Subtract Ref Freq 2]	$d R 2$	Subtract reference frequency 2
[Manual PID Ref.]	P , n	Manual speed reference of the PID controller (auto-man)
[PID Ref Frequency]	$F P ,$	PID reference frequency
[Ref Frequency 3 Summing]	$S R 3$	Reference frequency 3 summing
[Ref Frequency 1B]	$F r 1 b$	Reference frequency 1B
[Subtract Ref Freq 3]	$d R 3$	Subtract reference frequency 3
[Forced local]	$F L o \llcorner$	Forced local reference source1
[Ref Frequency 2 multiplier]	$n R 2$	Reference frequency 2 multiplier

Setting	Code / Value	Description
[Ref Frequency 3 multiplier]	$\Pi R 3$	Reference frequency 3 multiplier
[Torque reference]	$\llcorner r 1$	Torque regulation: torque set point 1
[Torque reference 2]	$\llcorner r 2$	Torque regulation: torque set point 2
[Frequency Meter]	$F 9 F$	Frequency meter function activation
[External Feed Forward]	$\llcorner E F F$	External feed-forward

[DI8 Pulse Input Assign] $P , B R$ - Menu

Access

[Complete settings] \rightarrow [Input/Output] \rightarrow [I/O assignment] \rightarrow [Pulse Input DI8 Assign]

About This Menu

Identical to [DI7 Pulse Input Assign] $P , 7 R$ - , page 467.

Following parameters can be accessed on the Graphic Display Terminal by pressing the OK key on the [DI8 Frequency Measured] $P F \llcorner B$ parameter.

[Pulse Input DI8 Assign] $P , B R$

Pulse Input DI8 Assignment.

Identical to [Pulse Input DI7 Assign] $P , 7 R$, page 467

[Encoder Pulse Assign] *P U G R - Menu*

Access

[Complete settings] → [Input/Output] → [I/O Assignment] → [Encoder Pulse Assign]

About This Menu

Following parameters can be accessed on the Graphic Display Terminal by pressing the OK key on the [Encoder Config] *P U* parameter.

This parameter can be accessed if an encoder module has been plugged.

[Encoder Pulse Assign] *P U G R*

Encoder pulse assignment.

It displays all the functions associated with the pulse input in order to verify, for example, compatibility problems.

If no functions have been assigned, [No] *n o* is displayed.

Identical to [Pulse Input DI7 Assign] *P I 7 R*, page 467.

[AI1 assignment] *R I R -* to [AI5 assignment] *R I 5 R - Menus*

Access

[Complete settings] → [Input/Output] → [I/O assignment] → [AI1 assignment] to [AI5 assignment]

About These Menus

AI4 and AI5 can be accessed if VW3A3203 I/O extension module has been inserted.

[AI1 Assignment] *R I R* to [AI5 Assignment] *R I 5 R*

Analog input AI1 functions assignment to Analog input AI5 functions assignment.

Read-only parameter, cannot be configured. It displays all the functions associated the related analog input in order to verify, for example, for compatibility problems.

If no functions have been assigned, [No] *n o* is displayed.

[AIV1 assignment] *AVIA* - Menu**Access**

[Complete settings] → [Input/Output] → [I/O assignment] → [AIV1 assignment]

[AIV1 Assignment] *AVIA*

Virtual analog input function assignment.

Read-only parameter, cannot be configured. It displays all the functions associated with the related virtual analog input in order to verify, for example, for compatibility problems. If no functions have been assigned, **[No]** *no* is displayed.

[DI50 Assignment] *D50A* - to [DI59 Assignment] *D59A* - Menus**Access**

[Complete settings] → [Input/Output] → [I/O assignment] → [DI50 Assignment] to [DI59 Assignment]

About These Menus

These menus can be accessed on ATV●30●●●F, ATV●50●●●F, ATV●60, ATV●80, and ATV●L0, equipped with cabinet IO, and if **[Access Level]** *LE* is set to **[Expert]** *EP*.

[DI50 Low Assignment] *D50L* to [DI59 Low Assignment] *D59L*

DI50 to DI59 low assignment.

NOTE: The factory setting value of D51L is modified to **[Cabinet Overheat]** *EC* on ATV●30●●●F, ATV●50●●●F, ATV●60, ATV●80, and ATV●L0.

[DI50 High Assignment] *D50H* to [DI59 High Assignment] *D59H*

DI50 to DI59 high assignment.

[Input/Output] - [DI/DQ]

[DI1 Configuration] *d , 1* - to [DI8 Configuration] *d , 8* - Menus

Access

[Complete settings] → [Input/Output] → [DI/DQ] → [DI1 Configuration] to [DI8 Configuration]

[DI1 Low Assignment] *L 1 L* to [DI8 Low Assignment] *L 8 L*

DI1 to DI8 low assignment.

Read-only parameter, cannot be configured. It displays all the functions associated with the related digital input in order to verify, for example, for compatibility problems.

If no functions have been assigned, **[No]** *n o* is displayed.

[DI1 High Assignment] *L 1 H* to [DI8 High Assignment] *L 8 H*

DI1 to DI8 high assignment.

Read-only parameter, cannot be configured. It displays all the functions associated with the related digital input in order to verify, for example, for compatibility problems.

If no functions have been assigned, **[No]** *n o* is displayed.

The digital input DI1 is assigned to:

- **[Forward]** *F r d* in 2-wire control
- **[Run]** *r u n* in 3-wire control.

[Run] *r u n* and **[Forward]** *F r d* settings cannot be modified manually.

NOTE: In IO profile, the assignment of **[Run]** *r u n* (respectively **[Forward]** *F r d*) switches to **[CD00]** *ℓ d 0 0* in 2-wire control (respectively 3-wire control).

The digital input DI2 is assigned to **[Forward]** *F r d* in 3-wire control. **[Forward]** *F r d* setting cannot be modified manually.

NOTE: In IO profile, the assignment of **[Forward]** *F r d* switches to **[CD01]** *ℓ d 0 1* in 3-wire control.

[DI1 Delay] *L 1 d* to [DI8 Delay] *L 8 d*

DI1 to DI8 delay.

NOTE: Commands received via this digital input are processed once the delay time set via this parameter has elapsed.

Setting	Description
0...200 ms	Setting range Factory setting: 2 ms

[DI11 Configuration] *d i i* - to [DI16 Configuration] Menu

Access

[Complete settings] → [Input/Output] → [DI/DQ] → [DI11 Configuration] to [DI16 Configuration]

About These Menus

Identical to [DI1 Configuration] *d i* - menu , page 471.

These menus can be accessed if VW3A3203 I/O extension module has been inserted.

[DI11 Low Assignment] *L i i L* to [DI16 Low Assignment] *L i L*★

DI11 to DI16 low assignment.

[DI11 High Assignment] *L i i H* to [DI16 High Assignment] *L i H*★

DI11 to DI16 high assignment.

[DI11 Delay] *L i i d* to [DI16 Delay] *L i d*★

DI11 to DI16 delay.

[DI7 Pulse Config] P R , 7 - Menu**Access**

[Complete settings] → [Input/Output] → [DI/DQ] → [DI7 Pulse Config]

About This Menu

Following parameters can be accessed on the Graphic Display Terminal by pressing the **OK** key on the **[DI7 Frequency Measured] P F \llcorner 7** parameter.

[DI7 Pulse Input Assign] P , 7 R

DI7 pulse input assignment.

It displays all the functions associated with the pulse input in order to verify, for example, for compatibility problems.

If no functions have been assigned, **[No] n o** is displayed.

Setting	Code / Value	Description
[No]	n o	Not assigned
[Torque Ref Offset]	t q o	Torque offset source
[Torque Ref Ratio]	t q r	Torque ratio source
[Ref Frequency 1]	F r 1	Reference frequency 1
[Ref Frequency 2]	F r 2	Reference frequency 2
[Ref Frequency 2 Summing]	S R 2	Reference frequency 2 summing
[PID Feedback]	P , F	PI controller feedback
[Torque limitation]	t R R	Torque limitation: activation by an analog value
[Torque limitation 2]	t R R 2	Torque limitation: activation by an analog value
[Subtract Ref Freq 2]	d R 2	Subtract reference frequency 2
[Manual PID Ref.]	P , n	Manual speed reference of the PID controller (auto-man)
[PID Ref Frequency]	F P ,	PID reference frequency
[Ref Frequency 3 Summing]	S R 3	Reference frequency 3 summing
[Ref Frequency 1B]	F r 1 b	Reference frequency 1B
[Subtract Ref Freq 3]	d R 3	Subtract reference frequency 3
[Forced local]	F L o \llcorner	Forced local reference source1
[Ref Frequency 2 multiplier]	n R 2	Reference frequency 2 multiplier
[Ref Frequency 3 multiplier]	n R 3	Reference frequency 3 multiplier

Setting	Code / Value	Description
[Torque reference]	<i>Er1</i>	Torque regulation: torque set point 1
[Torque reference 2]	<i>Er2</i>	Torque regulation: torque set point 2
[Frequency Meter]	<i>FqF</i>	Frequency meter function activation
[External Feed Forward]	<i>EFFF</i>	External feed-forward

[DI7 PulseInput Low Freq] *P, L 7*

DI7 pulse input low frequency.

Pulse input scaling parameter of 0% in Hz x 10 unit.

Setting	Description
0.00...30,000.00 Hz	Setting range Factory setting: 0.00 Hz

[DI7 PulseInput High Freq] *P, H 7*

DI7 pulse input high frequency.

Pulse input scaling parameter of 100% in Hz x 10 unit.

Setting	Description
0.00...30.00 kHz	Setting range Factory setting: 30.00 kHz

[DI7 Frequency Filter] *PF, 7*

Interference filtering pulse input cut-off time of the low-filter.

Setting	Description
0...1,000 ms	Setting range Factory setting: 0 ms

[DI8 Pulse Config] *PR, B* - Menu

Access

[Complete settings] → [Input/Output] → [DI/DQ] → [DI8 Pulse Config]

About This Menu

Following parameters can be accessed on the Graphic Display Terminal by pressing the **OK** key on the **[DI8 Frequency Measured]** *PF, LB* parameter.

[DI8 Pulse Input Assign] *P, BR*

DI8 Pulse Input assignment.

Identical to **[DI7 Pulse Input Assign]** *P, 7R*, page 473.

[DI8 PulseInput Low Freq] *P, LB*

DI8 pulse input low frequency.

Identical to **[DI7 PulseInput Low Freq]** *P, L 7*, page 474.

[DI8 PulseInput High Freq] *P, HB*

DI8 pulse input high frequency.

Identical to **[DI7 PulseInput High Freq]** *P, H 7*, page 474.

[DI8 Frequency Filter] *PF, B*

Interference filtering pulse input cut-off time of the low-filter.

Identical to **[DI7 Frequency Filter]** *PF, 7*, page 474.

[Encoder Config] P G - Menu

Access

[Complete settings] → [Input/Output] → [DI/DQ] → [Encoder Config]

About This Menu

Following parameters can be accessed on the Graphic Display Terminal by pressing the OK key on the [Encoder Config] P G parameter.

This parameter can be accessed if an encoder module has been plugged.

[Encoder Pulse Assign] P E G A

Encoder pulse assignment.

It displays all the functions associated with the pulse input in order to verify, for example, compatibility problems.

If no functions have been assigned, [No] n o is displayed.

[Encoder Pulse Assign] P G A

Reference Type.

Setting	Code / Value	Description
[Encoder]	E n C	Encoder Factory Setting
[Frequency Generator]	P E G	Pulse train generator is connected to the encoder board.

[Freq Min Value] P E , L

Frequency min value.

Pulse input scaling parameter of 0% in kHz x 10 unit.

Setting	Description
-300.00..300.00 kHz	Setting range Factory setting: 0.00 kHz

[Freq Max Value] P E F r

Frequency max value.

Pulse input scaling parameter of 100% in kHz x 10 unit.

Setting	Description
-300.00..300.00 kHz	Setting range Factory setting: 300 kHz

[Freq Signal Filter] E F ,

Frequency signal filter.

Setting	Description
0...1000 ms	Setting range Factory setting: 0 ms

[DQxx Configuration] $d \square X X$ - Menu

Access

[Complete settings] \rightarrow [Input/Output] \rightarrow [DI/DQ] \rightarrow [DQxx Configuration]

About This Menu

These menus are used to configure the digital outputs of the drive:

- **[DQ1 Configuration] $d \square 1$** - : The digital output DQ1 embedded to the drive.
- **[DQ11 Configuration] $d \square 11$** - and **[DQ12 Configuration] $d \square 12$** - : the digital output DQ11 and DQ12 if the VW3A3203 Extended I/O option module is inserted.


NOTE: the digital output DQ1 can also be used as a Pulse Train Output (PTO). If a function is assigned to this PTO, DQ1 can no longer be used as a digital output.

Use the touch wheel to scroll through the digital outputs. Click OK to access the configuration of the digital output.

On Graphic Display Terminal, if an output is assigned then a check mark is displayed.

For a given digital output (DQxx), the configuration is composed by:

- **[DQxx Assignment] $d \square X X$** : the assignment of the digital output DQxx,
- **[DQxx Delay time] $d X X d$** : the delay time of the digital output DQxx. It represents the delay before modifying the state of the output when the assigned event becomes true,
- **[DQxx Active at] $d X X S$** : the active level of the digital output DQxx. It defines the state 1 or 0 of the output to the "True" state of the assigned event.
- **[DQxx Holding time] $d X X H$** : the holding time of the digital output DQxx. It represents the delay before modifying the state of the output when the assigned event becomes false.
- **[Enable DQxx fallback] $d X X F / L \square X F$** : parameter used to enable/disable the fallback mode triggered in case of communication interruption (if the output is controlled by fieldbus communication).

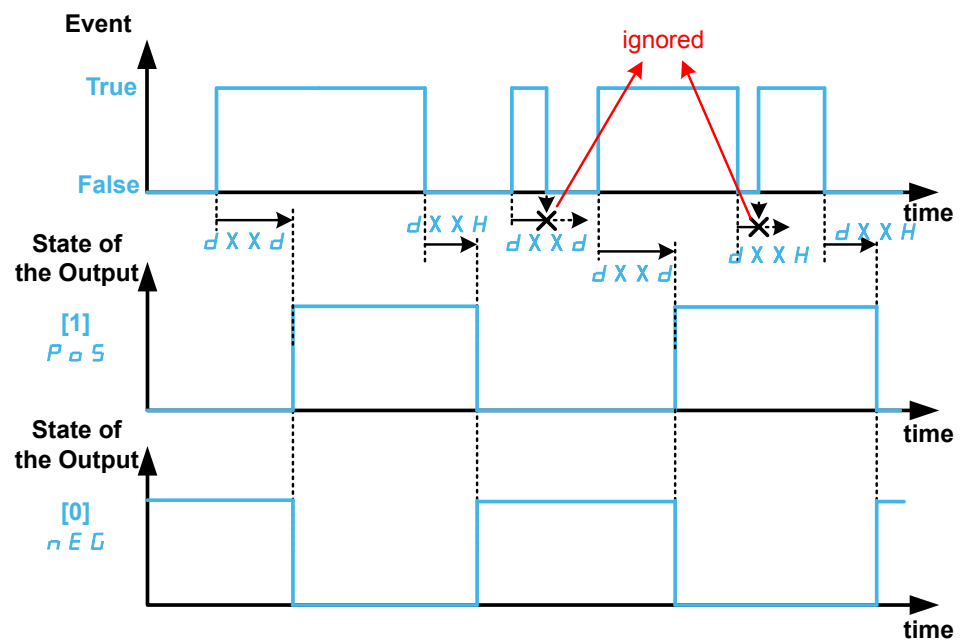

[DQxx Assignment] d o X X ★

[DQ1 Assignment] d o 1, [DQ11 Assignment] d o 1 1, [DQ12 Assignment] d o 1 2

Digital output xx assignment.

It is used to assign an output to an event or a function.

Possible settings: Identical to **[Rx Assignment] r X** Menus, page 503.

If the output is set to **[CDxx] CDxx** or **[Cxxx] Cxxx** and has been enabled, transition to operating state Fault such as, but not limited to, communication interruption, will not disable the output.

▲ WARNING
<p>LOSS OF CONTROL</p> <p>Only set the output to [CDxx] CDxx or [Cxxx] Cxxx after having verified that this setting cannot result in unsafe conditions including communication interruption.</p> <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p>

[DQxx Delay time] d X X d ★

DQxx activation delay time.

[DQ1 Delay time] d o 1 d, [DQ11 Delay time] d 1 1 d, [DQ12 Delay time] d 1 2 d

It represents the delay before modifying the state of the output when the assigned event becomes true.

If the corresponding output is assigned to one of the following assignments, the delay is forced to 0 ms and it cannot be modified:

- **[Operating State “Fault”] F L E,**
- **[Mains Contactor] L L C,**
- **[DC charging] d C o,**
- **[Brake Sequence] b L C,**
- **[Output Cont] o C C,**

Setting	Description
0...60,000 ms (step: 1 ms)	Setting range: 0...9,999 ms then 10.00...60.00 s on the Graphic Display Terminal . Factory setting: 0 ms

[DQxx Active at] d X X 5 ★

[DQ1 Active at] d o 1 5, [DQ11 Active at] d 1 1 5, [DQ12 Active at] d 1 2 5

DQxx status (output active level)

It defines the state 1 or 0 of the output to the “True” state of the assigned event.

If the output is assigned to one of the following assignments, the delay is forced to **[1] Pos:**

- **[Operating State “Fault”] F L E,**
- **[Mains Contactor] L L C,**
- **[DC charging] d C o,**
- **[Brake Sequence] b L C,**

- **[Output Cont]** $\alpha C C$,

Setting	Code / Value	Description
[1]	$P \alpha 5$	State 1 if the event is true. Factory Setting
[0]	$n E G$	State 0 if the event is true.

[DQxx Holding time] $d X X H \star$

[DQ1 Holding time] $d \alpha 1 H$, **[DQ11 Holding time]** $d 1 1 H$, **[DQ12 Holding time]** $d 1 2 H$

DQxx holding delay time.

It represents the delay before modifying the state of the output when the assigned event becomes false.

If the corresponding output is assigned to one of the following assignments, the delay is forced to 0 ms and it cannot be modified:

- **[Operating State "Fault"]** $F L E$,
- **[Mains Contactor]** $L L C$,
- **[DC charging]** $d C \alpha$,
- **[Brake Sequence]** $b L C$,
- **[Output Cont]** $\alpha C C$,

Setting	Description
0...9,999 ms (step: 1 ms)	Setting range Factory setting: 0 ms

[Enable DQxx fallback] $L \alpha X F / d X X F$

[Enable DQ1 fallback] $L \alpha 1 F$, **[Enable DQ11 fallback]** $d 1 1 F$, **[Enable DQ12 fallback]** $d 1 2 F$

Enable DQxx fallback.

[Enable DQ1 fallback] $L \alpha 1 F$ is forced to **[No]** $n \alpha$ if a function is assigned to DQ/PTO (see **[DQ1 Assignment]** $d \alpha 1$ and **[PTO Assign]** $P E \alpha$).

[Enable DQ11 fallback] $d 1 1 F$ (respectively **[Enable DQ12 fallback]** $d 1 2 F$) is forced to **[No]** $n \alpha$ if **[DQ11 Assignment]** $d \alpha 1 1$ (respectively **[DQ12 Assignment]** $d \alpha 1 2$) is assigned.

If the output is controlled by fieldbus and has been enabled, transition to operating state Fault such as, but not limited to, communication interruption, will not disable the output if this parameter is set to **[No]** $n \alpha$.

⚠ WARNING

LOSS OF CONTROL

- Verify that using this default setting does not result in unsafe conditions including communication interruption.
- Set this parameter to **[Yes]** $Y E 5$ to disable the output if an error is triggered.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Setting	Code / Value	Description
[No]	no	<p>Fallback feature disabled.</p> <p>When the output is assigned, the output value is defined according to its assignment, page 479.</p> <p>When the output is not assigned, the state of the output can be controlled via a bit of <code>OLIr</code>. If an error is triggered, the output remains unchanged.</p> <p>NOTE: depending on the configuration of PTO - DQ Switch (SW2), DQ1 output value is controlled via:</p> <ul style="list-style-type: none"> • a bit of <code>OLIr</code> (if DQ selected), • the internal parameter <code>PEoC</code> (if PTO selected). <p>Factory setting</p>
[Yes]	YES	<p>Fallback feature enabled.</p> <p>The state of the output is controlled via a bit of <code>OLIr</code> (refer to the communication parameter addresses file). If an error is detected, the output is disabled.</p> <p>NOTE: depending on the configuration of PTO - DQ Switch (SW2), DQ1 output value can be controlled via:</p> <ul style="list-style-type: none"> • a bit of <code>OLIr</code> (if DQ selected), • the internal parameter <code>PEoC</code> (if PTO selected). <p>NOTE: depending on the configuration of PTO - DQ Switch (SW2), if an error is detected, the output DQ1 is:</p> <ul style="list-style-type: none"> • disabled (if DQ selected), • modified to [PTO Min Output Freq] <code>PEoL</code> (if PTO selected). <p>NOTE: If an error is detected, the process applied on the output (e.g. delays, active level) remains applied.</p>

[DI50 Configuration] 5 5 0 - to [DI64 Configuration] 5 5 4 - Menus**Access**

[Complete settings] → [Input/Output] → [DI/DQ] → [DI50 Configuration] to [DI64 Configuration]

About These Menus

NOTE: DI50 up to DI59/DI64 Inputs are used inside the Drive Systems enclosure for control and monitoring circuits.

[DI50 Low Assignment] 5 5 0 L to [DI64 Low Assignment] 5 5 4 L

DI50 to DI64 low assignment.

Read-only parameters, cannot be configured. It displays all the functions associated with the cabinet digital input in order to verify, for example, for compatibility problems.

If no functions have been assigned, **[No]** n o is displayed.

[DI50 High Assignment] 5 5 0 H to [DI64 High Assignment] 5 5 4 H

DI50 to DI64 high assignment.

Read-only parameters, cannot be configured. It displays all the functions associated with the cabinet digital input in order to verify, for example, for compatibility problems.

If no functions have been assigned, **[No]** n o is displayed.

[DI50 delay] 5 5 0 d to [DI64 delay] 5 5 4 d

DI50 to DI64 delay.

NOTE: Commands received via this digital input are processed once the delay time set via this parameter has elapsed.

Setting	Description
0...200 ms	Setting range Factory setting: 2 ms

[Input/Output] - [Analog I/O]


[AI1 configuration] \mathcal{R} , \mathcal{I} - Menu

Access

[Complete settings] \rightarrow [Input/Output] \rightarrow [AI/AQ] \rightarrow [AI1 configuration]

About This Menu

The input can be delinearized by configuring an intermediate point on the input/output curve of this input:

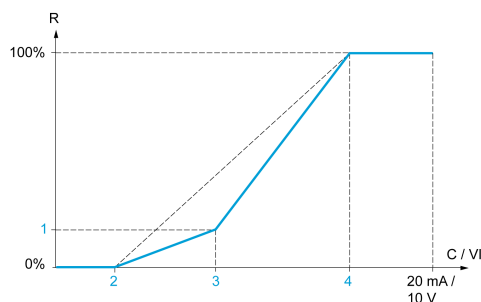

R Reference

C / VI Current or Voltage Input

1 [Y Interm. point]

2 [Min value] (0%)

3 [X Interm. point]

4 [Max value] (100%)

NOTE: For [X Interm. point], 0% corresponds to [Min value] and 100% to [Max value].

[AI1 Assignment] \mathcal{R} , \mathcal{I} \mathcal{R}

Analog input AI1 functions assignment.

Read-only parameter, cannot be configured. It displays all the functions associated with input AI1 in order to verify, for example, for compatibility problems.

If no functions have been assigned, [No] \mathcal{r} \mathcal{o} is displayed.

[AI1 Type] \mathcal{R} , \mathcal{I} \mathcal{L}

Configuration of analog input AI1.

Setting	Code / Value	Description
[Voltage]	\mathcal{I} \mathcal{O} \mathcal{v}	0-10 Vdc Factory setting
[Current]	\mathcal{O} \mathcal{R}	0-20 mA

[AI1 Min. value] \mathcal{v} , \mathcal{L} \mathcal{I} ★

AI1 voltage scaling parameter of 0%.

This parameter can be accessed if [AI1 Type] \mathcal{R} , \mathcal{I} \mathcal{L} is set to [Voltage] \mathcal{I} \mathcal{O} \mathcal{v} .

Setting	Description
0.0...10.0 Vdc	Setting range Factory setting: 0.0 Vdc

[AI1 Max. value] U , H I ★

AI1 voltage scaling parameter of 100%.

This parameter can be accessed if [AI1 Type] R , I E is set to [Voltage] I D U .

Setting	Description
0.0...10.0 Vdc	Setting range Factory setting: 10.0 Vdc

[AI1 Min. value] C r L I ★

AI1 current scaling parameter of 0%.

This parameter can be accessed if [AI1 Type] R , I E is set to [Current] D R .

Setting	Description
0.0...20.0 mA	Setting range Factory setting: 0.0 mA

[AI1 Max. value] C r H I ★


AI1 current scaling parameter of 100%.

This parameter can be accessed if [AI1 Type] R , I E is set to [Current] D R .

Setting	Description
0.0...20.0 mA	Setting range Factory setting: 20.0 mA

[AI1 filter] R , I F

AI1 cutoff time of the low filter.


Setting 	Description
0.00...10.00 s	Setting range Factory setting: 0.00 s

[AI1 Interm. point X] R , I E

Input delinearization point coordinate. Percentage of the physical input signal.

0% corresponds to [AI1 min value] (U I L)

100% corresponds to [AI1 max value] (U I H)

Setting 	Description
0...100%	Setting range Factory setting: 0%

[AI1 Interm. point Y] R , I 5

Input delinearization point coordinate (frequency reference).

Percentage of the internal frequency reference corresponding to the [AI1 Interm. point X] (R , I E) percentage of physical input signal.

Setting ()	Description
0...100%	Setting range Factory setting: 0%

[AI1 Range] R , I L

AI1 scaling selection.

This parameter can be accessed if [AI1 Type] R , I E is set to [Current] D R.

This parameter is forced to [0-100%] P 0 5 if:

- [AI1 Type] R , I E is not set to [Current] D R, or
- [AI1 min. value] C r L I is lower than 3.0 mA

Setting	Code / Value	Description
[0-100%]	P 0 5	Unidirectional: AI1 current scaling is 0% up to 100%. Factory Setting
[+/-100%]	P 0 5 r E G	Bidirectional: AI1 current scaling is -100% up to 100%. [AI1 min. value] C r L I corresponds to -100%. [AI1 max. value] C r H I corresponds to 100%.

[AI2 configuration] R , 2 - Menu**Access**

[Complete settings] → [Input/Output] → [AI/AQ] → [AI2 configuration]

[AI2 Assignment] R , 2 R

AI2 functions assignment.

Identical to **[AI1 Assignment] R , 1 R**, page 483.

[AI2 Type] R , 2 E

Configuration of analog input AI2.

Setting	Code / Value	Description
[Voltage]	100	0-10 Vdc
[Voltage +/-]	n 100	-10/+10 Vdc Factory setting

[AI2 min value] 0 , L 2★

AI2 voltage scaling parameter of 0%.

This parameter can be accessed if **[AI2 Type] R , 2 E** is set to **[Voltage] 100**.

Identical to **[AI1 min value] 0 , L 1**, page 483.

[AI2 Max .value] 0 , H 2★

AI2 voltage scaling parameter of 100%.

This parameter can be accessed if **[AI2 Type] R , 2 E** is set to **[Voltage] 100**.

Identical to **[AI1 Max. value] 0 , H 1**, page 484.

[AI2 filter] R , 2 F

AI2 filter.

Identical to **[AI1 filter] R , 1 F**, page 484.

[AI2 Interm. point X] R , 2 E

AI2 delinearization input level.

Identical to **[AI1 Interm. point X] R , 1 E**, page 484.

[AI2 Interm. point Y] R , 2 S

AI2 delinearization output level.

Identical to **[AI1 Interm. point Y] R , 1 S**, page 485.

[AI3 configuration] R , 3 - Menu**Access**

[Complete settings] → [Input/Output] → [AI/AQ] → [AI3 configuration]

[AI3 Assignment] R , 3 A

AI3 functions assignment.

Identical to [AI1 Assignment] R , 1 A , page 483.

[AI3 Type] R , 3 E

Configuration of analog input AI3.

Identical to [AI2 Type] R , 2 E , page 486 with factory setting: [Current] 0 A.

[AI3 Min. value] 0 , L 3 ★

AI3 voltage scaling parameter of 0%.

Identical to [AI1 Min. value] 0 , L 1 , page 483.

This parameter can be accessed if [AI3 Type] R , 3 E is set to [Voltage] 1 0 0 .

[AI3 Max. value] 0 , H 3 ★

AI3 voltage scaling parameter of 100%.

Identical to [AI1 Max. value] 0 , H 1 , page 484.

This parameter can be accessed if [AI3 Type] R , 3 E is set to [Voltage] 1 0 0 .

[AI3 Min. value] C r L 3 ★

AI3 current scaling parameter of 0%.

Identical to [AI1 Min. value] C r L 1 , page 484.

This parameter can be accessed if [AI3 Type] R , 3 E is set to [Current] 0 A.

[AI3 Max. value] C r H 3 ★

AI3 current scaling parameter of 100%.

Identical to [AI1 Max. value] C r H 1 , page 484.

This parameter can be accessed if [AI3 Type] R , 3 E is set to [Current] 0 A.

[AI3 filter] R , 3 F

AI3 cutoff time of the low filter.

Identical to [AI1 filter] R , 1 F , page 484.

[AI3 X Interm. point] R , 3 E

AI3 delinearization input level.

Identical to [AI1 Interm. point X] R , 1 E , page 484.

[AI3 Y Interm. point] P , 3 5

AI3 delinearization output level.

Identical to [AI1 Interm. point Y] P , 1 5 , page 485.

[AI3 Range] P , 3 L

AI3 scaling selection.

This parameter can be accessed if [AI3 Type] P , 3 E is set to [Current] 0 P.

Identical to [AI1 Type] P , 1 E , page 488

[AI4 configuration] R , 4 - Menu**Access**

[Complete settings] → [Input/Output] → [AI/AQ] → [AI4 configuration]

[AI4 Assignment] R , 4 A ★

AI4 functions assignment.

This parameter can be accessed if VW3A3203 I/O extension module has been inserted.

Identical to [AI1 Assignment] R , 1 A , page 483.

[AI4 Type] R , 4 E ★

Configuration of analog input AI4.

This parameter can be accessed if VW3A3203 I/O extension module has been inserted.

Setting	Code / Value	Description
[Voltage]	1 0 v	0-10 Vdc
[Current]	0 A	0-20 mA Factory setting
[Voltage +/-]	n 1 0 v	-10/+10 Vdc

[AI4 Min value] v , L 4 ★

AI4 voltage scaling parameter of 0%.

Identical to [AI1 Min value] v , L 1 , page 483.

[AI4 Max. value] v , H 4 ★

AI4 voltage scaling parameter of 100%.

Identical to [AI1 Max. value] v , H 1 , page 484.

[AI4 Min. value] C r L 4 ★

AI4 current scaling parameter of 0%.

Identical to [AI1 Min. value] C r L 1 , page 484.

[AI4 Max. value] C r H 4 ★

AI4 current scaling parameter of 100%.

Identical to [AI1 Max. value] C r H 1 , page 484.

[AI4 filter] R , 4 F ★

AI4 cutoff time of the low filter.

This parameter can be accessed if VW3A3203 I/O extension module has been inserted.

Identical to [AI1 filter] R , 1 F , page 484.

[AI4 X Interm. point] R , 4 E ★

AI4 delinearization input level.

This parameter can be accessed if VW3A3203 I/O extension module has been inserted.

Identical to [AI1 Interm. point X] R , 1 E , page 484.

[AI4 Y Interm. point] R , 4 S ★

AI4 delinearization output level.

This parameter can be accessed if VW3A3203 I/O extension module has been inserted.

Identical to [AI1 Interm. point Y] R , 1 S , page 485.

[AI4 Range] R , 4 L

AI4 scaling selection.

This parameter can be accessed if [AI4 Type] R , 4 E is set to [Current] 0 R .

Identical to [AI1 Type] R , 1 E , page 490

[AI5 configuration] R , 5 - Menu

Access

[Complete settings] → [Input/Output] → [AI/AQ] → [AI5 configuration]

[AI5 Assignment] R , 5 A ★

AI5 functions assignment.

This parameter can be accessed if VW3A3203 I/O extension module has been inserted.

Identical to [AI1 Assignment] R , 1 A , page 483.

[AI5 Type] R , 5 E ★

Configuration of analog input AI5.

This parameter can be accessed if VW3A3203 I/O extension module has been inserted.

Identical to [AI4 Type] R , 4 E . , page 489

[AI5 Min. value] U , L 5 ★

AI5 voltage scaling parameter of 0%.

Identical to [AI1 Min. value] U , L 1 , page 483.

[AI5 Max. value] U , H 5 ★

AI5 voltage scaling parameter of 100%.

Identical to [AI1 Max. value] U , H 1 , page 484.

[AI5 Min. value] C r L 5 ★

AI5 current scaling parameter of 0%.

Identical to [AI1 Min. value] C r L 1 , page 484.

[AI5 Max. value] C r H 5 ★

AI5 current scaling parameter of 100%.

Identical to [AI1 Max. value] C r H 1 , page 484.

[AI5 filter] R , 5 F ★

AI5 cutoff time of the low filter.

This parameter can be accessed if VW3A3203 I/O extension module has been inserted.

Identical to [AI1 filter] R , 1 F , page 484.

[AI5 X Interm. point] R , 5 E ★

AI5 delinearization input level.

This parameter can be accessed if VW3A3203 I/O extension module has been inserted.

Identical to **[AI1 Interm. point X]** *A* , *1 E* , page 484.

[AI5 Y Interm. point] *A* , *5 5* ★

AI5 delinearization output level.

This parameter can be accessed if VW3A3203 I/O extension module has been inserted.

Identical to **[AI1 Interm. point Y]** *A* , *1 5* , page 485.

[AI5 Range] *A* , *5 L*

AI5 scaling selection.

This parameter can be accessed if **[AI5 Type]** *A* , *5 E* is set to **[Current]** *0 A* .

Identical to **[AI1 Type]** *A* , *1 E* , page 492



[AQ1 configuration] $\text{R } \square \text{ I} - \text{Menu}$

Access

[Complete settings] \rightarrow [Input/Output] \rightarrow [AI/AQ] \rightarrow [AQ1 configuration]

Minimum and Maximum Output Values

The minimum output value, in volts, corresponds to the lower limit of the assigned parameter and the maximum value corresponds to its upper limit. The minimum value may be greater than the maximum value.

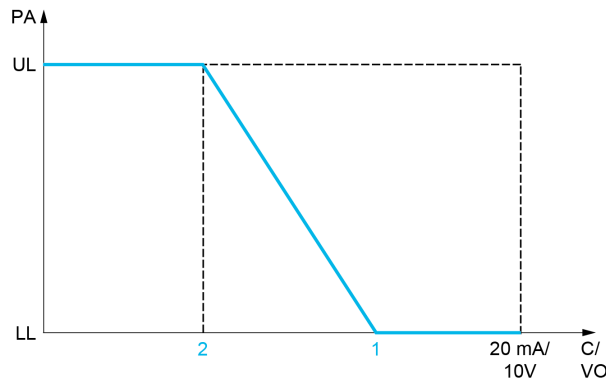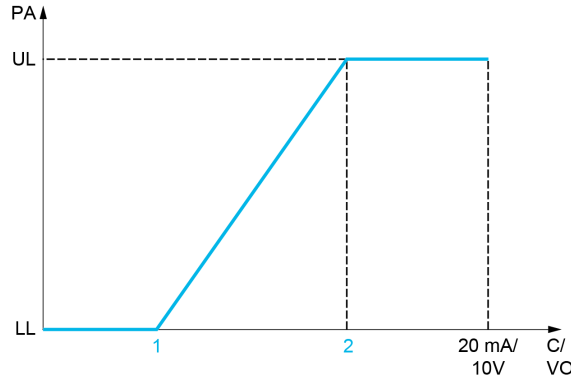

PA Parameter assigned

C / VO Current or voltage output

UL Upper limit

LL Lower limit

1 [Min Output] $\text{R } \square \text{ L X}$ or $\text{u } \square \text{ L X}$

2 [Max Output] $\text{R } \square \text{ H X}$ or $\text{u } \square \text{ H X}$

Scaling of the Assigned Parameter


The scale of the assigned parameter can be adapted in accordance with the requirements by modifying the values of the lower and upper limits with two parameters for each analog output ([Scaling AQx min] $\text{R } \square \text{ L X}$ and [Scaling AQx max] $\text{R } \square \text{ H X}$).

These parameters are given in %. 100 % corresponds to the total variation range of the configured parameter, so: 100% = upper limit - lower limit.

For example, [Sign. torque] 5 \llcorner 9 which varies between -3 and +3 times the rated torque, 100% corresponds to 6 times the rated torque.

- The [Scaling AQx min] $\text{R } \square \text{ L X}$ parameter modifies the lower limit: new value = lower limit + (range x $\text{R } \square \text{ L X}$). The value 0% (factory setting) does not modify the lower limit.

- The **[Scaling AQx max] P5HX** parameter modifies the upper limit: new value = lower limit + (range x P5LX). The value 100% (factory setting) does not modify the upper limit.
- **[Scaling AQx min] P5LX** must always be lower than **[Scaling AQx max] P5HX**.

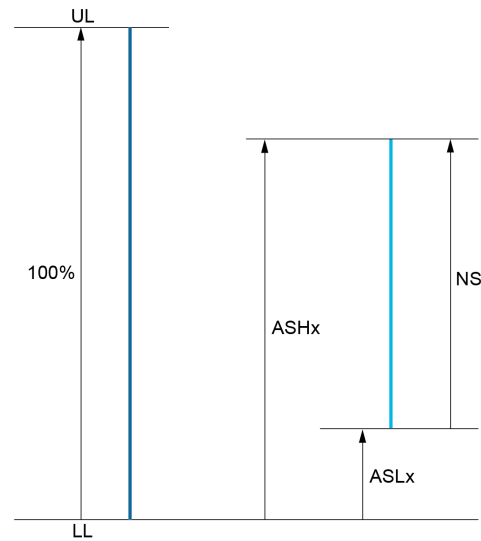

UL Upper limit of the assigned parameter

LL Lower limit of the assigned parameter

NS New scale

1 P5HX

2 P5LX

Application Example

In an application, it is requested to read on the analog output AQ1 the value of the motor current. The value must in current (0...20 mA) and the full range must correspond to 0 up to 2 x nominal motor current (2 x I_n motor).

In this example, I_n motor corresponds to 0.8 x I_n drive.

Consequently, the analog output AQ1 must be configured as following:

- Set **[AQ1 Assignment] P0I** to **[Motor Current] P0C**. By default, the total variation range is 0 to 2 times the nominal drive current (2 x I_n drive).
- Set **[AQ1 Type] P0I** to **[Current] P0R**. Then, set **[AQ1 min output] P0LI** and **[AQ1 max output] P0HI**. By default, they are equal to 0.0 mA and 20.0 mA, that is corresponding to the requirements.
- The requested minimum value is 0 A (0 x I_n motor = 0 x I_n drive): **[Scaling AQ1 min] P5LI** does not need to be modified (its factory setting is 0 %).
- The requested total variation range is 2 x I_n motor (= 1.6 x I_n drive). By default, the full range for **[Motor Current] P0C** is 2 x I_n drive. It means that the requested total variation range must be reduced to 80 % (1.6/2 = 0.8). Consequently, **[Scaling AQ1 max] P5HI** must be set to 80 %.

[AQ1 Assignment] P0I

AQ1 assignment.

Setting	Code / Value	Description
[Not Configured]	n o	Not assigned NOTE: In this case, the output can be controlled via the internal parameter <i>A o I r</i> (refer to the communication parameter addresses file). By default, if an error (such as a communication interruption) is detected, the output remains unchanged. Use the parameter [Enable AQ1 fallback] A o F I to disable the output in case of error detection.
[M/S Out Speed Reference]	n 5 5 o	Master / slave output speed reference
[M/S Out Torque Reference]	n 5 t o	Master / slave output torque reference
[Mixing Valve]	n v l o	External mixing valve command signal determined according to the cooling liquid temperature. Value given in percentage. 0% means the liquid will be bypassed, 100 % means the liquid is going through the cabinet cooling module and the drive power module. NOTE: The selection can only be accessed with APM Liquid Cooled (ATV·L0).
[Motor Current]	o l r	Current in the motor, from 0 to 2 In (In = rated drive current indicated in the Installation manual and on the drive nameplate)
[Motor Frequency]	o F r	Output frequency, from 0 to [Max Frequency] t F r Factory Setting
[Measured Motor Freq]	o F r r	Measured motor frequency
[Sig. o/p frq.]	o F 5	Signed output frequency, between –[Max Frequency] t F r and +[Max Frequency] t F r
[PID error]	o P E	PID controller detected error between –5% and +5% of [Max PID feedback] P , F 2 – [Min PID feedback] P , F 1
[PID feedbk]	o P F	PID controller feedback between [Min PID feedback] P , F 1 and [Max PID feedback] P , F 2
[PID output]	o P ,	PID controller output between [Low speed] L 5 P and [High speed] H 5 P
[Motor power]	o P r	Motor power, between 0 and 2.5 times [Nominal Motor Power] n P r
[PID ref.]	o P 5	PID controller reference between [Min PID reference] P , P 1 and [Max PID reference] P , P 2
[Ramp out.]	o r P	From 0 to [Max Frequency] t F r
[sign ramp]	o r 5	Signed ramp output, between –[Max Frequency] t F r and +[Max Frequency] t F r
[Signed Trq Ref]	5 t r	Signed torque reference
[Sign. torque]	5 t 9	Signed motor torque, between –3 and +3 times the rated motor torque. The + sign corresponds to the motor mode and the – sign to the generator mode (braking).
[Drv thermal]	t H d	Drive thermal state, from 0 to 200% of the rated thermal state
[Mot thermal]	t H r	Motor thermal state, from 0 to 200% of the rated thermal state
[Mot therm2]	t H r 2	Motor thermal 2 state
[Mot therm3]	t H r 3	Motor thermal 3 state
[Mot therm4]	t H r 4	Motor thermal 4 state
[Torque lim.]	t 9 L	Torque limit
[Torque 4Q]	t r 4 9	Signed motor torque, between –3 and +3 times the rated motor torque. The + and - signs correspond to the physical direction of the torque, regardless of mode (motor or generator)
[Motor torq.]	t r 9	Motor torque, from 0 to 3 times the rated motor torque

Setting	Code / Value	Description
[Unsigned Trq Ref]	U E r	Unsigned torque reference
[Motor volt.]	U O P	Voltage applied to the motor, between 0 and [Nom Motor Voltage] U O S

[AQ1 Type] R O I E

AQ1 type.

Select according to the requirements the type of output.

Setting	Code / Value	Description
[Voltage]	I O U	0-10 Vdc If necessary, adjust [AQ1 min Output] U O L I and [AQ1 max Output] U O H I. Factory setting
[Current]	O R	0-20 mA If necessary, adjust [AQ1 min output] R O L I and [AQ1 max output] R O H I.

[AQ1 min output] R O L I ★

AQ1 min output value.

This parameter can be accessed if [AQ1 Type] R O I E is set to [Current] O R.

Setting	Description
0.0...20.0 mA (step: 0.1 mA)	Setting range Factory setting: 0.0 mA

[AQ1 max output] R O H I ★

AQ1 max output value.

This parameter can be accessed if [AQ1 Type] R O I E is set to [Current] O R.

Setting	Description
0.0...20.0 mA (step: 0.1 mA)	Setting range Factory setting: 20.0 mA

[AQ1 min Output] U O L I ★

AQ1 minimum output.

This parameter can be accessed if [AQ1 Type] R O I E is set to [Voltage] I O U.

Setting	Description
0.0...10.0 Vdc (step: 0.1 Vdc)	Setting range Factory setting: 0.0 Vdc

[AQ1 max Output] U O H I ★

AQ2 minimum output.

This parameter can be accessed if **[AQ1 Type] R01E** is set to **[Voltage] 10U**.

Setting	Description
0.0...10.0 Vdc (step: 0.1 Vdc)	Setting range Factory setting: 10.0 Vdc

[Scaling AQ1 min] R5L1

Scaling AQ1 min.

Scaling of the lower limit of the assigned parameter, as a % of the maximum possible variation.

Setting	Description
0.0...[Scaling AQ1 max] R5H1 (step: 0.1 %)	Setting range Factory setting: 0.0%

[Scaling AQ1 max] R5H1

Scaling AQ1 max.

Scaling of the upper limit of the assigned parameter, as a % of the maximum possible variation.

Setting	Description
[Scaling AQ1 min] R5L1...100.0% (step: 0.1 %)	Setting range Factory setting: 100.0%

[AQ1 Filter] R01F

AQ1 filter.

Enable/disable the low pass-filter and configure its time constant.

Setting	Description
0.00...10.00 s (step: 0.01 s)	Setting range. If this parameter is set to 0.00 s, the filter is deactivated. Factory setting: 0.00 s

[Enable AQ1 fallback] R0F1

Enable AQ1 fallback.

This parameter is forced to **[No] n0** if **[AQ1 Assignment] R01I** is set to a value different from **[No] n0**.

If the output is controlled by fieldbus and has been enabled, transition to operating state Fault such as, but not limited to, communication interruption, will not disable the output if this parameter is set to **[No]** *n o*.

▲ WARNING

LOSS OF CONTROL

- Verify that using this default setting does not result in unsafe conditions including communication interruption.
- Set this parameter to **[Yes]** *y e s* to disable the output if an error is triggered.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Setting	Code / Value	Description
[No]	<i>n o</i>	<p>Fallback feature disabled.</p> <p>When the output is assigned, the output value is defined according to its assignment, page 494.</p> <p>When the output is not assigned, the output value can be controlled via the internal parameter <i>A o I r</i> (refer to the communication parameter addresses file). If an error is detected, the output remains unchanged.</p> <p>Factory setting</p>
[Yes]	<i>y e s</i>	<p>Fallback feature enabled.</p> <p>The output value can be controlled via the internal parameter <i>A o I r</i> (refer to the communication parameter addresses file). If an error is detected, the output is disabled.</p> <p>NOTE: If an error is detected, the process applied on the output (e.g. min, max, filter) remains applied.</p>

[AQ2 configuration] *A o 2* - Menu

Access

[Complete settings] → [Input/Output] → [AI/AQ] → [AQ1 configuration]

About This Menu

This menu is used to configure the analog output AQ2.

In this menu, the following parameters can be accessed:

- **[AQ2 assignment]** *A o 2*
- **[AQ2 Type]** *A o 2 t*
- **[AQ2 min output]** *A o L 2*
- **[AQ2 max output]** *A o H 2*
- **[AQ2 min Output]** *u o L 2*
- **[AQ2 max Output]** *u o H 2*
- **[Scaling AQ2 min]** *A 5 L 2*
- **[Scaling AQ2 max]** *A 5 H 2*
- **[AQ2 Filter]** *A o 2 F*
- **[Enable AQ2 fallback]** *A o F 2*

Refer to **[AQ1 configuration]** *A o 1*– for more information about analog output configuration and the possible settings.

NOTE: In factory setting, the analog input AQ2 is set to **[Motor Current]** *o C r* and is configured in **[Current]** *D A*.

[PTO configuration] *P ℓ ◊ - Menu*

Access

[Complete settings] → [Input/Output] → [AI/AQ] → [PTO configuration]

About This Menu

[PTO Assign] *P ℓ ◊*

Pulse train output assignment.

Setting	Code / Value	Description
[Not Configured]	<i>no</i>	Not assigned
[Motor Current]	<i>o ℓ r</i>	Current in the motor, from 0 to 2 In (In = rated drive current indicated in the Installation manual and on the drive nameplate) Factory Setting
[Motor Frequency]	<i>o F r</i>	Output frequency, from 0 to [Max Frequency] <i>ℓ F r</i>
[Ramp out.]	<i>o r P</i>	From 0 to [Max Frequency] <i>ℓ F r</i>
[Motor torq.]	<i>ℓ r 9</i>	Motor torque, from 0 to 3 times the rated motor torque
[Sign. torque]	<i>5 ℓ 9</i>	Signed motor torque, between -3 and +3 times the rated motor torque. The + sign corresponds to the motor mode and the - sign to the generator mode (braking).
[sign ramp]	<i>o r 5</i>	Signed ramp output, between -[Max Frequency] <i>ℓ F r</i> and +[Max Frequency] <i>ℓ F r</i>
[PID ref.]	<i>o P 5</i>	PID controller reference between [Min PID reference] <i>P , P 1</i> and [Max PID reference] <i>P , P 2</i>
[PID feedbk]	<i>o P F</i>	PID controller feedback between [Min PID feedback] <i>P , F 1</i> and [Max PID feedback] <i>P , F 2</i>
[PID error]	<i>o P E</i>	PID controller detected error between -5% and +5% of [Max PID feedback] <i>P , F 2</i> - [Min PID feedback] <i>P , F 1</i>
[PID output]	<i>o P ,</i>	PID controller output between [Low speed] <i>L 5 P</i> and [High speed] <i>H 5 P</i>
[Motor power]	<i>o P r</i>	Motor power, between 0 and 2.5 times [Nominal Motor Power] <i>o P r</i>
[Mot thermal]	<i>ℓ H r</i>	Motor thermal state, from 0 to 200% of the rated thermal state
[Drv thermal]	<i>ℓ H d</i>	Drive thermal state, from 0 to 200% of the rated thermal state
[Torque 4Q]	<i>ℓ r 4 9</i>	Signed motor torque, between -3 and +3 times the rated motor torque. The + and - signs correspond to the physical direction of the torque, regardless of mode (motor or generator)
[Measured Motor Freq]	<i>o F r r</i>	Measured motor frequency
[Sig. o/p frq.]	<i>o F 5</i>	Signed output frequency, between -[Max Frequency] <i>ℓ F r</i> and +[Max Frequency] <i>ℓ F r</i>
[Mot therm2]	<i>ℓ H r 2</i>	Motor thermal 2 state
[Mot therm3]	<i>ℓ H r 3</i>	Motor thermal 3 state
[Mot therm4]	<i>ℓ H r 4</i>	Motor thermal 4 state
[Unsigned Trq Ref]	<i>u ℓ r</i>	Unsigned torque reference
[Signed Trq Ref]	<i>5 ℓ r</i>	Signed torque reference
[Torque lim.]	<i>ℓ 9 L</i>	Torque limit
[Motor volt.]	<i>u o P</i>	Voltage applied to the motor, between 0 and [Nom Motor Voltage] <i>u o 5</i>

Setting	Code / Value	Description
[DC Bus voltage]	V b u S	DC bus voltage
[Copy PI8]	C o P Y	Copy Pulse
[M/S Out Speed Reference]	π S S o	Master / slave output speed reference
[M/S Out Torque Reference]	π S T o	Master / slave output torque reference

[PTO Max Output Freq] P T o H ★

Pulse train output maximum output frequency.

This parameter can be accessed if [PTO Assign] P T o is not set to [Not configured] n o .

Setting	Description
1.00...30.00 kHz	Setting range Factory setting: 4.00 kHz

[PTO Min Output Freq] P T o L ★

Pulse train output minimum output frequency.

This parameter can be accessed if [PTO Assign] P T o is not set to [Not configured] n o .

Setting	Description
1.00...30.00 kHz	Setting range Factory setting: 1.00 kHz

[Virtual AI1] $\mathcal{A}V1$ - Menu**Access**[Complete settings] \rightarrow [Input/Output] \rightarrow [AI/AQ] \rightarrow [Virtual AI1]**[AIV1 Assignment] $\mathcal{A}V1\mathcal{A}$**

Virtual analog input function assignment. Read-only parameter.

Setting	Code / Value	Description
[No]	$n\ 0$	Not assigned
[Torque Ref Offset]	$t\ 9\ 0$	Torque offset source
[Torque Ref Ratio]	$t\ 9\ r$	Torque ratio source
[Ref Frequency 2 Summing]	$s\ \mathcal{A}\ 2$	Reference frequency 2 summing
[PID Feedback]	$P\ ,\ F$	PI controller feedback
[Torque limitation]	$t\ \mathcal{A}\ \mathcal{A}$	Torque limitation: activation by an analog value
[Torque limitation 2]	$t\ \mathcal{A}\ \mathcal{A}\ 2$	Torque limitation: activation by an analog value
[Subtract Ref Freq 2]	$d\ \mathcal{A}\ 2$	Subtract reference frequency 2
[Ref Frequency 3 Summing]	$s\ \mathcal{A}\ 3$	Reference frequency 3 summing
[Subtract Ref Freq 3]	$d\ \mathcal{A}\ 3$	Subtract reference frequency 3
[Ref Frequency 2 multiplier]	$\mathcal{M}\ \mathcal{A}\ 2$	Reference frequency 2 multiplier
[Ref Frequency 3 multiplier]	$\mathcal{M}\ \mathcal{A}\ 3$	Reference frequency 3 multiplier

[AIV1 Channel Assignment] $\mathcal{A}\ ,\ \llcorner\ 1$

Channel assignment for virtual analog input AIV1.

Setting	Code / Value	Description
[Not Configured]	$n\ 0$	Not assigned Factory setting
[Ref. Freq-Modbus]	$\mathcal{M}\ d\ b$	Reference frequency via Modbus
[Ref. Freq-CANopen]	$\llcorner\ \mathcal{A}\ n$	Reference frequency via CANopen if a CANopen module has been inserted
[Ref. Freq-Com. Module]	$n\ E\ \llcorner$	Reference frequency via fieldbus module if a fieldbus module has been inserted
[Embedded Ethernet]	$E\ \llcorner\ H$	Embedded Ethernet

[AIV1 Type] RV 1E

Configuration of virtual analog input AIV1.

Setting	Code / Value	Description
[+/-8192]	<i>inEG</i>	-8192/+8192 Factory setting
[+/-100%]	<i>PnEG</i>	-100.00/+100.00 %

[Input/Output] - [Relay]

[Relay] \llcorner \llcorner \llcorner - Menu

Access

[Complete settings] \rightarrow [Input/Output] \rightarrow [Relay]

About This Menu

This menu is used to configure the relays of the drive:

- **[R1 configuration]** \llcorner \llcorner to **[R3 configuration]** \llcorner \llcorner : the relays R1 to R3 embedded to the drive.
- **[R4 configuration]** \llcorner \llcorner to **[R6 configuration]** \llcorner \llcorner : the relays R4 to R6 if the VW3A3204 relay output option module is inserted,
- **[R60 configuration]** \llcorner \llcorner to **[R66 configuration]** \llcorner \llcorner : the relays R60 to R66 inside Drive Systems enclosure for control and monitoring circuits. It can only be accessed on ATV●60, ATV●80 and ATV●L0 equipped with cabinet IO, and if **[Access Level]** \llcorner \llcorner is set to **[Expert]** \llcorner \llcorner .


On Graphic Display Terminal (VW3A1111), **[Relay]** \llcorner \llcorner - menu is the fourth tab displayed in the menu **[Input/Output]** \llcorner \llcorner (the tab is named "Relay").

Use the touch wheel to scroll through the relays. Click OK to access the configuration of the relay.

On Graphic Display Terminal, if a relay is assigned then a check mark is displayed.

For a given relay (Rx), the configuration is composed by:

- **[Rx Assignment]** \llcorner \llcorner : the assignment of the relay Rx,
- **[Rx Delay time]** \llcorner \llcorner : the delay time of the relay Rx. It represents the delay before modifying the state of the relay when the assigned event becomes true,
- **[Rx Active at]** \llcorner \llcorner : the active level of the relay Rx. It defines the state 1 or 0 of the relay to the true state of the assigned event.
- **[Rx Holding Time]** \llcorner \llcorner : the holding time of the relay Rx. It represents the delay before modifying the state of the relay when the assigned event becomes false.
- **[Enable Rx fallback]** \llcorner \llcorner : parameter used to enable/disable the fallback mode triggered in case of communication interruption (if the relay is controlled by fieldbus communication).

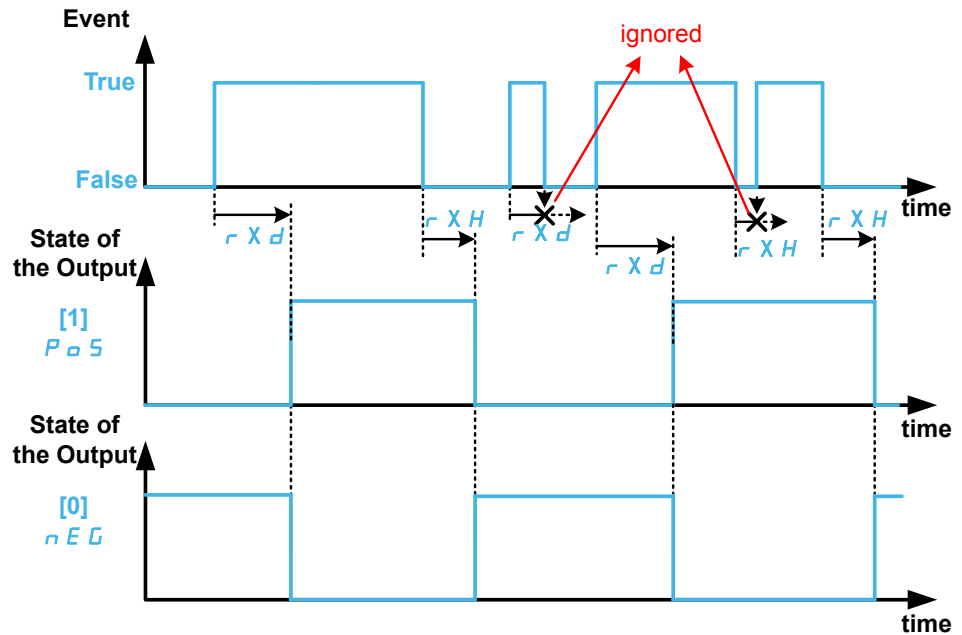

[Rx Assignment] r X

[R1 Assignment] r 1, [R2 Assignment] r 2, [R3 Assignment] r 3, [R4 Assignment] r 4, [R5 Assignment] r 5, [R6 Assignment] r 6, [R60 Assignment] r 6 0, [R61 Assignment] r 6 1, [R62 Assignment] r 6 2, [R63 Assignment] r 6 3, [R64 Assignment] r 6 4, [R65 Assignment] r 6 5, [R66 Assignment] r 6 6

Rx assignment.

It is used to assign the relay to an event or a function. The following table gives the possible settings:

If the output is set to [CDxx] CDxx or [Cxxx] Cxxx and has been enabled, transition to operating state Fault such as, but not limited to, communication interruption, will not disable the output.

⚠ WARNING

LOSS OF CONTROL

Only set the output to [CDxx] CDxx or [Cxxx] Cxxx after having verified that this setting cannot result in unsafe conditions including communication interruption.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Setting	Code / Value	Description
[No]	n 0	Not assigned. NOTE: In this case, the output can be controlled via the internal parameter o L 1 r (refer to the communication parameter addresses file). By default, if an error (such as a communication interruption is detected), the output remains unchanged. Use the parameter [Enable Rx Fallback] r X F to disable the output in case of error detection. Factory setting ⁽¹⁾
[Warning Grp 1]... [Warning Grp 5]	R G 1...R G 5	Warning group 1 to Warning group 5.
[Slipping warn]	R n A	Anti-veering warning

Setting	Code / Value	Description
[AI1 4-20 Loss Warning]...[AI5 4-20 Loss Warning]	<i>A P 1...A P 5</i>	4-20 mA loss warning on AI ⁽³⁾
[Neg Torque]	<i>A E 5</i>	Actual torque sign
[Brake Contact Warn]	<i>b C A</i>	Brake contact warning
[Brake Sequence]	<i>b L C</i>	Brake sequence ⁽²⁾ The output is automatically configured to this function by setting the parameter [Brake logic control] <i>b L C</i> .
[HMI Cmd]	<i>b P P</i>	Control via the Graphic Display Terminal is active. (only active with Local/Remote button)
[BR Temp Warning]	<i>b o A</i>	Braking resistor temperature warning.
[DBR Active]	<i>b r A 5</i>	DBR Active.
[In braking]	<i>b r 5</i>	In braking sequence
[Load Mvt Warn]	<i>b S A</i>	Brake speed warning
[CB Stop Pulse]	<i>C b d P</i>	Circuit Breaker stop pulse ⁽²⁾ The output is automatically configured to this function by setting the parameter [CB Start Pulse Activated] <i>C b d P</i> .
[CB Start Pulse]	<i>C b E P</i>	Circuit Breaker start pulse ⁽²⁾ The output is automatically configured to this function by setting the parameter [CB Stop Pulse Activated] <i>C b E P</i> .
[CD00]...[CD15]	<i>C d 0 0... C d 1 5.</i>	Bit x digital input ctrl word (e.g. virtual digital input CMD.0...CMD.15). The state of the output is modified accordingly with the bit of the control word. If an error is triggered (such as a communication error), the output remains unchanged. NOTE: CD00...CD10 are only accessible with [Control Mode] CHCF set to [I/O Profile] <i>i o</i> .
[C100]...[C115]	<i>C 1 0 0... C 1 1 5</i>	Bit x Modbus ctrl word (e.g. Virtual digital input CMD1.00...CMD1.15 with integrated Modbus Serial). The state of the output is modified accordingly with the bit of the Modbus control word. If an error is triggered (such as a communication error), the output remains unchanged. NOTE: C100...C110 are only accessible with [Control Mode] CHCF set to [I/O Profile] <i>i o</i> .
[C200]...[C215]	<i>C 2 0 0... C 2 1 5</i>	Bit x CANopen ctrl word (e.g. Virtual digital input CMD2.00...CMD2.15 with CANopen® fieldbus module). The state of the output is modified accordingly with the bit of the CANopen control word. If an error is triggered (such as a communication error), the output remains unchanged. NOTE: C200...C210 are only accessible with [Control Mode] CHCF set to [I/O Profile] <i>i o</i> .
[C300]...[C315]	<i>C 3 0 0... C 3 1 5</i>	Bit x Com module ctrl word (e.g. Virtual digital input CMD3.00...CMD3.15 with fieldbus module). The state of the output is modified accordingly with the bit of the fieldbus module control word. If an error is triggered (such as a communication error), the output remains unchanged. NOTE: C300...C310 are only accessible with [Control Mode] CHCF set to [I/O Profile] <i>i o</i> .
[C500]...[C515]	<i>C 5 0 0... C 5 1 5</i>	Bit x Ethernet ctrl word (e.g. Virtual digital input CMD3.00...CMD3.15 with Ethernet embedded). The state of the output is modified accordingly with the bit of the Ethernet embedded control word. If an error is triggered (such as a communication error), the output remains unchanged. NOTE: C500...C510 are only accessible with [Control Mode] CHCF set to [I/O Profile] <i>i o</i> .

Setting	Code / Value	Description
[set 1 active]...[set 2active]	C F P 1... C F P 3	Parameter set 1, 2 or 3 is active.
[Cnfg.0 act.]...[Cnfg.3 act.]	C n F 0... C n F 3	Configuration 0, 1, 2 or 3 is active
[Current Thd Reached]	C E R	Motor current threshold ([High Current Thd] C E d) reached
[Low Current Reached]	C E R L	Current low threshold ([Low I Threshold] C E d L) reached
[DC Bus Charged]	d b L	DC bus charged
[DC Charging]	d C o	DC charging ⁽²⁾ The output is automatically configured to this function by setting the parameter [DC Charging Assign] d C o.
[Dynamic Load Warning]	d L d R	Dynamic load detection.
[External Error Warning]	E F R	External error warning
[Forced Run]	E r n	Emergency Run
[Mot Freq High Thd 2]	F 2 R	Second frequency threshold ([Freq. threshold 2] F 2 d) reached
[Motor Freq Low Thd 2]	F 2 R L	Second frequency low threshold ([2 Freq. Threshold] F 2 d L) reached
[High Speed Reached]	F L R	High speed reached
[Operating State Fault]	F L t	Operating state fault
[Pulse Warn Thd Reached]	F 9 L R	Pulse warning threshold reached
[Fallback speed]	F r F	Reaction on event / fallback speed
[Mot Freq High Thd]	F E R	Motor frequency threshold ([Motor Freq Thd] F E d) reached
[Mot Freq Low Thd]	F E R L	Frequency low threshold ([Low Freq.Threshold] F E d L) reached
[Idle State]	i d L E	Device in energy saving state
[Idle Rdy Or Run State]	i d r r	Device in energy saving or ready or running state.
[Idle Or Rdy State]	i d r y	Device in energy saving or ready state.
[Mains Contactor]	L L C	Mains contactor ⁽²⁾ The output is automatically configured to this function by setting the parameter [Mains Contactor] L L C.
[Limit Switch Reached]	L S R	Limit switch function activated.
[I present]	π C P	Motor current present
[Forward]	π F r d	Run forward
[Reverse]	π r r S	Run reverse
[M/S Device Warn]	π S d R	M/S Device Warn ⁽²⁾
[Output cont]	o C C	Output contactor control ⁽²⁾ The output is automatically configured to this function by setting the parameter [Out. Contactor Assign] o C C.
[Process Overload Warning]	o L R	Overload warning
[PID Error Warning]	P E E	PID error warning
[PID Feedback Warning]	P F R	PID feedback warning

Setting	Code / Value	Description
[PID High Fdbck Warning]	P F A H	PID feedback high threshold (PAH) reached
[PID Low Fdbck Warning]	P F A L	PID feedback low threshold (PAL) reached
[Regulation Warning]	P , S H	PID regulation unable to reach the set point
[Power Removal State]	P r Π	Power removal state. Without power supply, the information cannot be delivered. With this setting value, the power supply must be not external.
[Ready]	r d Y	Ready to start
[Speed Maintained]	r L S	Reaction on event / maintain speed
[Ramp switching]	r P Z	Ramp switching state
[Slack Rope Warning]	r S d R	Rope Slack
[Trq ctrl Warning]	r t R	Torque control time-out warning
[Ref Freq High Thd Reached]	r t R H	Frequency reference high threshold reached
[Ref Freq Low Thd Reached]	r t R L	Frequency reference low threshold reached
[Drive Running]	r u n	Drive running
[Rdy Or Run State]	r Y r n	Device in ready or running state.
[Ref Freq Reached]	S r R	Frequency reference reached
[Lim T/I Reached]	S S R	Limit torque / I reached: Torque current limitation warning
[Per Type of Stop]	S t t	Reaction on event / stop on STT without an error triggered after stop.
[Drv Therm Thd Reached]	t R d	Drive thermal threshold reached
[Drive Thermal Warning]	t H R	Drive thermal state warning
[IGBT Thermal Warning]	t J R	Thermal junction warning
[AI1 Th Warning]...[AI5 Th Warning]	t P I R... t P S R	Thermal warning on AI ⁽³⁾
[Temp Sens AI1 Warn]...[Temp Sens AI5 Warn]	t S I R... t S S R	Temperature sensor AI warning (open circuit) ⁽³⁾
[Mot2 Therm Thd reached]...[Mot4 Therm Thd reached]	t S 2...t S 4	Motor thermal threshold TTD2, TTD3 or TTD4 is reached
[Motor Therm Thd Reached]	t S R	Motor thermal threshold ([Motor Therm Thd] t t d) reached
[High Torque Warning]	t t H R	High torque threshold
[Low Torque Warning]	t t L R	Low torque threshold
[Process Undld Warning]	u L R	Underload warning
[Preventive UnderV Active]	u P R	Undervoltage prevention warning
[Undervoltage Warning]	u S R	Undervoltage warning

(1): On relay R1, the factory setting is [Operating State Fault] F L E . On ATV●60 and ATV●80, the factory setting of R60 is [Cabinet Fan Command] F C C . R60 can only be assigned to No or FCC.

(2): This setting cannot be accessed with R1.

(3): Event on AI2 is not available on ATV900

[Rx Delay time] r X d

[R1 Delay time] r 1 d, [R2 Delay time] r 2 d, [R3 Delay time] r 3 d, [R4 Delay time] r 4 d, [R5 Delay time] r 5 d, [R6 Delay time] r 6 d, [R60 Delay time] r 6 0 d, [R61 Delay time] r 6 1 d, [R62 Delay time] r 6 2 d, [R63 Delay time] r 6 3 d, [R64 Delay time] r 6 4 d, [R65 Delay time] r 6 5 d, [R66 Delay time] r 6 6 d

Rx activation delay time.

It represents the delay before modifying the state of the relay when the assigned event becomes true.

If the corresponding relay is assigned to one of the following assignments, the delay is forced to 0 ms and it cannot be modified:

- **[Operating State “Fault”] F L L**,
- **[Mains Contactor] L L C**,
- **[DC charging] d C o**,
- **[Brake Sequence] b L C**,
- **[Output Cont] o C C**,

Setting	Description
0...60,000 ms (step: 1 ms)	Setting range Factory setting: 0 ms

[Rx Active at] r X 5

[R1 Active at] r 1 5, [R2 Active at] r 2 5, [R3 Active at] r 3 5, [R4 Active at] r 4 5, [R5 Active at] r 5 5, [R6 Active at] r 6 5, [R60 Active at] r 6 0 5, [R61 Active at] r 6 1 5, [R62 Active at] r 6 2 5, [R63 Active at] r 6 3 5, [R64 Active at] r 6 4 5, [R65 Active at] r 6 5 5, [R66 Active at] r 6 6 5

Rx status (output active level).

It defines the state 1 or 0 of the relay to the true state of the assigned event.

If the relay R1...R6 is assigned to one of the following assignments, the delay is forced to **[1] Pos**:

- **[Operating State “Fault”] F L L**,
- **[Mains Contactor] L L C**,
- **[DC charging] d C o**,
- **[Brake Sequence] b L C**,
- **[Output Cont] o C C**,

Setting	Code / Value	Description
1	P o S	State 1 if the event is true. Factory setting
0	n E G	State 0 if the event is true.

[Rx Holding Time] r X H

[R1 Holding time] r 1 H, [R2 Holding time] r 2 H, [R3 Holding time] r 3 H, [R4 Holding time] r 4 H, [R5 Holding time] r 5 H, [R6 Holding time] r 6 H, [R60 Holding time] r 6 0 H, [R61 Holding time] r 6 1 H, [R62 Holding time] r 6 2 H, [R63 Holding time] r 6 3 H, [R64 Holding time] r 6 4 H, [R65 Holding time] r 6 5 H, [R66 Holding time] r 6 6 H

Rx holding delay time.

It represents the delay before modifying the state of the relay when the assigned event becomes false.

If the corresponding relay is assigned to one of the following assignments, the delay is forced to 0 ms and it cannot be modified:

- [Operating State “Fault”] FLT,
- [Mains Contactor] LLC,
- [DC charging] dco,
- [Brake Sequence] bLC,
- [Output Cont] oLC,

Setting	Description
0...9,999 ms (step: 1 ms)	Setting range Factory setting: 0 ms

[Enable Rx fallback] rXf

[Enable R1 fallback] r1f, [Enable R2 fallback] r2f, [Enable R3 fallback] r3f, [Enable R4 fallback] r4f, [Enable R5 fallback] r5f, [Enable R6 fallback] r6f

Enable relayX fallback.

This parameter is forced to [No] no if [Rx Assignment] rX is set to a value different from [No] no.

If the output is controlled by fieldbus and has been enabled, transition to operating state Fault such as, but not limited to, communication interruption, will not disable the output if this parameter is set to [No] no.

⚠ WARNING
<p>LOSS OF CONTROL</p> <ul style="list-style-type: none"> • Verify that using this default setting does not result in unsafe conditions including communication interruption. • Set this parameter to [Yes] yes to disable the output if an error is triggered. <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p>

Setting	Code / Value	Description
[No]	no	Fallback feature disabled. When the output is assigned, the state of the output is defined according to its assignment, page 504 When the corresponding output is not assigned, the state of the output can be controlled via a bit of oLr (refer to the communication parameter addresses file). If an error is detected, the output remains unchanged. Factory setting
[Yes]	yes	Fallback feature enabled. The state of the relay can be controlled via a bit of oLr (refer to the communication parameter addresses file). If an error is detected, the output is disabled. NOTE: If an error is detected, the process applied on the output (e.g. delays, active level) remains applied.

[Input/Output] I O - Menu

Access

[Complete settings] → [Input/Output]

About This Menu



This parameter can be accessed with the Plain Text Remote Terminal or via the commissioning software.


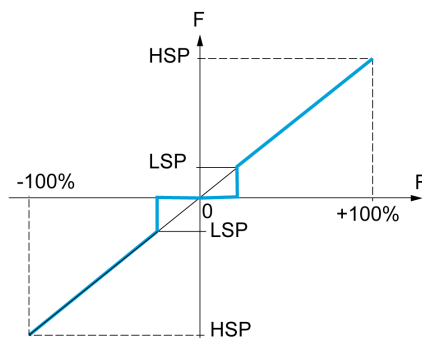
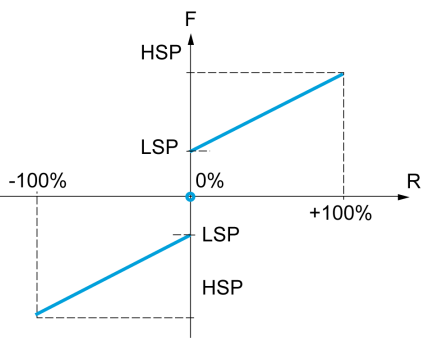
[Ref Freq Template] b 5 P

Reference frequency template selection.

This parameter defines how the speed reference is taken into account, for analog inputs and pulse input. In the case of the PID controller, this is the PID output reference.

The limits are set by the [Low speed] L 5 P and [High speed] H 5 P parameters

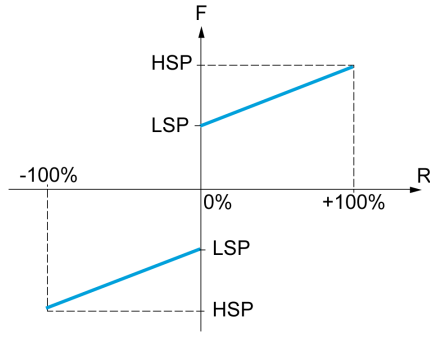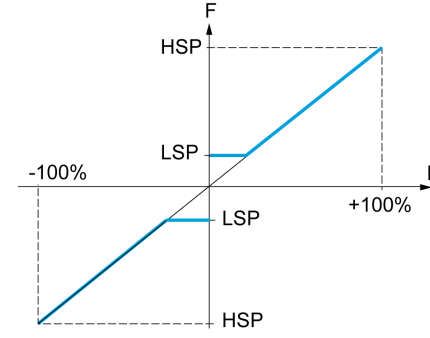Setting (⌚)	Code / Value	Description
[Standard]	b 5 d	 <p>F Frequency R Reference At reference = 0, the frequency = [Low speed] L 5 P Factory setting</p>
[Pedestal]	b L 5	 <p>F Frequency R Reference At reference = 0 to [Low speed] L 5 P, the frequency = [Low speed] L 5 P</p>

Setting 	Code / Value	Description
[Deadband]	b n 5	 <p>F Frequency</p> <p>R Reference At reference = 0 to [Low speed] L S P the frequency = 0</p>
[Deadband at 0%]	b n 5 0	 <p>F Frequency</p> <p>R Reference This operation is the same as [Standard] b 5 d, except that in the following cases at zero reference, the frequency = 0: The signal is less than [Min nvalue], which is greater than 0 (example: 1 Vdc on a 2–10 Vdc input) The signal is greater than [Min nvalue], which is greater than [Max value] (example: 11 Vdc on a 10–0 Vdc input).</p> <p>If the input range is configured as "bidirectional", operation remains identical to [Standard] b 5 d.</p>

[Encoder configuration]

[Encoder configuration] E n - Menu

Access

[Complete settings] → [Encoder configuration]

About This Menu

This menu can be accessed if an encoder module (VW3A3420, VW3A3422, VW3A3423, or VW3A3424) has been inserted, and the available selections depend on the type of encoder module used.

Encoder Check Procedure

This procedure applies to all types of encoder.

Step	Action
1	Configure the parameters of the encoder used
2	Set [Motor control type] C L E to a value other than [FVC] F V C even if it is the required configuration. For example, use [SVC V] V V C for an asynchronous motor and [Sync. mot.] S Y n for a synchronous motor.
3	Configure the motor parameters in accordance with the specifications on the nameplate. <ul style="list-style-type: none"> Asynchronous motor: [Nominal motor power] n P r, [Nom Motor Voltage] u n S, [Nom Motor Current] n C r, [Nominal Motor Freq] F r S, [Nominal Motor Speed] n S P. Synchronous motor: [Sync Nominal I] n C r S, [Nom SyncMotor Speed] n S P S, [Pole pairs] P P n S, [Syn. EMF constant] P H S, [Autotune L d-axis] L d S, [Autotune L q-axis] L q S, [SyncMotor Stator R] r S R S.
4	Set [Encoder usage] E n u to [No] n o .
5	Perform auto-tuning
6	Set [Encoder check] E n C to [Yes] Y E S
7	Set the motor rotating at stabilized speed around 15% of the rated speed for at least 3 seconds, and use the [Display] n o n menu to monitor its behavior using [Measured output fr.] n n F parameter.
8	If an [Encoder] E n F error is detected, [Encoder check] E n C returns to [No] n o . <ul style="list-style-type: none"> Check the parameter settings (see steps 1 to 5 above). Check that the mechanical and electrical operation of the encoder, its power supply, and connections are all OK. Reverse the direction of rotation of the motor ([Output Ph Rotation] P H r parameter) or the encoder signals
9	Repeat the operations from step 6 onwards until [Encoder check] E n C changes to [Done] d o n E
10	If necessary, change [Motor control type] C L E to [FVC] F V C or [Sync.CL] F S Y . NOTE: In this case [Encoder usage] E n u is automatically set to [Speed Regulation] r E G .

[Encoder Type] u E C P

Encoder type.

This parameter can be accessed if VW3A3420 or VW3A3422 or VW3A3424 are inserted.

The list of choice depends on the encoder module inserted.

Setting	Code / Value	Description
[Undefined]	<i>u n d</i>	Unknow / No encoder type selected Factory setting
[Hiperface]	<i>5 C H P</i>	SinCos Hiperface encoder
[SinCos]	<i>5 C</i>	SinCos encoder
[SSI]	<i>5 5 ,</i>	SSI encoder
[RS422]	<i>A b</i>	AB encoder
[Resolver]	<i>r E 5</i>	Resolver encoder
[EnDat 2.2]	<i>E n 2 2</i>	Endat 2.2 encoder
[HTL]	<i>H t L</i>	HTL encoder

[AB Encoder Type] *E n 5*

AB Encoder type configuration

This parameter can be accessed if [Encoder Type] *u E C P* is set to [RS422] *A b* or [HTL] *H t L*.

NOTE: This parameter is forced to [AABB] *A A b b* if the encoder module is different from HTL encoder.

▲ WARNING
<p>LOSS OF CONTROL</p> <p>If you use an HTL encoder module (VW3A3424) and set [Encoder Usage] <i>E n u</i> to [Speed Regulation] <i>r E G</i>, you must set the parameter [AB Encoder Type] <i>E n 5</i> to [AABB] <i>A A b b</i>.</p> <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p>

Setting	Code / Value	Description
[AABB]	<i>A A b b</i>	A, /A, B, /B signals Factory setting
[AB]	<i>A b</i>	A, B signals
[A]	<i>A</i>	A signal NOTE: In the case of an HTL encoder module, this parameter cannot be set to [A] <i>A</i> , if [Encoder usage] <i>E n u</i> is set to [Speed Regulation] <i>r E G</i> .

[Encoder supply volt.] *u E C V* ★

Encoder supply voltage.

Rated voltage of encoder used. The list of choice depends on the encoder module inserted.

This parameter can be accessed if [Encoder Type] *u E C P* is not set to:

- [Undefined] *u n d*, or
- [Resolver] *r E 5*.

Setting	Code / Value	Description
[Undefined]	<i>u n d</i>	Not defined Factory setting
[5 Vdc]	<i>5 V</i>	5 Volts

Setting	Code / Value	Description
[12 Vdc]	1 2 V	12 Volts
[15 Vdc]	1 5 V	15 Volts
[24 Vdc]	2 4 V	24 Volts

[Number of pulses] P G , ★

Number of pulses per encoder revolution.

The parameter can be accessed if

- An encoder module VW3A3420 has been inserted and if **[Encoder Type]** *u E C P* is set to **[RS422]** *R B* or,
- An encoder module VW3A3424 has been inserted and if **[Encoder Type]** *u E C P* is set to **[HTL]** *H E L*.

Setting	Description
100...10,000	Factory setting: 1024

[Encoder check] E n C

Encoder check activation.

Setting	Code / Value	Description
[Not done]	n o	Check not performed
[Yes]	y e s	Activates monitoring of the encoder.
[Done]	d o n e	Check performed successfully. The check procedure checks: <ul style="list-style-type: none"> • The direction of rotation of the encoder/motor • The presence of signals (wiring continuity) • The number of pulses/revolution. If an error is detected, the drive triggers an [Encoder] <i>E n F</i>.

[Encoder usage] E n u

Setting	Code / Value	Description
[No]	n o	Function inactive
[Speed Monitoring]	S E C	The encoder provides speed feedback for monitoring only.
[Speed Regulation]	r E G	The encoder provides speed feedback for regulation and monitoring. This configuration is automatic if the drive is configured for closed-loop operation [Motor control type] <i>C E E</i> = [FVC] <i>F V C</i> or [Sync.CL] <i>F S Y</i> . If [Motor control type] <i>C E E</i> = [SVC V] <i>V V C</i> the encoder operates in speed feedback mode and enables static correction of the speed to be performed. This configuration is not accessible for other [Motor control type] <i>C E E</i> values. NOTE: In the case of a HTL encoder module, this parameter cannot be set to [Speed Regulation] <i>r E G</i> if [AB Encoder Type] <i>E n S</i> is set to [A] <i>R</i> .
[Speed Reference]	P G r	The encoder provides a speed reference. It can only be selected with an incremental encoder module.

[Encoder rotation inv.] E n r ,

Inversion of encoder rotation direction.

Setting	Code / Value	Description
[No]	00	Inversion of the encoder deactivated Factory setting
[Yes]	955	Inversion of the encoder activated

[Resolver Exct. Freq.] r EF 9★

Resolver excitation frequency.

This parameter can be accessed if [Encoder Type] u E L P is set to [Resolver] r E 5.

Setting	Code / Value	Description
[3 kHz]	3K	3 kHz
[4 kHz]	4K	4 kHz
[5 kHz]	5K	5 kHz
[6 kHz]	6K	6 kHz
[7 kHz]	7K	7 kHz
[8 kHz]	8K	8 kHz Factory setting
[9 kHz]	9K	9 kHz
[10 kHz]	10K	10 kHz
[11 kHz]	11K	11 kHz
[12 kHz]	12K	12 kHz

[Transformation ratio] t r E 5★

Resolver transformation ratio.

This parameter can be accessed if [Encoder Type] u E L P is set to [Resolver] r E 5.

Setting	Code / Value	Description
[0.3]	03	0.3
[0.5]	05	0.5 Factory setting
[0.8]	08	0.8
[1.0]	10	1.0

[Resolver poles nbr] r P P n★

Resolver poles pair number.

This parameter can be accessed if [Encoder Type] u E L P is set to [Resolver] r E 5.

Setting	Code / Value	Description
[2 poles]	2P	2 poles Factory setting
[4 poles]	4P	4 poles

Setting	Code / Value	Description
[6 poles]	6 P	6 poles
[8 poles]	8 P	8 poles

[SinCos lines count] 5 5 L C ★

SinCos lines count.

This parameter can be accessed if [Encoder Type] 5 5 L P is set to [SinCos] 5 C .

Setting	Code / Value	Description
[Undefined]	u n d	Undefined Factory setting
[1...10000]		Setting range

[SSI parity] 5 5 C P ★

SSI Parity

This parameter can be accessed if [Encoder Type] 5 5 L P is set to [SSI] 5 5 ,

Setting	Code / Value	Description
[Undefined]	u n d	Undefined Factory setting
[No parity]	n o	No parity
[Even parity]	E V E n	Even parity

[SSI frame size] 5 5 F 5 ★

SSI frame size (in number of bits).

The parameter can be accessed if [Encoder Type] 5 5 L P is set to [SSI] 5 5 ,

Setting	Description
[Auto] A u t o...31	Setting range Factory setting: [Auto] A u t o

[Nbr of revolutions] E n R r ★

Number of revolutions.

Format of the number of revolutions (in number of bits).

The parameter can be accessed if [Encoder Type] 5 5 L P is set to [SSI] 5 5 ,

Setting	Description
[Undefined] u n d...25	Setting range Factory setting: [Undefined] u n d

[Turn bit resolution] E n t r ★

Turn bit resolution.

Resolution per revolution (in number of bits).

The parameter can be accessed if **[Encoder Type] u E C P** is set to **[SSI] S S**,

Setting	Description
[Undefined] u n d...25	Setting range Factory setting: [Undefined] u n d

[SSI code type] S S C d★

SSI code type.

The parameter can be accessed if **[Encoder Type] u E C P** is set to **[SSI] S S**,

Setting	Code / Value	Description
[Undefined]	<i>u n d</i>	Undefined Factory setting
[Binary code]	<i>b i n</i>	Binary code
[Gray code]	<i>G r A y</i>	Gray code

[Clock frequency] E n S P★

Clock frequency.

The parameter can be accessed if **[Encoder Type] u E C P** is set to **[SSI] S S**,

Setting	Code / Value	Description
[200 kHz]	<i>2 0 0 K</i>	200 kHz Factory setting
[1 Mhz]	<i>1 M</i>	1 MHz

[AB Encoder Max Freq] A b M F★

AB encoder maximum frequency.

This parameter can be accessed if **[Encoder Type] u E C P** is set to **[RS422] A b** or **[HTL] H T L** and, **[Access Level] L A C** is set to **[Expert] E P r**.

This parameter can be used in case of EMC perturbations to adjust the filter of the encoder.

Setting	Code / Value	Description
[150 kHz]	<i>1 5 0 K</i>	150 kHz
[300 kHz]	<i>3 0 0 K</i>	300 kHz Factory setting
[500 kHz]	<i>5 0 0 K</i>	500 kHz
[1000 kHz]	<i>1 M</i>	1000 kHz

[Encoder filter activ.] F F A★

Encoder feedback filter activation.

This parameter can be accessed if **[Access Level] L A C** is set to **[Expert] E P r** and **[Encoder usage] E n u** is not set to **[No] n o**.

Setting	Code / Value	Description
[No]	<i>n o</i>	Filter deactivated Factory setting
[Yes]	<i>y e s</i>	Filter activated

[Encoder filter value] *F F r* ★

Encoder feedback filter value.

This parameter can be accessed if:

- **[Access Level] *L R C*** is set to **[Expert] *E P r***, and
- **[Encoder filter activ.] *F F A*** is set to **[Yes] *y e s***.

Setting	Description
0.0...40.0 ms	Setting range Factory setting: according to encoder rating

[Stop on top Z] *t o p Z* ★

Stop on next top Z detection.

This parameter can be used for homing. If the approach speed is set to high an **[DC Bus Overvoltage] *o b F*** error will be triggered.

Some encoder provides a top Z signal. With the function linked to this parameter, it is possible to stop the motor on the detection of this signal.

- If the assigned input or bit is at 1 (high level), the function is active: the drive stops the motor with a fast stop on the detection of the next top Z signal.
- If **[2/3-wire control] *t c c*** is set to **[2-Wire Control] *z c*** and if **[2-wire type] *t c t*** is set to **[Level] *L E L*** or **[Fwd priority] *P F o***, the motor restarts when the assigned input or bit switches to 0 (low level) with a run command still activated. If it is not the case, a new run command must be sent.

This parameter can be accessed if a VW3A3420 Digital encoder module has been inserted and if **[Encoder type] *u E C P*** is set to **[RS422] *R b***.

Setting	Code / Value	Description
[Not Assigned]	<i>n o</i>	Not assigned Factory setting
[DI1]...[DI8]	<i>L , I ... L , B</i>	Digital input DI1...DI8
[DI11]...[DI16]	<i>L , I I ... L , I B</i>	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	<i>C d 0 0 ... C d 1 0</i>	Virtual digital input CMD.0...CMD.10 in [I/O profile] <i>i o</i> configuration
[CD11]... [CD15]	<i>C d 1 1 ... C d 1 5</i>	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	<i>C 1 0 1 ... C 1 1 0</i>	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] <i>i o</i> configuration
[C111]... [C115]	<i>C 1 1 1 ... C 1 1 5</i>	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	<i>C 2 0 1 ... C 2 1 0</i>	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] <i>i o</i> configuration
[C211]... [C215]	<i>C 2 1 1 ... C 2 1 5</i>	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	<i>C 3 0 1 ... C 3 1 0</i>	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] <i>i o</i> configuration

Setting	Code / Value	Description
[C311]... [C315]	<i>U 3 1 1</i> ... <i>U 3 1 5</i>	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	<i>U 5 0 1</i> ... <i>U 5 1 0</i>	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] <i>U 0</i> configuration
[C511]... [C515]	<i>U 5 1 1</i> ... <i>U 5 1 5</i>	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[Reset Position Assign] *r P 0 5*

Reset position assignment.

This parameter resets the value of **[PLC Encoder Pulse]** *P 0 C* and **[Enc pulse count]** *P 0 C d* parameters.

This parameter can be accessed if **[Access Level]** *L R C* is set to **[Expert]** *E P r*

Identical to **[Stop on top Z]** *t 0 5 t* .

[Error/Warning handling]

[Auto fault reset] 5 5 - Menu

Access

[Complete settings] → [Error/Warning handling] → [Auto fault reset]

[Auto Fault Reset] 5 5

Automatic fault reset.

This function can be used to automatically perform individual or multiple Fault Resets. If the cause of the error that has triggered the transition to the operating state Fault disappears while this function is active, the drive resumes normal operation. While the Fault Reset attempts are performed automatically, the output signal **[Operating state Fault]** is not available. If the attempts to perform the Fault Reset are not successful, the drive remains in the operating state Fault and the output signal **[Operating state Fault]** becomes active.

▲ WARNING

UNANTICIPATED EQUIPMENT OPERATION

- Verify that activating this function does not result in unsafe conditions.
- Verify that the fact that the output signal "Operating state Fault" is not available while this function is active does not result in unsafe conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The drive fault relay remains activated if this function is active. The speed reference and the operating direction must be maintained.

It is recommended to use 2-wire control (**[2/3-wire control]** 5 5 5 is set to **[2 wire]** 5 5 and **[2-wire type]** 5 5 5 is set to **[Level]** 5 5 5, refer to **[2/3-wire control]** 5 5 5.

If the restart has not taken place once the configurable time **[Fault Reset Time]** 5 5 5 has elapsed, the procedure is aborted and the Drive response to external error. remains locked until it is turned off and then on again.

The detected error codes, which permit this function, are listed in the Diagnostics part of the manual.

Setting	Code / Value	Description
[No]	0 0	Function inactive Factory setting
[Yes]	5 5 5	Automatic restart, after locking in error state, if the detected error has disappeared and the other operating conditions permit the restart. The restart is performed by a series of automatic attempts separated by increasingly longer waiting periods: 1 s, 5 s, 10 s, then 1 minute for the following attempts.

[Fault Reset Time] 5 5 5 ★

Maximum time for automatic restart function.

This parameter appears if **[Auto Fault Reset]** 5 5 5 is set to **[Yes]** 5 5 5. It can be used to limit the number of consecutive restarts on a recurrent detected error.

Setting	Code / Value	Description
[5 minutes]	5	5 minutes Factory setting
[10 minutes]	10	10 minutes
[30 minutes]	30	30 minutes
[1 hour]	1h	1 hour
[2 hours]	2h	2 hours
[3 hours]	3h	3 hours
[Unlimited]	C E	Continuous

[Fault reset] r 5 E - Menu**Access**

[Complete settings] → [Error/Warning handling] → [Fault reset]

[Fault Reset Assign] r 5 F

Fault reset input assignment.

Detected errors are cleared manually when the assigned input or bit changes to 1 if the cause of the detected error has been removed.

All errors cannot be cleared via a Fault Reset. Refer to the table in the part Diagnostics and Troubleshooting to have the full list, page 626.

The **STOP/RESET** key on the Graphic Display Terminal performs the same function.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned
[DI1]...[DI8]	L , I...L , B	Digital input DI1...DI8 used at high level Factory setting: [DI4] L , 4
[DI11]...[DI16]	L , I I... L , I B	Digital input DI11...DI16 if VW3A3203 extended I/O module has been inserted.
[DI52 (High level)]...[DI59 (High level)]	d 5 2 H... d 5 9 H	Cabinet Digital input DI52...DI59 used at high level in case of ATV•60, ATV•80 equipped with cabinet IO.
[CD00]... [CD15]	C d 0 0... C d 1 5	Virtual digital input CMD.0...CMD.10 in [I/O profile] , o configuration.
[C101]... [C115]	C 1 0 1... C 1 1 5	Virtual digital input CMD1.01...CMD1.15 with integrated Modbus Serial in [I/O profile] , o configuration.
[C201]... [C215]	C 2 0 1... C 2 1 5	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , o configuration.
[C301]... [C315]	C 3 0 1... C 3 1 5	Virtual digital input CMD3.01...CMD3.15 with a fieldbus module in [I/O profile] , o configuration.
[C501]... [C515]	C 5 0 1... C 5 1 5	Virtual digital input CMD5.01...CMD5.150 with embedded Ethernet in [I/O profile] , o configuration.

[Product Restart] r P ★

The Restart function performs a Fault Reset and then restarts the drive. During this Restart procedure, the drive goes through the same steps as if it had been switched off and on again. Depending on the wiring and the configuration of the drive, this may result in immediate and unanticipated operation.

▲ WARNING
<p>UNANTICIPATED EQUIPMENT OPERATION</p> <p>The Restart function performs a Fault Reset and restarts the drive.</p> <ul style="list-style-type: none"> • Verify that activating this function does not result in unsafe conditions. <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p>

Product restart.

This parameter can be accessed if [Access Level] L A C is set to [Expert] E P r mode.

This parameter can be used to reset all detected errors without having to disconnect the drive from the supply mains.

Setting	Code / Value	Description
[No]	<i>n o</i>	Function inactive Factory setting
[Yes]	<i>y e s</i>	Reinitialization. Press and hold down the OK key for 2 s. The parameter changes back to [No] <i>n o</i> automatically as soon as the operation is complete. The drive can only be reinitialized when locked.

[Prod Restart Assign] *r P R*★

Product restart assignment.

The Restart function performs a Fault Reset and then restarts the drive. During this Restart procedure, the drive goes through the same steps as if it had been switched off and on again. Depending on the wiring and the configuration of the drive, this may result in immediate and unanticipated operation.

▲ WARNING
UNANTICIPATED EQUIPMENT OPERATION
The Restart function performs a Fault Reset and restarts the drive.
• Verify that activating this function does not result in unsafe conditions.
Failure to follow these instructions can result in death, serious injury, or equipment damage.

This parameter can be accessed if **[Access Level] *L R C*** is set to **[Expert] *E P r*** mode.

Setting	Code / Value	Description
[Not Assigned]	<i>n o</i>	Not assigned Factory setting
[DI1]...[DI8]	<i>L , I...L , B</i>	Digital input DI1...DI8 used at high level
[DI11 (High level)]...[DI16 (high level)]	<i>L , I I... L , I B</i>	Digital input DI11...DI16 if VW3A3203 extended I/O module has been inserted.
[DI52 (High level)]...[DI59 (high level)]	<i>d 5 2 H... d 5 9 H</i>	Cabinet Digital input DI52...DI59 used at high level in case of ATV•60, ATV•80 equipped with cabinet IO.

[Extended Fault Reset] *H r F C*★

Hardware detected error configuration.

When ***H r F C*** is set to *y e s*, it allows you to reset hardware type error with the Fault Reset function (see above **[Fault Reset Assign] *r 5 F***).

All hardware type errors cannot be cleared via a this feature. Refer to the table in the part Diagnostics and Troubleshooting to have the full list , page 626.

This feature allows to clear these hardware type errors without disconnection the drive from the power supply.

NOTICE

INOPERATIVE DRIVE

- Verify that enabling this parameter does not result in equipment damage.
- Before resetting the detected error, identify and correct the cause of the error.

Failure to follow these instructions can result in equipment damage.

This parameter can be accessed if **[Access Level]** *L R C* is set to **[Expert]** *E P r* mode.

Setting	Code / Value	Description
[No]	<i>n o</i>	Not enable Factory setting⁽¹⁾
[Yes]	<i>y e s</i>	Enable, some hardware type errors can be reset via Fault Reset function.

⁽¹⁾: The factory setting value switches to **[Yes]** *y e s* for ATV•30•••••F, ATV•50•••••F, ATV•60, ATV•80, ATV•A0, ATV•B0 and ATV•L0.

[Catch on the fly] F L r - Menu

Access

[Complete settings] → [Error/Warning handling] → [Catch on the fly]

[Catch On Fly] F L r

Catch on the fly.

Used to enable a smooth restart if the run command is maintained after the following events:

- Loss of line supply or disconnection.
- Clearing clearance of current detected error or automatic restart.
- Freewheel stop.

The speed given by the drive resumes from the estimated or measured speed of the motor at the time of the restart, then follows the ramp to the reference speed.

This function requires 2-wire level control.

When the function is operational, it activates at each run command, resulting in a slight delay of the current (0.5 s max).

[Catch On Fly] F L r is forced to [No] n o if

- Motor Control Type C E E is set to [FVC] F V C or [Sync.CL] F 5 Y, or
- [Auto DC Injection] A d C is set to [Continuous] C E, or
- [Brake assignment] b L C is not set to [No] n o, or
- [BL Mode] b 9 n is not set to [No] n o.

Setting	Code / Value	Description
[Not Configured]	n o	Function inactive. Factory setting
[Yes On Freewheel]	Y E 5	Function active only after freewheel stop.
[Yes Always]	A L L	Function active after all stop type

NOTE: For synchronous reluctance motor, it is recommended to set [Angle Setting Type] A 5 E to [Rotational Current Injection] r C i.

[Catch on Fly Sensitivity] V C b ★

Catch on fly sensitivity.

This parameter can only be accessed if [Access Level] L A C is set to [Expert] E P r.

Setting the value of parameter [Catch on Fly Sensitivity] V C b too low may cause a wrong estimation of the speed of the motor.

▲ WARNING
<p>LOSS OF CONTROL</p> <ul style="list-style-type: none"> • Only reduce gradually the value of parameter [Catch on Fly Sensitivity] V C b. • During commissioning, verify that the drive and the system operate as intended by performing tests and simulations in a controlled environment under controlled conditions <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p>

Setting	Description
0.10...100.00 V	Setting range Factory setting: 0.20 V

[Catch On Fly Mode] C 0 F 0

Velocity detection method for the Catch on Fly function.

[Catch On Fly Mode] C 0 F 0 is forced to [Measured] HW C 0 F for synchronous motors.

Setting	Code / Value	Description
[Measured]	HW C 0 F	Hardware catch on the fly The motor voltage signal should be greater than [Catch on Fly Sensitivity] V C b to be able to estimate the speed. Factory setting
[Computed]	SW C 0 F	Software catch on the fly A signal is injected to estimate the speed and the position of the rotor. [Computed] SW C 0 F method is not effective for a motor velocity range exceeding -HSP or +HSP.

[Error detect disabling] I n H - Menu**Access****[Complete settings] → [Error/Warning handling] → [Error detect disabling]****[Disable Error Detect] I n H★**

Disable error detection.

In rare cases, the monitoring functions of the drive may be unwanted because they impede the purpose of the application. A typical example is a smoke extractor fan operating as a part of a fire protection system. If a fire occurs, the smoke extractor fan should operate as long as possible, even if, for example, the permissible ambient temperature of the drive is exceeded. In such applications, damage to or destruction of the device may be acceptable as collateral damage, for example, to keep other damage from occurring whose hazard potential is assessed to be more severe.

A parameter is provided to disable certain monitoring functions in such applications so that automatic error detection and automatic error responses of the device are no longer active. You must implement alternative monitoring functions for disabled monitoring functions that allow operators and/or master control systems to adequately respond to conditions which correspond to detected errors. For example, if overtemperature monitoring of the drive is disabled, the drive of a smoke extractor fan may itself cause a fire if errors go undetected. An overtemperature condition can be, for example, signaled in a control room without the drive being stopped immediately and automatically by its internal monitoring functions.

⚠ DANGER**MONITORING FUNCTIONS DISABLED, NO ERROR DETECTION**

- Only use this parameter after a thorough risk assessment in compliance with all regulations and standards that apply to the device and to the application.
- Implement alternative monitoring functions for disabled monitoring functions that do not trigger automatic error responses of the drive, but allow for adequate, equivalent responses by other means in compliance with all applicable regulations and standards as well as the risk assessment.
- Commission and test the system with the monitoring functions enabled.
- During commissioning, verify that the drive and the system operate as intended by performing tests and simulations in a controlled environment under controlled conditions.

Failure to follow these instructions will result in death or serious injury.This parameter can be accessed if **[Access Level] L R L** is set to **[Expert] E P r**.

If the assigned input or bit state is:

- 0: error detection is enabled.
- 1: error detection is disabled.

Current errors are cleared on a rising edge from 0 to 1 of the assigned input or bit.

Detection of following errors can be disabled: ACF1, ACF2, ANF, BOF, BSQF, BUHF, CFA, CFB, CFC, CHF, CNF, COF, COPF, DLF, ENF, EPF1, EPF2, ETHF, FCF1, FCF2, FDR1, FDR2, FFDF, FWER, IFA, IFB, IFC, IFD, IHF, INFB, INFV, LFF1, LFF3, LFF4, LFF5, LKON, MDF, MDLF, MFF, MOF, MSDF, OBF, OHF, OLC, OLF, OPF1, OPF2, OSF, P24C, PCPF, PFMF, PGLF, PHF, SLF1, SLF2, SLF3, SOF, SPF, SRF, SSF, STF, T1CF, T3CF, T4CF, T5CF, TECF, TFA, TFB, TFC, TFD, TH1F, TH3F, TH4F, TH5F, THEF, TJF, TJF2, TLOF, TNF, ULF, URF, USF.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[DI1]...[DI8]	L , I ... L , B	Digital input DI1...DI8
[DI11]...[DI16]	L , I I ... L , I B	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	C d D D ... C d I D	Virtual digital input CMD.0...CMD.10 in [I/O profile] , o configuration
[CD11]... [CD15]	C d I I ... C d I S	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C I D I ... C I I D	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , o configuration
[C111]... [C115]	C I I I ... C I I S	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 D I ... C 2 I D	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , o configuration
[C211]... [C215]	C 2 I I ... C 2 I S	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 D I ... C 3 I D	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , o configuration
[C311]... [C315]	C 3 I I ... C 3 I S	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 D I ... C 5 I D	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] , o configuration
[C511]... [C515]	C 5 I I ... C 5 I S	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[Forced Run] , n H 5 ★

Disable error detection on run order.

In rare cases, the monitoring functions of the drive may be unwanted because they impede the purpose of the application. In addition, the Run command is to be forced via a digital input. A typical example is a smoke extractor fan operating as a part of a fire protection system. If a fire occurs, the smoke extractor fan should operate as long as possible, even if, for example, the permissible ambient temperature of the drive is exceeded or the wiring is destroyed. In such applications, damage to or destruction of the device may be acceptable as collateral damage, for example, to keep other damage from occurring whose hazard potential is assessed to be more severe.

A parameter is provided to disable certain monitoring functions in such applications so that automatic error detection and automatic error responses of the device are no longer active. You must implement alternative monitoring functions for disabled monitoring functions that allow operators and/or master control systems to adequately respond to conditions which correspond to detected errors. For example, if overtemperature monitoring of the drive is disabled, the drive of a smoke extractor fan may itself cause a fire if errors go undetected. An overtemperature condition can be, for example, signaled in a control room without the drive being stopped immediately and automatically by its internal monitoring functions. In addition, it may not be possible to stop the drive.

⚠ DANGER

MONITORING FUNCTIONS DISABLED, NO ERROR DETECTION, UNANTICIPATED EQUIPMENT OPERATION

- Only use this parameter after a thorough risk assessment in compliance with all regulations and standards that apply to the device and to the application.
- Implement alternative monitoring functions for disabled monitoring functions that do not trigger automatic error responses of the drive, but allow for adequate, equivalent responses by other means in compliance with all applicable regulations and standards as well as the risk assessment.
- Verify that permanently forcing the Run command via a digital input does not result in unsafe conditions.
- Commission and test the system with the monitoring functions enabled.
- During commissioning, verify that the drive and the system operate as intended by performing tests and simulations in a controlled environment under controlled conditions.

Failure to follow these instructions will result in death or serious injury.

Setting	Code / Value	Description
[Disabled]	<i>n o</i>	Function inactive Factory setting
[Forced Run FW]	<i>F r d</i>	Forced forward run.
[Forced Run RV]	<i>r r 5</i>	Forced reverse run.

[Forced Run Ref] *i n H r* ★

Forced Run Reference Frequency.

This parameter can be accessed if [Forced Run] *i n H 5* is not set to [Disabled] *n o*.

This parameter causes the reference to be forced to the configured value when the input or bit for error detection disabled is at 1, with priority over all other references. Value 0 = function inactive. The factory setting changes to 60 Hz if [Motor Standard] *b F r* = [60 Hz NEMA] *5 0*.

Setting	Description
0...[Max Frequency] <i>£ F r</i>	Factory setting: 50 Hz

[External error] E 5 F - Menu

Access

[Complete settings] → [Error/Warning handling] → [External error]

[Ext Error Assign] E 5 F

External error assignment.

If the assigned bit state is:

- 0: there is no external error.
- 1: there is an external error

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[DI1]...[DI8]	L 1 L 8	Digital input DI1...DI8
[DI11]...[DI16]	L 11 L 16	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	C d 00 ... C d 10	Virtual digital input CMD.0...CMD.10 in [I/O profile] configuration
[CD11]... [CD15]	C d 11 ... C d 15	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 10 1 ... C 1 10	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] configuration
[C111]... [C115]	C 1 11 ... C 1 15	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1 ... C 2 10	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] configuration
[C211]... [C215]	C 2 1 1 ... C 2 15	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1 ... C 3 10	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] configuration
[C311]... [C315]	C 3 1 1 ... C 3 15	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1 ... C 5 10	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] configuration
[C511]... [C515]	C 5 1 1 ... C 5 15	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration
[DI52 (High level)]... [DI59 (High level)]	d 5 2 H ... d 5 9 H	Cabinet high level digital inputs NOTE: This selection can be accessed on ATV960, ATV980 equipped with Cabinet IO.

[Ext Error Resp] E 5 L

Drive response to external error.

Type of stop in the event of an external detected error.

Setting	Code / Value	Description
[Ignore]	n o	External detected error ignored
[Freewheel Stop]	y e s	Freewheel stop Factory setting
[Per STT]	s e t	Stop according to configuration of [Type of stop] 5 5 5, page 344, without tripping. In this case, the detected error relay does not open and the drive is ready to restart as soon as the

Setting	Code / Value	Description
		detected error has been removed, according to the restart conditions of the active command channel (for example, according to [2/3-wire control] and [2-wire type] , page 217 if control is via the terminals). Configuring a warning for this detected error is recommended (assigned to a digital output, for example) in order to indicate the cause of the stop.
[Fallback speed]	<i>L F F</i>	Change to fallback speed, maintained as long as the detected error persists and the run command has not been removed ⁽¹⁾
[Speed maintained]	<i>r L S</i>	The drive maintains the speed being applied when the detected error occurred, as long as the detected error is active and the run command has not been removed ⁽¹⁾
[Ramp stop]	<i>r P P</i>	Stop on ramp
[Fast stop]	<i>F S t</i>	Fast stop
[DC Injection]	<i>d C ,</i>	DC injection stop. This type of stop cannot be used with some other functions.
(1) Because, in this case, the detected error does not trigger a stop, it is advisable to assign a relay or digital output to its indication.		

[Fallback Speed] L F F ★

Fall back speed.

This parameter can be accessed if the error response parameter is set to **[Fallback Speed]** L F F.

Setting	Description
0.0...599.0 Hz	Setting range Factory setting: 0.0 Hz

[External error] — [Monitoring circuit A] C n C A - to [Monitoring circuit D] C n C d - Menus

Access

[Complete settings] → [Error/Warning handling] → [External error] → [Monitoring circuit A] to [Monitoring circuit D]

About These Menus

These menus are used to assign external “Monitoring Circuits” events to drive inputs in order to trigger an error or a warning.

The Monitoring Circuits, wired to these assigned inputs (using [MonitorCircuit X Assign] , F A X), give the possibility to manage 2 levels of monitoring according to [MonitorCircuit ErrorResp] , F r X configuration:

- A Warning level: the drive triggers a warning [MonitorCircuit Warn] , w X without stopping the application. Because, in this case, the detected error does not trigger a stop, it is recommended to assign a relay or logic output to its indication.
- An Error level: the drive triggers an error [MonitorCircuit Error] , F X and stops the application.

Additionally, it is possible to define:

- [MonitorCircuit X Monitor] , F n X: The required drive state conditions to have the monitoring active.
- [MonitorCircuit X Delay] , F d X: The delay before triggering the error or the warning.

[MonitorCircuit X Assign] , F A X

[MonitorCircuit A Assign] , F A A, [MonitorCircuit B Assign] , F A B, [MonitorCircuit C Assign] , F A C, [MonitorCircuit D Assign] , F A d

Monitoring circuit X assignment (with X = A, B, C or D)

This parameter is used to assign an digital input or a bit to the Monitoring Circuit X.

Monitoring event active when the assigned digital input (high level) or bit switches to 1. With low level, it is when the digital input switches to 0.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[DI1]...[DI8]	L , I...L , B	Digital input DI1...DI8
[DI11]...[DI16]	L , I I... L , I B	Digital input DI11...DI16 if VW3A3203 Extended I/O module has been inserted
[DI1 (Low level)]...[DI8 (Low level)]	L I L ... L B L	Digital input DI1...DI8 used at low level
[DI11 (Low level)]...[DI16 (Low level)]	L I I L ... L I B L	Digital input DI11...DI16 used at low level if VW3A3203 Extended I/O module has been inserted
[CD00]... [CD15]	C d 0 0... C d 1 5	Bit x digital input ctrl word (e.g. virtual digital input CMD.00... CMD.15). NOTE: CD00...CD10 are only accessible with [Control Mode] C H C F set to [I/O Profile] , o .
[C101]... [C115]	C 1 0 1... C 1 1 5	Bit x Modbus ctrl word (e.g. Virtual digital input CMD1.01... CMD1.15 with integrated Modbus Serial) NOTE: C101...C110 are only accessible with [Control Mode] C H C F set to [I/O Profile] , o .

Setting	Code / Value	Description
[C201]... [C215]	C 2 0 1... C 2 1 5	Bit x CANopen ctrl word (e.g. Virtual digital input CMD2.01... CMD2.15 with CANopen® fieldbus module) NOTE: C201...C210 are only accessible with [Control Mode] C H C F set to [I/O Profile] . 0 .
[C301]... [C315]	C 3 0 1... C 3 1 5	Bit x Com module ctrl word (e.g. Virtual digital input CMD3.01... CMD3.15 with fieldbus module) NOTE: C301...C310 are only accessible with [Control Mode] C H C F set to [I/O Profile] . 0 .
[C501]... [C515]	C 5 0 1... C 5 1 5	Bit x Ethernet ctrl word (e.g. Virtual digital input CMD3.01... CMD3.15 with Ethernet embedded) NOTE: C501...C510 are only accessible with [Control Mode] C H C F set to [I/O Profile] . 0 .
[DI52 (High level)]...[DI59 (High level)]	d 5 2 h... d 5 9 h	Cabinet high level digital inputs NOTE: This selection can be accessed on ATV•60, ATV•80 equipped with Cabinet IO.
[DI52 (Low level)]...[DI59 (Low level)]	d 5 2 L... d 5 9 L	Cabinet low level assignment digital inputs NOTE: This selection can be accessed on ATV•60, ATV•80 equipped with Cabinet IO.

[MonitorCircuit X Monitor] , F n X ★

[MonitorCircuit A Monitor] , F n A, [MonitorCircuit B Monitor] , F n B, [MonitorCircuit C Monitor] , F n C, [MonitorCircuit D Monitor] , F n D

Monitoring circuit X error monitoring type (with X = A, B, C or D)

This parameter defines the required drive state conditions to have the monitoring of “monitoring circuit x” active.

This parameter can be accessed if Monitoring circuit X is assigned (i.e. [MonitorCircuit X Assign] , F n X is set to a value different from [No] . 0).

Setting	Code / Value	Description
[Always Active]	A L L	Always active: monitoring is active irrespective of the drive state. Factory setting
[Ready & Run State]	r r Y	Ready and Run state: monitoring is active only if the drive is in RDY or RUN.
[Run State]	r u n	Run state: monitoring is active only if the drive is in RUN.

[MonitorCircuit X Delay] , F d X ★

[MonitorCircuit A Delay] , F d A, [MonitorCircuit B Delay] , F d B, [MonitorCircuit C Delay] , F d C, [MonitorCircuit D Delay] , F d D

Monitoring circuit X delay (with X = A, B, C or D)

This parameter defines a delay before triggering the error or warning. This delay starts when the drive meets the condition defined by [MonitorCircuit X Monitor] , F n X and the input assigned to [MonitorCircuit X Assign] , F n X switches in the correct state.

This parameter can be accessed if Monitoring circuit X is assigned (i.e. [MonitorCircuit X Assign] , F n X is set to a value different from [No] . 0).

Setting	Description
0...300 s (step: 1 s)	Setting range Factory setting: 0 s

[MonitorCircuit X ErrorResp] , F r X ★

[MonitorCircuit A ErrorResp] , F r A, **[MonitorCircuit B ErrorResp]** , F r b,
[MonitorCircuit C ErrorResp] , F r C, **[MonitorCircuit D ErrorResp]** , F r d

Response to monitoring circuit X error (with X = A, B, C or D)

This parameter defines the drive response to the “monitoring circuit X” related event that occurs at the end of the delay **[MonitorCircuit X Delay]** , F d X.

Concerned warnings: **[MonitorCircuit X Warn]** , W X

Concerned errors: **[MonitorCircuit X Error]** , F X

This parameter can be accessed if Monitoring circuit X is assigned (i.e. **[MonitorCircuit X Assign]** , F A X is set to a value different from **[No]** n o).

Setting	Code / Value	Description
[Ignore]	n o	Detected error ignored: A warning is triggered. ⁽¹⁾
[Freewheel Stop]	Y E S	Freewheel stop: the drive stops in freewheel and an error is triggered. Factory setting
[Per STT]	S E E	Stop according to [Type of stop] S E E parameter but without error or warning triggered after stop.
[Fallback Speed]	L F F	Change to fallback speed (defined with [Fallback Speed] L F F), maintained as long as the detected event persists and the run command has not been removed ⁽¹⁾
[Spd maintained]	r L S	Speed maintained as long as the detected event persists and the run command has not been removed ⁽¹⁾
[Ramp stop]	r P P	Stop on ramp: the drive stops on ramp and an error is triggered.
[Fast stop]	F S E	Fast stop: the drive stops on fast stop and an error is triggered.
[DC injection]	d C i	DC injection: the drive stops on DC injection and an error is triggered.
⁽¹⁾ : Because, in this case, the detected error does not trigger a stop, it is recommended to assign a relay or logic output to its indication.		

[Output phase loss] $\alpha P L$ - Menu

Access

[Complete settings] → [Error/Warning handling] → [Output phase loss]

[OutPhaseLoss Assign] $\alpha P L$ 

Output phase loss assignment.

⚠ ⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

If output phase monitoring is disabled, phase loss and, by implication, accidental disconnection of cables, are not detected.

- Verify that the setting of this parameter does not result in unsafe conditions.

Failure to follow these instructions will result in death or serious injury.


NOTE: [OutPhaseLoss Assign] $\alpha P L$ is set to [Function Inactive] $n o$ when [Motor control type] $l t t$ is set to [SYN_U VC] $S Y n$, [Sync.CL.] $F S Y$, [SYN_U VC] $S Y n u$ or [Reluctance Motor] $S r V l$. Additionally if [HF inj. activation] [HFI] is set to [No] $n o$, [OutPhaseLoss Assign] $\alpha P L$ is forced to [Function Inactive] $n o$.

Setting	Code / Value	Description
[Function Inactive]	$n o$	Function inactive
[OPF Error Triggered]	$y e s$	Tripping on [OutPhaseLoss Assign] $\alpha P L$ with freewheel stop Factory setting
[No Error Triggered]	$\alpha R l$	No detected error triggered, but management of the output voltage in order to avoid an overcurrent when the link with the motor is re-established and catch on the fly performed (even if this function has not been configured). The drive switches to [Output cut] $S o l$ state after [OutPhL Time] $\alpha d t$ time. Catch on fly is possible as soon as the drive is in stand by output cut [Output cut] $S o l$ state.

[OutPhaseLoss Delay] $\alpha d t$

Output (motor) phase loss detection time.

Time delay for taking the [OutPhaseLoss Assign] $\alpha P L$ detected error into account.

Setting 	Description
0.5...10 s	Setting range Factory setting: 0.5 s

[Input phase loss] , P L - Menu**Access**

[Complete settings] → [Error/Warning handling] → [Input phase loss]

[InPhaseLoss Assign] , P L ★

Loss of input phase error response.

If one supply mains phase is missing and if this leads to performance decrease, an **[Input phase loss] P H F** error is triggered.

If 2 or 3 supply mains phases are missing, the drive operate until an **[Supply Mains UnderV] u 5 F** error is triggered.

This parameter can only be accessed on ATV930 and ATV95●, and if **[DC Bus Source Type] d C b 5** is not configured.

This parameter is forced to **[Ignore] n o** if the drive is connected to a DC bus (i.e. in multi-drive configuration with **[DC Bus Source Type] d C b 5** configured).

On drive system (ATV960, ATV980) and APM (ATV9A0, ATV9B0, ATV9L0), this parameter is forced to **[Freewheel] y E 5**.

Setting	Code / Value	Description
[Ignore]	n o	The input phase loss monitoring function is disabled to be used when the drive is supplied via a single-phase supply or by the DC bus
[Freewheel]	y E 5	The drive stops in freewheel in case of a supply mains phase loss has been detected Factory setting

[4-20mA loss] L F L - Menu

Access

[Complete settings] → [Error/Warning handling] → [4-20mA loss]

[AI1 4-20mA Loss] L F L 1

Response to 4-20mA loss on AI1.

Drive behavior on AI1 4-20 event.

Setting	Code / Value	Description
[Ignore]	n o	Detected error ignored. This is the only possible configuration if [AI1 min. value] L r L 1 is not greater than 3 mA Factory setting
[Freewheel]	y e 5	Freewheel stop
[Per STT]	5 t t	Stop according to configuration of [Type of stop] 5 t t, without tripping. In this case, the error relay does not open and the drive is ready to restart as soon as the detected error disappears, according to the restart conditions of the active command channel (for example, according to [2/3-wire control] t c c and [2-wire type] t c t if control is via the terminals). Configuring a warning for this detected error is recommended (assigned to a digital output, for example) in order to indicate the cause of the stop
[fallback spd]	L F F	Change to fallback speed, maintained as long as the detected error persists and the run command has not been removed ⁽¹⁾
[Spd maint.]	r L 5	The drive maintains the speed being applied when the detected error occurred, as long as the detected error is active and the run command has not been removed ⁽¹⁾
[Ramp stop]	r n P	Stop on ramp
[Fast stop]	F 5 t	Fast stop
[DC injection]	d c ,	DC injection stop. This type of stop cannot be used with some other functions
(1) Because, in this case, the detected error does not trigger a stop, it is advisable to assign a relay or digital output to its indication.		

[AI3 4-20mA loss] L F L 3

Response to 4-20mA loss on AI3.

Drive behavior on AI3 4-20 event.

Identical to [AI1 4-20mA Loss] L F L 1

[AI4 4-20mA loss] L F L 4★

Response to 4-20mA loss on AI4.

Drive behavior on AI4 4-20 event.

Identical to [AI1 4-20mA Loss] L F L 1

This parameter can be accessed if VW3A3203 I/O extension module has been inserted.

[AI5 4-20mA loss] L F L 5★

Response to 4-20mA loss on AI5.

Drive behavior on AI5 4-20 event.

Identical to **[AI1 4-20mA Loss]** L F L I

This parameter can be accessed if VW3A3203 I/O extension module has been inserted.

[Fallback Speed] L F F ★

Fall back speed.

Setting	Description
0.0...599.0 Hz	Setting range Factory setting: 0.0 Hz

[Fallback speed] L F F - Menu**Access****[Complete settings] → [Error/Warning handling] → [Fallback speed]****[Fallback Speed] L F F**

Fall back speed.

Setting	Description
0.0...599.0 Hz	Setting range Factory setting: 0.0 Hz

[Fieldbus monitoring] 5 5 5 - Menu

Access

[Complete settings] → [Error/Warning handling] → [Fieldbus monitoring]

[Modbus Error Resp] 5 5 5

Response to Modbus interruption.

⚠ WARNING	
LOSS OF CONTROL	
If this parameter is set to [Ignore] NO, Modbus communication monitoring is disabled.	
<ul style="list-style-type: none"> • Only use this setting after a thorough risk assessment in compliance with all regulations and standards that apply to the device and to the application. • Only use this setting for tests during commissioning. • Verify that communication monitoring has been re-enabled before completing the commissioning procedure and performing the final commissioning test. 	
Failure to follow these instructions can result in death, serious injury, or equipment damage.	

Behavior of the drive in the event of a communication interruption with integrated Modbus.

Setting	Code / Value	Description
[Ignore]	n o	Detected error ignored
[Freewheel]	y e s	Freewheel stop Factory setting
[Per STT]	5 5 5	Stop according to configuration of [Type of stop] 5 5 5, without tripping. In this case, the error relay does not open and the drive is ready to restart as soon as the detected error disappears, according to the restart conditions of the active command channel (for example, according to [2/3-wire control] 5 5 5 and [2-wire type] 5 5 5 if control is via the terminals) ⁽¹⁾
[fallback spd]	L F F	Change to fallback speed, maintained as long as the detected error persists and the run command has not been removed ⁽¹⁾
[Spd maint.]	r L S	The drive maintains the speed being applied when the detected error occurred, as long as the detected error is active and the run command has not been removed ⁽¹⁾
[Ramp stop]	r n P	Stop on ramp
[Fast stop]	F 5 5	Fast stop
[DC injection]	d C ,	DC injection stop. This type of stop cannot be used with some other functions
(1) Because, in this case, the detected error does not trigger a stop, it is advisable to assign a relay or digital output to its indication.		

[Fallback Speed] L F F

Fall back speed.

Setting	Description
0.0...599.0 Hz	Setting range Factory setting: 0.0 Hz

[Fallback Channel] R F F L

Fieldbus communication loss fallback channel.

Automatic fallback behavior in case of fieldbus communication interruption.

For more information about this parameter refer to [Fallback Channel] R F F L ,
page 546.

[Embedded Modbus TCP] 5 5 5 - Menu**Access**

[Complete settings] → [Error/Warning handling] → [Embedded Modbus TCP]

[Eth Error Response] 5 5 5 5

Ethernet error response.

⚠ WARNING	
LOSS OF CONTROL	
If this parameter is set to [Ignore] NO , Ethernet communication monitoring is disabled.	
<ul style="list-style-type: none"> • Only use this setting after a thorough risk assessment in compliance with all regulations and standards that apply to the device and to the application. • Only use this setting for tests during commissioning. • Verify that communication monitoring has been re-enabled before completing the commissioning procedure and performing the final commissioning test. 	
Failure to follow these instructions can result in death, serious injury, or equipment damage.	

The error response to a communication interruption is effective if the communication channel is involved in the active command channel.

Setting	Code / Value	Description
[Ignore]	NO	Detected error ignored
[Freewheel]	YES	Freewheel stop Factory setting
[Per STT]	5 5 5	Stop according to configuration of [Type of stop] 5 5 5 , without tripping. In this case, the error relay does not open and the drive is ready to restart as soon as the detected error disappears, according to the restart conditions of the active command channel (for example, according to [2/3-wire control] 5 5 5 and [2-wire type] 5 5 5 if control is via the terminals) ⁽¹⁾
[fallback spd]	FFF	Change to fallback speed, maintained as long as the detected error persists and the run command has not been removed ⁽¹⁾
[Spd maint.]	RLS	The drive maintains the speed being applied when the detected error occurred, as long as the detected error is active and the run command has not been removed ⁽¹⁾
[Ramp stop]	RPP	Stop on ramp
[Fast stop]	F5 5	Fast stop
[DC injection]	DCI	DC injection stop. This type of stop cannot be used with some other functions
(1) Because, in this case, the detected error does not trigger a stop, it is advisable to assign a relay or digital output to its indication.		

[Fallback Speed] L F F ★

Fall back speed.

Setting	Description
0.0...599.0 Hz	Setting range Factory setting: 0.0 Hz

[Fallback Channel] *R F F L*

Fieldbus communication loss fallback channel.

Automatic fallback behavior in case of fieldbus communication interruption.

For more information about this parameter refer to **[Fallback Channel] *R F F L***, page 546.

[Communication module] 5 5 - Menu

Access

[Complete settings] → [Error/Warning handling] → [Communication module]

[Fieldbus Interrupt Resp] 5 5 5

▲ WARNING**LOSS OF CONTROL**

If this parameter is set to **[Ignore]** NO, fieldbus module communication monitoring is disabled.

- Only use this setting after a thorough risk assessment in compliance with all regulations and standards that apply to the device and to the application.
- Only use this setting for tests during commissioning.
- Verify that communication monitoring has been re-enabled before completing the commissioning procedure and performing the final commissioning test.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Response to fieldbus module communication interruption.

Setting	Code / Value	Description
[Ignore]	NO	Detected error ignored
[Freewheel]	YES	Freewheel stop Factory setting
[Per STT]	5 5 5	Stop according to configuration of [Type of stop] 5 5 5, without tripping. In this case, the error relay does not open and the drive is ready to restart as soon as the detected error disappears, according to the restart conditions of the active command channel (for example, according to [2/3-wire control] 5 5 5 and [2-wire type] 5 5 5 if control is via the terminals) ⁽¹⁾
[fallback spd]	FFF	Change to fallback speed, maintained as long as the detected error persists and the run command has not been removed ⁽¹⁾
[Spd maint.]	r L S	The drive maintains the speed being applied when the detected error occurred, as long as the detected error is active and the run command has not been removed ⁽¹⁾
[Ramp stop]	r PP	Stop on ramp
[Fast stop]	F S 5	Fast stop
[DC injection]	d C ,	DC injection stop. This type of stop cannot be used with some other functions

(1) Because, in this case, the detected error does not trigger a stop, it is advisable to assign a relay or digital output to its indication.

[CANopen Error Resp] L L L

▲ WARNING
<p>LOSS OF CONTROL</p> <p>If this parameter is set to [Ignore] NO, CANopen communication monitoring is disabled.</p> <ul style="list-style-type: none"> • Only use this setting after a thorough risk assessment in compliance with all regulations and standards that apply to the device and to the application. • Only use this setting for tests during commissioning. • Verify that communication monitoring has been re-enabled before completing the commissioning procedure and performing the final commissioning test. <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p>

Response to CANopen error.

Behavior of the drive in the event of a communication interruption with CANopen®.

Possible settings: Identical to [Fieldbus Interrupt Resp] L L L .

Factory setting: [Freewheel Stop] 4 E 5

[Eth Error Response] E L H L

▲ WARNING
<p>LOSS OF CONTROL</p> <p>If this parameter is set to [Ignore] NO, Ethernet communication monitoring is disabled.</p> <ul style="list-style-type: none"> • Only use this setting after a thorough risk assessment in compliance with all regulations and standards that apply to the device and to the application. • Only use this setting for tests during commissioning. • Verify that communication monitoring has been re-enabled before completing the commissioning procedure and performing the final commissioning test. <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p>

Response to Ethernet error.

The error response to a communication interruption is effective if the communication channel is involved in the active command channel.

Possible settings: Identical to [Fieldbus Interrupt Resp] L L L .

Factory setting: [Freewheel Stop] 4 E 5

[Fallback Speed] L F F ★

Fall back speed.

Setting	Description
0.0...599.0 Hz	Setting range Factory setting: 0.0 Hz

[Fallback Channel] R F F L

Fieldbus communication loss fallback channel.

Automatic fallback behavior in case of fieldbus communication interruption.

If this feature is enabled, in case of communication interruption, **[Freq Switch Assign]** r F C and **[Command Switching]** C C 5 are both forced to channel 1 or channel 2 (depending on **[Fallback Channel]** R F F L configuration) while the communication interruption is active. During this fallback behavior **[Fallback Channel]** R F F L warning remains active.

It is advisable to not use continuously the fallback mode. The cause of the communication interruption must be analyzed and cleared to switch back to normal operation using fieldbus.

This parameter can be accessed if **[Access Level]** L R C is set to **[Expert]** E P r .

This feature is incompatible with 2-wire control on level (i.e. this parameter is forced to **[Not Active]** n o if **[2-wire Type]** E C E is set to **[Level]** L E L or **[Level With Fwd Priority]** P F o).

Setting	Code / Value	Description
[Not Active]	n o	Feature disabled. ⁽¹⁾ Factory setting
[Fallback To CH1]	C H 1	Fallback to channel 1. ⁽²⁾
[Fallback To CH2]	C H 2	Fallback to channel 2. ⁽²⁾

⁽¹⁾: If this parameter is switched back to **[Not Active]** n o , verify that the settings of the parameters listed below are configured accordingly with the application requirements.

⁽²⁾: According to the channel switched on in case of communication interruption, the related communication monitoring parameters must be disabled manually.

List of parameters:

- **[Modbus Error Resp]** S L L ,
- **[Fieldbus Interrupt Resp]** C L L ,
- **[CANopen Error Resp]** C o L ,
- **[Eth Error Response]** E E H F .

[Undervoltage handling] *U 5 b - Menu*

Access

[Complete settings] → [Error/Warning handling] → [Undervoltage handling]

[Undervoltage Resp] *U 5 b*

Response to undervoltage.

Setting	Code / Value	Description
[Error Triggered]	0	The drive triggers an error (the detected error relay assigned to [Operating State Fault] <i>F L E</i> will be opened) Factory setting
[Error Triggered w/o Relay]	1	The drive triggers an error (the detected error relay assigned to [Operating State Fault] <i>F L E</i> remains closed)
[Warning Triggered]	2	The warning and detected error relay remain closed. The warning can be assigned to a digital output or a relay

[Mains Voltage] *U r E 5*

Rated voltage of the mains supply in Vac.

The factory setting value of this parameter depends of drive rating.

Settings	Code / Value	Description
[200 Vac]	2 0 0	200 Vac
[220 Vac]	2 2 0	220 Vac
[230 Vac]	2 3 0	230 Vac
[240 Vac]	2 4 0	240 Vac
[380 Vac]	3 8 0	380 Vac
[400 Vac]	4 0 0	400 Vac
[415 Vac]	4 1 5	415 Vac
[440 Vac]	4 4 0	440 Vac
[460 Vac]	4 6 0	460 Vac
[480 Vac]	4 8 0	480 Vac
[525 Vac]	5 2 5	525 Vac
[575 Vac]	5 7 5	575 Vac
[600 Vac]	6 0 0	600 Vac
[690 Vac]	6 9 0	690 Vac

[Undervoltage Level] *U 5 L*

Undervoltage level.

The factory setting is determined by the drive voltage rating.

Setting	Description
100...354 Vac	Setting range, according to drive rating Factory setting: According to drive rating

[UnderVolt Timeout] 5 5 5

Undervoltage timeout.

Setting	Description
0.2...999.9 s	Setting range Factory setting: 0.2 s

[Stop Type PLoss] 5 5 5 P

Controlled stop on power loss.

Behavior in the event of the undervoltage prevention level being reached.

Setting	Code / Value	Description
[No]	n o	No action Factory setting
[DC Maintain]	n n 5	This stop mode uses the inertia of the application to maintain the control block powered, and thus to keep operational I/O state and fieldbus link as long as possible.
[Ramp stop]	r n P	Stop following an adjustable deceleration ramp [Max stop time] 5 5 n in order to help to prevent from uncontrolled stop of the application.
[Freewheel Stop]	L n F	Lock (freewheel stop) without triggering an error

[UnderV. Restart Tm] 5 5 n ★

Undervoltage restart time.

This parameter can be accessed if **[CtrlStopPLoss] 5 5 P** is set to **[Ramp stop] r n P**.

The time delay before authorizing the restart after a complete stop for **[CtrlStopPLoss] 5 5 P** is set to **[Ramp stop] r n P** if the voltage has returned to normal.

Setting ()	Description
1.0...999.9 s	Setting range Factory setting: 1.0 s

[Prevention Level] 5 P L ★

Undervoltage prevention level.

This parameter can be accessed if **[CtrlStopPLoss] 5 5 P** is set to **[No] n o**.

The adjustment range and factory setting are determined by the drive voltage rating and the **[Mains Voltage] 5 r E 5** value.

Setting	Description
141...414 V	Setting range Factory setting: According to drive rating

[Max Stop Time] 5 5 n ★

Maximum stop time.

This parameter can be accessed if [CtrlStopPLoss] 5 5 P is set to [Ramp stop] 5 5 P.

This parameter defines the deceleration ramp time in case of mains loss. During this controlled stop, the drive is powered thanks to the inertia of the application, the motor is in generator mode. It is recommended to verify that the deceleration set is compatible with the application inertia.

Setting ()	Description
0.01...60.00 s	Setting range Factory setting: 1.00 s

[DC Bus Maintain Time] 5 5 5 ★

DC bus maintain time.

This parameter can be accessed if [CtrlStopPLoss] 5 5 P is set to [DC Maintain] 5 5 5.

Setting ()	Description
1...9999 s	Setting range Factory setting: 9999 s

[Ground Fault] *G r F L* - Menu

Access

[Complete settings] → [Error/Warning handling] → [Ground Fault]

About This Menu

This menu can be accessed if [Access Level] is set to [Expert] *E P r*

If the internal ground fault detection [Ground Fault] *G r F L* causes unwanted results in your application, it is possible to substitute the internal ground fault detection by an appropriate external ground fault monitoring system. Setting the parameter [Ground Fault] *G r F L* to [No] *n o* or to a percentage value of the nominal current of the drive disables the internal ground fault detection of the drive or reduces its effectiveness. Therefore, you must install an external ground fault detection system that is able to reliably detect ground faults.

⚠ DANGER

GROUND FAULT MONITORING DISABLED

- Only set the parameter [Ground Fault] *G r F L* to [No] *n o* or to a percentage value of the nominal current of the drive after a thorough risk assessment in compliance with all regulations and standards that apply to the device and to the application.
- Implement an alternative, external ground fault monitoring function that allows for an adequate, equivalent response to a ground fault of the drive in compliance with all applicable regulations and standards as well as the risk assessment.
- Commission and test the system with all monitoring functions enabled.
- During commissioning, verify that the alternative, external ground fault detection system properly detects any type of ground faults by performing tests and simulations in a controlled environment under controlled conditions.

Failure to follow these instructions will result in death or serious injury.

[Ground Fault Activation] *G r F L*

Ground fault error response.

NOTE: The setting of this parameter is taken into account after a product restart.

Setting	Code / Value	Description
[No]	<i>n o</i>	Disables error detection
[Yes]	<i>y e s</i>	Use product internal value. Around 25% of the drive nominal current. Factory setting
0.0...100.0%	—	Setting range, in % of the drive nominal current

[Motor thermal monit] E H E - Menu

Access

[Complete settings] → [Error/Warning handling] → [Motor thermal monit]


About this Menu

Motor thermal protection by calculating the I^2t .


NOTE: The motor thermal state is memorized when the drive is switched off. The power-off time is used to calculate the motor thermal state at the next startup.

- Self-cooled motors: The trigger curves depend on the motor frequency.
- Forced-cooled motors: Only the 50 Hz trigger curves needs to be considered, regardless of the motor frequency.

Below a curve for 50Hz motor.

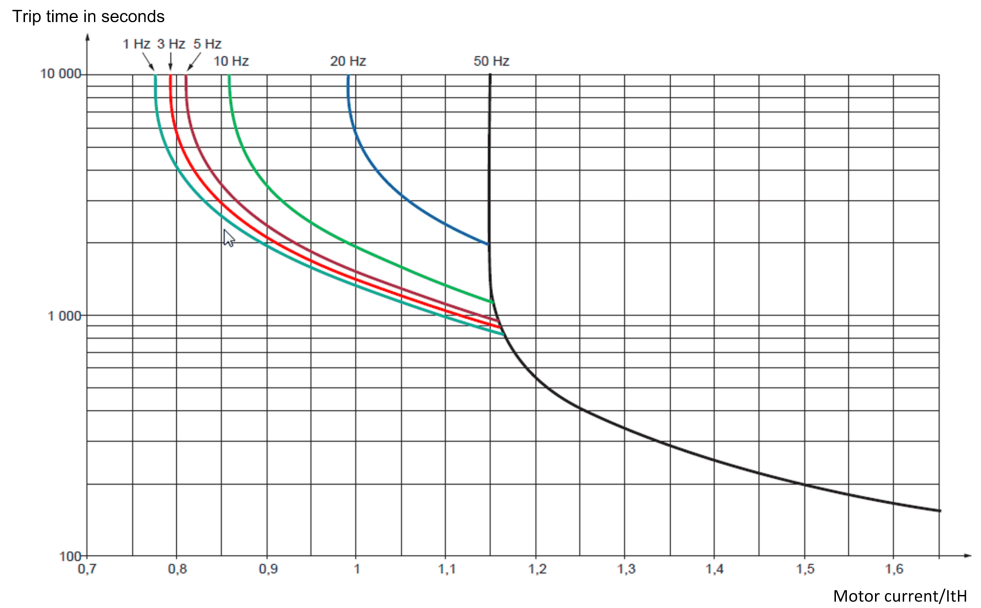

Below a curve for 60Hz motor.

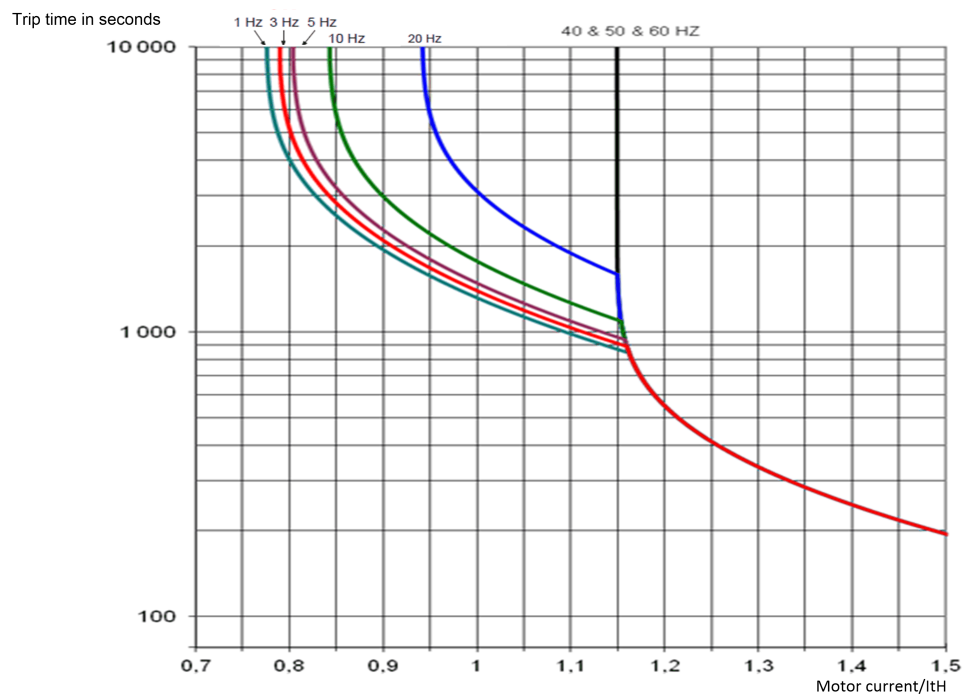

[Motor Th Current] , E H

Motor thermal monitoring current to be set to the rated current indicated on the nameplate.

Setting (°)	Description
0.2...1.5_In ⁽¹⁾	Setting range Factory setting: According to drive rating
(1) Corresponding to the rated drive current indicated in the installation manual and on the drive nameplate.	

[Motor Thermal Mode] E H E

Motor thermal monitoring mode.

NOTE: An error is detected when the thermal state reaches 118% of the rated state and reactivation occurs when the state falls back below 100%.

Setting	Code / Value	Description
[No]	n o	No thermal monitoring
[Self cooled]	F C L	Self ventilated motor Factory setting
[Force-cool]	F C L	Fan-cooled motor

[Encoder monitoring] S d d - Menu

Access

[Complete settings] → [Error/Warning handling] → [Encoder monitoring]

[Load slip detection] S d d

Load slipping monitoring function.

Setting	Code / Value	Description
[No]	n o	No error triggered. The warning may be assigned to a digital output or a relay Factory setting
[Yes]	y e s	Error triggered. [Load slip detection] S d d is set to [Yes] y e s if [Motor control type] C E E is set to [FVC] F V C or [Sync.CL] F S Y. The [Load slipping] R n F error is triggered by comparing the ramp output and the speed feedback, and is effective for speeds greater than 10% of the [Nominal Motor Freq] F r S. In the event of an error is triggered, the drive will stop in freewheel, and if the brake logic control function has been configured, the brake command will be set to 0.

[Encoder Coupling Monit] E C C ★

Encoder coupling monitoring.

This parameter can be accessed if [Encoder usage] E n u is not set to [No] n o.

Setting	Code / Value	Description
[No]	n o	Error not monitored Factory setting
[Yes]	y e s	Error monitored. If the brake logic control function has been configured, the factory setting changes to [Yes] y e s. [Encoder Coupling Monit] E C C set to [Yes] y e s is only possible if: <ul style="list-style-type: none"> • [Load slip detection] S d d is set to [Yes] y e s, and • [Encoder usage] E n u is not set to [NO] n o, and • [Brake assignment] b L C is not set to [No] n o The error monitored is the break in the mechanical coupling of the encoder. In the event of an error, the drive will switch to a freewheel stop, and if the brake logic control function has been configured, the brake command will be released.

[Encoder check time] E C E ★

Encoder check time.

This parameter can be accessed if:

- [Encoder usage] E n u is not set to [No] n o, and
- [Encoder Coupling Monit] E C C is not set to [No] n o.

Setting ()	Description
2.0...10.0 s	Setting range Factory setting: 2.0 s

[Braking Resistor monitor] $b r P$ - Menu**Access**

[Complete settings] \rightarrow [Error/Warning handling] \rightarrow [Braking Resistor monitor]

About This Menu

This menu can be accessed if the drive embeds a braking transistor (refer to the catalog, page 15).

This menu can be accessed if the Drive System is built in the variant with Braking Unit Option (BUO).

This function is used to monitor the thermal state of the brake resistors.

The calculation used for the monitoring estimates the overall thermal state of all the brake resistors. The brake resistor monitoring function does not replace the thermal contact monitoring of each managed braking resistor. This function does not monitor the IGBT, the short circuit and the presence of the braking resistor(s). The internal calculation uses the characteristics of the equivalent braking resistor such as the time constant, the equivalent power and the rated value of the resistor. Refer to the braking resistor supplier to gather the information. See for example the following table:

catalog number	time constant (in s)	catalog number	time constant (in s)	catalog number	time constant (in s)
VW3A7730	23	VW3A7740	39	VW3A7750	74
VW3A7731	39	VW3A7741	50	VW3A7751	116
VW3A7732	36	VW3A7742	161	VW3A7752	94
VW3A7733	74	VW3A7743	140	VW3A7753	179
VW3A7734	94	VW3A7744	131	VW3A7754	227
VW3A7735	140	VW3A7745	167	VW3A7755	235
VW3A7736	104	VW3A7746	202	VW3A7756	271
VW3A7737	217	VW3A7747	236	VW3A7757	289
VW3A7738	283	VW3A7748	234		

Depending on the setting of [Braking Resistor Monitor] $b r o$, if [DBR thermal state] $t H b$ reaches 100 %, the error [Braking Resistor ovid] $b o F$ or the warning [BR Thermal Warning] $b o R$ is triggered.

[Braking Resistor Monitor] $b r o$

Braking resistor monitoring.

Setting	Code / Value	Description
[Ignore]	$n o$	No braking resistor monitoring (thereby preventing access to the other function parameters). Factory setting
[Warning]	$w e s$	The warning may be assigned to a logic output or a relay.
[Error]	$f l t$	Triggering a [Braking Resistor ovid] $b o F$ with locking of drive (freewheel stop).

[Braking Resistor Power] $b r P$ ★

Rated power of the resistor used.

Insert the total power of all installed braking resistors.

This parameter can be accessed if **[Braking Resistor Monit]** *b r o* is not set to **[No]** *n o*.

Setting (🔄)	Description
0.1...3,000.0 kW	Setting range Factory setting: 0.1 kW

[Braking Resistor Value] *b r v* ★

Rated value of the braking resistor in ohms.

This parameter can be accessed if **[Braking Resistor Monit]** *b r o* is not set to **[No]** *n o*.

Setting (🔄)	Description
0.1...200.0 Ohm	Setting range Factory setting: 0.1 Ohm

[Braking Resist T Constant] *b r t c* ★

Braking resistor time constant.

This parameter can be accessed if **[Braking Resistor Monit]** *b r o* is not set to **[No]** *n o*.

NOTE: The factory setting is changed to 80 s for Drive Systems.

Setting (🔄)	Description
0...200 s	Setting range Factory setting: 45 s

[DBR thermal state] *t h b*

Braking Resistor thermal state.

Read-only parameter.

At power on, the value is updated according to the time the drive has been powered off.

This parameter is expressed in % of the nominal power (**[Braking Resistor Power]** *b r P*).

Setting	Description
0...118%	Setting range Factory setting: _

[Torque or i lim. detect] 5 5 5 - Menu**Access**

[Complete settings] → [Error/Warning handling] → [Torque or I limit detect]

[Trq/I limit. stop] 5 5 5

Torque current limitation: behaviour configuration.

Setting	Code / Value	Description
[Ignore]	0 0	Detected error ignored Factory setting
[Freewheel Stop]	5 5 5	Freewheel stop
[Per STT]	5 5 5	Stop according to [Type of stop] 5 5 5 parameter but without an error triggered after stop
[Fallback Speed]	L F F	Change to fallback speed, maintained as long as the detected error persists and the run command has not been removed ⁽¹⁾
[Spd maintained]	r L S	Speed maintained as long as the detected error persists and the run command has not been removed ⁽¹⁾
[Ramp stop]	r P P	Stop on ramp
[Fast stop]	F 5 5	Fast stop
[DC injection]	d C ,	DC injection
¹ Because, in this case, the detected error does not trigger a stop, it is recommended to assign a relay or logic output to its indication.		

[Trq/I limit. time out] 5 5 5

Torque current limitation: [Torque Limitation Error] 5 5 5 error delay and [Torque Limit Reached] 5 5 5 warning delay.

Setting ()	Description
1...9,999 ms	Setting range Factory setting: 1,000 ms

[Drive overload monit] o b r - Menu

Access

[Complete settings] → [Error/Warning handling] → [Drive overload monit]

[DriveTemp ErrorResp] o H L

Drive overtemperature error response.

Setting	Code / Value	Description
[Ignore]	n o	Detected error ignored
[Freewheel]	9 E 5	Freewheel stop Factory setting
[Per STT]	5 5 5	Stop according to configuration of [Type of stop] 5 5 5, without tripping. In this case, the error relay does not open and the drive is ready to restart as soon as the detected error disappears, according to the restart conditions of the active command channel (for example, according to [2/3-wire control] 5 5 5 and [2-wire type] 5 5 5 if control is via the terminals) ⁽¹⁾
[fallback spd]	L F F	Change to fallback speed, maintained as long as the detected error persists and the run command has not been removed ⁽¹⁾
[Spd maint.]	r L 5	The drive maintains the speed being applied when the detected error occurred, as long as the detected error is active and the run command has not been removed ⁽¹⁾
[Ramp stop]	r P P	Stop on ramp
[Fast stop]	F 5 5	Fast stop
[DC injection]	d C ,	DC injection stop. This type of stop cannot be used with some other functions

(1) Because, in this case, the detected error does not trigger a stop, it is advisable to assign a relay or digital output to its indication.

[Drv Thermal Warning] 5 H A

Drive thermal state warning (for [Drv Therm Thd reached] 5 A d warning).

Setting ()	Description
0...118%	Setting range Factory setting: 100%

[Drive Overload Monit] 5 L o L

Drive overload monitoring activation.

NOTICE
<p>OVERHEATING</p> <p>If [Drive Overload Monit] TLOL is set to [Disabled] DIS, drive overheating monitoring is disabled.</p> <ul style="list-style-type: none"> Verify that the settings of this parameter do not result in equipment damage. <p>Failure to follow these instructions can result in equipment damage.</p>

NOTE: If [Drive Overload Monit] L_{OL} is set to [Reduce to I Nom Drive] L_{OL} , the drive will reduce, after the specified overload time, an overload current down to the drive nominal current. This function will not work for constant load applications. For all applications with increasing loads the drive will therefore operate on slightly reduced speed but without triggering an error.

This parameter is forced to [Disabled] d_{OL} if the function [High Start Current] L_{HSC} is enabled (set to [Yes] YES).

Setting	Code / Value	Description
[Disabled]	d_{OL}	Disabled. Factory setting
[Error Triggered]	L_{OLP}	Error triggered
[Reduce to I Nom Drive]	L_{OL}	The motor current is limited to drive nominal current. This setting can only be accessed if [Brake Assignment] b_{LC} is not assigned.

[Warn grp 1 definition] R 1 L - to [Warn grp 5 definition] R 5 L - Menus

Access

[Complete settings] → [Error/Warning handling] → [Warning groups config]
→ [Warn grp 1 definition] to [Warn grp 5 definition]

About This Menu

The following submenus group the warnings into 1 to 5 groups, each of which can be assigned to a relay or a digital output for remote signaling.

When one or a number of warnings selected in a group occur, this warning group is activated.

List of Warnings

The list of warning codes is available in the chapter "Diagnostics and Troubleshooting".

[Error/Warning Handling] C 5 W Π - menu**Access**

[Complete Settings] → [Error/Warning Handling]

About This Menu

Following parameters can be accessed on ATV●60, ATV●80, ATV●A0, ATV●B0, or ATV●L0, equipped with cabinet IO, and if **[Access Level] L R C** is set to **[Expert] E P r**.

[Cabinet I/O 24V Timeout] P 2 4 d

Cabinet I/O 24V missing error timeout

Settings	Description
[Warning] n o	Detected error ignored. [Cab I/O 24V Warn] P 2 4 C warning is triggered.
0...3,000 s (step: 1 s)	Delay before triggering a [Cab I/O 24V Error] P 2 4 C error after [Cab I/O 24V Warn] P 2 4 C warning has been triggered. Factory setting: 3 s

[Cabinet Overheat Resp] C H r

Cabinet Overheating Response.

This parameter is used to configure the response to **[Cabinet Overheat Error] C H F** error.

Setting	Code / Value	Description
[No]	n o	Ignored.
[Warning]	R L r Π	[Cabinet Overheat Warn] C H A warning is triggered and the drive remains in operation enable.
[Error]	F L E	The drive stops the application and [Cabinet Overheat Error] C H F error is triggered. Factory setting ⁽¹⁾
[Warning Then Error]	R L F L E	The drive remains in operation enable for 10 minutes (with [Cabinet Overheat Warn] C H A warning active) then [Cabinet Overheat Error] C H F error is triggered and the drive stops the application.

⁽¹⁾: The factory setting switches to **[Warning Then Error] R L F L E** with ATV●L0.

[ON lock settings] L K o n - Menu

Access

[Complete settings] → [Error/Warning Handling] → [ON lock settings]

About This Menu


The “On lock” function helps to prevent the drive to start if the system is not ready to switch-on by meanings of the monitoring of drive-related devices (such as external auxiliary contacts, control voltages, cubicle fans, door contacts).

All auxiliary contacts of the external devices, which need to be monitored, are connected in series to the digital input assigned to the "ON lock" function (using the parameter [ON Lock Assignment] L K o 5).

If the drive is not running, the drive remains locked in [Freewheel] n 5 E and [ON Lock Warning] L K o n is active until the locking event is resolved (i.e. until all monitored contacts connected to the digital input allows the drive to be ready).

If the drive is running and locking is triggered, an error and/or a warning is triggered according to the configuration of [ON Lock Response] L K o r .

Below an example with “ON lock” assigned to a digital input (low level):

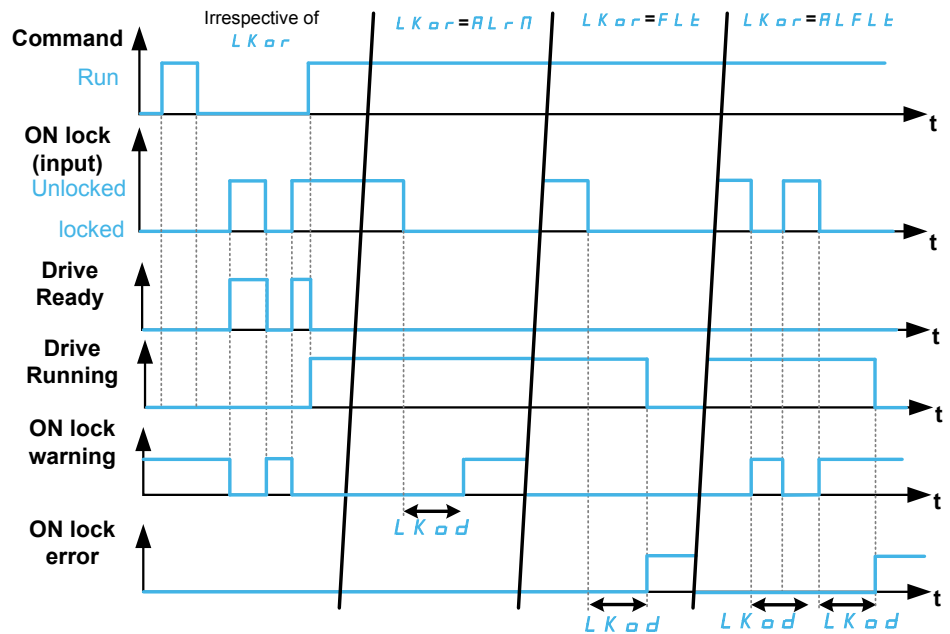

[ON Lock Assignment] L K o 5

On lock assignment.

On locking of the drive when the assigned digital input (high level) or bit switches to 1. With low level, on locking when the digital input switches to 0.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[DI1]...[DI8]	L , I ... L , B	Digital input DI1...DI8
[DI11]...[DI16]	L , I I ... L , I B	Digital input DI11...DI16 if VW3A3203 Extended I/O module has been inserted
[DI1 (Low level)]...[DI8 (Low level)]	L I L ... L B L	Digital input DI1...DI8 used at low level

Setting	Code / Value	Description
[DI11 (Low level)]...[DI16 (Low level)]	L 1 1 L ... L 1 6 L	Digital input DI11...DI16 used at low level if VW3A3203 Extended I/O module has been inserted
[CD00]... [CD15]	C d 0 0 ... C d 1 5	Bit x digital input ctrl word (e.g. virtual digital input CMD.00...CMD.15). NOTE: CD00...CD10 are only accessible with [Control Mode] L H L F set to [I/O Profile] i o .
[C101]... [C115]	C 1 0 1 ... C 1 1 5	Bit x Modbus ctrl word (e.g. Virtual digital input CMD1.01...CMD1.15 with integrated Modbus Serial) NOTE: C101...C110 are only accessible with [Control Mode] L H L F set to [I/O Profile] i o .
[C201]... [C215]	C 2 0 1 ... C 2 1 5	Bit x CANopen ctrl word (e.g. Virtual digital input CMD2.01...CMD2.15 with CANopen® fieldbus module) NOTE: C201...C210 are only accessible with [Control Mode] L H L F set to [I/O Profile] i o .
[C301]... [C315]	C 3 0 1 ... C 3 1 5	Bit x Com module ctrl word (e.g. Virtual digital input CMD3.01...CMD3.15 with fieldbus module) NOTE: C301...C310 are only accessible with [Control Mode] L H L F set to [I/O Profile] i o .
[C501]... [C515]	C 5 0 1 ... C 5 1 5	Bit x Ethernet ctrl word (e.g. Virtual digital input CMD3.01...CMD3.15 with Ethernet embedded) NOTE: C501...C510 are only accessible with [Control Mode] L H L F set to [I/O Profile] i o .
[DI52 (High level)]...[DI59 (High level)]	d 5 2 H ... d 5 9 H	Cabinet high level digital inputs NOTE: This selection can be accessed on ATV•60, ATV•80 equipped with Cabinet IO.
[DI52 (Low level)]...[DI59 (Low level)]	d 5 2 L ... d 5 9 L	Cabinet low level assignment digital inputs NOTE: This selection can be accessed on ATV•60, ATV•80 equipped with Cabinet IO.

[ON Lock Response] L K o r

On lock response.

This parameter is used to set the type of ON locking event response.

This parameter can be accessed if [ON Lock Assignment] L K o S is assigned.

Setting ()	Code / Value	Description
[Warning]	R L r n	Warning: if a locking event is detected while the drive is running, [ON Lock Warning] L K o n is triggered after the configured time [ON Lock Time Delay] L K o d . It is advisable to assign a relay or digital output to its indication. NOTE: The warning is cleared as soon as the locking event is resolved. Factory setting
[Error]	F L L	Error: if the locking event is detected while the drive is running, [ON Lock Error] L K o n is triggered after the configured time [ON Lock Time Delay] L K o d .
[Warning Then Error]	R L F L L	Warning then error with time delay: if the locking event is detected while the drive is running, [ON Lock Warning] L K o n is triggered and, after the configured time [ON Lock Time Delay] L K o d , [ON Lock Error] L K o n is triggered. NOTE: The warning is cleared as soon as the locking event is resolved.

[ON Lock Time Delay] L K o d

On lock time delay.

This parameter can be accessed if [ON Lock Assignment] L K o S is assigned.

Setting (↻)	Description
0.0...300.0 s (step: 0.1 s)	setting range Factory setting: 0.0 s

[Maintenance]

[Diagnostics] Menu

Access

[Complete settings] → [Maintenance] → [Diagnostics]

About This Menu

This menu allows you to make simple test sequences for diagnostics.

[FAN Diagnostics]

Diagnostics of internal fan(s).

This starts a test sequence.

NOTE: Fan diagnostics of internal fan(s) will be not-successful if the DC bus is not fully charged. This will be the case:

- on separate control (e.g. the control block is only supplied on 24V), or
- if the drive is in [Energy saving] mode (e.g. Stop and go function is active).

[LED Diagnostics]

Diagnostics of product LED(s).

This starts a test sequence.

[IGBT Diag w motor]

Diagnostics of product IGBT(s).

This will start a test sequence with the connected motor (open circuit/short-circuit).

[IGBT Diag w/o motor]

Diagnostics of product IGBT(s).

This starts a test sequence without the motor (short-circuit).

[Pump diagnostics]

Diagnostics of the cooling pump. This diagnostic can only be accessed with ATV•L0.

This will start a test sequence of the cooling pump. It cannot be performed if the drive is running.

[Drive warranty mgnt] dW n R - Menu

Access

[Complete settings] → [Maintenance] → [Drive warranty mgnt]

About This Menu

The product life cycle date is initialized during product manufacturing.

A [Life Cycle Warn 1] L C R 1 is triggered 2 months before the end of the warranty period. At the end of the warranty period a [Life Cycle Warn 2] L C R 2 is triggered. This function requires date and time data coming from Graphic Display Terminal or a time server configured through Ethernet.

[LifeCycle Warning] L C R C

Life cycle warning configuration.

Setting ()	Code / Value	Description
[No]	n o	No
[YES]	y e s	Yes Factory setting

[Warranty Expired] L C R d

Life cycle date.

End of warranty date (YYYY/MM/DD).

It can also be read via fieldbus communication. To convert the read value process as the following example.

Read value: 11679 → Binary conversion: **0010 1101 1001 1111** → Date: 2000 + **22/12/31=2022/12/31**

For more information such as its logic address, refer to the communication parameters file, page 15.

Setting	Description
YYYY/MM/DD	Setting range Factory setting: Read only.

[Customer event 1] C E 1 - Menu**Access**

[Complete settings] → [Maintenance] → [Customer events] → [Customer event 1]

About This Menu

This menu allows you to define customized customer events based on the time.

[Config Warning 1] C C R 1

Configuration of customer warning 1.

Setting	Code / Value	Description
[Not Configured]	n o	Not configured Factory setting
[Counter]	C P t	Counter
[Date And Time]	d t	Date and time

[Counter Limit 1] C C L 1

Configuration counter limit 1.

Setting	Description
0...4294967295 s	Setting range Factory setting: 0 s

[Counter Source 1] C C S 1

Configuration counter source 1.

Setting	Code / Value	Description
[Mains/ Control ON]	0	Mains or control supply on
[Mains Supply ON]	1	Mains supply on
[Drv In Run State]	2	Drive in running state Factory setting

[Current Counter 1] C C I

Current counter 1.

Setting	Description
0...4294967295 s	Setting range Factory setting: 0 s

[Date Time Warn 1] C d t 1★

Date time warning 1.

This parameter can be accessed with the Graphic Display Terminal only.

Setting ()	Description
hh:mm DD/MM/YYYY	Setting range Factory setting: 00:00 01/01/2000

[Customer event 2] C E 2 - to [Customer event 5] C E 5 - Menus

Access

[Complete settings] → [Maintenance] → [Customer events] → [Customer event 2] to [Customer event 5]

About This Menu

Identical to [Customer event 1] C E 1 - menu , page 566.

[Config Warning 2] C C A 2 to [Config Warning 5] C C A 5

Configuration of customer warning 2 to 5.

[Counter Limit 2] C C L 2 to [Counter Limit 5] C C L 5

Configuration counter limit 2 to 5.

[Counter Source 2] C C S 2 to [Counter Source 5] C C S 5

Configuration counter source 2 to 5.

[Current Counter 2] C C 2 to [Current Counter 5] C C 5

Current counter 2.

[Date Time Warn 2] C d E 2 to [Date Time Warn 5] C d E 5★

Date time warning 2 to 5.

This parameter can be accessed with the Graphic Display Terminal only.

[Customer events] C 4 E V - Menu**Access**

[Complete settings] → [Maintenance] → [Customer events]

[Warning Clearing] C A r

Customer warning clearing.

Setting ()	Code / Value	Description
[No Warning Clearing]	r 0	No warning clearing Factory setting
[Clear Event 1 Warning]	r A 1	Clear event 1 warning
[Clear Event 2 Warning]	r A 2	Clear event 2 warning
[Clear Event 3 Warning]	r A 3	Clear event 3 warning
[Clear Event 4 Warning]	r A 4	Clear event 4 warning
[Clear Event 5 Warning]	r A 5	Clear event 5 warning

[Fan management] *FRFR* - Menu

Access

[Complete settings] → [Maintenance] → [Fan management]

About This Menu

Fan speed and [Fan Operation Time] *FPbE* are monitored values.

An abnormal low speed or the fan trigger a warning [Fan Feedback Warning] *FFdR*. As soon as [Fan Operation Time] *FPbE* reach the predefined value of 45,000 hours, a warning [Fan Counter Warning] *FLER* is triggered.

[Fan Operation Time] *FPbE* counter can be set to 0 by using the [Counter Reset] *rPr* parameter.

Additional fan management on ATV960 and ATV980:

- If any of the cabinet fan is running at an abnormal low speed a warning [Cabinet Fan Fdbck Warn] *FFLR* is triggered.
- If [Cabinet Fan Oper Time] *FLER* has reached the predefined value of 30,000 hours, a warning [Cabinet Fan Counter Warn] *FLER* is triggered.

Additional fan management on ATV980 and ATV9B0:

- If any of the AFE fan bricks is running at an abnormal low speed the [AFE Fan Fdbck Warn] *FFbR* is triggered.
- If [AFE Fan Operation Time] *FbRE* has reached the predefined value of 45,000 hours, a warning [AFE Fan Counter Warn] *FLbR* is triggered.

[Fan Mode] *FFn*

Fan activation mode.

NOTE: For ATV960 and ATV9A0 and ATV980 and ATV9B0, this parameter is forced to [Standard] *Std*.

Setting ()	Code / Value	Description
[Standard]	<i>Std</i>	The operation of the fan is enabled when the motor is running. According to the drive rating, this could be the only available setting Factory setting
[Always]	<i>run</i>	The fan is always activated
[Never]	<i>StP</i>	If the software version is: <ul style="list-style-type: none"> • up to V1.6 (excluded), the fan of the drive is disabled. • V1.6 or higher, this selection has no effect. The operation of the fan is enabled when the motor is running.
[Economy]	<i>Eco</i>	The fan is activated only if necessary, according to the internal thermal state of the drive

NOTICE
<p>OVERHEATING</p> <p>Verify that the ambient temperature does not exceed 40 °C (104° F) if the fan is disabled.</p> <p>Failure to follow these instructions can result in equipment damage.</p>

If the software version is up to V1.6 (excluded) and the [Fan Mode] *FFn* is set to [Never] *StP*, the fan of the drive is disabled.

[Maintenance] C 5 P A - Menu**Access**

[Complete settings] → [Maintenance]

[Time Counter Reset] r P r

Time counter reset.

NOTE: The list of possible values depends on the product size.

Setting (Ⓢ)	Code / Value	Description
[No]	n o	No Factory setting
[Run Time Reset]	r t h	Run time reset
[Power ON Time Reset]	P t h	Power ON time reset
[Reset Fan Counter]	F t h	Reset fan counter
[Clear NSM]	n s m	Clear number of motor starts
[AFE Fan Operation Time]	F b r t	Fan operation time ⁽¹⁾
[Clear Cabinet Fan]	F c t	Clear cabinet fan operation time NOTE: This selection can be accessed on ATV960 and ATV980.
[Clear AFE Power ON Time]	b P t h	Clear AFE power ON time ⁽¹⁾
[Clear BRTH]	b r t h	Clear AFE run time ⁽¹⁾
[Clear AFE Nb. start]	b n s r	Clear AFE brick number of start ⁽¹⁾
1 This selection can be accessed on ATV980.		

[Cabinet I/O Function] C R b F -

[Monitoring circuit A] C n C R - to [Monitoring circuit D] C n C d - Menus

Access

[Complete settings] → [Cabinet I/O Function] → [Monitoring circuit A] to [Monitoring circuit D]

About These Menus

Identical to [Monitoring circuit A] C n C R - to [Monitoring circuit D] C n C d - Menus, page 532.

[Cabinet circuit A] C C n R - Menu

Access

[Complete settings] → [Cabinet I/O functions] → [Cabinet circuit A]

About This Menu

These functions can be used to manage warnings or detected errors inside the cabinet enclosure.

The cabinet circuits give the possibility to manage 2 levels of monitoring:

- A Warning level: the drive triggers an event without stopping the application.
If [CabinetCircuit ErrorResp] C F r X is set to [Ignore] n o the [CabinetCircuit Warn] C w X will be triggered.
- An Error level: the drive triggers an event and stops the application.
If [CabinetCircuit ErrorResp] C F r X is set to a different value [CabinetCircuit Error] C F X will be triggered.

Identical to [Monitoring circuit A] C n C R - menu

[CabinetCircuit A Assign] C F R R

Cabinet circuit A assignment

[CabinetCircuit A Monitor] C F n R★

Cabinet circuit A error monitoring type

[CabinetCircuit A Delay] C F d R★

Cabinet circuit A delay after Run

[CabinetCircuit A ErrorResp] C F r R★

Response to Cabinet circuit A error

[Cabinet circuit B] 5.5 - Menu

Access

[Complete settings] → [Cabinet I/O functions] → [Cabinet circuit B]

About This Menu

Identical to [Cabinet circuit A] 5.4 - menu

[CabinetCircuit B Assign] 5.5.1

Cabinet circuit B assignment

[CabinetCircuit B Monitor] 5.5.2★

Cabinet circuit B error monitoring type

[CabinetCircuit B Delay] 5.5.3★

Cabinet circuit B delay after Run

[CabinetCircuit B ErrorResp] 5.5.4★

Response to Cabinet circuit B error

[Cabinet circuit C] 5.6 - Menu

Access

[Complete settings] → [Cabinet I/O functions] → [Cabinet circuit C]

About This Menu

Identical to [Cabinet circuit A] 5.4 - menu

[CabinetCircuit C Assign] 5.6.1

Cabinet circuit C assignment

[CabinetCircuit C Monitor] 5.6.2★

Cabinet circuit C error monitoring type

[CabinetCircuit C Delay] 5.6.3★

Cabinet circuit C delay after Run

[CabinetCircuit C ErrorResp] 5.6.4★

Response to Cabinet circuit C error

[Motor winding A] C E , R - Menu**Access**

[Complete settings] → [Cabinet I/O functions] → [Motor winding A]

About This Menu

These functions will be mainly used with additional thermal relays to monitor the motor winding temperature.

These functions give the possibility to manage 2 levels of monitoring:

- A Warning level: the drive triggers an event without stopping the application.
If **[MotorWinding/Bearing ErrorResp] E F r X** is set to **[Ignore] n o** the **[MotorWinding/Bearing Warn] C W X** will be triggered.
- An Error level: the drive triggers an event and stops the application.
If **[MotorWinding/Bearing ErrorResp] E F r X** is set to a different value **[MotorWinding/Bearing Error] E F X** will be triggered.

Identical to **[Monitoring circuit A] C n C R - menu**

[MotorWinding A Assign] E F R R

Motor winding A assignment

[MotorWinding A Monitor] E F n R ★

Motor winding A monitoring

[MotorWinding A Delay] E F d R ★

Motor winding A delay after Run

[MotorWinding A ErrorResp] E F r R ★

Response to Motor winding A error

[Motor winding B] 5 - Menu

Access

[Complete settings] → [Cabinet I/O functions] → [Motor winding B]

About This Menu

Identical to [Motor winding A] 5 - menu , page 573

[MotorWinding B Assign] 5 F B

Motor winding B assignment

[MotorWinding B Monitor] 5 F B★

Motor winding B monitoring

[MotorWinding B Delay] 5 F d B★

Motor winding B delay after Run

[MotorWinding B ErrorResp] 5 F r B★

Response to Motor winding B error

[Motor bearing A] 5 - Menu

Access

[Complete settings] → [Cabinet I/O functions] → [Motor bearing A]

About This Menu

Identical to [Motor winding A] 5 - menu , page 573

[MotorBearing A Assign] 5 F A

Motor bearing A assignment

[MotorBearing A Monitor] 5 F A★

Motor winding A monitoring

[MotorBearing A Delay] 5 F d A★

Motor bearing A delay after Run

[MotorBearing A ErrorResp] 5 F r A★

Response to Motor bearing A error

[Motor bearing B] *U U , d -* Menu

Access

[Complete settings] → [Cabinet I/O functions] → [Motor bearing B]

About This Menu

Identical to [Motor winding A] *U U , A -* menu , page 573

[MotorBearing B Assign] *U F A d*

Motor bearing B assignment

[MotorBearing B Monitor] *U F A d*★

Motor winding B monitoring

[MotorBearing B Delay] *U F d d*★

Motor bearing B delay after Run

[MotorBearing B ErrorResp] *U F r d*★

Response to Motor bearing B error

[Circuit breaker] 5 5 K - Menu**Access**

[Complete settings] → [Cabinet I/O functions] → [Circuit breaker]

About This Menu

This menu is used to control the circuit breaker behavior

This menu can be accessed on ATV660 or ATV680, equipped with Cabinet IO, and if [Access Level] 5 5 is set to [Expert] 5 5.

[CB start pulse activated] 5 5 E P

Circuit breaker start pulse assignment

Setting	Code / Value	Description
[R61 Assignment]...[R66 Assignment]	5 5 1...5 5 5	Cabinet I/O relays outputs

[CB stop pulse activated] 5 5 d P

Circuit breakers stop pulse assignment

Setting	Code / Value	Description
[R61 Assignment]...[R66 Assignment]	5 5 1...5 5 5	Cabinet I/O relays outputs

[Drive Lock] 5 5 5

Drive lock assignment.

This parameter can be accessed if:

- [Mains Contactor] 5 5 5 is assigned, or
- [CB start pulse activated] 5 5 E P is assigned, or
- [CB stop pulse activated] 5 5 d P is assigned.

The drive locks when the assigned input or bit changes to 0.

Setting	Code / Value	Description
[Not Assigned]	0 0	Not assigned Factory setting
[CD00]... [CD10]	5 d 0 0... 5 d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] 5 5 configuration
[CD11]... [CD15]	5 d 1 1... 5 d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	5 1 0 1... 5 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] 5 5 configuration
[C111]... [C115]	5 1 1 1... 5 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	5 2 0 1... 5 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] 5 5 configuration
[C211]... [C215]	5 2 1 1... 5 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration

Setting	Code / Value	Description
[C301]... [C310]	C 3 0 1 ... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] configuration
[C311]... [C315]	C 3 1 1 ... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration
[C501]... [C510]	C 5 0 1 ... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] configuration
[C511]... [C515]	C 5 1 1 ... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration
[DI1 (Low level)]...[DI8 (Low level)]	L 1 L ... L 8 L	Digital input DI1...DI8 used at low level
[DI11 (Low level)]...[DI16 (Low level)]	L 1 1 L ... L 1 6 L	Digital input DI11...DI16 used at low level if VW3A3203 I/O extension module has been inserted
[DI52 (Low level)]...[DI59 (Low level)]	d 5 2 L ... d 5 9 L	Cabinet low level assignment digital inputs NOTE: This selection can be accessed on ATV960, ATV980 equipped with Cabinet IO.

[CB status] C b S

Circuit breaker status

If **[CB start pulse activated]** C b E P and **[CB stop pulse activated]** C b d P are not configured the **[CB Invalid Config]** C b C , status is displayed. Both values must be set in order to configure the circuit breaker.

The **[CB stop disable]** C b S d status is displayed until **[CB Disable stop delay]** C b E S is reached.

Setting	Code / Value	Description
[CB Not Configured]	n o	Circuit breaker not configured
[CB Invalid Config]	C b C ,	Circuit breaker invalid configuration
[CB In Start Pulse]	C b S E	Circuit breaker in start pulse
[CB Not Closed]	C b n C	Circuit breaker not closed
[CB Open]	C b o S	Circuit breaker in open
[CB In Stop Pulse]	C b S P	Circuit breaker in stop pulse
[CB Not Open]	C b n o	Circuit breaker not open
[CB Closed]	C b C S	Circuit breaker closed
[CB stop disable]	C b S d	Circuit breaker stop is disable

[CB start pulse time] C b E I

Circuit Breaker start pulse time.

Setting	Description
0.1...60.0 s	Setting range Factory setting: 0.5 s

[CB stop pulse time] L b E 2

Circuit Breaker stop pulse time.

Identical to **[CB start pulse time] L b E 1**

[CB Switch-on delay] L b E 3

Circuit Breaker Switch-on delay.

This parameter is used to set a minimal delay between a star pulse and a stop pulse.

Identical to **[CB start pulse time] L b E 1**

[CB Switch-off delay] L b E 4

Circuit Breaker Switch-off delay.

This parameter is used to set a minimal delay between a stop pulse and a start pulse.

Identical to **[CB start pulse time] L b E 1**

[CB Disable stop delay] L b E 5

Circuit Breaker Disable stop delay.

Setting	Description
0.0...360.0 s	Setting range Factory setting: 60.0 s

[Mains V. time out] L C E

Monitoring time for closing of line contactor.

Setting	Description
1...999 s	Setting range Factory setting: 5 s

[CB Error Resp] L b 5 r

The Circuit breaker gives the possibility to manage 2 levels of monitoring:

- A Warning level: the drive triggers an event without stopping the application.
- An Error level: the drive triggers an event and stops the application.

If after a start command, no voltage is detected after the **[Mains V. time out] L C E**, the **[CB Error Resp] L b 5 r** is triggered and the **[CB Not Closed] L b n C** status is displayed.

If after a stop command, the voltage is still detected after **[Mains V. time out] L C E**, the **[CB Error Resp] L b 5 r** is triggered and the **[CB Not Open] L b n O** status is displayed.

Setting	Code / Value	Description
[Error]	<i>F L E</i>	The drive stops the application Factory setting
[Warning]	<i>W A r</i>	A warning is triggered and the drive remains in operation enable.

[Cabinet I/O functions] C R B F - menu

Access

[Complete Settings] → [Cabinet I/O functions]

About This Menu

This parameter can be accessed on ATV•60, ATV•80, ATV•A0, ATV•B0, or ATV•L0, equipped with cabinet IO, and if [Access Level] L R C is set to [Expert] E P r .

[Cabinet I/O 24V Timeout] P 2 4 d

Cabinet I/O 24V missing error timeout

Settings	Description
[Warning] n o	Detected error ignored. [Cab I/O 24V Warn] P 2 4 C warning is triggered.
0...3,000 s	Delay before triggering a [Cab I/O 24V Error] P 2 4 C error after [Cab I/O 24V Warn] P 2 4 C warning has been triggered. Factory setting: 3 s

[Cabinet Overheat Resp] C H r

Cabinet Overheating Response.

This parameter is used to configure the response to [Cabinet Overheat Error] C H F error.

Setting	Code / Value	Description
[No]	n o	Ignored.
[Warning]	R L r n	[Cabinet Overheat Warn] C H R warning is triggered and the drive remains in operation enable.
[Error]	F L E	The drive stops the application and [Cabinet Overheat Error] C H F error is triggered. Factory setting ⁽¹⁾
[Warning Then Error]	R L F L E	The drive remains in operation enable for 10 minutes (with [Cabinet Overheat Warn] C H R warning active) then [Cabinet Overheat Error] C H F error is triggered and the drive stops the application.
⁽¹⁾ : The factory setting switches to [Warning Then Error] R L F L E with ATV•L0.		

[Communication] C o Π -

What's in This Chapter

[Modbus Fieldbus] Π d I - Menu	581
[Com. scanner input] , C S - Menu.....	583
[Com. scanner output] o C S - Menu	585
[Modbus HMI] Π d 2 - Menu.....	587
[Embd Eth Config] E t E - Menu.....	589
[Fast Device Replacement] F d r - Menu	590
[CANopen] C n o - Menu	592
[DeviceNet] d n C - Menu	592
[Profibus] P b C - Menu	592
[Profinet] P n C - Menu.....	593
[EtherCAT Module] E t C - Menu	593
[Powerlink] E P L - Menu.....	593

Introduction



[Communication] C o Π - menu presents the fieldbus submenus.

[Modbus Fieldbus] n d l - Menu

Access

[Communication] → [Comm parameters] → [Modbus SL] → [Modbus Fieldbus]

About This Menu

This menu is related to the Modbus serial communication port on the bottom of the control block.

Refer to the Modbus serial manual.

[Modbus Address] R d d

Drive Modbus address.

Setting	Description
[OFF] o F F ...247	Setting range Factory setting: [OFF] o F F

[Modbus add Com.C.] R n o C

Modbus address of COM option board

Setting	Description
[OFF] o F F ...247	Setting range Factory setting: [OFF] o F F

[Bd.RateModbus] t b r

Baud rate Modbus.

Setting	Code / Value	Description
[4800 bps]	4 K B	4,800 Bauds
[9600 bps]	9 K B	9,600 Bauds
[19200 bps]	1 9 K 2	19,200 Bauds Factory setting
[38.4 Kbps]	3 8 K 4	38,400 Bauds

[Term Word Order] t w o ★

Terminal Modbus: word order.

This parameter can be accessed if [Access Level] L R C is set to [Expert] E P r .

Setting	Code / Value	Description
[OFF]	o F F	Low word first
[ON]	o n	High word first Factory setting

[Modbus Format] E F 0

Modbus communication format.

Setting	Code / Value	Description
[8-O-1]	B 0 1	8 bits odd parity 1 stop bit
[8-E-1]	B E 1	8 bits even parity 1 stop bit Factory setting
[8-N-1]	B n 1	8 bits no parity 1 stop bit
[8-N-2]	B n 2	8 bits no parity 2 stop bits

[Modbus Timeout] E E 0

Modbus timeout.

Setting	Description
0.1 ...30.0 s	Setting range Factory setting: 10.s

[Mdb Com Stat] C 0 11 1

Modbus communication status.

Setting	Code / Value	Description
[r0t0]	r 0 E 0	Modbus no reception, no transmission
[r0t1]	r 0 E 1	Modbus no reception, transmission
[r1t0]	r 1 E 0	Modbus reception, no transmission
[r1t1]	r 1 E 1	Modbus reception and transmission

[Com. scanner input] , 5 - Menu

Access

[Communication] → [Comm parameters] → [Modbus SL] → [Modbus Fieldbus] → [Com. scanner input]

[Scan. IN1 address] 0 1 1 1

Address of the first input word.

Setting	Description
0...65535	Setting range Factory setting: 3201 (E L R)

[Scan. IN2 address] 0 1 1 2

Address of the second input word.

Setting	Description
0...65535	Setting range Factory setting: 8604 (r F r d)

[Scan. IN3 address] 0 1 1 3

Address of the third input word.

Setting	Description
0...65535	Setting range Factory setting: 0

[Scan. IN4 address] 0 1 1 4

Address of the fourth input word.

Identical to [Scan. IN3 address] 0 1 1 3.

[Scan. IN5 address] 0 1 1 5

Address of the fifth input word.

Identical to [Scan. IN3 address] 0 1 1 3.

[Scan. IN6 address] 0 1 1 6

Address of the sixth input word.

Identical to [Scan. IN3 address] 0 1 1 3.

[Scan. IN7 address] 0 1 1 7

Address of the seventh input word.

Identical to [Scan. IN3 address] 0 1 1 3.

[Scan. IN8 address] $\varepsilon \Pi R B$

Address of the eighth input word.

Identical to **[Scan. IN3 address]** $\varepsilon \Pi R \exists$.

[Com. scanner output] \square \square \square - Menu

Access

[Communication] → [Comm parameters] → [Modbus SL] → [Modbus Fieldbus] → [Com. scanner output]

[Scan.Out1 address] \square \square \square \square \square

Address of the first output word.

Setting	Description
0...65535	Setting range Factory setting: 8501(\square \square \square \square)

[Scan.Out2 address] \square \square \square \square \square

Address of the second output word.

Setting	Description
0...65535	Setting range Factory setting: 8602(\square \square \square \square)

[Scan.Out3 address] \square \square \square \square \square

Address of the third output word.

Setting	Description
0...65535	Setting range Factory setting: 0

[Scan.Out4 address] \square \square \square \square \square

Address of the fourth output word.

Identical to [Scan.Out3 address] \square \square \square \square \square .

[Scan.Out5 address] \square \square \square \square \square

Address of the fifth output word.

Identical to [Scan.Out3 address] \square \square \square \square \square .

[Scan.Out6 address] \square \square \square \square \square

Address of the sixth output word.

Identical to [Scan.Out3 address] \square \square \square \square \square .

[Scan.Out7 address] \square \square \square \square \square

Address of the seventh output word.

Identical to [Scan.Out3 address] \square \square \square \square \square .

[Scan.Out8 address] π Γ A B

Address of the eighth output word.

Identical to **[Scan.Out3 address]** π Γ A \exists .

[Modbus HMI] 1 1 2 - Menu

Access

[Communication] → [Comm parameters] → [Modbus SL] → [Modbus HMI]

About This Menu

This menu is related to the Modbus serial communication port on the front of the control block. It is used by default for the Graphic Display Terminal. The Graphic Display Terminal is only compliant with the following settings: **[HMI Baud Rate]** ƒ 6 ƒ equal to **[19200 bps]** 1 9 ƒ 2, **[Term 2 word order]** ƒ Ƶ 0 2 equal to **[HIGH]** 0 1 and **[HMI Format]** ƒ ƒ 0 2 equal to **[8-E-1]** ƒ ƒ 1.

[HMI Baud Rate] ƒ 6 ƒ 2

Baud rate Modbus.

Setting	Code / Value	Description
[4800 bps]	4 ƒ ƒ	4,800 Bauds
[9600 bps]	9 ƒ ƒ	9,600 Bauds
[19200 bps]	1 9 ƒ 2	19,200 Bauds Factory setting
[38.4 Kbps]	3 ƒ ƒ 4	38,400 Bauds

[Term 2 word order] ƒ Ƶ 0 2 ★

Terminal Modbus 2: Word order.

This parameter can be accessed if **[Access Level]** ƒ ƒ ƒ is set to **[Expert]** ƒ ƒ ƒ.

Setting	Code / Value	Description
[LOW]	0 ƒ ƒ	Low word first
[HIGH]	0 1	High word first Factory setting

[HMI Format] ƒ ƒ 0 2

HMI format.

Setting	Code / Value	Description
[8-O-1]	ƒ 0 1	8.o.1.
[8-E-1]	ƒ ƒ 1	8.E.1. Factory setting
[8-N-1]	ƒ ƒ 1	8.n.1.
[8-N-2]	ƒ ƒ 2	8.n.2.

[Mdb com start] ƒ 0 1 2

Modbus communication status.

Setting	Code / Value	Description
[r0t0]	r 0 Ɛ 0	Modbus no reception, no transmission
[r0t1]	r 0 Ɛ 1	Modbus no reception, transmission
[r1t0]	r 1 Ɛ 0	Modbus reception, no transmission
[r1t1]	r 1 Ɛ 1	Modbus reception and transmission

[Embd Eth Config] E E E - Menu

Access

[Communication] → [Comm parameters] → [Embd Eth Config]

About This Menu

Refer to the Ethernet embedded manual.

[Device Name] P R n

The FDR (Fast Device Replacement) service is based on identification of the device by a "Device Name". In the case of the Altivar drive, this is represented by the **[Device Name] P R n** parameter. Check that all the network devices have different "Device Names".

[IP Mode Ether. Embd] , n 0 0

IP mode Ethernet embedded.

Setting ()	Code / Value	Description
[Fixed]	n R n u	Fixed address
[BOOTP]	b o o t P	BOOTP
[DHCP]	d H C P	DHCP Factory setting

[IP address] , C 0

IP Address (, C 0 1, , C 0 2, , C 0 3, , C 0 4).

Setting	Description
0...255	Setting range Factory setting: 0.0.0.0

[Mask] , n 0

Subnet mask (, n 0 1, , n 0 2, , n 0 3, , n 0 4).

Setting	Description
0...255	Setting range Factory setting: 0.0.0.0

[Gateway] , C 0

Gateway address (, C 0 1, , C 0 2, , C 0 3, , C 0 4).

Setting	Description
0...255	Setting range Factory setting: 0.0.0.0

[Fast Device Replacement] F d r - Menu

Access

[Communication] → [Comm parameters] → [Embd Eth Config] → [Fast Device Replacement]

About This Menu

This menu can be accessed if [IP mode Ether. Embd] , 1 1 0 0 is set to [DHCP] d H C P .

[Enable FDR] F d V 0

Enable FDR function.

Setting	Code / Value	Description
[No]	n o	FDR service disabled Factory setting
[Yes]	y e s	FDR service enabled

[FDR Action] F d A 0

FDR action.

Setting ()	Code / Value	Description
[Not active]	, d L E	No FDR action Factory setting
[Save]	S A V E	FDR save command
[Rest]	r E S t	FDR restore command

[FDR Operating State] F d S 0

FDR operating state.

Setting	Code / Value	Description
[Initialization]	, n i t	Initialization
[Not active]	, d L E	Function not active Factory setting
[Operational]	o P E	Operational
[Ready]	r E A d Y	Ready
[IP Configuration]	, P C	IP configuration
[Not Configured]	u n C F	Function not configured
[Reading Configuration]	G E t	Download the current configuration

Setting	Code / Value	Description
[Writing Configuration]	S E E	Save the current configuration
[Applying Configuration]	R P P	Applying the configuration to the drive

[FDR Error Status] F d r 0

FDR error status.

Setting	Code / Value	Description
[No Error]	n o	No error Factory setting
[Server Timeout]	t o u t	Server timeout
[Server No File]	S n F	No file on server
[Server Corrupt File]	C r P E	Invalid file on server
[Server Empty File]	E P E Y	Empty file on server
[Drive Invalid File]	H i n V	Invalid file on drive
[CRC Error]	C r C	CRC error
[Version Incompatibility]	V r n	Version incompatibility between drive and file
[Drive No File]	H n F	No file on drive
[Server Reading Size]	S i Z E	File size reading error on server
[Drive Opening File]	a P E n	drive can not open the file
[Drive Reading File]	r E R d	drive can not read the file
[Incompatibility]	S C n t	File incompatibility
[Drive Invalid Name]	n i n V	drive name is invalid
[Server Incorrect File Size]	F S i Z	Incorrect file size on server
[Drive Writing File]	H W F	drive can not write the file
[Server Writing File]	S W F	Server can not write the file

[CANopen] $\mathcal{L} \square \square$ - Menu

Access

[Communication] → [Comm parameters] → [CANopen]

About This Menu

Refer to the CANopen fieldbus module manual.

[DeviceNet] $d \square \mathcal{L}$ - Menu

Access

[Communication] → [Comm parameters] → [DeviceNet]

About This Menu

Refer to the DeviceNet fieldbus module manual.

[Profibus] $P \square \mathcal{L}$ - Menu

Access

[Communication] → [Comm parameters] → [Profibus]

About This Menu

Refer to the Profibus DP fieldbus module manual.

[Profinet] $P \cap \mathcal{C}$ - Menu

Access

[Communication] → [Comm parameters] → [Profinet]

About This Menu

Refer to the PROFINET fieldbus module manual.

[EtherCAT Module] $E \mathcal{E} \mathcal{C}$ - Menu

Access

[Communication] → [EtherCAT Module]

About This Menu

This menu can be accessed if EtherCAT module has been insert. Refer to EtherCAT manual for more information.

[Powerlink] $E P L$ - Menu

Access

[Communication] → [Comm parameters] → [Powerlink]

About This Menu

This menu can be accessed if Powerlink module (VW3A3619) has been insert. Refer to Powerlink manual for more information.

[File management] F Π Ε -

What's in This Chapter

[Transfer config file] Ε Λ F - Menu.....	595
[Factory settings] F Λ S - Menu.....	596
[Parameter group list] F ρ Υ - Menu	597
[Factory settings] F Λ S - Menu.....	598
[Pre-settings] Ρ ρ Ε S - Menu	599
[Firmware update] F W U P - Menu.....	600

Introduction



[File management] F Π Ε - menu presents the management of drive configuration files.

[Transfer config file] E C F - Menu

Access

[File management] → [Transfer config file]

[Copy to the drive] □ P F

This allows to select a previously saved drive configuration from the Graphic Display Terminal memory and transfer it to the drive.

The drive needs to be restarted after a configuration file transfer.

[Copy from the drive] S R F

This allows to save the actual drive configuration into the Graphic Display Terminal memory.

NOTE: The Graphic Display Terminal can store up to 16 configuration files.

[Factory settings] F C S - Menu

Access

[File management] → [Factory settings]

About This Menu

This parameter allows to select the configuration to restore in case of factory setting operation.

[Config. Source] F C S , ★

Setting	Code / Value	Description
[Macro-Conf]	000	Factory setting parameter set Factory setting
[Config 1]	C F C 1	Customer parameter set 1
[Config 2]	C F C 2	Customer parameter set 2
[Config 3]	C F C 3	Customer parameter set 3

[Parameter group list] F P Y - Menu

Access

[File management] → [Factory settings] → [Parameter group list]

About This Menu

Selection of menus to be loaded.

NOTE: In factory configuration and after a return to "factory settings", [Parameter group list] F P Y will be empty.

[All] A L L

All parameters in all menus.

[Drive Configuration] d P П

Load [Complete settings] C S E - menu.

[Motor Param] П P E

Load [Motor parameters] П P P - menu.

[Comm. Menu] C P П★

Load [Communication] C P П - menu.

This parameter can be accessed if [Config. Source] F C S , is set to [Macro-Conf] П П .

[Display Config.] d P S★

Load [Display screen type] П S C - menu.

This parameter can be accessed if [Config. Source] F C S , is set to [Macro-Conf] П П .

[Factory settings] F C S - Menu

Access

[File management] → [Factory settings]

[Go to Factory settings] G F S

⚠ WARNING

UNANTICIPATED EQUIPMENT OPERATION

Verify that restoring the factory settings is compatible with the type of wiring used.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

It is only possible to revert to the factory settings if at least one group of parameters has previously been selected.

[Save Configuration] S C S , ★

Save configuration.

The active configuration to be saved does not appear for selection. For example, if it is **[Config 0] S t r 0**, only **[Config 1] S t r 1**, **[Config 2] S t r 2** and **[Config 3] S t r 3** appear. The parameter changes back to **[No] n o** as soon as the operation is complete.

Setting	Code / Value	Description
[No]	n o	No Factory setting
[Config 0]	S t r 0	Store customer parameter set 0
[Config 1]	S t r 1	Store customer parameter set 1
[Config 2]	S t r 2	Store customer parameter set 2
[Config 3]	S t r 3	Store customer parameter set 3

[Pre-settings] P 5 E 5 - Menu

Access

[File management] → [Factory settings] → [Pre-settings]

About This Menu

ATV960, ATV980 and ATV993 give possibility to defined pre-settings for drive parameters.

It allows pre configuration and protection from modifications of:

- Drive functions
- Cabinet I/O functions

This pre-setting is done during the manufacturing of the drive system.

[Pre-settings Status] P 5 5

Drive Systems pre-settings status.

Setting	Code / Value	Description
[Not locked]	n P C E	Pre-setting configuration is not locked. Parameters defined in the pre-setting list can be modified
[Locked]	P c E	Pre-setting configuration is locked. Parameters defined in the pre-setting list cannot be modified

[Pre-settings Unlock] P 5 r E

Drive Systems pre-settings unlock.

This parameter can be used, by a Schneider Electric representative, to unlock the pre-setting configuration.

Setting	Description
0...65535	Setting range Factory setting: 0

[Firmware update] F W U P - Menu

Access

[File management] → [Firmware update]

About This Menu

This function is used to update the software of the drive and can only be used by Schneider Electric Services.

For more information contact your local Schneider Electric Services.

[My preferences] ПУР -

What's in This Chapter

[Language]	601
[Password]	602
[Parameter access]	604
[Customization]	606
[Date & Time settings]	609
[Access level]	610
[Webserver]	611
[Functions key mgnt]	612
[LCD settings]	613
[Stop and go]	614
[QR code]	616
[Pairing password]	617

Introduction



[My preferences] ПУР - menu presents the possible settings for the user-defined HMI and parameter access.

[Language]

[Language] L n G - Menu

Access

[My preferences] → [Language]

About This Menu

This menu allows to select the Graphic Display Terminal language.

[Password]

[Password] Цод - Menu

Access

[My preferences] → [Password]

About This Menu

Enables the configuration to be protected with an access code or a password to be entered in order to access a protected configuration:

- The drive is unlocked when the password is set to **[No password defined]** нд or when the correct password has been entered. All menus can be accessed.
- Before protecting the configuration with a password, you must:
 - Define the **[Upload rights]** улr and **[Download rights]** длr.
 - Make a careful note of the password and keep it in a place where you are able to find it.

Locking the drive modifies the menu access. If the password is locked:

- **[My Menu]** ПУПн - menu (in **[Simply Start]** 5У5 - menu) remains visible if not empty,
- **[Dashboard]** дSH -, **[Diagnostics]** дrA - and **[Display]** Пон - menus remain visible with the read-only parameters. Sub-menus with settable parameters are not visible.
- **[Complete Settings]** ЦСт - and **[Communication]** Цон - menus are not visible,
- **[Transfer config file]** тCF - menu (in **[File Management]** FПт - menu) remains visible.
- in the **[My preferences]** ПУР - menu, remains visible:
 - **[Language]** Лнг,
 - **[Password]** Цод - menu,
 - **[Display screen Type]** П5С - menu (in **[Customization]** Цус - menu),
 - **[Date & Time settings]** ртЦ,
 - **[Access Level]** ЛrC, and
 - **[LCD settings]** ЦнЛ - menu.

[Password status] П55т

Password status.

Read only parameter.

Setting	Code / Value	Description
[No password defined]	нд	No password defined Factory setting
[Password is unlocked]	ул	Password is unlocked
[Password is locked]	лoC	Password is locked

[Password] Pw d

6-characters password. To lock the drive, define and enter your password.
[Password status] P 5 5 E value switches to **[Password is locked] L o C**.

To unlock the drive, the password must be entered. Once the correct code has been entered, the drive is unlocked and **[Password status] P 5 5 E** value switches to **[Password is unlocked] u L**. Access will be locked again the next time the drive is switched on.

To modify the password, unlock the drive then enter the new password. Entering a new password locks the drive.

To remove the password, the drive must be unlocked and the password 000000 must be entered. **[Password status] P 5 5 E** value switches to **[No password defined] n o**. At next switch-on, the drive remains unlocked.

[Upload rights] u L r

Upload rights.

Setting ()	Code / Value	Description
[Permitted]	u L r 0	Commissioning tools or the Graphic Display Terminal can save the whole configuration (password, monitoring, configuration) Factory setting
[Not allowed]	u L r 1	Commissioning tools or the Graphic Display Terminal cannot save the configuration if the drive is not protected by a password or if the in-correct password has been entered

[Download rights] d L r

Download rights.

Setting ()	Code / Value	Description
[Locked drv]	d L r 0	Lock drive: the configuration can be downloaded to the drive only if the drive is protected by a password, which is the same as the password of the configuration to be downloaded
[Unlock. drv]	d L r 1	Unlock drive: the configuration can be downloaded to the drive or a configuration can be modified if the drive is unlocked or is not protected by a password Factory setting
[Not allowed]	d L r 2	The configuration cannot be downloaded
[Lock/unlock]	d L r 3	Combination of [Locked drv] d L r 0 and [Unlock. drv] d L r 1

[Parameter access]

[Restricted channels] P C d - Menu

Access

[My preferences] → [Parameter access] → [Restricted access] → [Restricted channels]

About This Menu

Following channels can be selected to disable the accessibility to the related parameters.

[HMI] C o n

Graphic Display Terminal.

[PC Tool] P w S

DTM-based commissioning software.

[Modbus] П d b

Embedded Modbus serial.

[CANopen] C A n

CANopen fieldbus module.

[Com. Module] n E E

Fieldbus option module.

[Restricted param] P P R - Menu

Access

[My preferences] → [Parameter access] → [Restricted access] → [Restricted param]

About This Menu

In these screens, all parameters in the **[Complete settings] C S E** - menu can be protected and are displayed for selection, except for the Expert parameters.

Press the **All** key to select all the parameters. Press the **None** key again to deselect all the parameters.

Content of the **[Complete settings] C S E** - menu. No selections can be made in this screen if there are no parameters.

[Visibility] V , S - Menu

Access


[My preferences] → [Parameter access] → [Visibility]

About This Menu

Selection to display all parameters or only the active parameters.

[Parameters] P V , 5

Parameters.

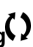Setting 	Code / Value	Description
[Active]	<i>A C L</i>	Only active parameters can be accessed Factory setting
[All]	<i>A L L</i>	All parameters can be accessed

[Customization]

[My menu config.] ПУС - Menu

Access

[My preferences] → [Customization] → [My menu config.]

About This Menu

This menu allows to customize the [My menu] ПУПН - Menu, page 49.

[Parameter Selection] ППР

This menu shows the content of [Complete settings] С5Е - menu and it allows to:

- Select the parameters visible in [My Menu] ПУПН -, and
- Remove the selected visible parameters from [My Menu] ПУПН - .

No selection can be made if there are no parameters in the displayed current screen.

[Display Selection] ПДР

This menu shows the content of [Display] ПОН - menu and it allows to:

- Select the parameters visible in [My Menu] ПУПН -, and
- Remove the selected visible parameters from [My Menu] ПУПН - .

No selection can be made if there are no parameters in the displayed current screen.

[Selected List] ПЛ

This menu displays the parameters selected via [Parameter Selection] ППР and [Display Selection] ПДР.

With the Graphic Display Terminal, this menu allows to sort and remove the selected parameters using the function keys (F1, F2 and F3).

NOTE: Up to 25 parameters can be selected to be displayed in the customized menu..

[My Menu] ПУПН

Used to define the name of the customized menu.

[Display screen type] П5С - Menu

Access

[My preferences] → [Customization] → [Display screen type]

About This Menu

This parameter allows to select the type of display for the default screen.

[Display value type] ПдЕ

Type of screen display.

Setting (↻)	Code / Value	Description
[Digital]	дЕС	Digital values Factory setting
[Bar graph]	бар	Bar graph
[List]	Л, СЕ	List of values
[Vu Meter]	Ву ПЕЕ	Vu meter

[Parameter Selection] ПРС

Customized selection.

This view allows to select the parameters to display on the default screen.

[Param. Bar Select] РБ5 - Menu

Access

[My preferences] → [Customization] → [Param. Bar Select]

About This Menu

This view allows to select the parameters to display on the top line of the Graphic Display Terminal screen.

[Customer parameters] C Y P - Menu**Access**

[My preferences] → [Customization] → [Customer parameters]

About This Menu

This menu allows to rename up to 15 parameters.

[Parameter Selection] S C P

Parameter selection.

This view allows to select up to 15 parameters.

[Custom Selection] C P П

Customized selection.

This view allows to set for each selected parameter:

- The name
- The unit if relevant (a custom unit is available)
- A multiplier (1...1000) if relevant
- A divisor (1...1000) if relevant
- An offset (-99.00...99.00) if relevant

[Service message] S E P - Menu**Access**

[My preferences] → [Customization] → [Service message]

About This Menu

This menu allows to define a user-defined service message (5 lines, 23 digits per line).

This defined message is displayed in **[Diagnostics] d , P - → [Diag. data] d d E - → [Service message] S E P - submenu**, page 58.

[LINE 1] S П L O 1 to [LINE 5] S П L O 5

Line 1 to line 5.

These elements are used to define line-by-line the content of the service message.

[Date & Time settings]

[Date/time settings] r t l - Menu

Access

[My preferences] → [Date/time settings]

About This Menu

This view allows to set date and time. This information is used for the time stamping of all logged data.

If a time server is connected over Ethernet and configured in the webserver, date and time data are updated automatically according to the configuration.

Date and time information shall be available (time server available and configured, or Graphic Display Terminal plugged) at drive power up to enable the time stamping of the logged data.

Modifying these settings will modify previously logged data value in case of average data based on time.

[Access level]

[Access level] L R C - Menu

Access

[My preferences] → [Access level]

[Access Level] L R C

Level of access control.

Setting ()	Code / Value	Description
[Basic]	<i>b R S</i>	Access to the [Simply start] <i>S Y S</i> -, [Dashboard] <i>d S H</i> -, [Diagnostics] <i>d , R</i> -, [File management] <i>F П E</i> - and [My preferences] <i>П У Р</i> - menus only.
[Standard]	<i>S E d</i>	Access to all menus. Factory setting
[Expert]	<i>E P r</i>	Access to all menus and to additional parameters.

[Webserver]

[Webserver] W B S - Menu

Access

[My preferences] → [Webserver]

About This Menu

This menu allows to manage Web services.

For more information refer to the Embedded Ethernet manual, page 15.

[EnableEmbdWeb] E W E E

Enable Embedded Webserver.


Enable Web services for the embedded Ethernet adapter.

Setting	Code / Value	Description
[No]	n o	Webserver disabled
[Yes]	Y E S	Webserver enabled Factory setting

[Reset Eth Embd Pwd] P W P E

Reset ethernet embedded password.

For embedded ethernet, it resets the user authentication password and the administrator access (ADMIN) webserver password to the default value. Once reset, the default password can be read using [Default Pwd Eth Embd] W D P E .

Setting 	Code / Value	Description
[No]	n o	Password reset is not requested. Factory setting
[Yes]	Y E S	Password reset is requested. NOTE: The parameter switches to [No] n o when the operation is done.

[Default Pwd Eth Embd] W D P E

8-characters default password.

It shows the ethernet embedded default password used for both webserver connection (Administrator access) and user authentication.

The default password is displayed on the Graphic Display Terminal. The Graphic Display Terminal is an accessory for cabinet integration product (ATV●30●●●N4Z).

NOTE: The user authentication is a feature provided to help prevent unauthorized and malicious connection to the device. The access to the connected device via a software tool provided by Schneider Electric (such as SoMove) is restricted to authenticated users. For more information, refer to the DTM online help.

The default password must not be used. A new password must be defined after a password reset or at the first connection to the drive.

[Functions key mgnt]

[Functions key mgnt] *F K G* - Menu

Access

[My preferences] → [Functions key mgnt]

About This Menu

This menu allows to assign functions to the Graphic Display Terminal function keys.

[F1 key assignment] *F n 1* to [F4 key assignment] *F n 4*

Function key 1 to function key 4.

Following possible assignments cannot be accessed in [I/O profile] *i o* configuration.

Setting	Code / Value	Description
[Not assigned]	<i>n o</i>	Not assigned Factory setting
[Jog]	<i>F J o G</i>	Function key jog affectation
[Preset Speed 1]	<i>F P S 1</i>	Function key preset speed 1 assignment
[Preset Speed 2]	<i>F P S 2</i>	Function key preset speed 2 assignment
[PID Ref Frequency 1]	<i>F P r 1</i>	Function key preset PID 1 assignment
[PID Ref Frequency 2]	<i>F P r 2</i>	Function key preset PID 2 assignment
[+Speed]	<i>F u S P</i>	Function key faster assignment
[-Speed]	<i>F d S P</i>	Function key slower assignment

[LCD settings]

[LCD settings] [n L - Menu

Access

[My preferences] → [LCD settings]

About This Menu

This menu allows to set the Graphic Display Terminal related parameters.

[Screen Contrast] [5 L

Screen contrast setting.

Setting	Description
0...100%	Setting range Factory setting: 50%

[Standby] 5 b Y

Stand-by delay.

NOTE: Disabling the automatic standby function of the display terminal backlight will reduce the backlight service time.

Setting	Description
n o...10 min	Automatic backlight OFF time Factory setting: 10 min

[Display Terminal locked] K L [K

Graphic Display Terminal key locked. Press **ESC** and **Home** keys to Lock manually & unlock the Graphic Display Terminal keys. The **Stop** key remains active when the Graphic Display Terminal is locked.

Setting ()	Description
n o...10 min	Setting range Factory setting: 5 min

[Red Backlight] b [K L ★

Graphic Display Terminal red backlight function disabled in case or an error triggered.

Setting ()	Code / Value	Description
[No]	n o	Red backlight disabled
[Yes]	Y E 5	Red backlight enabled Factory setting

[Stop and go]

[Stop and go] 5 6 7 - Menu

Access

[My preferences] → [Stop and go]

About This Menu

This function is available for drives from frame size 4 to 7. When the function is active, the DC bus voltage is no longer maintained at operational level in order to save energy. When the drive is in energy saving state, the next run command shall be delayed up to 1 second during the DC bus charge.

[Energy Saving Delay] , d L 11

Wait time before going to [Energy Saving] , d L E mode after motor is stopped.

At power-on, if [Energy Saving Delay] , d L 11 is not set to [No] n o , the drive goes directly to [Energy Saving] , d L E

The value [No] n o deactivate the function.

Setting	Description
[No] n o ...32,400 s	Setting range Factory setting: n o

[Energy Saving Assign] , d L 5

Energy saving mode digital input assignment.

At active state rising edge, the drive switches to energy saving state if the motor is stopped without a run command active. A falling edge switch the drive to normal operation.

Setting	Code / Value	Description
[Not Assigned]	n o	Not assigned Factory setting
[DI1]...[DI8]	L , I ... L , 8	Digital input DI1...DI8
[DI11]...[DI16]	L , I I ... L , I 6	Digital input DI11...DI16 if VW3A3203 I/O extension module has been inserted
[CD00]... [CD10]	C d 0 0 ... C d 1 0	Virtual digital input CMD.0...CMD.10 in [I/O profile] , o configuration
[CD11]... [CD15]	C d 1 1 ... C d 1 5	Virtual digital input CMD.11...CMD.15 regardless of configuration
[C101]... [C110]	C 1 0 1 ... C 1 1 0	Virtual digital input CMD1.01...CMD1.10 with integrated Modbus Serial in [I/O profile] , o configuration
[C111]... [C115]	C 1 1 1 ... C 1 1 5	Virtual digital input CMD1.11...CMD1.15 with integrated Modbus Serial regardless of configuration
[C201]... [C210]	C 2 0 1 ... C 2 1 0	Virtual digital input CMD2.01...CMD2.10 with CANopen® fieldbus module in [I/O profile] , o configuration
[C211]... [C215]	C 2 1 1 ... C 2 1 5	Virtual digital input CMD2.11...CMD2.15 with CANopen® fieldbus module regardless of configuration
[C301]... [C310]	C 3 0 1 ... C 3 1 0	Virtual digital input CMD3.01...CMD3.10 with a fieldbus module in [I/O profile] , o configuration
[C311]... [C315]	C 3 1 1 ... C 3 1 5	Virtual digital input CMD3.11...CMD3.15 with a fieldbus module regardless of configuration

Setting	Code / Value	Description
[C501]... [C510]	C 5 0 1... C 5 1 0	Virtual digital input CMD5.01...CMD5.10 with integrated Ethernet in [I/O profile] configuration
[C511]... [C515]	C 5 1 1... C 5 1 5	Virtual digital input CMD5.11...CMD5.15 with integrated Ethernet regardless of configuration

[Egy Saving Timeout] *rdLE*

Energy Saving Timeout.

If the value of the parameter [Egy Saving Timeout] *rdLE* is increased, the run command can be delayed for the amount of time set by the parameter **[Egy Saving Timeout] *rdLE*** as long as the condition to leave **[Energy Saving] *rdLE*** state is not fulfilled (for example, but not limited to, undervoltage or overvoltage of the supply mains).

⚠ WARNING
UNANTICIPATED EQUIPMENT OPERATION
Verify that the modification of the setting of this parameter does not result in unsafe conditions.
Failure to follow these instructions can result in death, serious injury, or equipment damage.

After **[Egy Saving Timeout] *rdLE*** time, if the drive is still in **[Energy Saving] *rdLE*** mode, the error **[Egy Saving Exit Error] *rdLF*** is triggered

NOTE: The factory setting value is changed to 8 s for ATV980 and ATV9B0.

Setting	Description
1...999 s	Setting range Factory setting: 5 s

[QR code]

[QR code] ПУЛ - Menu

Access

[My preferences] → [QR code]

About This Menu

This menu can only be accessed with the Graphic Display Terminal.

It gives access to 5 QR Codes:

- **[QR Code] ПУЛ** : scanning this QR code brings to a landing page on Internet with the information on the Technical product datasheet and a link for Schneider Electric App available for services.
- **[My link 1] ПУЛ 1 -** to **[My link 4] ПУЛ 4 -** : 4 QR codes customized with the commissioning software. By default, scanning these QR codes brings to the same landing page as **[QR Code] ПУЛ** . To customize these QR codes with SoMove, go to “**Device > HMI Personalization > QR codes**”.

NOTE: The name “My link x” can also be changed during the customization.

[Pairing password]

[Pairing password] P P ,

Access

[My preferences] → [Pairing password]

About This Menu

This function can only be accessed in Expert mode. This function is used to detect whenever an option module has been replaced or the software has been modified in any way. When a pairing password is entered, the parameters of the option modules currently inserted are stored. On every subsequent power-up, these parameters are verified and, in the event of a discrepancy, the drive locks in **[Boards Compatibility] H C F**. Before the drive can be restarted, it is necessary to revert to the original situation or reenter the pairing password.

The following parameters are verified:

- The type of option modules.
- The software version of the drive and the option modules.
- The serial number for the control block boards.

[Pairing password] P P ,

Operation as a pair password.

Setting	Description
[OFF] 0 F F ...9,999	Setting range Factory setting: 0 F F

The **[OFF] 0 F F** value signifies that the pairing password function is inactive.

The **[ON] 0 n** value signifies that the pairing password function is active and that a password is required to start the drive in the event of a **[Boards Compatibility] H C F** detected error.

As soon as the password has been entered, the drive is unlocked and the code changes to **[ON] 0 n**.

Maintenance and diagnostics

What's in This Part

Maintenance	619
Diagnostics and Troubleshooting	622

Maintenance

What's in This Chapter

Maintenance 619

Maintenance

Limitation of Warranty

The warranty does not apply if the product has been opened, except by Schneider Electric services.

Servicing

⚠️⚠️ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

Read and understand the instructions in **Safety Information** chapter before performing any procedure in this chapter.

Failure to follow these instructions will result in death or serious injury.

The temperature of the products described in this manual may exceed 80 °C (176 °F) during operation.

⚠️ WARNING

HOT SURFACES

- Ensure that any contact with hot surfaces is avoided.
- Do not allow flammable or heat-sensitive parts in the immediate vicinity of hot surfaces.
- Verify that the product has sufficiently cooled down before handling it.
- Verify that the heat dissipation is sufficient by performing a test run under maximum load conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

⚠️ WARNING

INSUFFICIENT MAINTENANCE

Verify that the maintenance activities described below are performed at the specified intervals.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Adherence to the environmental conditions must be ensured during operation of the drive. In addition, during maintenance, verify and, if appropriate, correct all factors that may have an impact on the environmental conditions.

	Part concerned	Activity	Interval (1)
Overall condition	All parts such as housing, HMI, control block, connections, etc.	Perform a visual inspection	At least every year
Corrosion	Terminals, connectors, screws, EMC plate	Inspect and clean if required	

	Part concerned	Activity	Interval (1)
Dust	Terminals, fans, enclosures air inlets and air outlets, air filters of cabinet	Inspect and clean if required	
	Floor standing drives filter mats	Inspect	At least every year
		Change	At least every 4 years
Cooling	Wall mounting drives fan	Verify the fan operation	At least every year
		Replace the fan, see catalog and the instructions sheets on www.schneider-electric.com .	After 3 to 5 years, depending on the operating conditions
	Floor standing drives fan for power part and enclosure door fan	Replace the fans, see catalog and the instructions sheets on www.schneider-electric.com .	Every 35000 operating hours or every 6 years
Fastening	All screws for electrical and mechanical connections	Verify tightening torques	At least every year
<p>(1) Maximum maintenance intervals from the date of commissioning. Reduce the intervals between maintenance to adapt maintenance to the environmental conditions, the operating conditions of the drive, and to any other factor that may influence the operation and/ or maintenance requirements of the drive.</p>			

Spares and Repairs

Serviceable product. Please contact your Customer Care Center on:

www.se.com/CCC.

Long Time Storage

If the drive was not connected to mains for an extended period of time, the capacitors must be restored to their full performance before the motor is started.

NOTICE

REDUCED CAPACITOR PERFORMANCE

- Apply mains voltage to the drive for one hour before starting the motor if the drive has not been connected to mains for the specified periods of time.(1)
- Verify that no Run command can be applied before the period of one hour has elapsed.
- Verify the date of manufacture if the drive is commissioned for the first time and run the specified procedure if the date of manufacture is more than 12 months in the past.

Failure to follow these instructions can result in equipment damage.

(1) Period of time:

- 12 months at a maximum storage temperature of +50°C (+122°F)
- 24 months at a maximum storage temperature of +45°C (+113°F)
- 36 months at a maximum storage temperature of +40°C (+104°F)

If the specified procedure cannot be performed without a Run command because of internal mains contactor control, perform this procedure with the power stage enabled, but the motor being at a standstill so that there is no appreciable mains current in the capacitors.

Fan Replacement

It is possible to order a new fan for the drive maintenance, see the catalog numbers on www.se.com.

Customer Care Center

For additional support, you can contact our Customer Care Center on:

www.se.com/CCC.


Diagnostics and Troubleshooting

What's in This Chapter

Warning Codes	623
Error Codes	626
FAQ	704

Overview

This chapter describes the various types of diagnostics and provides troubleshooting assistance.

<p style="text-align: center;"> DANGER</p> <p>HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH</p> <p>Read and understand the instructions in Safety Information chapter before performing any procedure in this chapter.</p> <p>Failure to follow these instructions will result in death or serious injury.</p>
--

Warning Codes

Warning Codes

List of Available Warnings Messages

Setting	Code	Description
[No Warning stored]	<i>n o A</i>	No warning stored
[Fallback Frequency]	<i>F r F</i>	Reaction on event: Fallback frequency
[Speed Maintained]	<i>r L S</i>	Reaction on event: Speed maintained
[Type of stop]	<i>S t t</i>	Reaction on event: Stop following [Type of stop] <i>S t t</i> without triggering an error
[Ref Frequency Warning]	<i>S r A</i>	Frequency reference reached
[Life Cycle Warn 1]	<i>L C A 1</i>	Life cycle warning 1
[Life Cycle Warn 2]	<i>L C A 2</i>	Life cycle warning 2
[PumpCycle warning]	<i>P C P A</i>	Pumpcycle monitoring warning , page 255
[PID error Warning]	<i>P E E</i>	PID error warning , page 385
[PID Feedback Warn]	<i>P F A</i>	PID feedback warning , page 377
[PID High Fdbck Warn]	<i>P F A H</i>	PID feedback high threshold reached , page 377
[PID Low Fdbck Warn]	<i>P F A L</i>	PID feedback low threshold reached , page 377
[Regulation Warning]	<i>P , S H</i>	PID feedback monitoring warning , page 248
[Limit Switch Reached]	<i>L S A</i>	Limit switch reached , page 412
[Slack Rope Warning]	<i>r S d A</i>	Slack rope warning , page 328
[Dynamic Load Warning]	<i>d L d A</i>	Dynamic load warning , page 329
[AI3 Th Warning]	<i>t P 3 A</i>	AI3 Thermal warning , page 166
[AI4 Th Warning]	<i>t P 4 A</i>	AI4 Thermal warning , page 166
[AI5 Th Warning]	<i>t P 5 A</i>	AI5 Thermal warning , page 166
[AI1 4-20 Loss Warning]	<i>A P 1</i>	AI1 4-20 mA loss warning , page 537
[AI3 4-20 Loss Warning]	<i>A P 3</i>	AI3 4-20 mA loss warning , page 537
[AI4 4-20 Loss Warning]	<i>A P 4</i>	AI4 4-20 mA loss warning , page 537
[AI5 4-20 Loss Warning]	<i>A P 5</i>	AI5 4-20 mA loss warning , page 537
[Drive Thermal Warning]	<i>t H A</i>	Drive overheating warning
[IGBT Thermal Warning]	<i>t J A</i>	IGBT thermal state warning
[Fan Counter Warning]	<i>F C t A</i>	Fan counter speed warning , page 569
[Fan Feedback Warning]	<i>F F d A</i>	Fan feedback warning , page 569
[BR Thermal Warning]	<i>b o A</i>	Braking resistor thermal warning
[Ext. Error Warning]	<i>E F A</i>	External error warning , page 530
[Undervoltage Warning]	<i>u S A</i>	Undervoltage warning , page 547
[Preventive UnderV Active]	<i>u P A</i>	Controlled stop threshold is reached , page 547
[Forced Run]	<i>E r n</i>	Drive in forced run
[Mot Freq High Thd]	<i>F t A</i>	Motor frequency high threshold 1 reached , page 388
[Mot Freq Low Thd]	<i>F t A L</i>	Motor frequency low threshold 1 reached , page 388
[Pulse Warn Thd Reached]	<i>F q L A</i>	Pulse warning threshold reached , page 462
[Mot Freq Low Thd 2]	<i>F 2 A L</i>	Motor frequency low threshold 2 reached , page 388
[High Speed Reached]	<i>F L A</i>	High speed reached warning

Setting	Code	Description
[Ref Freq High Thd reached]	r t A H	Reference frequency high threshold reached , page 389
[Ref Freq Low Thd reached]	r t A L	Reference frequency low threshold reached , page 390
[2nd Freq Thd Reached]	F 2 A	Motor frequency high threshold 2 reached , page 389
[Current Thd Reached]	C t A	Motor current high threshold reached , page 388
[Low Current Reached]	C t A L	Motor current low threshold reached , page 388
[High Torque Warning]	t t H A	High torque threshold reached , page 390
[Low Torque Warning]	t t L A	Low torque threshold reached , page 390
[Process Undld Warn]	u L A	Process underload warning , page 454
[Process Overload Warning]	o L A	Overload warning , page 457
[Torque Limit Reached]	S S A	Torque limit reached , page 556
[Torque Control Warning]	r t A	Torque control warning , page 422
[Drv Therm Thd reached]	t A d	Drive thermal threshold reached
[Motor Therm Thd reached]	t S A	Motor thermal threshold reached , page 389
[Mot2 Therm Thd reached]	t S 2	Motor 2 thermal threshold reached , page 389
[Mot3 Therm Thd reached]	t S 3	Motor 3 thermal threshold reached , page 389
[Mot4 Therm Thd reached]	t S 4	Motor 4 thermal threshold reached , page 389
[Power High Threshold]	P t H A	Power high threshold reached
[Power Low Threshold]	P t H L	Power low threshold reached
[Cust Warning 1]	C A S 1	Customer warning 1 active , page 566
[Cust Warning 2]	C A S 2	Customer warning 2 active , page 567
[Cust Warning 3]	C A S 3	Customer warning 3 active
[Cust Warning 4]	C A S 4	Customer warning 4 active
[Cust Warning 5]	C A S 5	Customer warning 5 active
[AFE Mains Undervoltage]	u r A	AFE mains undervoltage
[Power Cons Warning]	P o W d	Power consumption warning
[Slipping warn]	A n A	Slipping warning , page 553
[Load Mvt Warn]	b S A	Load movement warning
[Brake Cont Warn]	b C A	Brake contact warning
[AI1 Th Warning]	t P I A	AI1 Thermal warning , page 166
[Backspin Active]	b S C	Backspin control function is active , page 252
[MonitorCircuit A Warn]	, W A	Monitoring circuit A warning
[MonitorCircuit B Warn]	, W b	Monitoring circuit B warning
[MonitorCircuit C Warn]	, W C	Monitoring circuit C warning
[MonitorCircuit D Warn]	, W d	Monitoring circuit D warning
[CabinetCircuit A Warn]	C W A	Cabinet circuit A warning , page 571
[CabinetCircuit B Warn]	C W b	Cabinet circuit B warning , page 572
[CabinetCircuit C Warn]	C W C	Cabinet circuit C warning , page 572
[MotorWinding A Warn]	t W A	Motor winding A warning , page 573
[MotorWinding B Warn]	t W b	Motor winding B warning , page 574
[MotorBearing A Warn]	t W C	Motor bearing A warning , page 574
[MotorBearing B Warn]	t W d	Motor bearing B warning , page 575
[Circuit Breaker Warn]	C b W	Circuit breaker warning , page 576

Setting	Code	Description
[Cab I/O 24V Warn]	P 2 4 C	Cabinet I/O 24V missing warning
[AFE Motor Limitation]	C L , Π	AFE motor limitation , page 437
[AFE Generator Limitation]	C L , G	AFE regen limitation , page 437
[AFE Sensor thermal state]	ε H S R	AFE thermal state warning
[AFE IGBT thermal state]	ε H J R	AFE IGBT thermal warning
[Cabinet Fan Fdbck Warn]	F F C R	Cabinet fan feedback warning , page 569
[Cabinet Fan Counter Warn]	F C C R	Cabinet fan counter warning , page 569
[Cabinet Overheat Warn]	C H R	Cabinet overheat warning , page 560
[CMI Jumper Warn]	C Π , J	CMI jumper warning
[AFE Fan Counter Warn]	F C b R	AFE fan counter warning , page 569
[AFE Fan Fdbck Warn]	F F b R	AFE fan feedback warning , page 569
[M/S Device Warn]	Π S d R	Master/Slave device warning , page 258
[BUO Fan Counter Warn]	F C b b	BUO fan counter warning
[Backlash Warn]	b S 9 R	Backlash warning , page 286
[BUO Fan Fdbck Warn]	F F b b	BUO fan feedback warning
[BUO Thermal State Warn]	ε H W b	BUO thermal state warning
[AFE Bus Ref Warn]	Π d W	AFE bus reference link warning
[Encoder Thermal Warn]	ε P E R	Encoder module thermal warning , page 166
[Temp Sens AI1 Warn]	ε S 1 R	Temperature sensor AI1 warning (open circuit)
[Temp Sens AI3 Warn]	ε S 3 R	Temperature sensor AI3 warning (open circuit)
[Temp Sens AI4 Warn]	ε S 4 R	Temperature sensor AI4 warning (open circuit)
[Temp Sens AI5 Warn]	ε S 5 R	Temperature sensor AI5 warning (open circuit)
[DC Bus Ripple Warn]	d C r W	DC Bus Ripple Warning , page 202
[Cooling Pump Warn]	C o P R	Cooling pump warning resulting from the detection of an error during pump operation or resulting from [Pump diagnostics] C P E (related to ATV9L0).
[Module Overheat]	Π o R	Module overheating warning resulting from the ambient temperature monitoring
[Fallback Channel]	R F F L	Automatic fallback behavior activated after a fieldbus communication interruption , page 546
[ON Lock Warning]	L K o n	ON lock warning resulting from an external device not ready.

Error Codes

Overview

Clearing the Detected Error

This table presents the steps to follow if intervention on the drive system is required:

Step	Action
1	Disconnect all power, including external control power that may be present.
2	Lock all power disconnects in the open position.
3	Wait 15 minutes to allow the DC bus capacitors to discharge (the drive LEDs are not indicators of the absence of DC bus voltage).
4	Measure the voltage of the DC bus between the PA/+ and PC/- terminals to ensure that the voltage is less than 42 Vdc.
5	If the DC bus capacitors do not discharge completely, contact your local Schneider Electric representative. Do not repair or operate the drive.
6	Find and correct the cause of the detected error.
7	Restore power to the drive to confirm that the detected error has been rectified.

After the cause has been removed, the detected error can be cleared by:

- Switching off the drive.
- Using the **[Product Restart]** $r P$ parameter.
- Using the digital input or the control bit assigned to **[Prod Restart Assign]** $r P R$.
- Using the **[Auto Fault Reset]** $R E r$ - function.
- A digital input or control bit set to the **[Fault reset]** $r S E$ - function.
 - For **[Fault Reset Assign]** $r S F$ and **[Extended Fault Reset]** $H r C F$ refer to **[Fault reset]** $r S E$ - Menu, page 522.
- Pressing the **STOP/RESET** key on the Graphic Display Terminal depending on the setting of **[Stop Key Enable]** $P S E$.

How To Clear the Error Code?

The following table summarizes the possibilities to clear a detected error after the cause has been removed:

How to clear the error code after the cause has been removed	List of the cleared error
<ul style="list-style-type: none"> • Switch off the drive. • Use the [Product Restart] $r P$ parameter. • Use the digital input or the control bit assigned to [Prod Restart Assign] $r P R$. 	All detected error.
<ul style="list-style-type: none"> • As soon as its cause has been removed. 	CFF, CF1, CF2, CF3, CF4, CSF, FWER, HCF, PGLF, PHF, URF, USF
<ul style="list-style-type: none"> • Use the digital input or the control bit assigned to [Fault Reset Assign] $r S F$. • Pressing the RESET button on the HMI panel 	ACF1, ACF2, ACF3, ANF, ASF, BRf, BSQF, ECF, ENF, MDF, MFF, SOF, SPF, TNF

How to clear the error code after the cause has been removed	List of the cleared error
<ul style="list-style-type: none"> • Use the digital input or the control bit assigned to [Fault Reset Assign] <i>r 5 F</i> . • Pressing the RESET button on the HMI panel • Use the [Auto Fault Reset] <i>R E r -</i> function. 	BOF, BUHF, CFA, CFB, CFC, CHF, CNF, COF, COPF, DLF, EPF1, EPF2, ETHF, FCF2, FDR1, FDR2, FFDF, IDLF, IFA, IFB, IFC, IFD, IHF, INF9, INFB, INFV, LCF, LFF1, LFF3, LFF4, LFF5, LKON, MDLF, MOF, MSDF, OBF, OBF2, OHF, OLC, OLF, OPF1, OPF2, OSF, P24C, PCPF, PFMF, SCF4, SCF5, SLF1, SLF2, SLF3, SRF, SSF, STF, T1CF, T3CF, T4CF, T5CF, TECF, TFA, TFB, TFC, TFD, TH1F, TH3F, TH4F, TH5F, THEF, TJF, TJF2, TLOF, ULF
If [Fault Reset Assign] <i>H r F L</i> is set to <i>Y E 5</i> : <ul style="list-style-type: none"> • Use the digital input or the control bit assigned to [Fault Reset Assign] <i>r 5 F</i> , • Press the STOP/RESET key on the Graphic Display Terminal depending on the setting of [Stop Key Enable] <i>P 5 E</i> . 	CRF1, INFD, SCF1

[AFE DC-Caps Error] *A C F 1***Probable Cause**

AFE DC-capacitors error: DC-capacitors overcurrent.

- Low mains voltage for too long.
- Mains voltage is on a low limit, the modulation rate of the AFE increases to help protect the DC link capacitors the **[AFE Modulation Rate Error] *A C F 1*** is triggered.

**Remedy**

- Verify mains voltage.
- Verify parameter setting for mains voltage.

**Clearing the Error Code**

This detected error can be cleared manually with the **[Fault Reset Assign] *r 5 F*** parameter after the cause has been removed.

[AFE Current Control Error] *A C F 2***Probable Cause**

Mains voltage interruption.

**Remedy**

- Verify mains voltage.
- Reduce number of voltage drop-downs.

**Clearing the Error Code**

This detected error can be cleared manually with the **[Fault Reset Assign] *r 5 F*** parameter after the cause has been removed.

[AFE Line Filter Error] *r c f 3***Probable Cause**

Mains voltage drops during generator operation.

**Remedy**

Verify mains voltage.

**Clearing the Error Code**

This detected error can be cleared manually with the **[Fault Reset Assign] *r 5 F*** parameter after the cause has been removed.

[Load slipping] *r n f***Probable Cause**

Not following the ramp. The difference between the output frequency and the speed feedback is not correct.

**Remedy**

- Confirm the drive rating according to the application (motor, load, and so on.)
- Verify the motor, gain, and stability parameters.
- Add a braking resistor.
- Verify the mechanical coupling and wiring of the encoder.
- If the torque control function is used and if the encoder is assigned to speed feedback,
 - Set **[Load slip detection] *s d d*** = **[No] *n o***.
 - Set both **[Positive deadband] *d b P*** and **[Negative deadband] *d b n*** to a value less than 10% of the nominal motor frequency.

**Clearing the Error Code**

This detected error can be cleared manually with the **[Fault Reset Assign] *r 5 F*** parameter after the cause has been removed.

[Angle error] *A S F***Probable Cause**

This error is triggered during the phase-shift angle measurement if the motor phase is disconnected or if the motor inductance is too high.

**Remedy**

- Verify the motor phases and the maximum current allowed by the drive.

**Clearing the Error Code**

This detected error can be cleared manually with the **[Fault Reset Assign] *r 5 F*** parameter after the cause has been removed.

[Brake Control] *b L F***Probable Cause**

- Brake release current not reached.
- The torque set point is not reached.
- The fluxing current is not stable.

**Remedy**

- Verify the drive/motor connection.
- Verify the motor windings.
- Verify the **[Brk Release Current] *i b r*** and **[Brake release I Rev] *i r d*** settings.

**Clearing the Error Code**

This detected error requires a power reset.

[Brake Resistor ovid] $b \ o \ F$ **Probable Cause**

The braking resistor is overloaded

**Remedy**

- Wait for the braking resistor to cool down.
- Verify the nominal power of the braking resistor.
- Verify the **[Braking Resistor Power] $b \ r \ P$** and **[Braking Resistor Value] $b \ r \ V$** parameters.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] $A \ F \ r$** or manually with the **[Fault Reset Assign] $r \ S \ F$** parameter after the cause has been removed.

[Brake Feedback] $b \ r \ F$ **Probable Cause**

- The status of the brake feedback contact or the status of the brake relay feedback is not correct compared to the brake logic control.
- The brake does not stop the motor quickly enough (detected by measuring the speed on the "Pulse input" input).

**Remedy**

- Verify the brake feedback circuit.
- Verify the brake logic control circuit.
- Verify the brake behavior.
- Verify that the setting of **[Brake Release Time] $b \ r \ T$** and **[Brake Engage Time] BET** take into account the brake response time, **[Brake Fdbk Filter] $F \ b \ C \ i$** , and **[Brake Rly Fdbk Filter] $F \ b \ r \ i$** .

**Clearing the Error Code**

This detected error can be cleared manually with the **[Fault Reset Assign] $r \ S \ F$** parameter after the cause has been removed.

[Backlash Error] b 5 9 F**Probable Cause**

The torque threshold used for backlash function can not be reached after **[BL Monit Delay] b 9 E**.

**Remedy**

- Verify the settings
- Verify the coupling

**Clearing the Error Code**

This detected error can be cleared manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[DB unit sh. circuit] b u F**Probable Cause**

- Short-circuit from braking unit.
- Braking unit not connected. (not applicable for drive system braking unit option).

**Remedy**

- Verify the wiring of the braking unit.
- Verify that the braking unit value is not too low.

**Clearing the Error Code**

This detected error requires a power reset.

[DB unit op. circuit] b u F o**Probable Cause**

- Open-circuit from braking unit and/or braking resistor.
- Low current from braking unit and/or braking resistor.
- Braking unit not connected and/or braking resistor.

**Remedy**

- Verify the wiring of the braking unit and braking resistor.
- Verify that the total resistance value of the braking resistor is not too high.

**Clearing the Error Code**

This detected error requires a power reset.

[BUO Overheat error] b u H F**Probable Cause**

The cabinet thermal switch of the braking unit option is at active state, the fan cabinet has been switched on but there is no fan feedback.

The digital inputs DI50 and DI51 of supply units equipped with Cabinet IO are configured as cabinet temperature monitoring. If the enclosure thermo switch opens in case of over temperature, the **[BUO Overheat Error] b u H F** is triggered. Or the braking unit option internal temperature is too high.

**Remedy**

- Verify the braking unit option cabinet fan and its wiring.
- Verify the temperature in the braking unit option enclosure is not too high.
- Verify the setting of the thermo switch of the BUO (must be 60 °C (140 °F)).
- Verify the BUO load, the ventilation, and the ambient temperature. Wait for the supply unit to cool down before restarting.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] R E r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[BUO Overcurrent error] *b u o C*



Probable Cause

- Parameters in the **[Braking Resistor monit]** *b r P* - menu are not correct.
- Braking load too high.



Remedy

- Verify the braking unit parameters.
- Check the braking resistor.



Clearing the Error Code

This detected error requires a power reset.

[Circuit Breaker Error] *C b F*



Probable Cause

The DC bus voltage level is not correct compared to the circuit breaker logic control (start or stop pulse) after the configured timeout **[Mains V. time out]** *L C E*.



Remedy

- Verify the circuit breaker logic control (pulse time for start and stop).
- Verify the mechanical state of the circuit breaker.



Clearing the Error Code

This detected error requires a power reset.

[CabinetCircuit A Error] *C F A*



Probable Cause

The monitoring function has detected an error. The digital input assigned to **[CabinetCircuit A Assign]** *C F A A* is active when the detected error duration is longer than **[CabinetCircuit A Delay]** *F d A*.



Remedy

- Identify the cause of detection.
- Verify the connected device (door switch, thermal switch,...) and its wiring.
- Verify the **[CabinetCircuit A Assign]** *C F A A* parameter assignment.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** *A E r* or manually with the **[Fault Reset Assign]** *r S F* parameter after the cause has been removed.

[CabinetCircuit B Error] $C F b$



Probable Cause

The monitoring function has detected an error. The digital input assigned to **[CabinetCircuit B Assign]** $C F B b$ is active when the detected error duration is longer than **[CabinetCircuit B Delay]** $F d b$.



Remedy

- Identify the cause of detection.
- Verify the connected device (door switch, thermal switch,...) and its wiring.
- Verify the **[CabinetCircuit B Assign]** $C F B b$ parameter assignment.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** $R E r$ or manually with the **[Fault Reset Assign]** $r 5 F$ parameter after the cause has been removed.

[CabinetCircuit C Error] $C F c$



Probable Cause

The monitoring function has detected an error. The digital input assigned to **[CabinetCircuit C Assign]** $C F C c$ is active when the detected error duration is longer than **[CabinetCircuit C Delay]** $F d c$.



Remedy

- Identify the cause of detection.
- Verify the connected device (door switch, thermal switch,...) and its wiring.
- Verify the **[CabinetCircuit C Assign]** $C F C c$ parameter assignment.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** $R E r$ or manually with the **[Fault Reset Assign]** $r 5 F$ parameter after the cause has been removed.

[Incorrect Configuration] C F F**Probable Cause**

- Option module changed or removed.
- Control block replaced by a control block configured on a drive with a different rating.
- The current configuration is inconsistent.

**Remedy**

- Verify that there is no detected error on the option module.
- In the event of the control block being changed deliberately, see the remarks below.
- Return to factory settings or retrieve the backup configuration if it is valid.

**Clearing the Error Code**

This detected error is cleared as soon as its cause has been removed.

[Invalid Configuration] C F ,**Probable Cause**

Invalid configuration. The configuration loaded in the drive via the commissioning tool or fieldbus is inconsistent.

**Remedy**

- Verify the loaded configuration.
- Load a valid configuration.

**Clearing the Error Code**

This detected error is cleared as soon as its cause has been removed.

[Conf Transfer Error] [F , 2]**Probable Cause**

- The configuration transfer to the drive was not successful or interrupted.
- The configuration loaded is not compatible with the drive.

**Remedy**

- Verify the configuration loaded previously.
- Load a compatible configuration.
- Use PC software commissioning tool to transfer a compatible configuration
- Perform a factory setting

**Clearing the Error Code**

This detected error is cleared as soon as its cause has been removed.

[Pre-settings Transfer Error] [F , 3]**Probable Cause**

The configuration transfer to the drive was not successful or interrupted.

**Remedy**

Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error is cleared as soon as its cause has been removed.

[Empty Configuration] *L F 14*



Probable Cause

The selected configuration for the **[Multimotors config] *PPP*** - function has not been created previously.



Remedy

- Verify the configurations saved.
- Switch to a compatible configuration.



Clearing the Error Code

This detected error is cleared as soon as its cause has been removed.

[Cabinet Overheat Error] *L H F*



Probable Cause

The cabinet thermal switch is at active state, the cabinet fan(s) has been switched on but there is no fan feedback.

The digital inputs DI50 and DI51 of drives equipped with Cabinet IO are configured as cabinet temperature monitoring. If the enclosure thermo switch opens in case of over temperature, the **[Cabinet Overheat Error] *L H F*** is triggered.

This error can be triggered only in RUN state. On other state, the **[Cabinet Overheat Warn] *L H R*** is active.



Remedy

- Verify cabinet fan(s) and its wiring.
- Verify the temperature in the enclosure is not too high.
- Verify the setting of the thermostat (must be 60°C (140°F))



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset] *AEF*** or manually with the **[Fault Reset Assign] *r 5 F*** parameter after the cause has been removed.

[Fieldbus Com Interrupt] C n F**Probable Cause**

Communication interruption on fieldbus module.

This error is triggered when the communication between the fieldbus module and the master (PLC) is interrupted.

**Remedy**

- Verify the environment (electromagnetic compatibility).
- Verify the wiring.
- Verify the timeout.
- Replace the option module.
- Contact your local Schneider Electric representative

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] F L r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[CANopen Com Interrupt] C o F**Probable Cause**

Communication interruption on the CANopen® fieldbus

**Remedy**

- Verify the communication fieldbus.
- Verify the timeout.
- Refer to the CANopen® user manual.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] F L r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[Cooling Pump Error] C_{OPF}



Probable Cause

Cooling pump is not working.



Remedy

Contact your local Schneider Electric representative.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** R_{Lr} or manually with the **[Fault Reset Assign]** r_{5F} parameter after the cause has been removed.

[Precharge Capacitor] C_{rFI}



Probable Cause

- Charging circuit control detected error or charging resistor damaged.
- Supply mains too low.



Remedy

- Turn off the drive and then turn on again.
- Verify the setting of **[DC Bus Source Type]** d_{Cb5}
- Verify the internal connections.
- Verify the voltage and the parameters of **[Undervoltage handling]** u_{5b} .
- Contact your local Schneider Electric representative



Clearing the Error Code

This detected error can be cleared manually with the **[Extended Fault Reset]** H_{rFL} parameter enabled after the cause has been removed.

[AFE contactor fdbk error] [r F 3]**Probable Cause**

- The mains contactor feedback is inactive during DC Bus charging phase.
- The mains contactor feedback becomes inactive without mains phase loss detection while the drive is in operation (Ready or Run state).

**Remedy**

- Verify the feedback circuit.
- Verify the mechanical state of the mains contactor.

**Clearing the Error Code**

This detected error requires a power reset.

[Channel Switch Error] [5 F]**Probable Cause**

Switch to an invalid channel.

**Remedy**

Verify the function parameters.

**Clearing the Error Code**

This detected error is cleared as soon as its cause has been removed.

[Dynamic Load Error] $dL F$



Probable Cause

Load variation out of range.



Remedy

Verify for a mechanical cause of load instability.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** $R L r$ or manually with the **[Fault Reset Assign]** $r S F$ parameter after the cause has been removed.

[DC Bus Ripple Error] $dC r E$



Probable Cause

Persistent ripple observed on the DC bus or DC bus capacitors damaged.



Remedy

- Turn off the drive and then turn on again.
- Verify correct behavior of the input filter.
- Verify the mains wirings.
- Verify the internal connections.
- Contact your local Schneider Electric representative.



Clearing the Error Code

This detected error requires a power reset.

[Encoder Coupling] E C F



Probable Cause

The mechanical coupling of the encoder is broken.

The detection is active when **[Encoder Coupling Monit] E C C** parameter is set to **[Yes] 4 E 5**.

It triggers the error when the speed feedback is 0 and the drive is in torque or current limitation.

The limits for speed feedback are:

- 5 Hz for minimum
- 10% of **[Nominal Motor Freq] F r 5** for maximum
- Verify the setting of **[Encoder Coupling Monit] E C C** parameter.
- Verify the setting of **[Encoder check time] E C L** parameter.

The monitoring is not compatible with torque or current limitation functions.



Remedy

Verify the mechanical coupling of the encoder.



Clearing the Error Code

This detected error can be cleared manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[EEPROM Control] E E F I



Probable Cause

An error of the internal memory of the control block has been detected.



Remedy

- Verify the environment (electromagnetic compatibility).
- Switch off the product.
- Return to factory settings.
- Contact your local Schneider Electric representative.



Clearing the Error Code

This detected error requires a power reset.

[EEPROM Power] E E F 2**Probable Cause**

An error of the internal memory of the power board has been detected.

**Remedy**

- Verify the environment (electromagnetic compatibility).
- Switch off the product.
- Return to factory settings.
- Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Encoder] E n F**Probable Cause**

Encoder feedback error.

The difference between the measured and estimated speed is greater than 4% of **[Nominal Motor Freq] F r 5** or **[Sync Nominal Freq] F r 5 5**.

**Remedy**

- Verify the configuration parameters for the encoder used.
- Verify the mechanical and electrical operation of the encoder.
- Verify the consistency between the encoder signals and the direction of rotation of the motor.
- If necessary, reverse the direction of rotation of the motor (**[Output Ph rotation] P H r** parameter)
- Verify the encoder module.
- Verify the encoder type and supply voltage.

**Clearing the Error Code**

This detected error can be cleared manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[External Error] *E P F 1*



Probable Cause

- Event triggered by an external device, depending on user.
- An external error has been triggered via Embedded Ethernet.
- The error is caused by an external circuit.
- Ethernet configuration file is corrupted.



Remedy

- Remove the cause of the external error.
- Perform a factory setting of the Ethernet configuration or modify the **IP Mode**



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** *A F R* or manually with the **[Fault Reset Assign]** *r 5 F* parameter after the cause has been removed.

[Fieldbus Error] *E P F 2*



Probable Cause

Event triggered by an external device, depending on user.



Remedy

Remove the cause of the external error.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** *A F R* or manually with the **[Fault Reset Assign]** *r 5 F* parameter after the cause has been removed.

[Embd Eth Com Interrupt] E L H F



Probable Cause

Communication interruption on the Ethernet IP ModbusTCP bus.



Remedy

- Verify the communication bus.
- Refer to the Ethernet user manual.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset] R L r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[Out Contact Closed Error] F C F I



Probable Cause

The output contactor remains closed although the opening conditions have been met.



Remedy

- Verify the output contactor and its wiring.
- Verify the contactor feedback wiring.



Clearing the Error Code

This detected error requires a power reset.

[Out Contact Opened Error] *F C F 2*



Probable Cause

The output contactor remains opened although the closing conditions have been met.



Remedy

Verify the output contactor and its wiring. Verify the contactor feedback wiring.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** *F E r* or manually with the **[Fault Reset Assign]** *r 5 F* parameter after the cause has been removed.

[FDR 1 Error] *F d r 1*



Probable Cause

- Embedded Ethernet FDR error
- Communication interruption between the drive and the PLC
- Configuration file incompatible, empty or invalid
- Drive rating not consistent with the configuration file



Remedy

- Verify the drive and PLC connection
- Verify the communication workload
- Restart the transfer of configuration file from drive to PLC



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** *F E r* or manually with the **[Fault Reset Assign]** *r 5 F* parameter after the cause has been removed.

[FDR 2 Error] *F d r 2*



Probable Cause

- Ethernet fieldbus module FDR error
- Communication interruption between the drive and the PLC
- Configuration file incompatible, empty or corrupted
- Drive rating not consistent with the configuration file



Remedy

- Verify the drive and PLC connection
- Verify the communication workload
- Restart the transfer of configuration file from drive to PLC



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** *R E r* or manually with the **[Fault Reset Assign]** *r 5 F* parameter after the cause has been removed.

[Fan Feedback Error] *F F d F*



Probable Cause

Fan speed too low.

[Fan Feedback Warning] *F F d R* warning has been active for a time longer than 10 minutes.



Remedy

Replace the fan.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** *R E r* or manually with the **[Fault Reset Assign]** *r 5 F* parameter after the cause has been removed.

[Firmware Update Error] FWE r**Probable Cause**

Firmware update function has detected an error.

**Remedy**

Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error is cleared as soon as its cause has been removed.

[Boards Compatibility] HCF**Probable Cause**

Hardware configuration error.

The **[Pairing password] PP** , parameter has been enabled and an option module has been changed.

**Remedy**

- Refit the original option module.
- Confirm the configuration by entering the **[Pairing password] PP** , if the module was changed deliberately.

**Clearing the Error Code**

This detected error is cleared as soon as its cause has been removed.

[Egy Saving Exit Error] *i d L F*



Probable Cause

The drive is not turned on even though **[Egy Saving Timeout]** *i d L t* has elapsed.



Remedy

- Verify the Supply Mains/contactor/drive wiring.
- Verify the timeout.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** *R E r* or manually with the **[Fault Reset Assign]** *r 5 F* parameter after the cause has been removed.

[MonitorCircuit A Error] *i F R*



Probable Cause

The digital input assigned to **[MonitorCircuit A Assign]** *i F R R* is active for longer than **[MonitorCircuit A Delay]** *i F d R*.



Remedy

- Verify the connected device and its wiring.
- Verify the **[MonitorCircuit A Assign]** *i F R R* parameter assignment.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** *R E r* or manually with the **[Fault Reset Assign]** *r 5 F* parameter after the cause has been removed.

[MonitorCircuit B Error] , F B**Probable Cause**

The digital input assigned to **[MonitorCircuit B Assign] , F B** is active for longer than **[MonitorCircuit B Delay] , F d b**.

**Remedy**

- Verify the connected device and its wiring.
- Verify the **[MonitorCircuit B Assign] , F B** parameter assignment.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] R E r** or manually with the **[Fault Reset Assign] r S F** parameter after the cause has been removed.

[MonitorCircuit C Error] , F C**Probable Cause**

The digital input assigned to **[MonitorCircuit C Assign] , F C** is active for longer than **[MonitorCircuit C Delay] , F d C**.

**Remedy**

- Verify the connected device and its wiring.
- Verify the **[MonitorCircuit C Assign] , F C** parameter assignment.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] R E r** or manually with the **[Fault Reset Assign] r S F** parameter after the cause has been removed.

[MonitorCircuit D Error] , F d



Probable Cause

The digital input assigned to **[MonitorCircuit D Assign]** , F R d is active for longer than **[MonitorCircuit D Delay]** , F d d.



Remedy

- Verify the connected device and its wiring.
- Verify the **[MonitorCircuit D Assign]** , F R d parameter assignment.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** R E r or manually with the **[Fault Reset Assign]** r 5 F parameter after the cause has been removed.

[Input Overheating] , H F



Probable Cause

The AFE brick temperature is too high.



Remedy

Verify the drive ventilation and the ambient temperature. Wait for the drive to cool down before restarting.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** R E r or manually with the **[Fault Reset Assign]** r 5 F parameter after the cause has been removed.

[Internal Link Error] I L F**Probable Cause**

Communication interruption between option module and the drive.

**Remedy**

- Verify the environment (electromagnetic compatibility).
- Verify the connections.
- Replace the option module.
- Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Internal Error 0] I n F 0**Probable Cause**

- Communication interruption between microprocessors of the control board.
- The power board rating is not valid.

**Remedy**

Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Internal Error 1] INF 1**Probable Cause**

The power board rating is not valid.

**Remedy**

Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Internal Error 2] INF 2**Probable Cause**

The power board is incompatible with the control block software.

**Remedy**

Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Internal Error 3] INF 3



Probable Cause

Internal communication detected error.



Remedy

- Verify the wiring on drive control terminals (internal 10V supply for analog inputs overloaded).
- Contact your local Schneider Electric representative.



Clearing the Error Code

This detected error requires a power reset.

[Internal Error 4] INF 4



Probable Cause

Internal data inconsistent.



Remedy

Contact your local Schneider Electric representative.



Clearing the Error Code

This detected error requires a power reset.

[Internal Error 6] INF 6**Probable Cause**

- The option module installed in the drive is not recognized.
- The removable control terminal modules (if existing) are not present or not recognized.
- The embedded Ethernet adapter is not recognized.

**Remedy**

- Verify the catalog number and compatibility of the option module.
- Plug the removable control terminal modules after the drive has been switched off.
- Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Internal Error 7] INF 7**Probable Cause**

Communication interruption with CPLD component of Control board.

**Remedy**

Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Internal Error 8] *INF 8*



Probable Cause

The internal power switching supply is not correct.



Remedy

Contact your local Schneider Electric representative.



Clearing the Error Code

This detected error requires a power reset.

[Internal Error 9] *INF 9*



Probable Cause

An error on the current circuit measurement has been detected.



Remedy

Contact your local Schneider Electric representative.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** *AE r* or manually with the **[Fault Reset Assign]** *r 5 F* parameter after the cause has been removed.

[Internal Error 10] *inFR***Probable Cause**

The input stage is not operating correctly.

**Remedy**

Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Internal Error 11] *inFb***Probable Cause**

The internal drive thermal sensor is not operating correctly.

**Remedy**

Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset]** *REr* or manually with the **[Fault Reset Assign]** *r5F* parameter after the cause has been removed.

[Internal Error 12] *InfC*



Probable Cause

Internal current supply error.



Remedy

Contact your local Schneider Electric representative.



Clearing the Error Code

This detected error requires a power reset.

[Internal Error 13] *InfD*



Probable Cause

Differential current deviation.



Remedy

Verify connection of DigiLink cable (GG45).

Contact your local Schneider Electric representative.



Clearing the Error Code

This detected error can be cleared manually with the **[Extended Fault Reset]** *HrFC* parameter enabled after the cause has been removed.

[Internal Error 14] INF E**Probable Cause**

Internal microprocessor detected error.

**Remedy**

- Verify that the error code can be cleared.
- Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Internal Error 15] INF F**Probable Cause**

Serial memory flash format error.

**Remedy**

Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Internal Error 16] *INF G***Probable Cause**

Communication interruption or internal error of output relays option module

**Remedy**

- Verify that the option module is correctly connected to the slot
- Replace the option module.
- Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Internal Error 17] *INF H***Probable Cause**

Communication interruption with the Extension module of digital & analog I/O or internal error of the Extension module of digital & analog I/O.

**Remedy**

- Verify that the option module is correctly connected to the slot
- Replace the option module.
- Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Internal Error 18] INF1**Probable Cause**

Safety Module Internal Error

- Communication interruption with Safety function module.
- Internal error of the Safety function module.

**Remedy**

- Verify the Safety Module errors for additional information.
- Verify that the option module is correctly inserted into the slot.
- Replace the option module.
- Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Internal Error 19] INFJ**Probable Cause**

An error on the encoder module has been detected.

**Remedy**

- Verify if the encoder option module is connected correctly to the slot.
- Verify the compatibility of the encoder.
- Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Internal Error 20] *inFK*



Probable Cause

Option module interface board error.



Remedy

Contact your local Schneider Electric representative.



Clearing the Error Code

This detected error requires a power reset.

[Internal Error 21] *inFL*



Probable Cause

Internal Real Time Clock error. It could be a communication error between the keypad and the drive or a clock oscillator start error.



Remedy

Contact your local Schneider Electric representative.



Clearing the Error Code

This detected error requires a power reset.

[Internal Error 22] *INFn***Probable Cause**

An error on the embedded Ethernet adapter has been detected.
Unstability of external 24 Vdc supply.

**Remedy**

Verify the connection to the Ethernet port.
Verify the 24 Vdc stability.
Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Internal Error 23] *INFn***Probable Cause**

A communication interruption between the control block and AFE or BU bricks has been detected.

**Remedy**

Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Internal Error 25] *INF P*



Probable Cause

Incompatibility between Control Board hardware version and firmware version.



Remedy

- Update the firmware package.
- Contact your local Schneider Electric representative.



Clearing the Error Code

This detected error requires a power reset.

[Internal Error 27] *INF r*



Probable Cause

Diagnostics in CPLD have detected an error.



Remedy

Contact your local Schneider Electric representative.



Clearing the Error Code

This detected error requires a power reset.

[Internal Error 28] INF5**Probable Cause**

An error on the AFE brick has been detected.

**Remedy**

Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Internal Error 29] INF6**Probable Cause**

An error on the power unit / inverter brick has been detected.

**Remedy**

Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Internal Error 30] *i n F u***Probable Cause**

An error on the rectifier brick has been detected or an **[Input phase loss] *P H F*** error has been triggered when the DC bus is charged.

**Remedy**

Turn off the drive and then turn on again.

If **[Input phase loss] *P H F*** error code replaces **[Internal Error 30] *i n F u***, refer to the instructions of **[Input phase loss] *P H F*** error, page 682 otherwise contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Internal Error 31] *i n F v***Probable Cause**

An error on the brick architecture has been detected (brick unavailable).

**Remedy**

Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] *A E r*** or manually with the **[Fault Reset Assign] *r S F*** parameter after the cause has been removed.

[Internal Error 32] I n F W**Probable Cause**

Firmware update function has detected an error.

**Remedy**

Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Input Contactor] L C F**Probable Cause**

The drive is not switched on even though **[Mains V. time out] L C E** timeout has elapsed.

**Remedy**

- Verify the input contactor and its wiring.
- Verify the **[Mains V. time out] L C E** timeout.
- Verify the supply mains/contactor/drive wiring.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] R E r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[AI1 4-20mA loss] L F F I**Probable Cause**

Loss of the 4-20 mA on analog input AI1.

This error is triggered when the measured current is below 2 mA.

**Remedy**

- Verify the connection on the analog inputs.
- Verify the setting of **[AI1 4-20mA loss] L F L I** parameter.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] F L r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[AI3 4-20mA loss] L F F 3**Probable Cause**

Loss of the 4-20 mA on analog input AI3.

This error is triggered when the measured current is below 2 mA.

**Remedy**

- Verify the connection on the analog inputs.
- Verify the setting of **[AI3 4-20mA loss] L F L 3** parameter.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] F L r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[AI4 4-20mA loss] L F F 4**Probable Cause**

Loss of the 4-20 mA on analog input AI4.

This error is triggered when the measured current is below 2mA.

**Remedy**

- Verify the connection on the analog inputs.
- Verify the setting of **[AI4 4-20mA loss] L F L 4** parameter.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] R L r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[AI5 4-20mA loss] L F F 5**Probable Cause**

Loss of the 4-20 mA on analog input AI5.

This error is triggered when the measured current is below 2 mA.

**Remedy**

- Verify the connection on the analog inputs.
- Verify the setting of **[AI5 4-20mA loss] L F L 5** parameter.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] R L r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[ON Lock Error] L K 0 n**Probable Cause**

External device not ready.

**Remedy**

Verify external device assigned to ON lock input.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] R E r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[AFE Bus Ref Error] n d F**Probable Cause**

Communication interruption or disturbance of the DC bus reference link between the Supply Unit AFE and the drives during operation.

- If the DC bus reference is shared using PTI/PTO, the error is triggered if the PTI signal is less than 10 kHz.
- If the DC bus reference is shared using Modbus Serial line, the error is triggered if the drive does not receive a new value within the **[Modbus Timeout] t t 0** value.

**Remedy**

If DC bus reference is shared using PTI/PTO:

- Verify the values of PTI and PTO signals.
- Verify PTI parameters configuration on drive side.
- Verify PTO parameters configuration on Supply Unit AFE side.
- Verify that only 4 drives maximum are connected on PTO signal (PTO max current is 20 mA and PTI consumption is 5 mA)

If DC bus reference is shared using Modbus Serial:

- Verify the Modbus serial communication line.

**Clearing the Error Code**

This detected error can be cleared manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[Load Mvt Error] $\Pi d C F$



Probable Cause

Load movement for which no command has been given.



Remedy

Verify the brake command circuit. Verify the brake.



Clearing the Error Code

This detected error can be cleared manually with the **[Fault Reset Assign]** $r 5 F$ parameter after the cause has been removed.

[MultiDrive Link Error] $\Pi d L F$



Probable Cause

- The communication has been interrupted while running.
- The function has detected an inconsistency in the system configuration.



Remedy

- Check the communication network.
- Check the configuration of the multi-drive link function.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** $R L r$ or manually with the **[Fault Reset Assign]** $r 5 F$ parameter after the cause has been removed.

[Mains Freq Out Of Range] Π F F**Probable Cause**

[Mains Frequency] F H C on the AFE brick is out of range.

**Remedy**

Verify the mains frequency.

**Clearing the Error Code**

This detected error can be cleared manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[Module Overheat] Π □ F**Probable Cause**

Cabinet temperature too high.

[Module Overheat] Π □ H warning has been active for a time longer than 10 minutes.

**Remedy**

Verify the cooling of the cabinet.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] H E r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[M/S Device Error] Π 5 d F



Probable Cause

- For a master, one or more slaves are not present or not ready.
- For a slave, the master is not present.



Remedy

- Verify the drive status.
- Verify the settings of the master/slave architecture.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** R L r or manually with the **[Fault Reset Assign]** r 5 F parameter after the cause has been removed.

[DC Bus Overvoltage] α b F



Probable Cause

- Deceleration time too short or driving load too high.
- Supply mains voltage too high.



Remedy

- Increase the deceleration time.
- Configure the **[Dec ramp adapt.]** b r R function if it is compatible with the application.
- Verify the supply mains voltage.
- Verify the braking circuit capability if present.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** R L r or manually with the **[Fault Reset Assign]** r 5 F parameter after the cause has been removed.

[AFE Bus unbalancing] ▫ b F 2**Probable Cause**

- AFE DC bus unbalancing.
- Supply mains voltage too high.
- Total generative power too high

**Remedy**

- Verify the supply mains voltage.
- Contact your local Schneider Electric representative

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] R E r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[Overcurrent] ▫ C F**Probable Cause**

- Parameters in the **[Motor data] Π ▫ A** - menu are not correct.
- Inertia or load too high.
- Mechanical locking.

**Remedy**

- Verify the motor parameters.
- Verify the size of the motor/drive/load.
- Verify the state of the mechanism.
- Decrease **[Current limitation] C L r**.
- Increase the switching frequency.

**Clearing the Error Code**

This detected error requires a power reset.

[Drive Overheating] ▫ H F



Probable Cause

Drive temperature too high.



Remedy

Verify the motor load, the drive ventilation, and the ambient temperature. Wait for the drive to cool down before restarting.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** *R E r* or manually with the **[Fault Reset Assign]** *r 5 F* parameter after the cause has been removed.

[Process Overload] ▫ L C



Probable Cause

Process overload.



Remedy

- Verify and remove the cause of the overload.
- Verify the parameters of the **[Process overload]** *▫ L d* - function.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** *R E r* or manually with the **[Fault Reset Assign]** *r 5 F* parameter after the cause has been removed.

[Motor Overload] \square L F**Probable Cause**

Triggered by excessive motor current.

**Remedy**

- Verify the setting of the motor thermal monitoring
- Verify the motor load. Wait for the motor to cool down before restarting
- Verify the setting of the following parameters:
 - **[Motor Th Current]** r L H
 - **[Motor Thermal Mode]** L H L
 - **[Motor Therm Thd]** L L d
 - **[MotorTemp ErrorResp]** \square L L

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset]** H L r or manually with the **[Fault Reset Assign]** r 5 F parameter after the cause has been removed.

[Single Output Phase Loss] \square P F I**Probable Cause**

Loss of one phase at drive output.

**Remedy**

Verify the wiring from the drive to the motor.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset]** H L r or manually with the **[Fault Reset Assign]** r 5 F parameter after the cause has been removed.

[Output Phase Loss] $\square P F 2$ **Probable Cause**

- Motor not connected or motor power too low.
- Output contactor opened.
- Instantaneous instability in the motor current.

**Remedy**

- Verify the wiring from the drive to the motor.
- If an output contactor is being used, set **[OutPhaseLoss Assign] $\square P L$** to **[No Error Triggered] $\square H C$** .
- If the drive is connected to a low-power motor or not connected to a motor: In factory settings mode, motor phase loss detection is active **[Output Phase Loss] $\square P L = [OPF Error Triggered] 4 E 5$** . Deactivate motor phase loss detection **[Output Phase Loss] $\square P L = [Function Inactive] n o$** .
- Verify and optimize the following parameters: **[IR compensation] $\mu F r$** , **[Nom Motor Voltage] $\mu n 5$** and **[Rated mot. current] $n C r$** and perform **[Autotuning] $t u n$** .

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] $R E r$** or manually with the **[Fault Reset Assign] $r 5 F$** parameter after the cause has been removed.

[Supply Mains Overvoltage] $\square 5 F$ **Probable Cause**

- Supply mains voltage too high.
- Disturbed supply mains.

**Remedy**

Verify the supply mains voltage.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] $R E r$** or manually with the **[Fault Reset Assign] $r 5 F$** parameter after the cause has been removed.

[Cab I/O 24V Error] P 2 4 C**Probable Cause**

The input DI58 is used to monitor the 24V on input terminal. If it breaks down, all inputs are suppressed to avoid unintended error messages (from software version V1.3).

- DI58 cabinet I/O input is not wired to the internal terminal X231.
- DI58 is used by another cabinet I/O function.

**Remedy**

- Verify if the terminal X231 is wired to the cabinet I/O input DI58.
- If the DI58 is used by another cabinet function, it is needed to change the function to another free cabinet I/O input on the X220 terminals. Additionally, it is needed to adapt the parameter setting of the new selected input.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] F E r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[PumpCycle Start Error] P C P F**Probable Cause**

The Pumpcycle monitoring function has exceeded the maximum number of start sequences allowed in the time window.

**Remedy**

- Search for a possible cause of repetitive start of system.
- Verify the settings of the monitoring function.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] F E r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[PID Feedback Error] P F Π F**Probable Cause**

The PID feedback error was out of the allowed range around the set point during the time window.

**Remedy**

- Check for mechanical breakdown of pipes.
- Check for water leakage.
- Check for open discharge valve.
- Check for fire hydrant opened.
- Verify the settings of the monitoring function.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] R L r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[Program Loading Error] P G L F**Probable Cause**

Verify that the error code can be cleared.

**Remedy**

Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error is cleared as soon as its cause has been removed.

[Program Running Error] P G r F**Probable Cause**

Verify that the error code can be cleared.

**Remedy**

Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Input phase loss] P H F**Probable Cause**

- Drive incorrectly supplied or a tripped fused.
- One phase is unavailable.
- 3-phase Drive used on a single-phase supply mains.
- Unbalanced load.

**Remedy**

- Verify the power connection and the fuses.
- Use a 3-phase supply mains.
- Disable the detected error by **[Input phase loss] i P L = [No] n o** if single phase supply mains or DC bus supply is used.

**Clearing the Error Code**

This detected error is cleared as soon as its cause has been removed.

[Rotation Angle Monit] r R d F**Probable Cause**

The monitoring of the rotation angle has detected a too high deviation.

**Remedy**

- Check for mechanical problems in the system.
- Verify the settings of the monitoring function.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] R E r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[Safety Function Error] S R F F**Probable Cause**

- Debounce time exceeded.
- Internal hardware error.
- STOA and STOB have a different status (high/low) for more than 1 second.

**Remedy**

- Verify the wiring of the digital inputs STOA and STOB.
- Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Safety Violation] S A V F**Probable Cause**

- Safety Module Violation Error.
- Safety Module has detected a violation of defined limits.

**Remedy**

- Verify the Safety Module errors for additional information.
- Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Motor short circuit] S C F I**Probable Cause**

Short-circuit or grounding at the drive output.

**Remedy**

- Verify the cables connecting the drive to the motor, and the motor insulation.
- Adjust the switching frequency.
- Connect chokes in series with the motor.
- Verify the adjustment of speed loop and brake.
- Increase the **[Time to restart] t E r**

**Clearing the Error Code**

This detected error can be cleared manually with the **[Extended Fault Reset] H r F C** parameter enabled after the cause has been removed.

[Ground Short Circuit] 5 C F 3**Probable Cause**

Significant ground leakage current at the drive output if several motors are connected in parallel.

**Remedy**

- Verify the cables connecting the drive to the motor, and the motor insulation.
- Adjust the switching frequency.
- Connect chokes in series with the motor.
- Verify the adjustment of speed loop and brake.
- Increase the **[Time to restart] t E r**
- If you have long cables, verify the setting of **[Ground Fault Activation] G r F L**.

**Clearing the Error Code**

This detected error requires a power reset.

[IGBT Short Circuit] 5 C F 4**Probable Cause**

Power component detected error.

At product power-on, the IGBTs are tested for short circuit. Thereby an error (short circuit or interruption) has been detected on at least one IGBT. The time to check each transistor is between 1 and 10 μ s.

**Remedy**

Verify the setting of **[Output Short Circuit Test] S E r E** parameter.

Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] A E r** or manually with the **[Fault Reset Assign] r S F** parameter after the cause has been removed.

[Motor Short Circuit] 5 L F 5**Probable Cause**

Short-circuit at drive output.

**Remedy**

- Verify the cables connecting the drive to the motor, and the motor's insulation.
- Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] r E r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[AFE ShortCircuit error] 5 L F 6**Probable Cause**

AFE rectifier IGBT short-circuit.

AFE over current due to power factor correction systems in the grid. Each switch of the capacitor produces over voltage in the mains which can lead an over current in the AFE.

**Remedy**

- Verify the mains voltage when the power factor correction system is changing the capacitive load. Install only power factor correction systems with integrated reactors
- Verify the cables connecting the AFE brick to the mains.
- Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Safety IO Error] 5 1 0 F**Probable Cause**

- Safety Module IO Error.
- Error on input / output of the Safety Module.
- Error on encoder signal.

**Remedy**

- Verify the Safety Module errors for additional information.
- Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Safety Config Error] 5 C F F**Probable Cause**

- Safety Module Configuration Error.
- Incorrect configuration linked to the Safety Module has been detected.

**Remedy**

- Verify the Safety Module errors for additional information.
- Contact your local Schneider Electric representative.

**Clearing the Error Code**

This detected error requires a power reset.

[Modbus Com Interruption] 5 L F 1**Probable Cause**

Communication interruption on the Modbus port.

**Remedy**

- Verify the communication bus.
- Verify the timeout.
- Refer to the Modbus user manual.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] r 5 F 1** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[PC Com Interruption] 5 L F 2**Probable Cause**

Communication interruption with the commissioning software.

**Remedy**

- Verify the commissioning software connecting cable.
- Verify the timeout.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] r 5 F 2** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[HMI Com Interruption] 5 L F 3**Probable Cause**

Communication interruption with the Graphic display terminal.

This error is triggered when the command or reference value are given using the Graphic Display Terminal and if the communication is interrupted during more than 2 seconds.

**Remedy**

- Verify the Graphic display terminal connection.
- Verify the timeout.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] R L r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[Motor Overspeed] 5 o F**Probable Cause**

- Instability or driving load too high.
- If a downstream contactor is used, the contacts between the motor and the drive have not been closed before applying a Run command.
- The overspeed threshold (corresponding to 110 % of **[Max frequency] L F r**) has been reached.

**Remedy**

- Verify the motor parameter settings.
- Verify the size of the motor/drive/load.
- Verify and close the contacts between the motor and the drive before applying a Run command.
- Verify the consistency between **[Max frequency] L F r** and **[High Speed] H 5 P**. It is recommended to have at least **[Max frequency] L F r** $\geq 110\%$ * **[High Speed] H 5 P**.

**Clearing the Error Code**

This detected error can be cleared manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[Encoder Feedback Loss] 5 P F**Probable Cause**

- Encoder feedback signal missing.
- No top Z signal after two rotations has been done.
- No signal on the pulse input, if the input is used for speed measurement.
- Noise on the encoder feedback signal.
- Encoder consumption exceeds power supply maximum current.

**Remedy**

- Verify the error code value **[Encoder Fdbck Error] E n C E**.
- Verify the wiring between the encoder and the drive.
- Verify the encoder.
- Verify the encoder settings.
- Verify the wiring of the pulse input and the sensor used.
- Use a shielded cable and ground both ends.
- Verify the encoder power supply. Reduce **[Encoder Supply Voltage] u E C V** value.

**Clearing the Error Code**

This detected error can be cleared manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[Security Files Corrupt] 5 P F C**Probable Cause**

Security files corrupted or missing.

**Remedy**

Switch off the product. Upon next switch-on, the security file will be created again and the information related to cybersecurity (such as channel policy and password) will be reset to its default value.

**Clearing the Error Code**

This detected error requires a power reset.

[Torque timeout] 5 r F



Probable Cause

The torque control function is not able to regulate the torque within the configured dead band. The drive has switched to speed control for longer than **[Torque ctrl time out] r t o**.



Remedy

- Verify the settings of the **[Torque control] t o r** - function.
- Verify that there are no mechanical constraints.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset] R t r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[Torque Limitation Error] 5 5 F



Probable Cause

The drive was in torque limitation or current limitation state during **[Trq/I Limit Timeout] 5 t o**.



Remedy

- Verify the settings of the **[Torque limitation] t o L** - function.
- Verify that there are no mechanical constraints.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset] R t r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[Motor Stall Error] S E F



Probable Cause

The stall monitoring function has detected an error.

The **[Motor Stall Error] S E F** is triggered on the following conditions:

- The output frequency is smaller than the stalling frequency **[Stall Frequency] S E P 3**
- The output current is higher than the stalling current **[Stall Current] S E P 2**
- For a duration longer than the stalling time **S[Stall Max Time] S E P 1**.



Remedy

- Search for a mechanical blocking of the motor.
- Search for a possible cause of motor overload.
- Verify the settings of the monitoring function.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset] A E r** or manually with the **[Fault Reset Assign] r S F** parameter after the cause has been removed.

[AI1 Thermal Sensor Error] E I C F



Probable Cause

The thermal monitoring function has detected an error of the thermal sensor connected to the analog input AI1:

- Open circuit, or
- Short circuit



Remedy

- Verify the sensor and its wiring.
- Replace the sensor.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset] A E r** or manually with the **[Fault Reset Assign] r S F** parameter after the cause has been removed.

[AI3 Thermal Sensor Error] E 3 C F



Probable Cause

The thermal monitoring function has detected an error of the thermal sensor connected to the analog input AI3:

- Open circuit, or
- Short circuit



Remedy

- Verify the sensor and its wiring.
- Replace the sensor.
- Verify the setting of **[AI3 Type] P 1 3 E** parameter.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset] P 1 7** or manually with the **[Fault Reset Assign] P 5 F** parameter after the cause has been removed.

[AI4 Thermal Sensor Error] E 4 C F



Probable Cause

The thermal monitoring function has detected an error of the thermal sensor connected to the analog input AI4:

- Open circuit, or
- Short circuit



Remedy

- Verify the sensor and its wiring.
- Replace the sensor.
- Verify the setting of **[AI4 Type] P 1 4 E** parameter



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset] P 1 7** or manually with the **[Fault Reset Assign] P 5 F** parameter after the cause has been removed.

[AI5 Thermal Sensor Error] E 5 C F



Probable Cause

The thermal monitoring function has detected an error of the thermal sensor connected to the analog input AI5:

- Open circuit, or
- Short circuit



Remedy

- Verify the sensor and its wiring.
- Replace the sensor.
- Verify the setting of **[AI5 Type] R 1 5 E** parameter.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset] R E r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[Encoder Th Sensor Error] E E C F



Probable Cause

The thermal sensor monitoring function has detected a thermal sensor on the encoder module analog input:

- Open circuit, or
- Short circuit.



Remedy

- Verify the sensor and its wiring.
- Replace the sensor.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset] R E r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[MotorWinding A Error] $\epsilon F A$



Probable Cause

The digital input assigned to **[MotorWinding A Assign]** $\epsilon F A A$ is active for longer than **[MotorWinding A Delay]** $\epsilon F d A$.



Remedy

- Verify the connected device (motor winding thermal switch) and its wiring.
- Verify the motor load and the ambient temperature. Wait for the motor to cool down before restarting.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** $A \epsilon r$ or manually with the **[Fault Reset Assign]** $r 5 F$ parameter after the cause has been removed.

[MotorWinding B Error] $\epsilon F b$



Probable Cause

The digital input assigned to **[MotorWinding B Assign]** $\epsilon F B b$ is active for longer than **[MotorWinding B Delay]** $\epsilon F d b$.



Remedy

- Verify the connected device (motor winding thermal switch) and its wiring.
- Verify the motor load and the ambient temperature. Wait for the motor to cool down before restarting.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** $A \epsilon r$ or manually with the **[Fault Reset Assign]** $r 5 F$ parameter after the cause has been removed.

[MotorBearing A Error] $\epsilon F \epsilon$ **Probable Cause**

The digital input assigned to **[MotorBearing A Assign] $\epsilon F \epsilon \epsilon$** is active for longer than **[MotorBearing A Delay] $\epsilon F d \epsilon$** .

**Remedy**

- Verify the connected device (motor winding thermal switch) and its wiring.
- Verify the motor load and the ambient temperature. Wait for the motor to cool down before restarting.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] $\epsilon \epsilon r$** or manually with the **[Fault Reset Assign] $r 5 F$** parameter after the cause has been removed.

[MotorBearing B Error] $\epsilon F d$ **Probable Cause**

The digital input assigned to **[MotorBearing B Assign] $\epsilon F \epsilon d$** is active for longer than **[MotorBearing B Delay] $\epsilon F d d$** .

**Remedy**

- Verify the connected device (motor winding thermal switch) and its wiring.
- Verify the motor load and the ambient temperature. Wait for the motor to cool down before restarting.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] $\epsilon \epsilon r$** or manually with the **[Fault Reset Assign] $r 5 F$** parameter after the cause has been removed.

[AI1 Th Level Error] *EHIF***Probable Cause**

The thermal sensor monitoring function has detected a high temperature on analog input AI1.

**Remedy**

- Search for a possible cause of overheating.
- Verify the settings of the monitoring function.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] *AEr*** or manually with the **[Fault Reset Assign] *r5F*** parameter after the cause has been removed.

[AI3 Th Level Error] *EH3F***Probable Cause**

The thermal sensor monitoring function has detected a high temperature on analog input AI3.

**Remedy**

- Search for a possible cause of overheating.
- Verify the settings of the monitoring function.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] *AEr*** or manually with the **[Fault Reset Assign] *r5F*** parameter after the cause has been removed.

[AI4 Th Level Error] *E H 4 F***Probable Cause**

The thermal sensor monitoring function has detected a high temperature on analog input AI4.

**Remedy**

- Search for a possible cause of overheating.
- Verify the settings of the monitoring function.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] *H E r*** or manually with the **[Fault Reset Assign] *r 5 F*** parameter after the cause has been removed.

[AI5 Th Level Error] *E H 5 F***Probable Cause**

The thermal sensor monitoring function has detected a high temperature on analog input AI5.

**Remedy**

- Search for a possible cause of overheating.
- Verify the settings of the monitoring function.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] *H E r*** or manually with the **[Fault Reset Assign] *r 5 F*** parameter after the cause has been removed.

[Encoder Th Detected Error] *E H E F*



Probable Cause

The thermal sensor monitoring function has detected a high temperature on encoder module analog input.



Remedy

- Search for a possible cause of overheating.
- Verify the settings of the monitoring function.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** *R E r* or manually with the **[Fault Reset Assign]** *r 5 F* parameter after the cause has been removed.

[IGBT Overheating] *E J F*



Probable Cause

Drive power stage overheating.

On AFE drives: the thermal model of the AFE IGBT thermal monitoring has detected an overheat.



Remedy

- Verify the size of the load/motor/drive according to environment conditions.
- Reduce the switching frequency.



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** *R E r* or manually with the **[Fault Reset Assign]** *r 5 F* parameter after the cause has been removed.

[AFE IGBT over-heat error] E J F 2**Probable Cause**

Rectifier IGBT power stage overheating.

**Remedy**

- Verify the size of the load/motor/drive according to environment conditions.
- Verify and clean, if necessary, the cooling channel.
- Clean or replace the filter mats on IP54 products.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] F E r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[Drive Overload] E L 0 F**Probable Cause**

The **[Drive overload monit] 0 b r** - function has detected an error.

**Remedy**

- Verify the size of the load/motor/drive according to environment conditions.
- Verify the settings of the **[Drive Overload Monit] E L 0 L** parameter.

**Clearing the Error Code**

This detected error can be cleared with the **[Auto Fault Reset] F E r** or manually with the **[Fault Reset Assign] r 5 F** parameter after the cause has been removed.

[Autotuning Error] t_{nF} **Probable Cause**

An error has been detected during a (standstill) motor tune or a tune in rotation.

- Special motor or motor whose power is not suitable for the drive.
- Motor not connected to the drive.
- Motor not stopped.
- For a tune in rotation, the motor has been stopped prematurely.
- The configuration of the drive (including the configuration of the tune in rotation) does not fit the use of tune in rotation with your application.
- The motor cannot operate correctly during a tune in rotation.

**Remedy**

- Verify that the motor/drive are compatible.
- Verify that the motor is connected to the drive during autotuning.
- If an output contactor is being used, verify that it is closed during autotuning.
- Verify that the motor is present and stopped during autotuning.
- In case of reluctance motor, reduce **[PSI Align Curr Max] $p_{c r}$** .
- In case of error detected during a tune in rotation:
 - Verify the run order remain active all along the tune in rotation.
 - Increase **[Acceleration] $a_{c c}$** and **[Deceleration] $d_{e c}$** . They must not be set to value close to 0 s.
 - If **[Nb of Repetitions] $t_{n b r}$** is different from 1, decrease **[2nd Id max current] $i_{d H 2}$** .
 - If Nb of Repetitions $t_{n b r}$ is different from 1, increase **[2nd Id min current] $i_{d L 2}$** .
 - If possible, remove the load of the motor.
 - Set back **[Rotation Tune Freq] $t_{L F r}$** to **[Nominal Motor Freq] $f_{r 5 / 2}$** . If the error continues to be triggered, decrease **[Rotation Tune Freq] $t_{L F r}$** .
 - If possible, decrease **[Nb of Repetitions] $t_{n b r}$** .

**Clearing the Error Code**

This detected error can be cleared manually with the **[Fault Reset Assign] $r_{5 F}$** parameter after the cause has been removed.

[Process Underload] $u L F$



Probable Cause

Process underload.



Remedy

- Verify and remove the cause of the underload.
- Verify the parameters of the **[Process underload]** $u L d$ - function



Clearing the Error Code

This detected error can be cleared with the **[Auto Fault Reset]** $A E r$ or manually with the **[Fault Reset Assign]** $r 5 F$ parameter after the cause has been removed.

[AFE Mains Undervoltage] $u r F$



Probable Cause

- Too low DC-Bus voltage due to mains undervoltage.
- AFE overload.



Remedy

- Verify mains voltage.
- Verify the size of the load/motor/drive according to environment conditions.



Clearing the Error Code

This detected error is cleared as soon as its cause has been removed.

[Supply Mains UnderV] \cup 5 F**Probable Cause**

- Supply mains too low.
- Transient voltage dips.

**Remedy**

Verify the voltage and the parameters of **[Undervoltage handling]** \cup 5 b.

**Clearing the Error Code**

This detected error is cleared as soon as its cause has been removed.

FAQ

FAQ

Introduction

If the display does not light up, verify the supply mains to the drive.

The assignment of the fast stop or freewheel functions help to prevent the drive starting if the corresponding digital inputs are not switched on. The drive then displays **[Freewheel]** $n 5 E$ in freewheel stop and **[Fast stop]** $F 5 E$ in fast stop. This is a normal behavior since these functions are active at zero so that the drive is stopped if there is a wire break.

Verify that the run command input is activated in accordance with the selected control mode (**[2/3-wire control]** $E C C$ and **[2-wire type]** $E C E$ parameters).

If the reference channel or command channel is assigned to a fieldbus, when the supply mains is connected, the drive displays **[Freewheel]** $n 5 E$. It remains in stop mode until the fieldbus gives a command.

Drive lock in blocking state

The drive is locked in a blocking state and displays **[Freewheel Stop]** $n 5 E$, if a Run command such as Run forward, Run reverse, DC injection is still active during:

- A product reset to the factory settings,
- A manual "Fault Reset" using **[Fault Reset Assign]** $r 5 F$,
- A manual "Fault reset" by applying a product switched off and on again,
- A stop command given by a channel that is not the active channel command (such as Stop key of the display terminal in 2/3 wires control),

It will be necessary to deactivate all active Run commands prior to authorizing a new Run command.

Option Module Changed or Removed

When an option module is removed or replaced by another, the drive locks in **[Incorrect configuration]** $E F F$ error mode at power-on. If the option module has been deliberately changed or removed, the detected error can be cleared by pressing the **OK** key twice, which causes the factory settings to be restored for the parameter groups affected by the option module.

Control Block Changed

When a control block is replaced by a control block configured on a drive with a different rating, the drive locks in **[Incorrect configuration]** $E F F$ error mode at power-on. If the control block has been deliberately changed, the detected error can be cleared by pressing the **OK** key twice, which **causes all the factory settings to be restored.**

Glossary

D

Display terminal :

The display terminal menus are shown in square brackets.

For example: **[Communication]**

The codes are shown in round brackets.

For example: *(C o P)* -

Parameter names are displayed on the display terminal in square brackets.

For example: **[Fallback Speed]**

Parameter codes are displayed in round brackets.

For example: *(L F F)*

E

Error :

Discrepancy between a detected (computed, measured, or signaled) value or condition and the specified or theoretically correct value or condition.

F

Factory setting:

Factory settings when the product is shipped

Fault Reset:

A function used to restore the drive to an operational state after a detected error is cleared by removing the cause of the error so that the error is no longer active.

Fault:

Fault is an operating state. If the monitoring functions detect an error, a transition to this operating state is triggered, depending on the error class. A "Fault reset" is required to exit this operating state after the cause of the detected error has been removed. Further information can be found in the pertinent standards such as IEC 61800-7, ODVA Common Industrial Protocol (CIP).

M

Monitoring function:

Monitoring functions acquire a value continuously or cyclically (for example, by measuring) in order to check whether it is within permissible limits. Monitoring functions are used for error detection.

P

Parameter:

Device data and values that can be read and set (to a certain extent) by the user.

PELV:

Protective Extra Low Voltage, low voltage with isolation. For more information: IEC 60364-4-41

PLC:

Programmable logic controller

Power stage:

The power stage controls the motor. The power stage generates current for controlling the motor.

W

Warning:

If the term is used outside the context of safety instructions, a warning alerts to a potential error that was detected by a monitoring function. A warning does not cause a transition of the operating state.

Schneider Electric
35 rue Joseph Monier
92500 Rueil Malmaison
France

+ 33 (0) 1 41 29 70 00

www.se.com

As standards, specifications, and design change from time to time,
please ask for confirmation of the information given in this publication.

© 2021 – Schneider Electric. All rights reserved.

NHA80757.09